

<b>Part Number</b>	<b>Description</b>
3601	Fire/Overheat Detector
5228	EEC Fuel Temperature Thermocouple Probe
5232	EEC Oil Temperature Thermocouple Probe
5631	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
6144	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
13298	Fuel Flow Diverter and Return Valve
17300	Fuel Flow Diverter and Return Valve
18286	EEC Oil Temperature Thermocouple Probe
19075	EEC Oil Temperature Thermocouple Probe
19248	EEC Oil Temperature Thermocouple Probe
20471	Hi-Stage Temperature Sensor Cable Assembly
35175	VG Flexible Feedback Cable
44895	Permanent Magnet Alternator
45099	Permanent Magnet Alternator
45100	Permanent Magnet Alternator
45391	EEC Wiring Harnesses
45497	EEC Wiring Harnesses
45503	EEC Wiring Harnesses
45506	EEC Wiring Harnesses
45508	EEC Wiring Harnesses
45524	EEC Wiring Harnesses
45529	EEC Wiring Harnesses
45531	EEC Wiring Harnesses
45657	EEC Wiring Harnesses
45722	EEC Wiring Harnesses
45753	EEC Wiring Harnesses
45755	EEC Wiring Harnesses
45774	EEC Wiring Harnesses
45775	EEC Wiring Harnesses
45778	EEC Wiring Harnesses
45779	EEC Wiring Harnesses
45791	EEC Wiring Harnesses
45792	EEC Wiring Harnesses
45793	EEC Wiring Harnesses
45794	EEC Wiring Harnesses
45795	EEC Wiring Harnesses
45796	EEC Wiring Harnesses
45797	EEC Wiring Harnesses
45798	EEC Wiring Harnesses
45851	EEC Wiring Harnesses
45852	EEC Wiring Harnesses
45853	EEC Wiring Harnesses
45854	EEC Wiring Harnesses
45855	EEC Wiring Harnesses

45857	EEC Wiring Harnesses
45858	EEC Wiring Harnesses
45859	EEC Wiring Harnesses
45860	EEC Wiring Harnesses
45861	EEC Wiring Harnesses
45862	EEC Wiring Harnesses
45863	EEC Wiring Harnesses
45864	EEC Wiring Harnesses
45865	EEC Wiring Harnesses
45866	EEC Wiring Harnesses
45906	EEC Wiring Harnesses
45907	EEC Wiring Harnesses
45909	EEC Wiring Harnesses
45915	EEC Wiring Harnesses
45918	EEC Wiring Harnesses
45920	EEC Wiring Harnesses
45924	EEC Wiring Harnesses
45928	EEC Wiring Harnesses
45929	EEC Wiring Harnesses
45932	EEC Wiring Harnesses
45933	EEC Wiring Harnesses
45934	EEC Wiring Harnesses
45935	EEC Wiring Harnesses
45936	EEC Wiring Harnesses
45937	EEC Wiring Harnesses
45982	EEC Wiring Harnesses
45983	EEC Wiring Harnesses
45984	EEC Wiring Harnesses
45985	EEC Wiring Harnesses
45986	EEC Wiring Harnesses
45987	EEC Wiring Harnesses
45988	EEC Wiring Harnesses
45989	EEC Wiring Harnesses
45990	EEC Wiring Harnesses
45991	EEC Wiring Harnesses
45992	EEC Wiring Harnesses
45993	EEC Wiring Harnesses
46038	Permanent Magnet Alternator
46052	EEC Wiring Harnesses
46053	EEC Wiring Harnesses
46054	EEC Wiring Harnesses
46055	EEC Wiring Harnesses
46092	EEC Wiring Harnesses
46094	EEC Wiring Harnesses
46097	EEC Wiring Harnesses
46100	EEC Wiring Harnesses
46147	EEC Wiring Harnesses

46148	EEC Wiring Harnesses
46149	EEC Wiring Harnesses
46150	EEC Wiring Harnesses
46151	EEC Wiring Harnesses
46152	EEC Wiring Harnesses
46153	EEC Wiring Harnesses
46154	EEC Wiring Harnesses
46155	EEC Wiring Harnesses
46156	EEC Wiring Harnesses
46167	EEC Wiring Harnesses
46168	EEC Wiring Harnesses
46169	EEC Wiring Harnesses
46188	EEC Wiring Harnesses
46224	EEC Wiring Harnesses
46228	EEC Wiring Harnesses
46231	EEC Wiring Harnesses
46233	EEC Wiring Harnesses
46243	EEC Wiring Harnesses
46244	EEC Wiring Harnesses
46330	EEC Wiring Harnesses
46331	EEC Wiring Harnesses
46332	EEC Wiring Harnesses
46333	EEC Wiring Harnesses
46334	EEC Wiring Harnesses
46335	EEC Wiring Harnesses
46366	EEC Wiring Harnesses
46367	EEC Wiring Harnesses
46368	EEC Wiring Harnesses
46369	EEC Wiring Harnesses
46382	EEC Wiring Harnesses
46383	EEC Wiring Harnesses
46384	EEC Wiring Harnesses
46385	EEC Wiring Harnesses
46452	EEC Wiring Harnesses
46453	EEC Wiring Harnesses
46454	EEC Wiring Harnesses
46455	EEC Wiring Harnesses
46456	EEC Wiring Harnesses
46457	EEC Wiring Harnesses
46458	EEC Wiring Harnesses
46459	EEC Wiring Harnesses
46460	EEC Wiring Harnesses
46461	EEC Wiring Harnesses
46462	EEC Wiring Harnesses
46463	EEC Wiring Harnesses
46464	EEC Wiring Harnesses
46465	EEC Wiring Harnesses

46466	EEC Wiring Harnesses
46467	EEC Wiring Harnesses
46474	EEC Wiring Harnesses
46475	EEC Wiring Harnesses
46476	EEC Wiring Harnesses
46477	EEC Wiring Harnesses
46478	EEC Wiring Harnesses
46479	EEC Wiring Harnesses
46480	EEC Wiring Harnesses
46623	EEC Wiring Harnesses
46629	Electrical Cable Assemblies
46696	EEC Wiring Harnesses
46742	EEC Wiring Harnesses
46780	EEC Wiring Harnesses
46781	EEC Wiring Harnesses
46782	EEC Wiring Harnesses
46902	EEC Wiring Harnesses
46962	EEC Wiring Harnesses
46963	EEC Wiring Harnesses
46964	EEC Wiring Harnesses
46965	EEC Wiring Harnesses
46966	EEC Wiring Harnesses
62702	Position Indicating Switch
62716	Position Indicating Switch
62721	Position Indicating Switch
62740	Position Indicating Switch
62742	Position Indicating Switch
62743	Position Indicating Switch
62744	Position Indicating Switch
66360	Door Opening-Manifold Assembly
67018	Electrical Cable Assemblies
67019	Electrical Cable Assemblies
67020	Electrical Cable Assemblies
73030	Pressure Switch (Douglas Aircraft
77445	Thrust Reverser Assembly
101671	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
101672	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
227848	Fuel Filter
229165	Shutoff Valve
320115	Shutoff Valve
324425	Valve, Intake Anti-Ice
324495	Start Bleed Valve
326975	Anti-Ice On/Off Valve
327915	Solenoid Valve
398188	Oil Tank Drain Valve
420012	EEC Wiring Harnesses
420015	EEC Wiring Harnesses

420016	EEC Wiring Harnesses
420017	EEC Wiring Harnesses
420018	EEC Wiring Harnesses
420020	EEC Wiring Harnesses
420021	EEC Wiring Harnesses
420054	EEC Wiring Harnesses
420060	EEC Wiring Harnesses
420061	EEC Wiring Harnesses
420062	EEC Wiring Harnesses
420075	EEC Wiring Harnesses
420076	EEC Wiring Harnesses
420077	EEC Wiring Harnesses
420078	EEC Wiring Harnesses
420079	EEC Wiring Harnesses
420080	EEC Wiring Harnesses
420081	EEC Wiring Harnesses
420082	EEC Wiring Harnesses
420083	EEC Wiring Harnesses
420084	EEC Wiring Harnesses
420085	EEC Wiring Harnesses
420086	EEC Wiring Harnesses
420087	EEC Wiring Harnesses
420088	EEC Wiring Harnesses
420090	EEC Wiring Harnesses
420091	EEC Wiring Harnesses
420092	EEC Wiring Harnesses
420094	EEC Wiring Harnesses
420095	EEC Wiring Harnesses
420096	EEC Wiring Harnesses
420097	EEC Wiring Harnesses
420098	EEC Wiring Harnesses
420099	EEC Wiring Harnesses
420100	EEC Wiring Harnesses
420101	EEC Wiring Harnesses
420102	EEC Wiring Harnesses
420103	EEC Wiring Harnesses
420104	EEC Wiring Harnesses
420135	EEC Wiring Harnesses
420172	EEC Wiring Harnesses
420173	EEC Wiring Harnesses
420174	EEC Wiring Harnesses
420179	EEC Wiring Harnesses
420181	EEC Wiring Harnesses
420185	EEC Wiring Harnesses
420186	EEC Wiring Harnesses
420187	EEC Wiring Harnesses
420188	EEC Wiring Harnesses

420190	EEC Wiring Harnesses
420206	EEC Wiring Harnesses
420207	EEC Wiring Harnesses
420208	EEC Wiring Harnesses
420437	EEC Wiring Harnesses
420438	EEC Wiring Harnesses
420439	EEC Wiring Harnesses
420440	EEC Wiring Harnesses
420441	EEC Wiring Harnesses
420442	EEC Wiring Harnesses
420443	EEC Wiring Harnesses
420445	EEC Wiring Harnesses
420446	EEC Wiring Harnesses
420467	EEC Wiring Harnesses
420560	EEC Wiring Harnesses
420561	EEC Wiring Harnesses
420562	EEC Wiring Harnesses
420563	EEC Wiring Harnesses
420578	EEC Wiring Harnesses
420611	EEC Wiring Harnesses
420612	EEC Wiring Harnesses
420613	EEC Wiring Harnesses
420630	EEC Wiring Harnesses
420650	Fire Detection Conduit And Thrust Reverser Harnesses
420651	EEC Wiring Harnesses
420652	EEC Wiring Harnesses
420653	EEC Wiring Harnesses
420654	EEC Wiring Harnesses
420655	EEC Wiring Harnesses
420656	EEC Wiring Harnesses
420658	EEC Wiring Harnesses
420659	EEC Wiring Harnesses
420660	Fire Detection Conduit And Thrust Reverser Harnesses
420661	Fire Detection Conduit And Thrust Reverser Harnesses
420662	Fire Detection Conduit And Thrust Reverser Harnesses
420663	Fire Detection Conduit And Thrust Reverser Harnesses
420664	Fire Detection Conduit And Thrust Reverser Harnesses
420665	Fire Detection Conduit And Thrust Reverser Harnesses
420666	Fire Detection Conduit And Thrust Reverser Harnesses
420684	EEC Wiring Harnesses
420686	EEC Wiring Harnesses
420687	EEC Wiring Harnesses
420692	EEC Wiring Harnesses
420695	EEC Wiring Harnesses
420745	EEC Wiring Harnesses
420746	EEC Wiring Harnesses
420747	EEC Wiring Harnesses

420748	EEC Wiring Harnesses
420749	EEC Wiring Harnesses
420750	EEC Wiring Harnesses
420751	EEC Wiring Harnesses
420752	EEC Wiring Harnesses
420754	Fire Detection Conduit And Thrust Reverser Harnesses
420755	Fire Detection Conduit And Thrust Reverser Harnesses
420761	EEC Wiring Harnesses
420768	EEC Wiring Harnesses
420777	EEC Wiring Harnesses
420788	EEC Wiring Harnesses
420789	EEC Wiring Harnesses
420790	EEC Wiring Harnesses
420805	EEC Wiring Harnesses
420806	EEC Wiring Harnesses
420814	EEC Wiring Harnesses
420815	EEC Wiring Harnesses
420816	EEC Wiring Harnesses
420832	EEC Wiring Harnesses
420833	EEC Wiring Harnesses
420834	EEC Wiring Harnesses
420839	EEC Wiring Harnesses
420841	EEC Wiring Harnesses
420844	EEC Wiring Harnesses
420900	EEC Wiring Harnesses
420916	EEC Wiring Harnesses
420917	EEC Wiring Harnesses
421101	EEC Wiring Harnesses
421249	Wiring Harness
421260	EEC Wiring Harnesses
421273	EEC Wiring Harnesses
421308	Wiring Harness
421332	Wiring Harness
421341	EEC Wiring Harnesses
421342	EEC Wiring Harnesses
421343	EEC Wiring Harnesses
421391	Wiring Harness
421393	Wiring Harness
421394	Wiring Harness
421465	Wiring Harness
421466	Wiring Harness
421495	Motor Actuated Butterfly Shutoff Valve
421511	Wiring Harnesses
421513	Wiring Harnesses
421560	Wiring Harness
421601	Wiring Harness
421645	Sump Seal Valve

421646	Wiring Harness
421647	Wiring Harness
421648	Wiring Harness
421649	Wiring Harness
421650	Wiring Harness
421654	Wiring Harness
421655	Wiring Harness
421656	Wiring Harness
421657	Wiring Harness
421658	Wiring Harness
421660	EEC Wiring Harnesses
421661	EEC Wiring Harnesses
421775	Sump Eductor Valve
421885	Sump Seal Shutoff Valve
422625	Hand Operated Shutoff Valve
430071	Permanent Magnet Alternator
430073	EEC Permanent Magnet Alternator (Rotor and Stator)
430074	EEC Permanent Magnet Alternator (Rotor and Stator)
430145	Permanent Magnet Alternator
430146	Permanent Magnet Alternator
430192	Permanent Magnet Alternator
430193	Permanent Magnet Alternator
430219	Permanent Magnet Alternator
430233	Permanent Magnet Alternator
442187	Fuel Pressurizing and Dump/Drain Valve
446469	Fuel Heater
457574	Differential Pressure Switch
472011	Fan Speed Pickup
474815	Fuel Heater
478317	Stage 10 Air Solenoid Valve
480732	Fuel Manifold
480733	Fuel Manifold
480737	Fuel Manifold
480738	Fuel Manifold
489084	Thermocouple Box and Cable (Tt6)
489085	Thermocouple Box and Cable (Tt6)
490830	Thermocouple (Tt6)
492143	EVC 3-2 and EVC 3-4 Engine Vane
499527	Fuel Pressurizing and Dump/Drain Valve
500799	Stage 10 Air Solenoid Valve
501295	Thermocouple Box and Cable (Tt6)
501718	Fuel Manifold
501723	Fuel Manifold
502042	EVC 3-5 Engine Vane Control
502938	Fuel Heater
506540	Stage 10 Air Solenoid Valve
510224	Thermocouple Box and Cable (Tt6)



511193	Thermocouple (Tt6)
511194	Thermocouple Box and Cable (Tt6)
515233	Fuel Manifold
515240	Fuel Manifold
522442	Fuel Manifold
522443	Fuel Manifold
522649	Fuel Heater
522829	Fuel Heater
524378	Fuel Manifold
524379	Fuel Manifold
531380	Thermocouple (Tt6)
536359	Fuel Manifold
536361	Fuel Manifold
537850	Thermocouple Box and Cable (Tt6)
540967	Thermocouple Box and Cable (Tt6)
540978	Thermocouple Box and Cable (Tt6)
544275	Fuel Manifold
544276	Fuel Manifold
544280	Fuel Manifold
544281	Fuel Manifold
564651	EVC 3-2 and EVC 3-4 Engine Vane
571215	Main Fuel Pump
581028	Fuel Manifold
581029	Fuel Manifold
581031	Fuel Manifold
581033	Fuel Manifold
587772	Fuel Manifold
587773	Fuel Manifold
593764	EVC 3-2 and EVC 3-4 Engine Vane
596026	Fuel Manifold
596029	Fuel Manifold
600053	Electrical Cable Assemblies
600095	Electrical Cable Assemblies
600228	Electrical Cable Assemblies
600236	Electrical Cable Assemblies
600237	Electrical Cable Assemblies
600238	Electrical Cable Assemblies
600467	Electrical Cable Assemblies
611693	Total Pressure Probe & Total Pressure and Temperature Probe
612600	Fuel Heater
614107	Thermocouple Box and Cable (Tt7)
614350	Fuel Pressurizing and Dump/Drain Valve
616530	EVC 3-5 Engine Vane Control
622492	Oil Tank Drain Valve
623595	Thermocouple (Tt6)
623977	Variable Displacement Hydraulic Pump
627710	Stage 10 Air Solenoid Valve

627711	Immersion Thermocouple (Tt7)
629141	Fuel Manifold
629148	Fuel Manifold
629154	Fuel Manifold
629155	Fuel Manifold
634995	EVC 3-5 Engine Vane Control
638302	Total Pressure Probe & Total Pressure and Temperature Probe
646526	Fuel Heater
649927	LPC Bleed Master Actuator
650698	LPC Bleed Master Actuator
654233	Fuel Pressurizing and Dump/Drain Valve
654777	Hand Wind Assembly
655394	Oil Tank Drain Valve
655570	Thermocouple Box and Cable (Tt6)
655571	Thermocouple Box and Cable (Tt6)
656468	T/R Hand Wind Mechanism
658385	EVC 3-2 and EVC 3-4 Engine Vane
658490	EVC 3-2 and EVC 3-4 Engine Vane
660136	Thermocouple (Tt6)
660925	HPC Stage 7 Bleed Valve
662114	Fuel Pressurizing and Dump/Drain Valve
663446	Thermocouple (Tt6)
664203	Fuel Pressurizing and Dump/Drain Valve
664236	Thermocouple Box and Cable (Tt6)
668013	HPT/LPT ACC Valve Assembly
668043	Hand Wind Assembly
670333	HPC Stage 10 Solenoid Valve
671613	Water Injection Regulator
672423	T/R Hand Wind Mechanism
672727	Oil Cooler
674358	Fuel Heater
674977	LPC Bleed Master Actuator
675754	HPC Stage 10 Solenoid Valve
677003	Immersion Thermocouple (Tt4.5)
677006	Thermocouple (Tt3)
677415	LPC Bleed Master Actuator
691630	Fuel Control Water Signal Check Valve
692644	Total Pressure Probe & Total Pressure and Temperature Probe
692645	Total Pressure Probe & Total Pressure and Temperature Probe
692791	Immersion Thermocouple (Tt4.5)
693716	Total Pressure Probe & Total Pressure and Temperature Probe
693878	Fuel Pressurizing and Dump/Drain Valve
693939	Total Pressure Probe & Total Pressure and Temperature Probe
693943	Total Pressure Probe & Total Pressure and Temperature Probe
694926	Hand Wind Assembly
694927	Hand Wind Assembly
696108	Fuel Pressurizing and Dump/Drain Valve

698158	Thermocouple (Tt6)
701650	Oil Cooler
701923	Fuel Pressurizing and Dump/Drain Valve
701933	Water Injection Regulator
701934	Water Injection Regulator
702657	Oil Cooler
704044	Thermocouple Box and Cable (Tt6)
704073	Fuel Heater
705375	Oil Cooler
705942	HPC Stage 7 Bleed Valve
706357	Thermocouple (Tt6)
706920	Fuel Heater
708503	Total Pressure Probe & Total Pressure and Temperature Probe
709792	Oil Cooler
710425	Stage 10 Air Solenoid Valve
710755	Fuel Pressurizing and Dump/Drain Valve
710828	HPC Stage 10 Solenoid Valve
711483	Hand Wind Assembly
711484	Hand Wind Assembly
711659	Fuel Heater
711732	Thermocouple (Tt6)
711744	Oil Cooler
712484	Thermocouple (Tt3)
712485	Thermocouple (Tt3)
712500	Oil Cooler
712759	Oil Cooler
712799	HPC Stage 10 Solenoid Valve
714810	Fuel Pressurizing and Dump/Drain Valve
716617	Oil Cooler
716618	Oil Cooler
718142	Fuel Heater
718348	Stage 10 Air Solenoid Valve
718453	LPC Bleed Slave Actuator
718702	Fuel Filter
719306	Hand Wind Assembly
719530	LPC Bleed Slave Actuator
725126	Immersion Thermocouple (Tt7)
725127	Immersion Thermocouple (Tt7)
725513	Stage 10 Air Solenoid Valve
726218	Fuel Pressurizing and Dump/Drain Valve
727037	Oil Cooler
728964	Fuel Manifold
728965	Fuel Manifold
728966	Fuel Manifold
728967	Fuel Manifold
728968	Fuel Manifold
728969	Fuel Manifold

728973	Oil Cooler
728975	Oil Cooler
729122	Fuel Manifold
729123	Fuel Manifold
729124	Fuel Manifold
729125	Fuel Manifold
729199	Oil Cooler
729202	Oil Cooler
729203	Oil Cooler
731229	Fuel Heater
732229	Fuel Distribution Valve
733698	Pressure Probe (Ps3, Pt3)
734467	Fuel Heater
735780	Fuel Manifold
735781	Fuel Manifold
736802	Fuel Heater
737062	Fuel Heater
743963	Fuel Pressurizing and Dump/Drain Valve
743964	Fuel Pressurizing and Dump/Drain Valve
744037	Stage 10 Air Solenoid Valve
744470	Immersion Thermocouple (Tt7)
744471	Immersion Thermocouple (Tt7)
745439	Hand Wind Assembly
745608	Fuel Heater
746529	Fuel Heater
747674	Thermocouple Box and Cable (Tt7)
747864	Thermocouple (Tt6)
748328	Oil Cooler
750712	Fuel Pressurizing and Dump/Drain Valve
751825	HPC Stage 10 Solenoid Valve
752091	Immersion Thermocouple (Tt4.5)
752092	Immersion Thermocouple (Tt4.5)
752137	Fuel Heater
752384	HPC Stage 10 Solenoid Valve
754317	EVC 3-5 Engine Vane Control
755280	Fuel Heater
755425	Fuel Heater
756099	Thermocouple (Tt6)
756247	Immersion Thermocouple (Tt7)
756711	HPC Stage 10 Solenoid Valve
756714	HPC Stage 10 Solenoid Valve
756718	HPC Stage 10 Solenoid Valve
756720	HPC Stage 10 Solenoid Valve
756725	HPC Stage 10 Solenoid Valve
758399	HPC Stage 10 Solenoid Valve
758847	Fuel Heater
759250	Fuel Pressurizing and Dump/Drain Valve

759456	Fuel Manifold
759460	Fuel Manifold
759461	Fuel Manifold
759467	Fuel Manifold
759586	Fuel Manifold
759612	Fuel Manifold
759613	Fuel Manifold
759675	Fuel Manifold
759679	Fuel Manifold
759680	Fuel Manifold
760362	HPC Stage 10 Solenoid Valve
760363	HPC Stage 10 Solenoid Valve
760367	HPC Stage 10 Solenoid Valve
760433	Fuel Distribution Valve
761366	Thermocouple (Tt6)
762622	Fuel Manifold
762623	Fuel Manifold
762624	Fuel Manifold
762625	Fuel Manifold
762710	Oil Cooler
762812	HPC Stage 10 Solenoid Valve
762815	HPC Stage 10 Solenoid Valve
762816	HPC Stage 10 Solenoid Valve
762817	HPC Stage 10 Solenoid Valve
762818	HPC Stage 10 Solenoid Valve
764224	Lubrication and Scavenge Oil Pump
765412	Thermocouple (Tt6)
765763	Oil Cooler
766342	Fuel Pressurizing and Dump/Drain Valve
766592	Thermocouple (Tt6)
766624	Oil Cooler
769220	EVC 3-5 Engine Vane Control
769486	Hand Wind Assembly
769606	EEC Permanent Magnet Alternator
770106	Thermocouple (Tt6)
770114	Thermocouple (Tt6)
770306	Fuel Distribution Valve
770308	HPT/LPT ACC Valve Assembly
770330	Total Pressure Probe & Total Pressure and Temperature Probe
771095	Thermocouple (Tt6)
771169	HPC Stage 10 Solenoid Valve
772374	Oil Cooler
772540	Fuel Pressurizing and Dump/Drain Valve
772969	Fuel Heater
772997	Fuel Heater
773456	Hand Wind Assembly
774677	HPT/LPT ACC Valve Assembly

774812	Thermocouple Box and Cable (Tt7)
776287	Oil Cooler
776443	Thermocouple Box and Cable (Tt6)
776859	Thermocouple (Tt3)
776961	HPC Stage 10 Solenoid Valve
777086	Thermocouple (Tt3)
777087	Thermocouple (Tt3)
777925	Thermocouple (Tt6)
777928	Thermocouple (Tt6)
781767	Fuel Pressurizing and Dump/Drain Valve
782250	Immersion Thermocouple (Tt7)
782262	Stage 10 Air Solenoid Valve
782267	Fuel Heater
782471	Immersion Thermocouple (Tt7)
783448	Stage 10 Air Solenoid Valve
783955	EVC 3-2 and EVC 3-4 Engine Vane
785353	Fuel Manifold
785354	Fuel Manifold
785355	Fuel Manifold
785356	Fuel Manifold
785357	Fuel Manifold
785358	Fuel Manifold
785359	Fuel Manifold
785360	Fuel Manifold
786443	Fuel Pressurizing and Dump/Drain Valve
786445	Fuel Heater
786464	Pt2/Tt2 Probe
787350	Stage 10 Air Solenoid Valve
788012	HPT/LPT ACC Valve Assembly
788013	HPT/LPT ACC Valve Assembly
788014	HPT/LPT ACC Valve Assembly
789466	Thermocouple Box and Cable (Tt7)
789642	EVC 3-5 Engine Vane Control
789643	EVC 3-5 Engine Vane Control
789644	Fuel Heater
789762	Fuel Heater
789803	EVC 3-5 Engine Vane Control
790312	EVC 3-2 and EVC 3-4 Engine Vane
790770	HPT/LPT ACC Valve Assembly
791288	Fuel Heater
792863	Thermocouple Box and Cable (Tt6)
792864	Thermocouple Box and Cable (Tt6)
792917	EVC 3-5 Engine Vane Control
792919	EVC 3-5 Engine Vane Control
793272	Stage 10 Air Solenoid Valve
793274	Stage 10 Air Solenoid Valve
793322	Pressure Probe (Ps3, Pt3)

793396	Hand Wind Assembly
793477	Thermocouple Box and Cable (Tt7)
793515	Thermocouple Box and Cable (Tt7)
793528	Fuel Pressurizing and Dump/Drain Valve
793859	Fuel Pressurizing and Dump/Drain Valve
794106	Oil Cooler
794412	Motional Pickup Transducer (Stator Vane Angle)
794699	Outer Locking/Feedback Actuator
794915	Outer Locking/Feedback Actuator
795111	HPT/LPT ACC Valve Assembly
795233	Thermocouple Box and Cable (Tt7)
795246	Oil Cooler
796257	EVC 3-5 Engine Vane Control
796258	EVC 3-5 Engine Vane Control
796812	Pt2/Tt2 Probe
797555	Differential Pressure Switch
798073	Fuel Pressurizing and Dump/Drain Valve
798095	Fuel Pressurizing and Dump/Drain Valve
798133	Pt2/Tt2 Probe
798275	Hydraulic Return Fuel Heater
798287	Thermocouple Box and Cable (Tt7)
798380	Thermocouple Box and Cable (Tt6)
798409	Oil Cooler
798587	Hydraulic Return Fuel Heater
799120	Hydraulic Return Fuel Heater
799419	Hydraulic Return Fuel Heater
799607	Thermocouple Box and Cable (Tt7)
799628	Thermocouple Box and Cable (Tt7)
801673	EVC 3-5 Engine Vane Control
801677	EVC 3-5 Engine Vane Control
801868	Hand Wind Assembly
801941	HPT/LPT ACC Valve Assembly
803509	Stage 10 Air Solenoid Valve
804228	Hand Wind Assembly
805373	EVC 3-2 and EVC 3-4 Engine Vane
805783	Outer Locking/Feedback Actuator
806266	Fuel Manifold
806267	Fuel Manifold
806636	Thermocouple Box and Cable (Tt7)
806637	Thermocouple Box and Cable (Tt7)
808893	Oil Cooler
808894	Oil Cooler
808895	Oil Cooler
808896	Oil Cooler
808897	Oil Cooler
808898	Oil Cooler
808899	Oil Cooler

808900	Oil Cooler
811094	HPC Stage 10 Solenoid Valve
811945	Oil Cooler
814067	Thermocouple Box and Cable (Tt7)
887673	Variable Displacement Hydraulic Pump
903546	Fire/Overheat Detector Assembly
903547	Fire/Overheat Detector Assembly
973604	Dual Fuel Filter Differential Pressure Sensor
974301	Dual Main Oil Pressure Sensor
974302	No. 4 Scavenge Pressure Sensor
974401	P4.9 Pressure Sensor
1122696	Temperature Transducers and Thermocouple Sensor
1122797	Oil Temperature Resistance Temperature Detectors
1226400	Actuator, V.B.V.
2009051.02	Valve Assembly
2009081.02	Valve Assembly
3009051.02	Electrical Chip Detector
3009061.02	Electrical Chip Detector
3100013	Temperature Transducers and Thermocouple Sensor
3100072	Temperature Transducers and Thermocouple Sensor
3100130	Temperature Transducers and Thermocouple Sensor
3199958	Temperature Transducers and Thermocouple Sensor
3307641.02	Electrical Chip Detector
3307761.02	Electrical Chip Detector
4205400	Hydraulic Pump
5008437	Lubrication and Scavenge Oil Pump
5010224	Fuel Pump
7578944	Filter Assembly
10300167	Engine Core Compartment Temperature Sensor
11082101	Flexible Shaft Assembly
11150300	T/R Hydraulic Control Unit
22608100	Terminal Lug Sensing Elements
23801100	Terminal Lug Sensing Elements
24201700	Terminal Lug Sensing Elements
24601700	Terminal Lug Sensing Elements
24602000	Terminal Lug Sensing Elements
26402000	Terminal Lug Sensing Elements
26804000	Terminal Lug Sensing Elements
27041907	LPC Bleed Slave Actuator
27044923	EEC Permanent Magnet Alternator
27044941	EEC Permanent Magnet Alternator
27141198	LPC Bleed Slave Actuator
27241337	LPC Bleed Slave Actuator
73983600	Fuel Temperature Thermocouple
73983700	A.C.O.C. Oil Temperature Thermo-couple
73984200	Fuel Temperature Thermocouple
73984300	A.C.O.C. Oil Temperature Thermo-couple



285689001	Check Valve
471111232	Fuel Cooled Oil Cooler
0111160-001	Hydraulic Manifold Assembly
0154BE-2	Fan Inlet Temperature Transmitter (T2)
0154CL	Inlet Temperature Sensor
0154CN	Inlet Temperature Sensor
0154CY	Fan Inlet Temperature Transmitter (T2)
0154DA	Inlet Temperature Sensor
0154DN	Engine Inlet Total TemperatureSensor
0154DN2	Engine Inlet Total TemperatureSensor
0154DN3	Engine Inlet Total TemperatureSensor
0154DN6	Engine Inlet Total TemperatureSensor
0154DN8	Engine Inlet Total TemperatureSensor
0154EW2	CIT/P25 Probe
0154EW3	CIT/P25 Probe
0154EW4-1	CIT/P25 Probe
0154GF10	PT25 Temperature Sensor
0154GF11	T25/PT25 Temperature Sensor
0154GF12	PT25 Temperature Sensor
0154GF13	T25/PT25 Temperature Sensor
0154GF4	T25/PT25 Temperature Sensor
0154GF6	PT25 Temperature Sensor
0154GF7	T25/PT25 Temperature Sensor
0154GF9	PT25 Temperature Sensor
0154JU	Total Pressure and Total Temperature
0154LG	Engine Inlet Pressure and Temperature Sensor
03P75-1	Turbine Vane and Blade Cooling Air Valve
03P75-2	Turbine Vane and Blade Cooling Air Valve
03P75-3	Turbine Vane and Blade Cooling Air Valve
04P23-1	Dual 3-Way Pneumatic Solenoid Air Valve
04P23-4	Dual 3-Way Pneumatic Solenoid Air Valve
04P23-5	Dual 3-Way Pneumatic Solenoid Air Valve
04P23-6	Dual 3-Way Pneumatic Solenoid Air Valve
04P23-7	Dual 3-Way Pneumatic Solenoid Air Valve
04P23-8	Dual 3-Way Pneumatic Solenoid Air Valve
0513AB1	Ice Detection System
0513AB2	Ice Detection System
0513AB2-1	Ice Detection System
0712171-004	Variable Geometry Actuator
0712171-005	Variable Geometry Actuator
0712176-004	Pressure Regulating Valve
0712335-003	B-Sump Vent Regulator Valve
0712335-004	B-Sump Vent Regulator Valve
07P951	Pneumatic Relay Valve
07P952	Pneumatic Relay Valve
07P953	Pneumatic Relay Valve
07P954	Pneumatic Relay Valve

07P957	Pneumatic Relay Valve
07P958	Pneumatic Relay Valve
07P959	Pneumatic Relay Valve
0871GD1	Ice Detection System
1000851-3	PS400-2 Starter Control Valve
1001000-3	In-Line Starter Valve
1001000-4	In-Line Starter Valve
1001100-3	In-Line Starter Valve
1001807-2	GTA67-2 IDG Oil Bypass Valve
101050A1	Fuel De-icing Valve
101050A2	Fuel De-icing Valve
101050A3	Fuel De-icing Valve
101050A4	Fuel De-icing Valve
101050A5	Fuel De-icing Valve
101180A1	Pressure Ratio Bleed Control
1011V0200-2	Pneumatic Solenoid Valve
1011V0400-1	Pneumatic Solenoid Valve
1011V0400-2	Pneumatic Solenoid Valve
1015080-1	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
1015080-2	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
1015080-3	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
1026V0600	No. 4 Bearing Scavenge Valve
1026V0600-1	No. 4 Bearing Scavenge Valve
1026V0600-2	No. 4 Bearing Scavenge Valve
1026V0600-3	No. 4 Bearing Scavenge Valve
1026V0700	No. 4 Bearing Scavenge Valve
1026V0800	No. 4 Bearing Scavenge Valve
103-00080	IDG Oil Temperature Sensor
103-00082	Oil Temperature Sensor
103-00084	Engine Oil Temperature Sensor
1043V0300	Fuel/Oil Heat Exchanger Bypass Valve
1058V0100	HPC Stage 10 Bleed Valve
1058V0100-1	HPC Stage 10 Bleed Valve
1058V0100-2	HPC Stage 10 Bleed Valve
1058V0100-3	HPC Stage 10 Bleed Valve
1058V0400	HPC Stage 10 Bleed Valve
1058V0400-1	HPC Stage 10 Bleed Valve
1058V0400-2	HPC Stage 10 Bleed Valve
1058V0400-3	HPC Stage 10 Bleed Valve
1058V0600	HPC Stage 10 Bleed Valve
10-609445-1	Dual Relay Box
10-609455-1	Dual Relay Box
10-609481-10	EEC Wiring Harnesses
10-609481-11	EEC Wiring Harnesses
10-609481-3	EEC Wiring Harnesses
10-609481-5	EEC Wiring Harnesses
10-609481-51	EEC Wiring Harnesses

10-609481-6	EEC Wiring Harnesses
10-609481-61	EEC Wiring Harnesses
10-609481-7	EEC Wiring Harnesses
10-609481-81	EEC Wiring Harnesses
10-609481-9	EEC Wiring Harnesses
10-609482-10	EEC Wiring Harnesses
10-609482-11	EEC Wiring Harnesses
10-609482-3	EEC Wiring Harnesses
10-609482-5	EEC Wiring Harnesses
10-609482-51	EEC Wiring Harnesses
10-609482-6	EEC Wiring Harnesses
10-609482-61	EEC Wiring Harnesses
10-609482-7	EEC Wiring Harnesses
10-609482-81	EEC Wiring Harnesses
10-609482-9	EEC Wiring Harnesses
10-609483-3	EEC Wiring Harnesses
10-609483-4	EEC Wiring Harnesses
10-609483-41	EEC Wiring Harnesses
10-609484-3	EEC Wiring Harnesses
10-609484-4	EEC Wiring Harnesses
10-609484-41	EEC Wiring Harnesses
10-609491-3	EEC Wiring Harnesses
10-609491-4	EEC Wiring Harnesses
10-609491-41	EEC Wiring Harnesses
10-609600-1	EEC Wiring Harnesses
10-609600-11	EEC Wiring Harnesses
10-609600-12	EEC Wiring Harnesses
10-609600-2	EEC Wiring Harnesses
10-609600-31	EEC Wiring Harnesses
10-609600-4	EEC Wiring Harnesses
10-609600-5	EEC Wiring Harnesses
10-609600-6	EEC Wiring Harnesses
10-609640-1	EEC Wiring Harnesses
10-609640-11	EEC Wiring Harnesses
10-609640-2	EEC Wiring Harnesses
10-609640-31	EEC Wiring Harnesses
10-609640-4	EEC Wiring Harnesses
10-609640-5	EEC Wiring Harnesses
1061-0010	Pressure Switch (Douglas Aircraft
10-614960-2	EEC Generator (Rotor and Stator)
10-614965-1	EEC Generator (Rotor and Stator)
10-621595-2	Permanent Magnet Alternator Rotor & Stator
10-621920-1	EEC Alternator
10-621920-2	EEC Alternator
1065V0100	Three Way Valve
1085000-4	Isolation Valve Assembly
1086000-4	Directional Control Valve

1086000-5	Directional Control Valve
10885E	Engine Air/Oil Heat Exchanger
109800A1	T/R Hydraulic Control Unit
109800A2	T/R Hydraulic Control Unit
109800A3	T/R Hydraulic Control Unit
10P18-10	No. 3 Bearing Compartment Breather Restrictor Valve
10P18-14	No. 3 Bearing Compartment Breather Restrictor Valve
10P22-2	No. 3 Bearing Oil Shutoff Valve
10P22-3	No. 3 Bearing Oil Shutoff Valve
10P22-4	No. 3 Bearing Oil Shutoff Valve
10P22-5	No. 3 Bearing Oil Shutoff Valve
1101V0200	Pneumatic Solenoid Valve
1101V0400	Pneumatic Solenoid Valve
1102V0500-4	HPC Secondary Flow Control Valve
1102V0500-5	HPC Secondary Flow Control Valve
1102V0500-7	HPC Secondary Flow Control Valve
1102V0500-8	HPC Secondary Flow Control Valve
1102V1000	HPC Secondary Flow Control Valve
1102V1000-2	HPC Secondary Flow Control Valve
1102V1000-3	HPC Secondary Flow Control Valve
1102V1100	HPC Secondary Flow Control Valve
1102V1100-1	HPC Secondary Flow Control Valve
1102V1100-2	HPC Secondary Flow Control Valve
1108V0100	Flow Control Valve-Turbine Cooling Air Valve, Solenoid (Dual Three Way Pneumatic Solenoid)
1108V0100-1	Flow Control Valve-Turbine Cooling Air Valve, Solenoid (Dual Three Way Pneumatic Solenoid)
1108V0100-2	Flow Control Valve-Turbine Cooling Air Valve, Solenoid (Dual Three Way Pneumatic Solenoid)
1109V0300	Scavenge Filter Pressure Switch
1109V0300-1	Scavenge Filter Pressure Switch
1109V0300-2	Scavenge Filter Pressure Switch
1109V0300-3	Scavenge Filter Pressure Switch
1110V0700-3	Turbine Vane and Blade Cooling (TVBC)
1110V0700-4	Turbine Vane and Blade Cooling (TVBC)
1110V0700-5	Turbine Vane and Blade Cooling (TVBC)
1115V0300-1	T/R Hydraulic Control Unit
1115V0300-4	T/R Hydraulic Control Unit
1115V0300-6	T/R Hydraulic Control Unit
1115V0700	T/R Hydraulic Control Unit
1115V0700-10	T/R Hydraulic Control Unit
1115V0700-3	T/R Hydraulic Control Unit
1115V0700-4	T/R Hydraulic Control Unit
1115V0700-5	T/R Hydraulic Control Unit
1115V0700-9	T/R Hydraulic Control Unit
111E9000G01	Electrical Cables
111E9000G02	Electrical Cables
111E9000G03	Electrical Cables
111E9000G04	Electrical Cables
111E9001G02	Electrical Cables

111E9001G03	Electrical Cables
111E9002G01	Electrical Cables
111E9034G01	Electrical Cables
111E9035G01	Electrical Cables
111E9073G01	Electrical Cables
111E9073G02	Electrical Cables
111E9073G03	Electrical Cables
111E9073G04	Electrical Cables
111E9074G01	Electrical Cables
111E9074G02	Electrical Cables
111E9074G03	Electrical Cables
111E9074G04	Electrical Cables
111E9074G05	Electrical Cables
111E9075G01	Electrical Cables
111E9075G02	Electrical Cables
111E9075G03	Electrical Cables
111E9076G01	Electrical Cables
111E9076G02	Electrical Cables
111E9076G03	Electrical Cables
111E9076G04	Electrical Cables
111E9076G05	Electrical Cables
111E9076G06	Electrical Cables
111E9077G01	Electrical Cables
111E9077G02	Electrical Cables
111E9077G03	Electrical Cables
111E9078G01	Electrical Cables
111E9078G02	Electrical Cables
111E9232G01	Electrical Cables
111E9232G02	Electrical Cables
111E9232G03	Electrical Cables
111E9233G01	Electrical Cables
111E9233G02	Electrical Cables
111E9233G03	Electrical Cables
111E9233G04	Electrical Cables
111E9266G01	Electrical Cables
111E9266G02	Electrical Cables
111E9266G03	Electrical Cables
111E9266G04	Electrical Cables
111E9266G05	Electrical Cables
111E9266G06	Electrical Cables
111E9267G01	Electrical Cables
111E9267G02	Electrical Cables
111E9267G03	Electrical Cables
111E9267G04	Electrical Cables
111E9267G05	Electrical Cables
111E9267G06	Electrical Cables
111E9268G01	Electrical Cables

111E9268G02	Electrical Cables
111E9268G03	Electrical Cables
111E9269G01	Electrical Cables
111E9269G02	Electrical Cables
111E9269G03	Electrical Cables
111E9270G01	Electrical Cables
111E9270G02	Electrical Cables
111E9270G03	Electrical Cables
111E9271G01	Electrical Cables
111E9271G02	Electrical Cables
111E9271G03	Electrical Cables
111E9272G0	Electrical Cables
111E9272G01	Electrical Cables
111E9272G02	Electrical Cables
111E9272G03	Electrical Cables
111E9272G04	Electrical Cables
111E9272G05	Electrical Cables
111E9272G06	Electrical Cables
11307-4	IDG Latching Pressure Relief Valve
11688-000	Fuel Flow Diverter and Return Valve
11698-000	Total Pressure and Total Temperature EEC Inlet (P2/T2) Probe
11-841193-2	Oil/Fuel Heat Exchanger
11-841193-3	Oil/Fuel Heat Exchanger
11-841193-4	Oil/Fuel Heat Exchanger
1211175-007	Vsv Actuator
1211175-010	Vsv Actuator
1211175-011	Vsv Actuator
1211175-018	Actuator-Variable Stator
1211175-108-2	Variable Stator
1211313-002	VSV Actuator
1211313-003	VSV Actuator
1211313-004	VSV Actuator
1211313-005	VSV Actuator
1211313-006	VSV Actuator
1211313-007	VSV Actuator
1211313-008	Actuator, Variable Stator
1211313-009	Actuator, Variable Stator
1211313-010	Variable Stator Actuator
1211443-001	Actuator C-Duct Opening Upper
1211444-001	Actuator C-Duct Opening Upper
1211508-005	CVG Master Actuator
1211508-007	CVG Master Actuator
1211509-005	CVG Slave Actuator
121664-10	Ballscrew Actuator
121664-11	Ballscrew Actuator
121664-12	Ballscrew Actuator
121664-3	Ballscrew Actuator

121664-4	Ballscrew Actuator
121664-5	Ballscrew Actuator
121664-6	Ballscrew Actuator
121664-7	Ballscrew Actuator
121664-8	Ballscrew Actuator
121664-9	Ballscrew Actuator
121666-11	Master Ballscrew Actuator
121666-13	Master Ballscrew Actuator
121666-14	Master Ballscrew Actuator
121666-15	Master Ballscrew Actuator
121666-16	Master Ballscrew Actuator
121666-17	Master Ballscrew Actuator
121666-18	Master Ballscrew Actuator
121666-19	Master Ballscrew Actuator
121666-21	Master Ballscrew Actuator
121666-3	Master Ballscrew Actuator
121666-4	Master Ballscrew Actuator
121666-5	Master Ballscrew Actuator
121666-6	Master Ballscrew Actuator
121666-7	Master Ballscrew Actuator
121666-8	Master Ballscrew Actuator
121666-9	Master Ballscrew Actuator
121668-1	Flexible Shaft Assembly
121668-2	Flexible Shaft Assembly
121762-1	Flexible Shaft Assembly
121762-2	Flexible Shaft Assembly
121762-3	Flexible Shaft Assembly
121762-4	Flexible Shaft Assembly
12243-12	Solenoid Valve
12243-14	Solenoid Valve
12243-2	Solenoid Valve
12243-3	Solenoid Valve
12243-5	Solenoid Valve
12243-9	Solenoid Valve
12688-000	Fuel Flow Diverter and Return Valve
12698-000	Total Pressure and Total Temperature EEC Inlet (P2/T2) Probe
1289M48G05	Drain Module Assembly
1289M48G06	Drain Module Assembly
1289M48G09	Drain Module Assembly
1293M37P01	CIT Sensor
1303M20P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1303M21P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1303M21P02	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1304M10P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1306M13P01	Servo Fuel/Oil Heat Exchanger
1306M13P02	Servo Fuel/Oil Heat Exchanger
1307M66P04	Fan Inlet Temperature Sensor Assembly

1307M68P03	Fan Inlet Temperature Sensor; Assembly
1324M12P02	VSV Actuator
1324M12P03	VSV Actuator
1324M12P04	VSV Actuator
1324M12P05	VSV Actuator
1324M12P06	VSV Actuator
1324M12P07	VSV Actuator
1324M12P08	VSV Actuator
1324M12P09	VSV Actuator
1324M12P10	VSV Actuator
1325M60P01	Engine Inlet Total Temperature Sensor
1325M60P02	Engine Inlet Total Temperature Sensor
1325M60P03	Engine Inlet Total Temperature Sensor
1325M60P06	Engine Inlet Total Temperature Sensor
1325M60P08	Engine Inlet Total Temperature Sensor
1325M60P09	Engine Inlet Total Temperature Sensor
132ABK	Fuel/Oil Temperature Sensor
1332M27P01	Check Valve
1348M21P01	T3 Sensor Compressor Outlet Temperature
1348M21P04	T3 Sensor Compressor Outlet Temperature
1348M21P05	T3 Sensor Compressor Outlet Temperature
1374M59P02	CIT/P25 Probe
1374M59P03	CIT/P25 Probe
1383M18P02	N1 Speed Sensor
1383M18P03	N1 Speed Sensor
1383M64P01	Temperature Transducers and Thermocouple Sensor
13P44-3	Turbine Cooling Air Valve
13P44-4	Turbine Cooling Air Valve
13P44-5	Turbine Cooling Air Valve
13P44-6	Turbine Cooling Air Valve
144151000-201	Outer Locking/Feedback Actuator
144151000M2-01	Outer Locking/Feedback Actuator
1443M60P03	ECU Cooling Valve
1457M11P01	VSV Actuator
1457M12P02	HPTCC Valve
1457M12P03	HPTCC Valve
1457M12P05	HPTCC Valve
1457M12P06	HPTCC Valve
1457M12P08	HPTCC Valve
1459M16P01	Temperature Transducers and Thermocouple Sensor
1459M16P03	Temperature Transducers and Thermocouple Sensor
1471M29P01	RACC Valve
14844-000	Fuel Cooled IDG Oil Cooler
14G0182-003	W-11 Harness
14G0184-003	W-4 Harness
14G0185-007	W-12 Harness
14G0186-007	W-3 Harness



14G0187-001	W-10 Harness
14G0187-003	W-10 Harness
1500P119	Pressure Indicator
1500P31-1	Pressure Indicator
1519M43P05	RACC Valve
1519M43P06	RACC Valve
1519M43P07	RACC Valve
1520M27P05	HPTCC Valve
1520M27P06	HPTCC Valve
1520M27P07	HPTCC Valve
1520M27P08	HPTCC Valve
1520M99P02	Fuel Filter
1520M99P03	Fuel Filter
1520M99P04	Fuel Filter
1521M72P01	VSV Actuator
1521M72P05	Variable Stator
1527M33P07	Fuel Manifold Staging Valve
1527M33P08	Fuel Manifold Staging Valve
1527M33P10	Fuel Manifold Staging Valve
1527M90P01	Valve
15434-1	Solenoid Valve
15434-10	Solenoid Valve
15434-11	Solenoid Valve
15434-16	Solenoid Valve
15434-17	Solenoid Valve
15434-19	Solenoid Valve
15434-21	Solenoid Valve
15434-25	Solenoid Valve
15434-29	Solenoid Valve
15434-30	Solenoid Valve
15434-32	Solenoid Valve
15434-34	Solenoid Valve
15434-40	Solenoid Valve
15434-9	Solenoid Valve
1548-05-12	Check Valve
154DB3	Total Pressure and Total Temperature
154DB4	Total-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154DN9	Engine Inlet Total Temperature Sensor
154ED	Total-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154ED2	Total-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154GF3	T25/PT25 Temperature Sensor
154GT	Total-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
1583M24P01	IDG Air/Oil Cooler
1583M24P02	IDG Air/Oil Cooler
1583M24P03	IDG Air/Oil Cooler
1583M30P04	Shutoff Valve Assembly
1583M30P05	Shutoff Valve Assembly

1583M30P06	IDG Shutoff Valve Assembly
1583M30P07	Shutoff Valve Assembly
1583M30P08	IDG Shutoff Valve Assembly
1583M30P09	Shutoff Valve Assembly
1583M30P11	Shutoff Valve Assembly
15844-000	Fuel Cooled IDG Oil Cooler
15E0404005	W-8 Harness
15E0404005M1	W-8 Harness
15E0404005M2	W-8 Harness
15E0404007	W-8 Harness
15E0404009	W-8 Harness
15E0404011	W-8 Harness
15E0405005	W-9 Harness
160064-1-1	Oil Cooler Bypass Valve Assembly
1604300-001	Turbine Cooling Valve Control Cable
160480-1	Oil Cooler
160482-6	Servo Fuel Heater
1605000-1	Thrust Reverser Actuator
1605130-001	Turbine Cooling Valve Control Cable
160668-1	Air/Oil Cooler
1610000-10	Thrust Reverser Actuator Assembly
1610000-11	Thrust Reverser Actuator Assembly
1610000-9	Thrust Reverser Actuator Assembly
1648MK2	No 4 Bearing Compartment Scavenge Valve
1651M73G02	Lube Oil Tank
1663M53P02	Servo Fuel/Oil Heat Exchanger
1663M79P03	IDG Oil/Fuel Heat Exchanger
1663M96P04	IDG Shutoff Valve Assembly
1666MK5	LPC Bleed Master Actuator
1667MK3	LPC Bleed Slave Actuator
16844-000	Fuel Cooled IDG Oil Cooler
1685MK4-7	Variable Stator Vane Actuator
1687M90P02	Fuel/Oil Temperature Sensor
1689M10P07	Gear Type Main Fuel Pump Assembly
1689M10P08	Gear Type Main Fuel Pump Assembly
1689M10P09	Gear Type Main Fuel Pump Assembly
1689M62P01	Permanent Magnet Alternator
1689M63P03	Permanent Magnet Alternator
1689M63P05	Permanent Magnet Alternator
1689M63P06	Permanent Magnet Alternator
1691M44P03	Fuel Filter
1692M85P03	Turbine Blade Temperature Pyrometer
1692M85P04	Turbine Blade Temperature Pyrometer
1692M85P05	Turbine Blade Temperature Pyrometer
1692M85P06	Turbine Blade Temperature Pyrometer
1692M86P02	APT Pressure Transducers
1693M16P02	APT Pressure Transducers

1693M17P02	APT Pressure Transducers
1693M78P03	Flexible Thermocouple Harness
1693M78P04	Flexible Thermocouple Harness
1694M23P06	High Pressure Turbine Active Clearance Control Valve
1694M24P02	Low Pressure Turbine Active Clearance Control Valve
1694M24P07	Low Pressure Turbine Active Clearance Control Valve
1694M25P03	Core Compartment Cooling Valve
1694M25P05	Core Compartment Cooling Valve
1694M25P07	Core Compartment Cooling Valve
1694M26P06	Start Transient Bleed Valve
1694M26P07	Start Transient Bleed Valve
1694M66P02	Flexible Thermocouple Harness
1694M66P03	Flexible Thermocouple Harness
1694M66P05	Flexible Thermocouple Harness
1694M81P04	Variable Bypass Valve Actuator
1694M81P05	Variable Bypass Valve Actuator
1696M81P07	Twin Element Thermocouple
1697M50G01	Electrical Cables
1697M50G02	Electrical Cables
1697M50G03	Electrical Cables
1697M50G04	Electrical Cables
1697M51G02	Electrical Cables
1697M51G03	Electrical Cables
1697M52G01	Electrical Cables
1752M18P05	Fuel Gear Pump Assembly
1752M18P06	Fuel Gear Pump Assembly
1752M18P07	Fuel Gear Pump Assembly
1752M18P08	Fuel Gear Pump Assembly
1752M18P09	Fuel Gear Pump Assembly
1754M59P01	Combustor Drain Valve
1777MK1	L.P.C. Bleed Master Actuator
1777MK2	L.P.C. Bleed Master Actuator
1778MK1	L.P.C. Bleed Slave Actuator
1779MK1	No 4 Bearing Compartment Scavenge Valve
1797M98P01	Pressure Probe
1797M98P02	Pressure Probe
1797MK1	L.P.C. Bleed Master Actuator
1797MK2	L.P.C. Bleed Master Actuator
1797MK3	L.P.C. Bleed Master Actuator
1798MK1	L.P.C. Bleed Slave Actuator
1799M72P03	Pressure Interface Unit
17P67-1	No. 2 Bearing Damper Valve
1811M82P02	Drain Manifold
1820M35P01	Burner Selection Valve
1821M59P05	High Pressure Turbine Clearance Valve
1821M59P06	High Pressure Turbine Clearance Valve
1821M59P07	High Pressure Turbine Clearance Valve

1821M60P01	Transient Bleed Air Valve
1821M60P02	Transient Bleed Valve
1821M60P04	Transient Bleed Valve
1821M62G01	Electrical Cables
1821M62G02	Electrical Cables
1821M62G03	Electrical Cables
1821M63G01	Electrical Cables
1821M63G02	Electrical Cables
1821M63G03	Electrical Cables
1821M63G04	Electrical Cables
1821M64G02	Electrical Cables
1821M64G03	Electrical Cables
1821M64G04	Electrical Cables
1821M64G05	Electrical Cables
1821M64G06	Electrical Cables
1821M65G01	Electrical Cables
1821M65G02	Electrical Cables
1821M65G03	Electrical Cables
1821M65G04	Electrical Cables
1821M65G05	Electrical Cables
1821M65G06	Electrical Cables
1838M12P02	Fuel Flow Transmitter
1838M12P03	Fuel Flow Transmitter
1838M12P04	Fuel Flow Transmitter
1838M12P05	Fuel Flow Transmitter
1838M12P06	Fuel Flow Transmitter
1838M12P08	Fuel Flow Transmitter
1838M12P09	Fuel Flow Transmitter
1838M88P03	Lube/Servo Fuel/Oil Cooler
1838M88P06	Lube/Servo Fuel/Oil Cooler
1838M88P11	Lube/Servo Fuel/Oil Cooler
1838M88P13	Lube/Servo Fuel/Oil Cooler
1838M89P03	IDG Fuel/Oil Cooler
1838M89P04	IDG Fuel/Oil Cooler
1838M89P05	IDG Fuel/Oil Cooler
1838M90P03	VSCF/Lube Oil/Oil Cooler Interface
1838M91P06	IDG/VSCF Air/Oil Cooler Interface
1838M91P07	IDG/VSCF Air/Oil Cooler Interface
1838M91P08	IDG/VSCF Air/Oil Cooler Interface
1851M60P02	CIT/P25 Probe
1853M12P01	Transient Bleed Air Valve
1853M12P02	Transient Bleed Air Valve
1853M12P04	Transient Bleed Air Valve
1853M29G01	Electrical Cables
1853M30G01	Electrical Cables
1853M47P01	T3 Sensor Compressor Outlet Temperature
1853M47P02	T3 Sensor Compressor Outlet Temperature

1853M89P01	Fuel Manifold Pressure Sensor
1959M18P03	Burner Selection Valve
1960M28P04	High Pressure Turbine Clearance Valve
1960M28P05	High Pressure Turbine Clearance Valve
1960M28P06	High Pressure Turbine Clearance Valve
1960M28P07	High Pressure Turbine Clearance Valve
1960M28P08	High Pressure Turbine Clearance Valve
1960M28P09	High Pressure Turbine Clearance Valve
1960M64P01	Rotor Active Turbine Clearance Valve
1960M77P02	Nacelle Cooling and Transient Bleed Valve
1962M23P02	Fuel Cooled Oil Cooler
1962M36P01	Servo Fuel/Oil Heat Exchanger
1962M37P01	Gear Type Main Fuel Pump Assembly
1962M37P02	Gear Type Main Fuel Pump Assembly
1962M41P02	Fuel/Oil Heat Exchanger
1962M41P03	Fuel/Oil Heat Exchanger
1962M84P01	IDG/VSCF Air/Oil Cooler Interface
1962M86P01	Thermocouple Temperature Probe
1962M86P02	Thermocouple Temperature Probe
1962M87P03	T4.9 Thermocouple Cable Assemblies
1962M91P03	Variable Bypass Valve Actuator
1962M91P04	Variable Bypass Valve Actuator
1962M95P02	Starter Air Valve
1963M51P01	Sump Eductor Valve
1963M68P01	N2 Sensor
1A6132	EGT (T4.9) Thermocouple Probe
1A6133	EGT (T4.9) Thermocouple Probe
1A6134	EGT (T4.9) Thermocouple Probe
1A6473	Pressure Oil Filter Element
1A6505	Pressure Oil Filter Element
1A6596	EGT (T4.9) Thermocouple Probe
1A9053	Fuel Injector and Support Assembly
1B0012	EEC Fuel Temperature Thermocouple Probe
1B3122	Fuel Injector and Support Assembly
1B6488	Pressure Oil Filter Element
1F7514	Oil Separator
2041M24P03	T4.9 Thermocouple Cable Assemblies
2041M34P02	IDG Air Cooled Oil Cooler
2043M12P03	Fuel Pump
2043M12P04	Fuel Pump
2043M12P05	Fuel Pump
2043M13P01	Three Inch Diameter Starter Valve
2043M14P01	Sensor, N1 Fan Speed
2043M14P02	Sensor, N1 Fan Speed
2043M15P02	T2.5 Temperature Sensor
2043M15P03	T2.5 Temperature Sensor
2043M16P03	T3 Temperature Sensor

2043M17P03	VBV Actuator
2043M18P02	VSV Actuator
2043M19P01	Main Fuel Filter Assembly
2043M21P03	Wiring Harnesses
2043M21P04	Wiring Harnesses
2043M21P05	Wiring Harnesses
2043M23P03	Wiring Harnesses
2043M23P04	Wiring Harnesses
2043M23P05	Wiring Harnesses
2043M25P01	Wiring Harnesses
2043M25P02	Wiring Harnesses
2043M25P03	Wiring Harnesses
2043M27P01	Wiring Harnesses
2043M27P02	Wiring Harnesses
2043M27P03	Wiring Harnesses
2043M31P01	T1.2 Inlet Fan Temperature Sensor
2043M31P02	T1.2 Inlet Fan Temperature Sensor
2043M32P02	Turbine Clearance Temperature Sensor
2043M33P01	Thermocouple Cable Harness
2043M33P02	Thermocouple Cable Harness
2043M34P03	Delta P3 Sensor
2043M34P05	Delta P3 Sensor
2043M37P03	Oil Level and Temperature Sensor
2043M37P04	Oil Level and Temperature Sensor
2043M37P05	Oil Level and Temperature Sensor
2043M39P01	Differential Pressure Switch
2043M45P02	Transient Bleed Valve
2043M45P03	Transient Bleed Valve
2043M45P04	Transient Bleed Valve
2043M46P04	HPTCC Valve
2043M46P06	HPTCC Valve
2043M47P04	EGT Probe
2043M60P03	EGT Probe
2043M74P02	Vent Valve
2043M81P01	Hand Operated Shutoff Valve
2044M22P01	Flexible Thermocouple Harness
2044M34P01	Fuel Pump
2044M34P02	Fuel Pump
2044M35P01	Main Fuel Filter Assembly
2044M36P03	Solenoid Pilot Shutoff Valve
2044M36P06	Nacelle Anti-Ice Valve
20E68-3	Oil Cooler Assembly
2121M57P01	Aft Sump Supply Check Valve
2121M57P02	Aft Sump Supply Check Valve
2121M86P01	Resistance Temperature Detector Probe
2122M27P01	Permanent Magnet Alternator
2122M28P01	Permanent Magnet Alternator

2122M74P01	Oil Cooler and Relief Bypass Valve Assembly
2123M21P01	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P02	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P03	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P04	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M62P01	Permanent Magnet Alternator
2123M63P02	Permanent Magnet Alternator
2123M63P03	Permanent Magnet Alternator
2123M78P01	HPTCC Valve
2124M36P02	Wiring Harnesses
2124M37P02	Wiring Harnesses
2124M38P02	Wiring Harnesses
2124M39P02	Wiring Harnesses
2124M40P02	Wiring Harnesses
2124M41P02	Wiring Harnesses
2124M42P02	Wiring Harnesses
2124M46P02	Wiring Harnesses
2124M47P02	Wiring Harnesses
2124M48P02	Wiring Harnesses
2124M50P01	Wiring Harnesses
2124M51P01	Wiring Harnesses
2124M52P02	Wiring Harnesses
2124M53P02	Wiring Harnesses
2124M59P02	Wiring Harnesses
2124M60P02	Wiring Harnesses
2124M62P04	FADEC Cooling Fan
2124M62P05	FADEC Cooling Fan
2125M74P03	Oil Tank
2139M45P03	Fuel Strainer Delta Pressure Transducer
2139M60P01	Three Inch Diameter Starter Valve
2139M85P02	Thermocouple Cable Harness
2139M86P01	EGT Probe
2139M87P02	EGT Probe
2160M11P03	Wiring Harness
2160M11P04	Wiring Harness
2160M12P03	Wiring Harness
2192000-3	Thrust Reverser Actuator
2192000-4	Thrust Reverser Actuator
2192000-5	Thrust Reverser Actuator
2192000-6	Thrust Reverser Actuator
2192000-7	Thrust Reverser Actuator
21C1-1-16B	Pressure Switch
21C1-1-22	No 4 Bearing Scavenge Valve Pressure Switch
21C1517A	Low Oil Pressure Switch
21SN04-259	Pressure Switch
21SN04-260	Pressure Switch
21SN04-260A	Pressure Switch

21SN04-275A	Low Oil Pressure Switch
21SN04-298A	Scavenge Filter Pressure Switch
21SN04-300B	Fuel Filter Differential Pressure Switch
21SN04-352	Pressure Switch
21SN04-353	Pressure Switch
21SN04-354	Pressure Switch
21SN04-355	Pressure Switch
21SN04-356D	Main Oil Filter Differential Pressure Switch
21SN04-370	Low Oil Pressure Switch
21SN04-371	Scavenge Filter Pressure Switch
21SN04-372	Fuel Filter Differential Pressure Switch
21SN04-383A	Oil Filter Differential Pressure Switch
21SN04-389A	Oil Filter Differential Pressure Switch
21SN04-389B	Oil Filter Differential Pressure Switch
21SN04-391	Oil Filter Differential Pressure Switch
21SN04-391A	Oil Filter Differential Pressure Switch
21SN04-401	Main Oil Filter Differential Pressure Switch
21SN04-402	Oil Filter Differential Pressure Switch
21SN04-403	Oil Filter Differential Pressure Switch
21SN04-404	Oil Filter Differential Pressure Switch
21SN04-405	Oil Filter Differential Pressure Switch
21SN04-413	Main Oil Filter Differential Pressure Switch
21SN04-413A	Main Oil Filter Differential Pressure Switch
21SN04-415	Oil Filter Differential Pressure Switch
21SN04-416	Oil Filter Differential Pressure Switch
21SN04-417	Oil Filter Differential Pressure Switch
21SN04-422A	Oil Pressure Switch
21SN04-422B	Oil Pressure Switch
21SN04-459	Main Oil Filter Differential Pressure Switch
21SN04-70	Pressure Switch
21SN04-70A	Pressure Switch
21SN04-71	Pressure Switch
21SN04-89	Pressure Switch Assembly
21SN41-109A	TAI Pressure Switch
21SN41-88	Pressure Switch (Douglas Aircraft)
21SN41-88A	Pressure Switch (Douglas Aircraft)
221-0240-501	Foward Engine Mount
221-0240-503	Foward Engine Mount
221-0240-505	Foward Engine Mount
221-0240-507	Foward Engine Mount
221-0240-509	Foward Engine Mount
221-0240-511	Foward Engine Mount
221-0240-513	Foward Engine Mount
221-112-501	Fire Detector
221-1210	Wire Harnesses
221-1211	Fire Detector
221-4049-503	Foward Engine Mount



221-4049-507	Foward Engine Mount
221-4086-507	Foward Engine Mount
221-4086-509	Foward Engine Mount
221-4086-515	Foward Engine Mount
221-4086-517	Foward Engine Mount
221-4125-1001	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1003	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1005	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1007	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1009	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1011	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1013	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1015	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-509	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-511	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-517	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-519	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-549	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-551	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-565	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-567	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-569	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-571	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-577	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-579	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-585	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-587	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-589	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-591	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4550-509	Fire Detector
221-4550-513	Fire Detector
221-4550-517	Fire Detector
221-4550-519	Fire Detector
221-4550-523	Fire Detector
221-5127-1001	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1003	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1007	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1025	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1027	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1029	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1031	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-509	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-511	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-517	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-519	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-521	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-523	Thrust Reverser Assembly (Douglas Aircraft Installation)

 
221-5127-525	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-527	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-529	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-531	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1001	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1003	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1013	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1015	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-505	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-509	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-511	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-513	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-515	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5560-503	Fire Detector
221-5560-505	Fire Detector
221-5560-507	Fire Detector
2230M80P02	Oil Filter Module
2233M80P01	Lube and Scavenge Pump
22640-005	Immersion Thermocouple
22868-001	Exhaust Gas Temperature (EGT) Harness Assembly
22912-000	Fuel Temperature Thermocouple
2293B010000	Check Valve
2293B020000	Check Valve
22953-002	Stage 10 to HPT Air Valve
22969-002	T3/TCA Harness Assembly
2340M53P01	Wiring Harnesses
23504-001	EEC Thermocouple Probe (Tt3)
23830-000	Exhaust Gas Temperature (EGT)/T3 Harness
23E59-3	Valve
23E59-4	Valve
23E59-5	Valve
23E59-6	Valve
23E59-7	Valve
23E59-8	Valve
23E59-9	Valve
2404M53P01	Wiring Harnesses
2404M63P01	Wiring Harnesses
2422M36P01	Wiring Harnesses
2422M37P01	Wiring Harnesses
2424M43P02	Wiring Harnesses
2424M58P02	Wiring Harnesses
243601-26	Main Fuel Gear Pump
243601-27	Main Fuel Gear Pump
243601-28	Main Fuel Gear Pump
243601-29	Main Fuel Gear Pump
243601-30	Main Fuel Gear Pump
243601-31	Main Fuel Gear Pump

243601-32	Main Fuel Gear Pump
243601-33	Main Fuel Gear Pump
243601-34	Main Fuel Gear Pump
243601-35	Main Fuel Gear Pump
243601-36	Main Fuel Gear Pump
2497M68P01	Wiring Harnesses
24E17-3	Shutoff Valve Assembly
24F5002	Oil Tank
24F5202	Oil Tank
24F5402	Oil Tank
2502M85P01	Wiring Harnesses
2502M86P01	Wiring Harnesses
2502M87P01	Wiring Harnesses
2519M24P01	Wiring Harnesses
2519M25P01	Wiring Harnesses
2560M22P01	Wiring Harnesses
2560M86P01	Wiring Harnesses
2560M91P01	Wiring Harnesses
2560M92P01	Wiring Harnesses
2560M94P01	Wiring Harnesses
2560M95P01	Wiring Harnesses
2560M96P01	Wiring Harnesses
2560M97P01	Wiring Harnesses
2560M98P01	Wiring Harnesses
2561M51P01	Wiring Harnesses
2561M52P01	Wiring Harnesses
2561M55P01	Wiring Harnesses
2561M56P01	Wiring Harnesses
2561M57P01	Wiring Harnesses
2561M58P01	Wiring Harnesses
2561M63P01	Wiring Harnesses
2561M64P01	Wiring Harnesses
2568M00P01	Wiring Harnesses
2568M98P01	Wiring Harnesses
2576M20P01	Wiring Harnesses
2581M82P01	Wiring Harnesses
2581M83P01	Wiring Harnesses
25975-000	E.G.T. Harness and Junction Box
2604880-001	Feedback Control Assembly, Variable Stator Vane, Vsv
2604880-002	Feedback Cable Assembly, Variable Bleed Valve, Vbv
2607MK1	Variable Stator Vane Actuator
2607MK2	Variable Stator Vane Actuator
2607MK3	Variable Stator Vane Actuator
2612M47P01	Wiring Harnesses
2617M97P01	Core Compartment Cooling Valve
26257-000	EGT (T4.9) Thermocouple Box and Cable
2700336M1	Oil Tank Pressurizing Valve

2704480-1	Permanent Magnet Alternator
2704M03P01	Exhaust Gas Temperature Probe
2710540-1	Permanent Magnet Alternator
2710880M2	Reverse Thrust Limiter Valve
2710880M3	Reverse Thrust Limiter Valve
2710880M4	Reverse Thrust Limiter Valve
27344-000	EEC Thermocouple Probe (Tt3)
2760M31P01	EGT Wiring Harness
2766M70P01	Wiring Harnesses
2766M71P01	Wiring Harnesses
2766M72P01	Wiring Harnesses
2766M73P01	Wiring Harnesses
2766M74P01	Wiring Harnesses
2766M75P01	Wiring Harnesses
2780436-102	Reverse Thrust Limiter Valve
2810194-106	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-108	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-114	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-115	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-116	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-117	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-118	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-119	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-120	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-121	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-122	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-123	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-124	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-125	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-126	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2810194-127	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
2A0528	Total Pressure and Total Temperature
2A1380	E.G.T. Harness and Junction Box
2A1609	E.G.T. Harness and Junction Box
2A3343	Total Pressure and Total Temperature
2A3580	E.G.T. Harness and Junction Box
2S6392-2	Check Valve, Bleed Air 4.50 inch
2S6392-3	Check Valve, Bleed Air 4.50 inch
2S6392-4	Check Valve, Bleed Air 4.50 inch
2U2202-3	TRAS Locking Actuator Assembly
2U2202-4	TRAS Locking Actuator Assembly
2U2202-5	TRAS Locking Actuator Assembly
2U2202-6	TRAS Locking Actuator Assembly
2U2202-7	TRAS Locking Actuator Assembly
2U2202-8	TRAS Locking Actuator Assembly
2U2203-3	Feedback Actuator Assembly
2U2203-4	Feedback Actuator Assembly

2U2211-1	Cowl Lock Assembly
2U2281-2	Feedback Actuator Assembly
2U2281-3	Feedback Actuator Assembly
2U2282-1	Locking Actuator Assembly
2U2282-3	Locking Actuator Assembly
2U2282-4	Locking Actuator Assembly
2U2283-1	Isolation Control Valve Assembly
2U2284-1	Directional Control Valve
2U2285-3	Cowl Lock Assembly
2U2285-4	Cowl Lock Assembly
2U2285-5	Cowl Lock Assembly
2U2285-6	Cowl Lock Assembly
301-548-007-0	Oil Tank
301-572-030-0	Lubrication Unit
301-572-031-0	Lubrication Unit
301-572-032-0	Lubrication Unit
301-771-503-0	Variable Bleed Valve Feedback Cable
301-772-101-0	Flexible Shaft Assembly
301-772-601-0	Bleed Valve Fuel Gear Motor
301-772-602-0	Bleed Valve Fuel Gear Motor
301-772-652-0	Bleed Valve Fuel Gear Motor
301-772-901-0	Servo Fuel Heater
301-774-201-0	Flexible Shaft Assembly
301-774-702-0	Bleed Valve Fuel Gear Motor
301-774-703-0	Bleed Valve Fuel Gear Motor
301-774-704-0	Bleed Valve Fuel Gear Motor
301-774-705-0	Bleed Valve Fuel Gear Motor
301-774-706-0	Bleed Valve Fuel Gear Motor
301-774-707-0	Bleed Valve Fuel Gear Motor
301-774-708-0	Bleed Valve Fuel Gear Motor
301-774-709-0	Bleed Valve Fuel Gear Motor
301-775-701-0	RH and LH T495 Thermocouple Wiring Segments
301-775-703-0	RH and LH T495 Thermocouple Wiring Segments
301-775-801-0	RH and LH T495 Thermocouple Wiring Segments
301-775-803-0	RH and LH T495 Thermocouple Wiring Segments
301-775-901-0	thermocouple
301-775-902-0	thermocouple
301-776-101-1	Fuel Pump
301-776-102-0	Fuel Pump
301-776-103-0	Fuel Pump
301-776-104-0	Fuel Pump
301-776-105-0	Fuel Pump
301-776-106-0	Fuel Pump
301-776-108-0	Fuel Pump
301-776-109-0	Fuel Pump
301-776-110-0	Fuel Pump
301-776-111-0	Fuel Pump

301-776-112-0	Fuel Pump
301-776-113-0	Fuel Pump
301-776-114-0	Fuel Pump
301-776-115-0	Fuel Pump
301-776-206-0	Master Ballscrew Actuator Assembly
301-776-207-0	Master Ballscrew Actuator Assembly
301-776-305-0	Ballscrew Actuator Assembly
301-776-306-0	Ballscrew Actuator Assembly
301-776-501-0	Servo Fuel Heater
301-776-702-0	Bleed Valve Fuel Gear Motor
301-776-703-0	Bleed Valve Fuel Gear Motor
301-776-704-0	Bleed Valve Fuel Gear Motor
301-777-701-0	Flexible Shaft Assembly
301-777-702-0	Flexible Shaft Assembly
301-777-801-0	Flexible Shaft Assembly
301-777-802-0	Flexible Shaft Assembly
301-778-401-0	RH and LH T495 Thermocouple Wiring Harness
301-778-501-0	RH and LH T495 Thermocouple Wiring Harness
301-778-801-0	Fuel Pump
301-778-802-0	Fuel Pump
301-778-804-0	Fuel Pump
301-778-805-0	Fuel Pump
301-778-806-0	Fuel Pump
301-779-001-0	Fuel Pump
301-779-002-0	Fuel Pump
301-779-005-0	Fuel Pump
301-779-006-0	Fuel Pump
301-779-007-0	Fuel Pump
301-779-101-0	Fuel Pump
301-779-102-0	Fuel Pump
301-779-201-0	IDG Oil Cooler
301-779-501-0	Servo Fuel Heater
301-779-502-0	Servo Fuel Heater
301-779-701-0	T495 Thermocouple Wiring Harness
301-779-801-0	T495 Thermocouple Wiring Harness
301-779-802-0	T495 Thermocouple Wiring Harness
301-779-803-0	T495 Thermocouple Wiring Harness
301-780-102-0	RH and LH T495 Thermocouple Wiring Harness
301-780-201-0	T495 Thermocouple Wiring Harness
301-780-401-0	T495 Thermocouple Wiring Harness
301-780-804-0	VBV Position Sensor
301-780-805-0	VBV Position Sensor
301-781-402-0	Stop Mechanism
301-781-403-0	Stop Mechanism
301-781-404-0	Stop Mechanism
301-781-405-0	Stop Mechanism
301-783-701-0	Fuel Return Valve

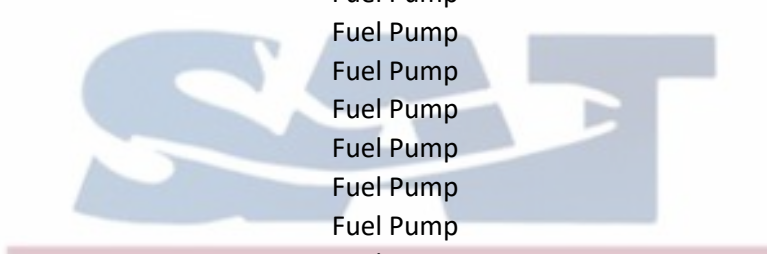

301-783-702-0	Fuel Return Valve
301-784-101-0	RH and LH T495 Thermocouple Wiring Harness
301-784-201-0	T495 Thermocouple Wiring Harness
301-784-202-0	T495 Thermocouple Wiring Harness
301-784-203-0	T495 Thermocouple Wiring Harness
301-784-401-0	T495 Wiring Harness
301-784-402-0	T495 Wiring Harness
301-784-403-0	T495 Wiring Harness
301-784-501-0	T495 Wiring Harness
301-784-502-0	T495 Wiring Harness
301-784-503-0	T495 Wiring Harness
301-784-601-0	T495 Wiring Harness
301-784-602-0	T495 Wiring Harness
301-784-603-0	T495 Wiring Harness
301-784-701-0	T495 Wiring Harness
301-784-702-0	T495 Wiring Harness
301-784-703-0	T495 Wiring Harness
301-784-801-0	T495 Wiring Harness
301-784-802-0	T495 Wiring Harness
301-784-803-0	T495 Wiring Harness
301-784-901-0	T5 Temperature Sensor
301-784-902-0	T5 Temperature Sensor
301-785-001-0	T495 Thermocouple Wiring Harness
301-785-002-0	T495 Thermocouple Wiring Harness
301-785-003-0	T495 Thermocouple Wiring Harness
301-785-101-0	T495 Thermocouple Wiring Harness
301-785-102-0	T495 Thermocouple Wiring Harness
301-785-103-0	T495 Thermocouple Wiring Harness
301-785-201-0	T495 Thermocouple Wiring Harness
301-785-202-0	T495 Thermocouple Wiring Harness
301-785-203-0	T495 Thermocouple Wiring Harness
301-785-204-0	T495 Thermocouple Wiring Harness
301-785-205-0	T495 Thermocouple Wiring Harness
301-785-301-0	T495 Thermocouple Wiring Harness
301-785-501-0	Fuel Pump
301-785-502-0	Fuel Pump
301-785-503-0	Fuel Pump
301-785-504-0	Fuel Pump
301-787-001-0	Air Valve LPTACC Module
301-787-401-0	Solenoid Valve
301-787-701-0	Air Valve LPTACC Module
301-787-702-0	Air Valve LPTACC Module
301-787-703-0	Air Valve LPTACC Module
301-787-801-0	T495 Thermocouple Wiring Harness
301-787-802-0	T495 Thermocouple Wiring Harness
301-787-803-0	T495 Thermocouple Wiring Harness
301-787-902-0	IDG Oil Cooler

301-787-903-0	IDG Oil Cooler
301-789-101-0	Servo Fuel Heater
301-789-102-0	Servo Fuel Heater
301-790-101-0	IDG Oil Cooler
301-790-301-0	VBV Position Sensor
301-790-302-0	VBV Position Sensor
301-791-301-0	Master Ballscrew Actuator Assembly
301-791-302-0	Master Ballscrew Actuator Assembly
301-791-901-0	T5 Temperature Sensor
301-792-701-0	Master Ballscrew Actuator Assembly
301-792-702-0	Master Ballscrew Actuator Assembly
301-792-703-0	Master Ballscrew Actuator Assembly
301-792-751-0	Master Ballscrew Actuator Assembly
301-792-801-0	Ballscrew Actuator Assembly
301-792-802-0	Ballscrew Actuator Assembly
301-792-803-0	Ballscrew Actuator Assembly
301-792-901-0	Bleed Valve Fuel Gear Motor
301-792-951-0	Bleed Valve Fuel Gear Motor
301-793-901-0	Master Ballscrew Actuator Assembly
301-793-902-0	Master Ballscrew Actuator Assembly
301-793-952-0	Master Ballscrew Actuator Assembly
301-794-101-0	Air Valve LPTACC Module
301-794-102-0	Air Valve LPTACC Module
301-795-401-0	Fuel Return Valve
301-795-402-0	Fuel Return Valve
301-795-702-0	T495 Wiring Harness
301-795-703-0	T495 Wiring Harness
301-795-704-0	T495 Wiring Harness
301-795-705-0	T495 Wiring Harness
301-795-706-0	T495 Wiring Harness
301-795-707-0	T495 Wiring Harness
301-795-708-0	T495 Wiring Harness
301-795-802-0	T495 Wiring Harness
301-795-803-0	T495 Wiring Harness
301-795-804-0	T495 Wiring Harness
301-795-805-0	T495 Wiring Harness
301-795-806-0	T495 Wiring Harness
301-795-901-0	T495 Wiring Harness
301-795-902-0	T495 Wiring Harness
301-795-903-0	T495 Wiring Harness
301-795-904-0	T495 Wiring Harness
301-795-951-0	Master Ballscrew Actuator Assembly
301-796-001-0	T495 Wiring Harness
301-796-002-0	T495 Wiring Harness
301-796-003-0	T495 Wiring Harness
301-796-004-0	T495 Wiring Harness
301-796-102-0	T495 Wiring Harness



301-796-301-0	Air Valve LPTACC Module
301-796-302-0	Air Valve LPTACC Module
301-796-303-0	Air Valve LPTACC Module
301-796-304-0	Air Valve LPTACC Module
301-796-311-0	Air Valve LPTACC Module
301-796-312-0	Air Valve LPTACC Module
301-797-001-0	T495 Thermocouple Wiring Harness
301-797-002-0	T495 Thermocouple Wiring Harness
301-797-003-0	T495 Thermocouple Wiring Harness
301-797-101-0	T495 Thermocouple Wiring Harness
301-797-102-0	T495 Thermocouple Wiring Harness
301-797-103-0	T495 Thermocouple Wiring Harness
301-797-201-0	T495 Thermocouple Wiring Harness
301-797-202-0	T495 Thermocouple Wiring Harness
301-797-203-0	T495 Thermocouple Wiring Harness
301-797-301-0	T495 Thermocouple Wiring Harness
301-797-302-0	T495 Thermocouple Wiring Harness
301-797-303-0	T495 Thermocouple Wiring Harness
301-797-304-0	T495 Thermocouple Wiring Harness
301-797-401-0	Fuel Pump
301-797-402-0	Fuel Pump
301-797-501-0	Master Ballscrew Actuator Assembly
301-797-502-0	Master Ballscrew Actuator Assembly
301-797-503-0	Master Ballscrew Actuator Assembly
301-797-601-0	Ballscrew Actuator Assembly
301-797-602-0	Ballscrew Actuator Assembly
301-797-603-0	Ballscrew Actuator Assembly
301-797-901-0	T495 Thermocouple Wiring Harness
301-798-001-0	T495 Thermocouple Wiring Harness
301-798-101-0	T495 Thermocouple Wiring Harness
301-798-201-0	T495 Thermocouple Wiring Harness
301-798-204-0	T495 Thermocouple Wiring Harness
301-798-401-0	T5 Temperature Sensor
301-798-402-0	T5 Temperature Sensor
301-798-501-0	Fuel Return Valve
301-798-801-0	Fuel Return Valve
301-798-901-0	Fuel Return Valve
301-799-001-0	T5 Temperature Sensor
301-799-002-0	T5 Temperature Sensor
301-799-101-0	T495 Thermocouple Wiring Harness
301-799-102-0	T495 Thermocouple Wiring Harness
301-799-103-0	T495 Thermocouple Wiring Harness
301-799-201-0	T495 Thermocouple Wiring Harness
301-799-202-0	T495 Thermocouple Wiring Harness
301-799-203-0	T495 Thermocouple Wiring Harness
301-800-101-0	T495 Wiring Harness
301-800-102-0	T495 Wiring Harness

301-800-103-0	T495 Wiring Harness
301-800-104-0	T495 Wiring Harness
301-801-201-0	Master Ballscrew Actuator Assembly
301-801-301-0	Ballscrew Actuator Assembly
301-806-201-0	IDG Oil Cooler
301-807-301-0	Fuel Return Valve
301-807-401-0	Fuel Return Valve
301-807-901-0	VBV Position Sensor
301-807-902-0	VBV Position Sensor
301-808-001-0	VBV Position Sensor
301-808-002-0	VBV Position Sensor
301-809-502-0	Oil Tank
301-809-602-0	Oil Tank
301-809-702-0	Oil Tank
301-809-801-0	T495 Thermocouple Wiring Harness
301-809-901-0	T495 Thermocouple Wiring Harness
301-810-001-0	T495 Thermocouple Wiring Harness
301-810-101-0	T495 Thermocouple Wiring Harness
301-810-201-0	T495 Thermocouple Wiring Harness
301-810-301-0	T495 Thermocouple Wiring Harness
301-810-803-0	Fuel Return Valve
301-810-903-0	Fuel Return Valve
301-910-005-0	LPTACC Valve
301-910-006-0	LPTACC Valve
301-910-007-0	LPTACC Valve
3031863-001	Pump
305-620-502-0	Thrust Reverser Actuator
305-620-503-0	Thrust Reverser Actuator
305-620-504-0	Thrust Reverser Actuator
305-620-505-0	Thrust Reverser Actuator
305-620-506-0	Thrust Reverser Actuator
305-620-801-0	Thrust Reverser Hydraulic Control Unit
305-620-804-0	Thrust Reverser Hydraulic Control Unit
305-620-805-0	Thrust Reverser Hydraulic Control Unit
305-620-806-0	Thrust Reverser Hydraulic Control Unit
305-620-807-0	Thrust Reverser Hydraulic Control Unit
305-620-808-0	Thrust Reverser Hydraulic Control Unit
305-620-809-0	Thrust Reverser Hydraulic Control Unit
305-620-810-0	Thrust Reverser Hydraulic Control Unit
305-620-811-0	Thrust Reverser Hydraulic Control Unit
305-620-812-0	Thrust Reverser Hydraulic Control Unit
305-621-201-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-202-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-203-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-204-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-205-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-206-0	Thrust Reverser Cowl Opening Hydraulic Actuator

305-621-701-0	Check Valve
305-621-801-0	Thrust Reverser Hydraulic Control Unit
305-621-901-0	Check Valve
305-622-101-0	Thrust Reverser Actuator
305-643-902-0	Thrust Reverser Flexible Shafts
305-644-002-0	Thrust Reverser Flexible Shafts
305-644-602-0	Thrust Reverser Flexible Shafts
31-75107-3020-4	Lube and Scavenge Pump
31-75107-4063-5	Oil Pump Assembly
31-75107-4086-5	Oil Pump Assembly
31-75107-4101-5	Oil Pump Assembly
31-75107-4103-5	Oil Pump Assembly
320 212-201-0	Electrical Harness CJ13
320-083-101-0	Thrust Reverser Wiring Harness
320-113-902-0	Thrust Reverser Wiring Harness
320-198-001-0	Electrical Harness J7
320-198-101-0 -	Electrical Harness J8
320-198-401-0	Electrical Harness J11
320-198-501-0	Electrical Harness J12
320-198-902-0	Electrical Harness CJ11R
320-199-001-0	Electrical Harness CJ12R
320-199-101-0	Electrical Harness CJ13
320-199-201-0	Electrical Harness CJ11L
320-199-401-0	Electrical Harness J10
320-199-501-0	Electrical Harness J9
320-199-601-0	Electrical Harness J13
320-212-001-0	Electrical Harness J9
320-212-101-0	Electrical Harness J10
320-212-102-0	Electrical Harness J10
320-212-301-0	Electrical Harness J8
320-213-501-0	Electrical Harness CJ11R
320-213-601-0	Electrical Harness CJ12R
320-213-801-0	Electrical Harness J9
320-213-802-0	Electrical Harness J9
3202176-1	Thrust Reverser Feedback Mechanism Assembly
3202176-2	Thrust Reverser Feedback Mechanism Assembly
3202176-3	Thrust Reverser Feedback Mechanism Assembly
320-228-001-0	Electrical Harness CJ13
320-228-002-0	Electrical Harness CJ13
320-228-801-0	Electrical Harness J11
320-248-301-0	Electrical Harness J15
320-253-201-0	Electrical Harness J5
320-253-202-0	Electrical Harness J5
320-253-302-0	Electrical Harness J6
320-253-602-0	Electrical Harness J9
320-253-603-0	Electrical Harness J9
320-253-701-0	Electrical Harness J10

320-253-702-0	Electrical Harness J10
320-254-401-0	Electrical Harness CJ9R
320-254-501-0	Electrical Harness CJ 10R
320-261-301-0	Electrical Harness J15
320-261-701-0	Electrical Harness J7
320-261-702-0	Electrical Harness J7
320-282-901-0	Electrical Harness CJ11L
320-284-701-0	Electrical Harness CJ10L
320-284-801-0	Electrical Harness J7
320-284-802-0	Electrical Harness J7
320-284-901-0	Electrical Harness J8
320-284-902-0	Electrical Harness J8
320-284-903-0	Electrical Harness J8
320-284-904-0	Electrical Harness J8
320-290-101-0	Electrical Harness CJ11R
320-290-102-0	Electrical Harness CJ11R
320-290-201-0	Electrical
320-290-301-0	Electrical Harness CJ12R
320-290-302-0	Electrical Harness CJ12R
320-292-301-0	Electrical Harness CJ9L
320-292-401-0	Electrical Harness CJ10L
320-295-601-0	Electrical Harness J8
320-295-602-0	Electrical Harness J8
320-296-801-0	Electrical Harness J12
320-298-101-0	Electrical Harness DPM
320-298-601-0	Electrical Harness J8
320-298-602-0	Electrical Harness J8
320-298-801-0	Electrical Harness J7
320-298-802-0	Electrical Harness J7
320-323-001-0	Electrical Harness CJ9R
320-323-201-0	Electrical Harness CJ9L
320-323-301-0	Electrical Harness CJ9L
320-323-701-0	Electrical Harness CJ10L
320-323-801-0	Electrical Harness CJ10L
320-323-901-0	Electrical Harness CJ10L
320-346-001-0	Electrical Harness CJ13
320-346-101-0	Electrical Harness CJ13
320-346-201-0	Electrical Harness CJ13
320-346-301-0	Electrical Harness CJ13
320-346-401-0	Electrical Harness CJ13
320-357-001-0	Electrical Harness J15
320-359-401-0	Electrical Harness CJ 10R
320-359-501-0	Electrical Harness CJ9L
320-363-201-0	Electrical Harness CJ9L
320-363-301-0	Electrical Harness CJ10L
320-364-001-0	Electrical Harness J7
320-364-101-0	Electrical Harness J8

320-364-201-0	Electrical Harness J9
320-364-202-0	Electrical Harness J9
320-364-203-0	Electrical Harness J9
320-364-401-0	Electrical Harness 11
320-364-501-0	Electrical Harness J13
320-366-201-0	Electrical Harness J11
320-366-301-0	Electrical Harness J12
320-366-401-0	Electrical Harness J13
320-366-402-0	Electrical Harness J13
320-366-501-0	Electrical Harness CJ11R
320-366-601-0	Electrical Harness CJ12R
320-366-701-0	Electrical Harness CJ13
320-370-301-0	Electrical Harness CJ12R
320-372-601-0	Electrical Harness J10
320-372-602-0	Electrical Harness J10
320-383-202-0	Fan Electrical Harness
320-383-203-0	Fan Electrical Harness
320-383-204-0	Fan Electrical Harness
320-387-101-0	Core Electrical Harness
320-387-102-0	Core Electrical Harness
320-387-201-0	Core Electrical Harness
320-387-202-0	Core Electrical Harness
320-387-301-0	Core Electrical Harness
320-387-302-0	Core Electrical Harness
320-387-401-0	Core Electrical Harness
320-387-402-0	Core Electrical Harness
320-387-501-0	Core Electrical Harness
320-387-502-0	Core Electrical Harness
320-387-503-0	Core Electrical Harness
320-390-701-0	Fan Electrical Harness
320-392-601-0	Electrical Harness J7
320-392-602-0	Electrical Harness J7
320-392-701-0	Electrical Harness J8
320-392-801-0	Electrical Harness J7
320-392-802-0	Electrical Harness J7
320-392-901-0	Electrical Harness J8
320-392-902-0	Electrical Harness J8
320-394-003-0	Fan Electrical Harness
320-394-004-0	Fan Electrical Harness
320-394-103-0	Fan Electrical Harness
320-394-104-0	Fan Electrical Harness
320-394-203-0	Fan Electrical Harness
320-394-204-0	Fan Electrical Harness
320-394-303-0	Fan Electrical Harness
320-394-304-0	Fan Electrical Harness
320-394-403-0	Fan Electrical Harness
320-394-404-0	Fan Electrical Harness

320-394-503-0	Fan Electrical Harness
320-394-504-0	Fan Electrical Harness
320-394-603-0	Fan Electrical Harness
320-394-604-0	Fan Electrical Harness
320-394-703-0	Fan Electrical Harness
320-394-704-0	Fan Electrical Harness
320-394-803-0	Fan Electrical Harness
320-394-804-0	Fan Electrical Harness
320-395-903-0	Fan Electrical Harness
320-396-003-0	Fan Electrical Harness
320-396-004-0	Fan Electrical Harness
320-397-002-0	Core Electrical Harness
320-397-003-0	Core Electrical Harness
320-397-004-0	Core Electrical Harness
320-397-005-0	Core Electrical Harness
320-397-104-0	Core Electrical Harness
320-397-106-0	Core Electrical Harness
320-397-107-0	Core Electrical Harness
320-397-302-0	Core Electrical Harness
320-397-304-0	Core Electrical Harness
320-397-305-0	Core Electrical Harness
320-397-402-0	Core Electrical Harness
320-397-404-0	Core Electrical Harness
320-397-405-0	Core Electrical Harness
320-397-702-0	Core Electrical Harness
320-397-703-0	Core Electrical Harness
320-397-704-0	Core Electrical Harness
320-397-802-0	Core Electrical Harness
320-397-803-0	Core Electrical Harness
320-397-804-0	Core Electrical Harness
320-397-902-0	Core Electrical Harness
320-397-904-0	Core Electrical Harness
320-397-905-0	Core Electrical Harness
320-398-002-0	Core Electrical Harness
320-398-004-0	Core Electrical Harness
320-398-005-0	Core Electrical Harness
320-398-102-0	Core Electrical Harness
320-398-103-0	Core Electrical Harness
320-398-104-0	Core Electrical Harness
320-398-202-0	Core Electrical Harness
320-398-204-0	Core Electrical Harness
320-398-205-0	Core Electrical Harness
320-398-501-0	Electrical Harness CJ10L
320-398-502-0	Electrical Harness CJ10L
320-398-601-0	Electrical Harness CJ9L
320-398-602-0	Electrical Harness CJ9L
320-398-701-0	Electrical Harness CJ11R

320-398-801-0	Electrical Harness CJ12R
320-399-001-0	Electrical Harness J7
320-399-101-0	Electrical Harness J8
320-399-201-0	Electrical Harness CJ11R
320-399-301-0	Electrical Harness CJ12R
320-400-101-0	Electrical Harness CJ10L
320-400-301-0	Electrical Harness CJ13
320-401-101-0	Electrical Harness J13
320-401-201-0	Electrical Harness CJ13
320-401-401-0	Electrical Harness J7
320-401-501-0	Electrical Harness J7
320-401-701-0	Electrical Harness CJ12R
320-402-101-0	Electrical Harness CJ11R
320-402-201-0	Electrical Harness CJ12R
320-402-301-0	Electrical Harness CJ11L
320-402-401-0	Electrical Harness CJ12L
320-407-001-0	Electrical Harness J8
320-410-102-0	Core Electrical Harness
320-410-202-0	Core Electrical Harness
320-410-301-0	Core Electrical Harness
320-410-401-0	Core Electrical Harness
320-410-702-0	Electrical Harness CJ9L
320-410-711-0	Electrical Harness CJ9R
320-410-726-0	Electrical Harness CJ10L
320-410-731-0	Electrical Harness CJ 10R
320-413-301-0	Electrical Harness CJ9L
320-413-401-0	Electrical Harness CJ9L
320-413-501-0	Electrical Harness CJ9L
320-413-601-0	Electrical Harness CJ9L
320-413-701-0	Electrical Harness CJ10L
320-413-801-0	Electrical Harness CJ10L
320-413-901-0	Electrical Harness CJ10L
320-414-001-0	Electrical Harness CJ10L
320-414-101-0	Electrical Harness CJ10L
320-414-201-0	Electrical Harness CJ10L
320-414-301-0	Electrical Harness CJ9R
320-414-401-0	Electrical Harness CJ 10R
320-802-401-0	N2 Speed Sensor
320-802-402-0	N2 Speed Sensor
320-802-403-0	N2 Speed Sensor
320-802-602-0	N1 Speed Sensor
320-802-603-0	N1 Speed Sensor
320-802-605-0	N1 Speed Sensor
320-802-606-0	N1 Speed Sensor
3213868-3	Shutoff Regulator Valve
3214236-2	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-3	Two and One-Half Inch Diameter Regulator and Shutoff Valve

3214236-4	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-5	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-6	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-7	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3215790-3	Nose Cowl Anti-Ice Valve
3216868-4	Shutoff Regulator Valve
3217KGB01	N1 Speed Sensor
3224700-2	Ground Air Supply T/R Valve
324685-1	HPTCC Valve
324685-2	HPTCC Valve
324685-2A	HPTCC Valve
324685-4	HPTCC Valve
324685-5	HPTCC Valve
325-014-802-0	Electrical Harness CJ11L
325-014-901-0	Electrical Harness CJ12L
325-015-001-0	Fire Detection Harness,
325-025-201-0	Engine Harness J9, J10
325-025-202-0	Engine Harness J9, J10
325-025-301-0	Engine Harness J9, J10
325-025-302-0	Engine Harness J9, J10
325-025-401-0	Engine Harness CJ9, CJ10
325-025-402-0	Engine Harness CJ9, CJ10
325-025-701-0	Engine Harness J5, J6 J7, J8
325-025-702-0	Engine Harness J5, J6 J7, J8
325-025-801-0	Engine Harness J5, J6 J7, J8
325-025-802-0	Engine Harness J5, J6 J7, J8
325-025-803-0	Engine Harness J5, J6 J7, J8
325-025-804-0	Engine Harness J5, J6 J7, J8
325-026-001-0	Engine Harness J5, J6 J7, J8
325-026-101-0	Engine Harness J5, J6 J7, J8
325-026-401-0	Fire Detection Harness,
325-026-501-0	Fire Detection Harness,
325-026-701-0	Fire Detection Harness,
325-026-801-0	Fire Detection Harness,
325-026-901-0	Fire Detection Harness,
325-026-902-0	Fire Detection Harness,
325-027-302-0	Fire Detection Harness,
325-027-303-0	Fire Detection Harness,
325-027-402-0	Fire Detection Harness,
325-027-403-0	Fire Detection Harness,
325-027-404-0	Fire Detection Harness,
325-027-503-0	Fire Detection Harness,
325-027-504-0	Fire Detection Harness,
325-027-505-0	Fire Detection Harness,
325-027-506-0	Fire Detection Harness,
325-027-603-0	Fire Detection Harness,
325-027-604-0	Fire Detection Harness,



325-027-605-0	Fire Detection Harness,
325-027-606-0	Fire Detection Harness,
325-027-701-0	Engine Harness CJ9, CJ10
325-027-702-0	Engine Harness CJ9, CJ10
325-029-901-0	Fire Detection Harness,
325-029-902-0	Fire Detection Harness,
325-029-903-0	Fire Detection Harness,
325-029-904-0	Fire Detection Harness,
325-029-905-0	Fire Detection Harness,
325-029-906-0	Fire Detection Harness,
325-029-907-0	Fire Detection Harness,
325-029-908-0	Fire Detection Harness,
325-034-801-0	Engine Harness J9, J10
325-034-802-0	Engine Harness J9, J10
325-034-803-0	Engine Harness J9, J10
325-034-804-0	Engine Harness J9, J10
325-034-805-0	Engine Harness J9, J10
325-034-806-0	Engine Harness J9, J10
325-034-901-0	Engine Harness J5, J6 J7, J8
325-034-902-0	Engine Harness J5, J6 J7, J8
325-035-001-0	Engine Harness J5, J6 J7, J8
325-035-002-0	Engine Harness J5, J6 J7, J8
325-035-003-0	Engine Harness J5, J6 J7, J8
325-035-201-0	Fire Detection Harness,
325-035-501-0	Fire Detection Harness,
325-035-502-0	Fire Detection Harness,
325-035-503-0	Fire Detection Harness,
325-042-001-0	Fire Detection Harness,
325-042-502-0	Engine Harness J5, J6 J7, J8
325-042-503-0	Engine Harness J5, J6 J7, J8
325-042-601-0	Engine Harness J5, J6 J7, J8
325-042-602-0	Engine Harness J5, J6 J7, J8
325-042-701-0	Engine Harness J5, J6 J7, J8
325-042-801-0	Engine Harness J5, J6 J7, J8
325-042-902-0	Fire Detection Harness,
325-043-400-0	Engine Harness J9, J10
325-043-401-0	Engine Harness J9, J10
325-043-402-0	Engine Harness J9, J10
325-043-403-0	Engine Harness J9, J10
325-043-500-0	Engine Harness J9, J10
325-043-501-0	Engine Harness J9, J10
325-043-502-0	Engine Harness J9, J10
325-043-503-0	Engine Harness J9, J10
325-043-504-0	Engine Harness J9, J10
325-043-505-0	Engine Harness J9, J10
325-045-201-0	Engine Harness CJ9, CJ10
325-045-202-0	Engine Harness CJ9, CJ10

325-045-301-0	Fire Detection Harness,
325-045-401-0	Fire Detection Harness,
325-045-501-0	Engine Harness CJ9, CJ10
325-045-502-0	Engine Harness CJ9, CJ10
3250514-3	Pneumatic Drive Unit
325-100-702-0	Engine Harness J5, J6 J7, J8
325-100-703-0	Engine Harness J5, J6 J7, J8
325-100-802-0	Engine Harness J5, J6 J7, J8
325-100-803-0	Engine Harness J5, J6 J7, J8
325-101-101-0	Engine Harness J5, J6 J7, J8
325-101-102-0	Engine Harness J5, J6 J7, J8
325-101-201-0	Engine Harness J5, J6 J7, J8
325-101-202-0	Engine Harness J5, J6 J7, J8
325-101-203-0	Engine Harness J5, J6 J7, J8
325-101-301-0	Engine Harness J9, J10
325-101-401-0	Engine Harness J9, J10
325-101-402-0	Engine Harness J9, J10
325-102-001-0	Engine Harness CJ9, CJ10
325-102-502-0	Fire Detection Harness,
325-102-503-0	Fire Detection Harness,
325-102-504-0	Fire Detection Harness,
325-102-505-0	Fire Detection Harness,
325365-4	Nacelle Cooling Valve
325365-5	Nacelle Cooling Valve
325855-1	Nacelle Cooling Valve (Douglas Aircraft Installation)
325855-2	Nacelle Cooling Valve (Douglas Aircraft Installation)
325855-3	Nacelle Cooling Valve (Douglas Aircraft Installation)
3264-100	Solenoid Timer Valve
326625-1	Racc Valve
326625-2	Racc Valve
326625-3	Racc Valve
326635-1	High Pres. Turbine Clearance Cont. Valve
326635-2	High Pres. Turbine Clearance Cont. Valve
326635-3	Valve Assy., Hptcc
326635-4	High Pres. Turbine Clearance Cont. Valve
3270514-1	Pneumatic Drive Unit
3270514-2	Pneumatic Drive Unit
327155-1	On/Off Anti-Ice Valve
327155-2	On/Off Anti-Ice Valve
327155-3	On/Off Anti-Ice Valve
3272558-2	Slave Ballscrew Actuator
3272560-2	Master Ballscrew Actuator
3272560-3	Master Ballscrew Actuator
3272560-4	Master Ballscrew Actuator
3272560-5	Master Ballscrew Actuator
3272564-1	Synchronizing Shaft Lock
3282556-1	Bleed Valve Stop Mechanism

328-2556-11	Bleed Valve Fuel Gear Motor
3282556-2	Bleed Valve Stop Mechanism
3282556-21	Stop Mechanism Sb 75-0049
328-2556-21	Bleed Valve Fuel Gear Motor
3282756-1	Throttle Feedback Balk Mechanism
3282756-2	Throttle Feedback Balk Mechanism
3282948-3	Thrust Reverser Feedback Mechanism Assembly
3282948-4	Thrust Reverser Feedback Mechanism Assembly
3282948-5	Thrust Reverser Feedback Mechanism Assembly
3282948-6	Thrust Reverser Feedback Mechanism Assembly
3282970-2	Stop Mechanism
3282970-3	Stop Mechanism
3282970-4	Stop
3282970-5	Stop Mechanism
3283096-2	Starter Control Valve Manual Release
3283096-3	Starter Control Valve Manual Release
3290064-10	Start Valve
3290064-17	Starter Valve Assembly
3290064-20	Starter Valve Assembly
3290976-2	Air Turbine Valve Assembly
3290976-4	Air Turbine Valve Assembly
3291184-1	Transient Bleed Air Valve
3291184-2	Transient Bleed Valve
3291186-5	High Pressure Turbine Clearance Valve
3291186-6	High Pressure Turbine Clearance Valve
3291186-7	High Pressure Turbine Clearance Valve
3291192-1	Nacelle Cooling Valve
3291192-2	Nacelle Cooling Valve
3291192-3	Nacelle Cooling Valve
3291192-4	Nacelle Cooling Valve
3291339-2	Starter Control Valve
3291339-3	Starter Control Valve
3291339-4	Starter Control Valve
3291390-1	Transient Bleed Valve
3291390-2	Transient Bleed Valve
3291390-3	Transient Bleed Valve
3291390-4	Transient Bleed Valve
3291552-2	Operability Bleed Valve
3291556-1	Starter Control Valve
3291556-2	Starter Control Valve
3291556-3	Starter Control Valve
3291675-1	Three Inch Diameter Starter Valve
3291675-2	Three Inch Diameter Starter Valve
3291676-2	Starter Air Valve
3291677-2	Starter Air Valve
3291680-2	Transient Bleed Valve
3291680-3	Transient Bleed Valve

3291680-4	Transient Bleed Valve
3291682-5	HPTCC Valve
3291682-6	HPTCC Valve
3291682-7	HPTCC Valve
3291708-1	Nose Cowl Anti-Ice Valve
3291798-2	Nose Cowl Anti-Ice Valve
329695-3	High Pressure Turbine Clearance Valve
329695-4	High Pressure Turbine Clearance Valve
329695-5	Shaft
329695-6	High Pressure Turbine Clearance Valve
329695-7	High Pressure Turbine Clearance Valve
329695-8	High Pressure Turbine Clearance Valve
329705-1	Rotor Active Clearance Valve
32F0003	No 4 Bearing Compartment Scavenge Valve
330-005-702-0	N1 Speed Sensor
330-005-703-0	N1 Speed Sensor
330-009-201-0	Oil Pressure Sensor
335-261-001-0	Lubrication Unit
335-261-002-0	Lubrication Unit
335-261-003-0	Lubrication Unit
335-261-004-0	Lubrication Unit
335-261-005-0	LUBRICATION
335-261-202-0	Oil Tank
335-261-203-0	Oil Tank
336-010-003-0	Lubrication Unit
336-010-004-0	Lubrication Unit
336-010-005-0	Lubrication Unit
337-039-501-0	Oil Tank
337-075-103-0	Lubrication Unit
337-075-104-0	Lubrication Unit
337-075-105-0	Lubrication Unit
338-013-801-0	Oil Tank
340-400-004-0	Lubrication Unit
340-400-005-0	Lubrication Unit
340-402-003-0	LPTACC Valve
340-402-004-0	LPTACC Valve
340-402-005-0	LPTACC Valve
340-402-006-0	LPTACC Valve
340-402-101-0	Fuel Pump
340-402-102-0	Fuel Pump
340-402-103-0	Fuel Pump
340-402-104-0	Fuel Pump
340-402-105-0	Fuel Pump
340-402-106-0	Fuel Pump
340-402-107-0	Fuel Pump
340-402-108-0	Fuel Pump
340-402-402-0	T5 Temperature Sensor

340-402-403-0	T5 Temperature Sensor
340-402-503-0	T495 Wiring Harness
340-402-504-0	T495 Wiring Harness
340-402-505-0	T495 Wiring Harness
340-402-602-0	Actuator, V.B.V.
340-402-603-0	Actuator, V.B.V.
340-402-604-0	Actuator, V.B.V.
340-402-653-0	Actuator, V.B.V.
340-402-701-0	Fuel Differential Pressure Switch
340-402-704-0	Fuel Differential Pressure Switch
340-402-706-0	Fuel Differential Pressure Switch
340-403-101-0	IDG Oil Cooler
340-403-102-0	IDG Oil Cooler
340-403-802-0	Oil Tank
340-406-801-0	Fire Detection Harness,
340-406-802-0	Fire Detection Harness,
340-406-811-0	Fire Detection Harness,
340-406-901-0	Fire Detection Harness,
340-406-902-0	Fire Detection Harness,
340-406-911-0	Fire Detection Harness,
340-408-001 -0	Fuel Filter Clogging Indicator
340-408-002-0	Fuel Filter Clogging Indicator
341-1270-501	Tubes Ducts and Hoses
341-1400-501	Tubes Ducts and Hoses
341-1430-501	Tubes Ducts and Hoses
341-5101-501	Tubes Ducts and Hoses
341-5102-501	Tubes Ducts and Hoses
341-5103-503	Tubes Ducts and Hoses
341-5103-505	Tubes Ducts and Hoses
341-5104-503	Tubes Ducts and Hoses
341-5104-505	Tubes Ducts and Hoses
341-5161-509	Tubes Ducts and Hoses
341-5161-511	Tubes Ducts and Hoses
341-5162-507	Tubes Ducts and Hoses
341-5162-509	Tubes Ducts and Hoses
341-5174-501	Tubes Ducts and Hoses
341-5193-501	Tubes Ducts and Hoses
341-5194-501	Tubes Ducts and Hoses
341-5195-501	Tubes Ducts and Hoses
341-5201-501	Tubes Ducts and Hoses
341-5202-505	Tubes Ducts and Hoses
341-5202-507	Tubes Ducts and Hoses
341-5267-501	Tubes Ducts and Hoses
341-5267-503	Tubes Ducts and Hoses
341-5905-501	Tubes Ducts and Hoses
341-5905-503	Tubes Ducts and Hoses
341-5906-501	Tubes Ducts and Hoses

341-5906-503	Tubes Ducts and Hoses
341-5907-501	Tubes Ducts and Hoses
341-5907-503	Tubes Ducts and Hoses
341-5951-501	Tubes Ducts and Hoses
341-5951-503	Tubes Ducts and Hoses
341-5952-501	Tubes Ducts and Hoses
341-5953-501	Tubes Ducts and Hoses
341-5953-503	Tubes Ducts and Hoses
341-5954-503	Tubes Ducts and Hoses
341-5954-505	Tubes Ducts and Hoses
341-5954-507	Tubes Ducts and Hoses
341-5955-503	Tubes Ducts and Hoses
341-5955-505	Tubes Ducts and Hoses
341D8003-505	Thermal Anti-Ice Valve
341D8010-501	Oil Cooler and Relief Bypass Valve Assembly
341D8021-501	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-503	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-505	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-507	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341W1421-501	Wire Harness Assemblies
341W1422-501	Wire Harness Assemblies
341W5809-501	Wire Harness Assemblies
341W5810-501	Wire Harness Assemblies
341W5811-501	Wire Harness Assemblies
341W5812-501	Wire Harness Assemblies
341W5813-501	Wire Harness Assemblies
341W5814-501	Wire Harness Assemblies
341W5815-503	Wire Harness Assemblies
341W5816-505	Wire Harness Assemblies
341W5817-501	Wire Harness Assemblies
341W5817-503	Wire Harness Assemblies
341W5818-501	Wire Harness Assemblies
341W5818-503	Wire Harness Assemblies
341W5818-507	Wire Harness Assemblies
341W5818-509	Wire Harness Assemblies
341W5818-511	Wire Harness Assemblies
350-050-005-0	Lubrication Unit
350-050-006-0	Lubrication Unit
350-106-403-0	Static Anti-Leak Valve
350-123-216-0	Lube Oil Tank
350-123-217-0	Lube Oil Tank
350-123-218-0	Lube Oil Tank
350-123-268-0	Lube Oil Tank
350-328-005-0	Lubrication Unit
350-328-006-0	Lubrication Unit
350-328-007-0	Lubrication Unit
350-328-008-0	Lubrication Unit

350-328-009-0	Lubrication Unit
3505582-12	Air Engine Turbine Starter
3505582-14	Air Engine Turbine Starter
3505582-15	Air Engine Turbine Starter
3505582-27	Starter Outline Eng
3505582-28	Air Turbine Starter
3505582-60	Air Engine Turbine Starter
3505582-61	Air Engine Turbine Starter
3505582-62	Air Engine Turbine Starter
3505582-63	Air Engine Turbine Starter
3505582-64	Air Engine Turbine Starter
3505582-65	Air Engine Turbine Starter
3505830-10	Air Turbine Starter
3505830-11	Air Turbine Starter
3505830-12	Air Turbine Starter
3505830-13	Air Turbine Starter
3505830-2	Air Turbine Starter
3505830-3	Air Turbine Starter
3505830-31	Air Turbine Starter
3505830-32	Air Turbine Starter
3505830-33	Air Turbine Starter
3505830-4	Air Turbine Starter
3505830-41	Air Turbine Starter
3505830-5	Air Turbine Starter
3505830-51	Air Turbine Starter
3505830-8	Air Turbine Starter
3505830-9	Air Turbine Starter
3505953-1	Air Turbine Engine Starter
3505953-2	Air Turbine Engine Starter
3505953-4	Air Turbine Engine Starter
3505953-5	Air Turbine Engine Starter
3505953-6	Air Turbine Engine Starter
3505953-7	Air Turbine Engine Starter
350-708-806-0	Air Turbine Valve Assembly
350-708-808-0	Air Turbine Valve Assembly
350-711-501-0	T25/PT25 Temperature Sensor
350-711-604-0	T3 Probe
350-711-606-0	T3 Probe
350-711-607-0	T3 Probe
350-711-801-0	Oil Level Sensor
350-711-901-0	Oil Pressure Sensor
350-713-102-0	Actuator, Variable Stator
350-713-103-0	Actuator, Variable Stator
350-713-803-0	Air Turbine Starter
350-713-804-0	Air Turbine Starter
350-713-805-0	Air Turbine Starter
350-713-806-0	Air Turbine Starter

350-713-808-0	Air Turbine Starter
350-713-810-0	Air Turbine Starter
350-713-811-0	Air Turbine Starter
350-713-812-0	Air Turbine Starter
350-713-813-0	Air Turbine Starter
350-713-814-0	Air Turbine Starter
350-713-815-0	Air Turbine Starter
350-713-854-0	Air Turbine Starter
350-713-855-0	Air Turbine Starter
350-713-864-0	Air Turbine Starter
350-713-874-0	Air Turbine Starter
350-714-701-0	Starter Control Valve Manual Release
350-714-801-0	Static Anti-Leak Valve
350-714-802-0	Static Anti-Leak Valve
350-714-901-0	Oil Tank
350-714-902-0	Oil Tank
350-714-904-0	Oil Tank
350-714-951-0	Oil Tank
350-714-952-0	Oil Tank
350-714-953-0	Oil Tank
350-716-301-0	T25/PT25 Temperature Sensor
350-716-302-0	T25/PT25 Temperature Sensor
350-717-701-0	Oil Level Sensor
350-717-901-0	Starter Control Valve Manual Release
350-718-001-0	Oil Tank
350-718-002-0	Oil Tank
350-718-052-0	Oil Tank
350-718-101-0	Oil Separator
350-718-651-0	Lube Oil Tank
350-719-501-0	T25/PT25 Temperature Sensor
350-719-502-0	T25/PT25 Temperature Sensor
351-700-003-0	Core Electrical Harness
351-700-104-0	Core Electrical Harness
351-700-202-0	Core Electrical Harness
351-700-203-0	Core Electrical Harness
351-700-204-0	Core Electrical Harness
351-700-205-0	Core Electrical Harness
351-700-302-0	Core Electrical Harness
351-700-303-0	Core Electrical Harness
351-700-304-0	Core Electrical Harness
351-700-305-0	Core Electrical Harness
351-700-402-0	Core Electrical Harness
351-700-502-0	Core Electrical Harness
351-700-503-0	Core Electrical Harness
351-700-602-0	Fan Electrical Harness
351-700-605-0	Fan Electrical Harness
351-700-606-0	Fan Electrical Harness



351-700-702-0	Fan Electrical Harness
351-700-704-0	Fan Electrical Harness
351-700-802-0	Fan Electrical Harness
351-700-803-0	Fan Electrical Harness
351-700-902-0	Fan Electrical Harness
351-700-903-0	Fan Electrical Harness
351-701-002-0	Fan Electrical Harness
351-701-004-0	Fan Electrical Harness
351-701-005-0	Fan Electrical Harness
351-701-102-0	Fan Electrical Harness
351-701-103-0	Fan Electrical Harness
351-701-202-0	Fan Electrical Harness
351-701-203-0	Fan Electrical Harness
351-701-204-0	Fan Electrical Harness
351-701-302-0	Nacelle electrical harness
351-701-402-0	Nacelle electrical harness
351-701-453-0	Core Electrical Harness
351-701-502-0	Fan Electrical Harness
351-701-553-0	Core Electrical Harness
351-701-605-0	Core Electrical Harness
351-701-606-0	Core Electrical Harness
351-701-607-0	Core Electrical Harness
351-701-705-0	Core Electrical Harness
351-701-706-0	Core Electrical Harness
351-701-707-0	Core Electrical Harness
351-701-708-0	Core Electrical Harness
351-701-709-0	Core Electrical Harness
351-701-710-0	Core Electrical Harness
351-701-802-0	Core Electrical Harness
351-701-902-0	Core Electrical Harness
351-702-104-0	Oil Tank
351-702-106-0	Oil Tank
351-702-201-0	Actuator, Variable Stator
351-702-202-0	Actuator, Variable Stator
351-702-303-0	Starter Control Valve
351-702-304-0	Starter Control Valve
351-702-703-0	T3 Probe
351-702-705-0	T3 Probe
351-702-706-0	T3 Probe
351-702-801-0	PT25 Temperature Sensor
351-702-802-0	PT25 Temperature Sensor
351-702-803-0	PT25 Temperature Sensor
351-703-202-0	Pressurizing Valve
351-704-010-0	Lubrication Unit
351-704-801-0	Variable Stator Actuator
351-704-802-0	Variable Stator Actuator
351-705-501-0	Lubrication Unit

351-705-502-0	Lubrication Unit
351-706-101-0	PT25 Temperature Sensor
3567402-0201	Transmitter, Engine Oil
3567403-3001	Transmitter, Engine Oil
3567404-7001	Transmitter, Engine Oil
3567407-0101	Transmitter, Engine Oil
3567908-0001	Differential Transformer Control
3567909-0001	Differential Transformer Control
358201-26	Main Fuel Gear Pump
358201-27	Main Fuel Gear Pump
358201-28	Main Fuel Gear Pump
358201-29	Main Fuel Gear Pump
358201-30	Main Fuel Gear Pump
358201-31	Main Fuel Gear Pump
358201-32	Main Fuel Gear Pump
358201-33	Main Fuel Gear Pump
358201-34	Main Fuel Gear Pump
358201-35	Main Fuel Gear Pump
358201-36	Main Fuel Gear Pump
35E38-5	Air/Oil Idg Cooler Assembly
35E38-6	Air/Oil Idg Cooler Assembly
362688-22-1	Shutoff Differential Valve
371901-26	Main Fuel Gear Pump
371901-27	Main Fuel Gear Pump
371901-28	Main Fuel Gear Pump
371901-29	Main Fuel Gear Pump
371901-30	Main Fuel Gear Pump
371901-31	Main Fuel Gear Pump
371901-32	Main Fuel Gear Pump
371901-33	Main Fuel Gear Pump
371901-34	Main Fuel Gear Pump
371901-35	Main Fuel Gear Pump
371901-36	Main Fuel Gear Pump
373401-26	Main Fuel Gear Pump
373401-27	Main Fuel Gear Pump
373401-28	Main Fuel Gear Pump
373401-29	Main Fuel Gear Pump
373401-30	Main Fuel Gear Pump
373401-32	Main Fuel Gear Pump
373401-34	Main Fuel Gear Pump
373401-36	Main Fuel Gear Pump
373401-37	Main Fuel Gear Pump
378201-10	Main Fuel Gear Pump
378201-11	Main Fuel Gear Pump
378201-12	Main Fuel Gear Pump
378201-13	Main Fuel Gear Pump
378201-3	Main Fuel Gear Pump

378201-4	Main Fuel Gear Pump
378201-5	Main Fuel Gear Pump
378201-6	Main Fuel Gear Pump
378201-7	Main Fuel Gear Pump
378201-8	Main Fuel Gear Pump
378201-9	Main Fuel Gear Pump
3800035-105	Stator Vane Actuator
3800035-106	Stator Vane Actuator
3800035-108	Stator Vane Actuator
3800035-109	Stator Vane Actuator
3800035-110	Stator Vane Actuator
3800035-111	Stator Vane Actuator
3800035-113	Stator Vane Actuator
3800035-114	Stator Vane Actuator
3800035-116	Stator Vane Actuator
3800035-117	Stator Vane Actuator
3800035-120	Stator Vane Actuator
382401-26	Main Fuel Gear Pump
382401-27	Main Fuel Gear Pump
382401-28	Main Fuel Gear Pump
382401-29	Main Fuel Gear Pump
382401-30	Main Fuel Gear Pump
382401-32	Main Fuel Gear Pump
382401-34	Main Fuel Gear Pump
382401-36	Main Fuel Gear Pump
382401-37	Main Fuel Gear Pump
3830032-103	Fuel/Oil Heat Exchanger Bypass Valve
3830032-104	Fuel/Oil Heat Exchanger Bypass Valve
3830032-105	Fuel/Oil Heat Exchanger Bypass Valve
3830041-101	Intercompressor (2.5) Bleed Actuator
3830041-103	Intercompressor (2.5) Bleed Actuator
3830041-104	Intercompressor (2.5) Bleed Actuator
3830041-105	Intercompressor (2.5) Bleed Actuator
384301-2	Main Fuel Gear Pump
384301-3	Main Fuel Gear Pump
384301-4	Main Fuel Gear Pump
384301-5	Main Fuel Gear Pump
384301-6	Main Fuel Gear Pump
384301-7	Main Fuel Gear Pump
384301-8	Main Fuel Gear Pump
386901-10	Main Fuel Gear Pump
386901-11	Main Fuel Gear Pump
386901-12	Main Fuel Gear Pump
386901-13	Main Fuel Gear Pump
386901-14	Main Fuel Gear Pump
386901-6	Main Fuel Gear Pump
386901-7	Main Fuel Gear Pump

386901-8	Main Fuel Gear Pump
386901-9	Main Fuel Gear Pump
389401-26	Main Fuel Gear Pump
389401-27	Main Fuel Gear Pump
389401-28	Main Fuel Gear Pump
389401-29	Main Fuel Gear Pump
389401-30	Main Fuel Gear Pump
389401-32	Main Fuel Gear Pump
389401-34	Main Fuel Gear Pump
389401-36	Main Fuel Gear Pump
389401-37	Main Fuel Gear Pump
3900029-104	Variable Bypass Valve Actuator
3900029-105	Variable Bypass Valve Actuator
390601-6	Main Fuel Gear Pump
390-610-201-0	Electrical Harness J5
390-610-301-0	Electrical Harness J5
390-610-401-0	Electrical Harness J5
390-610-501-0	Electrical Harness J5
390-611-001-0	Electrical Harness J5
390-611-101-0	Electrical Harness J5
390-611-201-0	Electrical Harness J5
390-611-211-0	Electrical Harness J5
390-611-301-0	Electrical Harness J5
390-611-311-0	Electrical Harness J5
390-611-401-0	Electrical Harness J5
390-611-501-0	Electrical Harness J5
390-611-601-0	Electrical Harness J5
390-611-701-0	Electrical Harness J5
390-611-801-0	Electrical Harness J5
390901-10	Main Fuel Gear Pump
390901-11	Main Fuel Gear Pump
390901-12	Main Fuel Gear Pump
390901-13	Main Fuel Gear Pump
390901-14	Main Fuel Gear Pump
390901-7	Main Fuel Gear Pump
390901-8	Main Fuel Gear Pump
390901-9	Main Fuel Gear Pump
392688-10-1	Shutoff Differential Valve
392688-1-1	Shutoff Differential Valve
392688-11-1	Shutoff Differential Valve
392688-12-1	Shutoff Differential Valve
392688-16-1	Shutoff Differential Valve
392688-17-1	Shutoff Differential Valve
392688-18-1	Shutoff Differential Valve
392688-19-1	Shutoff Differential Valve
392688-21-1	Shutoff Differential Valve
392688-5-1	Shutoff Differential Valve

392688-6-1	Shutoff Differential Valve
392688-7-1	Shutoff Differential Valve
392688-8-1	Shutoff Differential Valve
392688-9-1	Shutoff Differential Valve
396800-10	Bleed Valve Fuel Gear Motor
396800-11	Bleed Valve Fuel Gear Motor
396800-12	Bleed Valve Fuel Gear Motor
396800-5	Bleed Valve Fuel Gear Motor
396800-6	Bleed Valve Fuel Gear Motor
396800-7	Bleed Valve Fuel Gear Motor
396800-8	Bleed Valve Fuel Gear Motor
396800-9	Bleed Valve Fuel Gear Motor
4018T11P02	A-Sump Oil Scavenge Pump
4018T27P04	Electrical Chip Detector
4020T35G04	Pressure Regulating Valve
4021T56P01	Fan Speed Pickup
4021T56P03	Fan Speed Pickup
4021T56P04	Fan Speed Pickup
4022T27G22	Lube and Scavenge Pump
4027T69P03	Oil Tank Pressurizing Valve
4027T69P06	Oil Tank Pressurizing Valve
4029T33P01	Oil Drain Valve
4029T35P01	Electrical Chip Detector
4033T65P02	Fan Inlet Temperature Transmitter (T2)
4033T65P03	Fan Inlet Temperature Transmitter (T2)
4042T50P02	Permanent Magnet Alternator
4044T01G03	Lube Filter
4048T39P01	Oil Cooler Bypass Valve Assembly
4048T65P01	Fuel Check Valve
4060T64P01	Oil Filter By-Pass Sensor
4060T64P03	Oil Filter By-Pass Sensor
4060T64P04	Oil Filter By-Pass Sensor
4060T81G03	B-Sump Vent Regulator Valve
4060T81G04	B-Sump Vent Regulator Valve
4071T72P01	T2C (CIT) Sensor
40F0001	Static Anti-Leak Valve
40F0002	Static Anti-Leak Valve
40F1006	Lubrication Unit
40F1007	Lubrication Unit
40F1008	Lubrication Unit
40F6019	Lubrication Unit
40F6020	Lubrication Unit
40F6021	Lubrication Unit
4106T62P01	Main Fuel Filter
4106T93G01	B-Sump Vent Regulator
4119T01P01	Lube and Scavenge Pump
4119T01P02	Lube and Scavenge Pump

4119T01P03	Lube and Scavenge Pump
4119T01P04	Lube and Scavenge Pump
4119T01P05	Lube and Scavenge Pump
4119T01P06	Lube and Scavenge Pump
4119T04P01	Oil Filter Module
4119T04P02	Oil Filter Module
4119T21P02	Thermocouple Assembly
4119T22P02	Thermocouple Assembly
4119T26P02	Fuel Oil Heat Exchanger
4119T30P03	Fan Inlet Temperature Transmitter
4119T30P06	Fan Inlet Temperature Transmitter
4119T30P07	Fan Inlet Temperature Transmitter
4119T31P02	Thermocouple Assembly
4119T31P03	Thermocouple Assembly
4119T32P02	Thermocouple Assembly
4119T32P03	Thermocouple Assembly
4119T36P03	Fuel Oil Heat Exchanger
4119T41P01	Thermocouple Assembly
4119T42P01	Thermocouple Assembly
4119T61P03	Thermocouple Assembly
4119T61P04	Thermocouple Assembly
4119T62P03	Thermocouple Assembly
4119T62P04	Thermocouple Assembly
4120T02P05	CVG Master Actuator
4120T02P07	CVG Master Actuator
4120T03P05	CVG Slave Actuator
4120T04P04	Fuel Pump
4120T04P05	Fuel Pump
4120T04P07	Fuel Pump
4120T04P08	Fuel Pump
4120T04P09	Fuel Pump
4120T04P10	Fuel Pump
4120T05P02	Starter Control Valve
4120T05P03	Starter Control Valve
4120T05P04	Starter Control Valve
4120T06P01	Air Turbine Engine Starter
4120T06P02	Air Turbine Engine Starter
4120T06P04	Air Turbine Engine Starter
4120T06P05	Air Turbine Engine Starter
4120T06P10	Air Turbine Engine Starter
4120T06P11	Air Turbine Engine Starter
4120T07P01	Permanent Magnet Alternator
4120T07P02	Permanent Magnet Alternator
4120T08P01	Permanent Magnet Alternator
4120T11P01	N1 Fan Speed Sensor
4120T16P01	Oil Pressure Transmitter
4120T16P02	Oil Pressure Transmitter

4120T16P03	Oil Pressure Transmitter
4120T17P01	Oil Pressure Switch
4120T17P02	Oil Pressure Switch
4120T19P02	Oil Level Temperature Sensor
4120T19P03	Oil Level Temperature Sensor
4120T19P04	Oil Level Temperature Sensor
4120T20P03	Wiring Harness
4120T20P05	Wiring Harness
4120T20P07	Wiring Harness
4120T21P01	Wiring Harness
4120T21P02	Wiring Harness
4120T21P03	Wiring Harness
4120T21P05	Wiring Harness
4120T24P02	Wiring Harness
4120T24P04	Wiring Harness
4120T24P05	Wiring Harness
4120T25P02	Wiring Harness
4120T25P03	Wiring Harness
4120T26P02	Wiring Harness
4120T26P03	Wiring Harness
4121T67P02	Operability Bleed Valve
4123T61P01	Sump Seal Valve
4123T61P03	Sump Seal Valve
4123T71P02	Operability Bleed Fuel Actuated Valve
4123T71P03	Operability Bleed Fuel Actuated Valve
4123T71P04	Operability Bleed Fuel Actuated Valve
4123T71P05	Operability Bleed Fuel Actuated Valve
4142T52P03	Wiring Harness
4142T52P04	Wiring Harness
4142T52P05	Wiring Harness
4142T54P02	Wiring Harness
4142T54P03	Wiring Harness
4142T54P04	Wiring Harness
4142T54P05	Wiring Harness
4142T54P06	Wiring Harness
4142T55P02	Wiring Harness
4142T55P03	Wiring Harness
4151010-3	Shutoff Valve
4151010-4	Shutoff Valve
4157T43P01	Sump Seal Shutoff Valve
418-04124	Oil/Fuel Pressure Transmitter
418-05124	Oil/Fuel Pressure Transmitter
418-06124	Oil/Fuel Pressure Transmitter
41F1004	Lubrication Unit
41F1005	Lubrication Unit
41F5102	Oil Tank
41SG240-1	Oil Pressure Differential Transmitter

41SG240-3	Oil Pressure Differential Transmitter
41SG240-4	Oil Pressure Differential Transmitter
41SG272-3	No 4 Bearing Pressure Transducer
41SG272-5	No 4 Bearing Pressure Transducer
41SG272-6	No 4 Bearing Pressure Transducer
420085C	EEC Wiring Harnesses
420086A	EEC Wiring Harnesses
420086C	EEC Wiring Harnesses
420088B	EEC Wiring Harnesses
420090A	EEC Wiring Harnesses
420091B	EEC Wiring Harnesses
420092A	EEC Wiring Harnesses
420094B	EEC Wiring Harnesses
420505-5	TAI Pressure Switch
42054-01	Hydraulic Engine Driven Pump
420575-2	TAI Pressure Switch
420575-4	TAI Pressure Switch
420575-5	TAI Pressure Switch
420745-3	Pressure Actuated Butterfly Selector Valve
420745-4	Pressure Actuated Butterfly Selector Valve
421245-1	Nacelle Cooling and Transient Bleed Valve
421340-1	EEC Wiring Harnesses
421645-2	Sump Seal Valve
421865-2	Thermal Anti-Ice Valve
422245-1	Pressure Actuated Sleeve Shutoff Valve
423405-2	Solenoid Pilot Shutoff Valve
4252202-2	Stow Indication Switch, Thrust Reverser
4252202-3	Stow Indication Switch, Thrust Reverser
4259000-2	Manual Drive Assembly Torque Limiter
426V600	Override Bleed Valve
42D185	Differential Pressure Switch
42D362	Fuel Pump Filter Differential Pressure Switch
42D394	Fuel Pump Filter Differential Pressure Switch
42D395	Fuel Pump Filter Differential Pressure Switch
430070-2	Permanent Magnet Alternator
44895-1	Permanent Magnet Alternator
449V450	Three Way Valve
449V450-1	Three Way Valve
44E64-5	Fuel Manifold Staging Valve
44E64-6	Fuel Manifold Staging Valve
44E64-8	Fuel Manifold Staging Valve
45731-1191	Servo Fuel Heater
45731-1231-2	Servo Fuel Heater
45731-1251-1	Actuator
45731-1301-1	Servo Fuel Heater
45731-1301-2	Servo Fuel Heater
45731-1375	IDG Oil Cooler




45731-1381	Servo Fuel Heater
45731-1382	Servo Fuel Heater
45731-1385	Servo Fuel Heater
45731-1386	Servo Fuel Heater
45731-1391	Idg Oil Cooler
45731-1392	IDG Oil Cooler
45731-1393	IDG Oil Cooler
45731-1397	Fuel Cooled Oil Cooler
45D31	Differential Pressure Switch
45D32	Differential Pressure Switch
47111-1171	Fuel/Oil Heat Exchanger
47111-1172	Fuel/Oil Heat Exchanger
47111-1201	Fuel Oil Cooler
47111-1203	Fuel Oil Cooler
47111-1204	Fuel Oil Cooler
47158-5130	Heat Exchanger
472011-01	Fan Speed Pickup
473873-1	Fire Detector Assemblies
473873-2	Fire Detector Assemblies
48114-1149	IDG Air Cooled Oil Cooler
48989-1	Permanent Magnet Alternator
492143-001	EVC 3-2 and EVC 3-4 Engine Vane
5000047-01	Hand Wind Assembly
5000131-01	Fuel Manifold
5000132-01	Fuel Manifold
5000133-01	Fuel Manifold
5000134-01	Fuel Manifold
5000728-104	Operability Bleed Fuel Actuated Valve
5000728-106	Operability Bleed Fuel Actuated Valve
5001105-01	Oil Cooler
5001222-01	Stage 10 Air Solenoid Valve
5001396-01	Thermocouple Box and Cable (Tt7)
5001648-01	Stage 10 Air Solenoid Valve
50026001-1	Air Cooled Oil Cooler
5002844-01	Fuel Pressurizing and Dump/Drain Valve
5003130-01	Oil Cooler
50034001-1	Air Cooled Oil Cooler
5005228-01	Fuel Manifold
5005228-02	Fuel Manifold
5005228-03	Fuel Manifold
5005229-01	Fuel Manifold
5005229-02	Fuel Manifold
5005229-03	Fuel Manifold
5005287-01	Fuel Filter
5006514-01	Stage 10 Air Solenoid Valve
5006521-01	Immersion Thermocouple (Tt7)
5006522-01	Immersion Thermocouple (Tt7)

5006755-01	Oil Cooler
5006755-02	Oil Cooler
50069001-1	Air Cooled Oil Cooler
5007246A	Fuel Pump
5007246B	Fuel Pump
5008055-01	Oil Cooler
5008735D	L.P/HP Fuel Pump
5008735E	L.P/HP Fuel Pump
5008735F	L.P/HP Fuel Pump
5009776D	Fuel Gear Pump Assembly
5009776E	Fuel Gear Pump Assembly
5009776F	Fuel Gear Pump Assembly
5009776G	Fuel Gear Pump Assembly
5009776H	Fuel Gear Pump Assembly
5009913B	L.P/ HP Fuel Pump
5009913C	L.P/ HP Fuel Pump
5009913D	L.P/ HP Fuel Pump
5009913E	L.P/ HP Fuel Pump
5009913F	L.P/ HP Fuel Pump
5009913G	L.P/ HP Fuel Pump
5010216B	L.P/ HP Fuel Pumps
5010216C	L.P/ HP Fuel Pumps
5010216D	L.P/ HP Fuel Pumps
5010216E	L.P/ HP Fuel Pumps
5010216F	L.P/ HP Fuel Pumps
5010216G	L.P/ HP Fuel Pumps
5010224A	Fuel Pump
5010752-103	Fuel Actuated Booster Anti-Ice Valve
5010758-101	LPT Active Clearance Control Valve
5010758-103	LPT Active Clearance Control Valve
5010758-104	LPT Active Clearance Control Valve
5010759-101	Core Compartment Cooling Valve
5010759-102	Core Compartment Cooling Valve
5010759-103	Core Compartment Cooling Valve
501770-1	Wiring Harness
5023T57P02	Fuel Heater
502425-1	Wiring Harnesses
502430-1	Wiring Harnesses
503860-1	EEC Wiring Harnesses
5040908-102	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-103	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-104	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-105	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
504243-1	Resistance Temperature Detector Probe
504444-1	Wiring Harnesses
504444-2	Wiring Harnesses
504444-3	Wiring Harnesses

504445-1	Wiring Harnesses
504445-2	Wiring Harnesses
504445-3	Wiring Harnesses
5047T46G03	Oil Tank
5047T46G04	Oil Tank
5047T46G05	Oil Tank
5047T46G06	Oil Tank
5047T47G01	Drain and Shutoff Valve
5047T47G02	Drain and Shutoff Valve
504909-1	Permanent Magnet Alternator
504910-1	Permanent Magnet Alternator
504994-1	Wiring Harnesses
504995-1	Wiring Harnesses
5050T37G01	Variable Geometry Actuator
5050T37G02	Variable Geometry Actuator
5050T60P01	Main Fuel Filter
5050T60P02	Main Fuel Filter
5050T93P01	Electrical Cable Assemblies
5050T93P02	Electrical Cable Assemblies
505344-1	Permanent Magnet Alternator
5054T82G01	Oil Cooler Bypass Valve Assembly
505P044-01	Fuel Distribution Valve
505P044-02	Fuel Distribution Valve
505P044-03	Fuel Distribution Valve
5061T29P01	Electrical Cable Assemblies
506412-1	Wiring Harnesses
506413-1	Wiring Harnesses
506414-1	Wiring Harnesses
506415-1	Wiring Harnesses
506416-1	Wiring Harnesses
506569-1	Permanent Magnet Alternator
5071T70P01	Main Fuel Filter
5071T99P02	Electrical Chip Detector
5071T99P03	Electrical Chip Detector
507987-1	Wiring Harness
507989-1	Wiring Harness
507990-1	Wiring Harness
5079T04P01	Valve Assembly
5079T04P02	Valve Assembly
5079T04P03	Valve Assembly
5079T05G01	Oil Tank
5080046-101	Operability Bleed Fuel Actuated Valve
5080046-102	Operability Bleed Fuel Actuated Valve
508040-1	Wiring Harnesses
508040-2	Wiring Harnesses
508041-1	Wiring Harnesses
508041-2	Wiring Harnesses

508071-1	Wiring Harnesses
508071-2	Wiring Harnesses
508072-1	Wiring Harnesses
508072-2	Wiring Harnesses
508938-1	Wiring Harnesses
509017-1	Thrust Reverser Harnesses
509018-1	Thrust Reverser Harnesses
509019-1	Thrust Reverser Harnesses
509023-1	Thrust Reverser Harnesses
509024-1	Thrust Reverser Harnesses
509025-1	Thrust Reverser Harnesses
509028-1	Thrust Reverser Harnesses
509823-1	Wiring Harness
50E40-4	Shutoff Valve Assembly
50E40-5	VALVE -AIR I
50E40-6	Shutoff Valve Assembly
50P029	EGT (T4.95) Thermocouple Probe
50P066	EGT (T4.95) Thermocouple Probe
510-0030-1	IDG Shutoff Valve Assembly
510003-1	Wiring Harnesses
510003-2	Wiring Harnesses
510004-1	Wiring Harnesses
510004-2	Wiring Harnesses
510005-1	Wiring Harnesses
510005-2	Wiring Harnesses
510006-1	Wiring Harnesses
510006-2	Wiring Harnesses
510007-1	Wiring Harnesses
510007-2	Wiring Harnesses
510008-1	Wiring Harnesses
510008-2	Wiring Harnesses
510009-1	Wiring Harnesses
510009-2	Wiring Harnesses
510010-1	Wiring Harnesses
510010-2	Wiring Harnesses
510011-1	Wiring Harnesses
510011-2	Wiring Harnesses
510011-3	Wiring Harnesses
510012-1	Wiring Harnesses
510012-2	Wiring Harnesses
510013-1	Wiring Harnesses
510013-2	Wiring Harnesses
510013-3	Wiring Harnesses
510014-1	Wiring Harnesses
510014-2	Wiring Harnesses
510014-3	Wiring Harnesses
510015-1	Wiring Harnesses

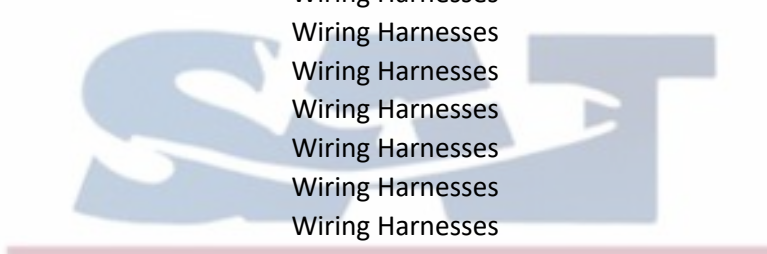 

510015-2	Wiring Harnesses
510015-3	Wiring Harnesses
510015-4	Wiring Harnesses
510016-1	Wiring Harnesses
510016-2	Wiring Harnesses
510017-1	Wiring Harnesses
510017-2	Wiring Harnesses
510018-1	Wiring Harnesses
510018-2	Wiring Harnesses
510018-3	Wiring Harnesses
510018-4	Wiring Harnesses
510019-1	Wiring Harnesses
510019-2	Wiring Harnesses
510019-3	Wiring Harnesses
510019-4	Wiring Harnesses
510020-1	Wiring Harnesses
510020-2	Wiring Harnesses
510020-3	Wiring Harnesses
510573-1	Wiring Harness
510654-1	Thrust Reverser Harnesses
510655-1	Thrust Reverser Harnesses
510656-1	Thrust Reverser Harnesses
510657-1	Thrust Reverser Harnesses
510658-1	Thrust Reverser Harnesses
510846-1	Permanent Magnet Alternator
510931-1	Wiring Harnesses
510931-2	Wiring Harnesses
510932-1	Wiring Harnesses
510932-2	Wiring Harnesses
5122T11G01	Oil Tank
512337-1	Permanent Magnet Alternator
513969-1	Wiring Harness
5140017-101	Core Compartment Cooling Valve
516P636-01	Fuel Distribution Valve
516P636-02	Fuel Distribution Valve
517794-1	Exhaust Gas Temperature Probe
519660-1	EGT Wiring Harness
51A060	Wire Harnesses ( Airbus Aircraft Installation)
51A157	Wire Harness (Douglas Aircraft Installation)
521755-1	Nacelle Anti-Ice Valve
540-0001-1	HPC Stage 7 Solenoid Valve
540-0001-2	HPC Stage 7 Solenoid Valve
540-0001-3	HPC Stage 7 Solenoid Valve
540-0001-4	HPC Stage 7 Solenoid Valve
540-0002-4	Turbine Cooling Air Valve
540-0003-4	Turbine Cooling Air Valve
540-0566-1	Turbine Cooling Air Valve

540-0710-1	Shutoff Valve Assembly
540-0710-2	Shutoff Valve Assembly
540-0712-1	Shutoff Valve Assembly
540-0712-2	Valve - Air Idg Shut Off
540-0712-3	Shutoff Valve Assembly
540-0717-1	Shutoff Valve Assembly
540-0717-2	Shutoff Valve Assembly
540-0719-1	IDG Shutoff Valve Assembly
540-0774-1	Turbine Cooling Air Valve
540-1479-6	High Pressure Bleed Valve
540-1581-6	Mid Stage Beed Valve Dual Solenoid
55022001-1	Fuel Oil Heat Exchanger
55022001-11	Fuel Oil Heat Exchanger
55024001-11	Fuel Oil Heat Exchanger
55025001-1	Fuel Oil Heat Exchanger
55029001-21	Fuel Oil Heat Exchanger
55030001-11	Fuel Oil Heat Exchanger
5537000-2	Transcowl Locking System
5537000-7	Transcowl Locking System
564651-001	EVC 3-2 and EVC 3-4 Engine Vane
56B17E	Temperature Transducers and Thermocouple Sensor
56B3A11	Temperature Transducers and Thermocouple Sensor
56B98	Oil Temperature Resistance Temperature Detectors
56BK32K	Temperature Transducers and Thermocouple Sensor
5779-1	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
5781-1	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
579V200	Fuel Manifold Drain Valve
579V200-2	Fuel Manifold Drain Valve
579V200-3	Fuel Manifold Drain Valve
580-268-012	Variable Bleed Valve Feedback Cable
580-268-041	Feedback Cable, Variable Bleed Valve, Vbv
580-285-051	Feedback Cable, Variable Stator Vane, Vsv
580-285-052	Feedback Cable, Variable Stator Vane, Vsv
580-285-054	Feedback Cable, Variable Stator Vane, Vsv
580-285-056	Feedback Cable, Variable Stator Vane, Vsv
580-285-058	Feedback Cable, Variable Stator Vane, Vsv
580-285-151	Feedback Cable, Variable Stator Vane, Vsv
580-285-152	Feedback Cable, Variable Stator Vane, Vsv
580-285-153	Feedback Cable, Variable Stator Vane, Vsv
5830201-106	Turbine Case Cooling Air Valve Actuator
5830201-107	Turbine Case Cooling Air Valve Actuator
5830201-108	Turbine Case Cooling Air Valve Actuator
5830201-109	Turbine Case Cooling Air Valve Actuator
5830201-110	Turbine Case Cooling (LPT) Air Valve
5830201-111	Turbine Case Cooling (LPT) Air Valve
5830202-101	Turbine Case Cooling (LPT) Air Valve
5830202-102	Turbine Case Cooling (LPT) Air Valve

5830202-103	Turbine Case Cooling (LPT) Air Valve
5830202-104	Turbine Case Cooling (LPT) Air Valve
5830202-105	Turbine Case Cooling (LPT) Air Valve
5830202-106	Turbine Case Cooling (LPT) Air Valve
5830202-108	Turbine Case Cooling (LPT) Air Valve
5830212-101	No. 4 Bearing Scavenge Valve Pressure Switch
5830212-102	No. 4 Bearing Scavenge Valve Pressure Switch
5830212-104	No. 4 Bearing Scavenge Valve Pressure Switch
5840207-103	No. 4 Bearing Scavenge Valve Pressure Switch
5840207-104	No. 4 Bearing Scavenge Valve Pressure Switch
5850265-103	ECU Cooling Valve
5860010-103	Stage 10 to HPT Air Valve
5860010-106	Stage 10 to HPT Air Valve
5860010-108	Stage 10 to HPT Air Valve
5860016 Series	HPT/LPT ACC Valve Assembly
5860017 Series	HPT/LPT ACC Valve Actuator Assembly
5870153-101	RACC Valve
5890421-106	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-108	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-114	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-116	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-118	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-120	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-122	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-124	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5890421-126	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910478-101	HPT/LPT ACC Valve Assembly
5910478-103	HPT/LPT ACC Valve Assembly
5910479-102	HPT/LPT ACC Valve Assembly
5910479-103	HPT/LPT ACC Valve Assembly
5910479-104	HPT/LPT ACC Valve Assembly
5910500-106	High Pressure Turbine Active Clearance Control Valve
5910503-102	Low Pressure Turbine Active Clearance Control Valve
5910503-105	Low Pressure Turbine Active Clearance Control Valve
5910504-103	Core Compartment Cooling Valve
5910504-104	Core Compartment Cooling Valve
5910504-105	Core Compartment Cooling Valve
5910524-126	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910524-128	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-106	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-107	Valve, Intake Anti-Ice
5910525-108	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-109	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-114	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-115	Valve, Intake Anti-Ice
5910525-116	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-117	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)


5910525-118	Valve, Intake Anti-Ice
5910525-119	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-119-	Valve, Intake Anti-Ice
5910525-120	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-121	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-122	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-123	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-124	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-125	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-126	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-127	Low Pressure Turbine Case Cooling Air Valve (Modulating Active Clearance Control Valve)
5910525-141	Valve, Intake Anti-Ice
5912415-4	Lube Oil Filter Assembly
5913242-3	Oil Reservoir Assembly
5930638-101	Turbine Case Cooling (LPT) Air Valve
5930638-102	Turbine Case Cooling (LPT) Air Valve
5930638-103	Turbine Case Cooling (LPT) Air Valve
5930643-106	Start Transient Bleed Valve
593764-001	EVC 3-2 and EVC 3-4 Engine Vane
5950009-102	Start Transient Bleed Valve
5950009-103	Start Transient Bleed Valve
5950041-105	Stage 10 High Pressure Compressor Bleed Valve
5950041-107	Stage 10 High Pressure Compressor Bleed Valve
5950041-108	Stage 10 High Pressure Compressor Bleed Valve
5980015-103	No. 4 Bearing Scavenge Valve
5L0022	No 4 Bearing Compartment Scavenge Valve
5L0027	LPC Bleed Slave Actuator
5L0039	L.P.C. Bleed Slave Actuator
5L0044	L.P.C. Bleed Slave Actuator
5L0059	LPC Bleed Master Actuator
5R5025	Pressure Oil Filter Element
5U0026	A.C.O.C. Oil Temperature Thermo-couple
5U0030	A.C.O.C. Oil Temperature Thermo-couple
60010-000	IDG Air/Oil Cooler
60141-000	Fuel Cooled VSCF Oil Cooler
6030T40P01	T5 Thermocouple Assembly
6030T40P02	T5 Thermocouple Assembly
6030T41P01	T5 Thermocouple Assembly
6030T41P02	T5 Thermocouple Assembly
6047T53P01	Main Fuel Pump
6047T55P01	Permanent Magnet Alternator
6047T55P02	Permanent Magnet Alternator
6047T66P01	VG Flexible Feedback Cable
6047T76P01	Electrical Cable Assemblies
6047T87P01	Electrical Cable Assemblies
6047T87P02	Electrical Cable Assemblies
6047T88P01	Electrical Cable Assemblies



6047T88P02	Electrical Cable Assemblies
604C0123-003	Isolation Control Valve Assembly
604C1501-001	Hold Open Rod Assembly
604C1501-003	Hold Open Rod Assembly
604C2001-001	Latch Assembly
604C2001-002	Latch Assembly
604C2001-003	T-Bolt Keeper Assembly
604C2001-004	T-Bolt Keeper Assembly
604C2002-001	Adjustable Hook Latch Assembly
604C2002-003	Adjustable Hook Latch Assembly
604C2002-004	Adjustable Hook Latch Assembly
604C2003-001	Hook Latch Assembly
604C2003-003	Keeper Assembly
604C2006-001	Hook Latch Assembly
604C2006-003	Keeper Assembly
604C3101-003	Feedback Actuator Assembly
604C3101-005	Feedback Actuator Assembly
604C3102-003	Locking Actuator Assembly
604C3102-007	Locking Actuator Assembly
604C3102-011	Locking Actuator Assembly
604C3103-003	Directional Control Valve
604C3104-001	Manual Drive
604C3105-005	Cowl Lock Assembly
604C3105-007	Cowl Lock Assembly
604C3105-011	Cowl Lock Assembly
604C3105-013	Cowl Lock Assembly
604C3109-001	Thrust Reverser Harnesses
604C3109-003	Thrust Reverser Harnesses
604C3109-005	Thrust Reverser Harnesses
604C3109-015	Thrust Reverser Harnesses
604C3109-017	Thrust Reverser Harnesses
604C3109-021	Thrust Reverser Harnesses
604C3109-024	Thrust Reverser Harnesses
604C3109-031	Thrust Reverser Harnesses
604C3109-033	Thrust Reverser Harnesses
604C3109-035	Thrust Reverser Harnesses
604C3109-037	Thrust Reverser Harnesses
604C3109-041	Thrust Reverser Harnesses
604C4025-001	Hook Latch Assembly
604C4025-003	Keeper Assembly
604C6103-001	Hook Latch Assembly
604C6103-003	Keeper Assembly
604C6107-001	Hold Open Rod Assembly
604C6107-003	Hold Open Rod Assembly
6052T06P03	Main Fuel Pump
6052T06P05	Main Fuel Pump
6052T12P01	Electrical Cable Assemblies

6052T23P01	Electrical Cable Assemblies
60590-000	ESM101-1 Solenoid Drive Controller Assembly
6078T09P01	Electrical Cable Assemblies
6078T39P01	Main Fuel Pump
6078T39P02	Main Fuel Pump
6078T39P03	Main Fuel Pump
6078T39P04	Main Fuel Pump
6078T39P08	Main Fuel Pump
6087T04P05	Oil Pump Assembly
6087T04P06	Oil Pump Assembly
6087T04P09	Oil Pump Assembly
6087T04P10	Oil Pump Assembly
6087T05P02	Heat Exchanger
60E70	Main Fuel Filter
623V100-1	T/R Hand Wind Mechanism
623V100-2	T/R Hand Wind Mechanism
62702-1	Position Indicating Switch
62716-1	Position Indicating Switch
62716-2	Position Indicating Switch
62716-5	Position Indicating Switch
62716-6	Position Indicating Switch
62721-1	Position Indicating Switch
62726-1	Position Indicating Switch
62742-1	Position Indicating Switch
62744-1	Position Indicating Switch
62744-3	Position Indicating Switch
6338B0001-02	Rotary Actuator Assembly Fuel Shutoff Control
658385-001	EVC 3-2 and EVC 3-4 Engine Vane
658490-001	EVC 3-2 and EVC 3-4 Engine Vane
66189-02	Variable Delivery Hydraulic Pump
66198-01	Variable Delivery Hydraulic Pump
66350-3	Door Opening-Actuator Assembly
66350-4	Door Opening-Actuator Assembly
66360-4	Door Opening-Manifold Assembly
66360-5	Door Opening-Manifold Assembly
663M96P03	IDG Shutoff Valve Assembly
666V100	Fuel Check Valve, Two-Way Restrictor
666V100-1	Fuel Check Valve, Two-Way Restrictor
6773E010000	Bleed Valve
6773F010000	High Pressure Bleed Valve
6774E010000	Actuator Ram
6774F010000	Bleed Valve
6774G010000	Bleed Valve
681L263G01	Aft Mount Assembly
681L263G02	Aft Mount Assembly
681I264G01	Aft Mount Assembly
683I239G01	Aft Mount Assembly

683I241G01	Aft Mount Assembly
684V100	Flow Control Thermostat
684V800	Flow Control Thermostat
68E54-3	IDG Shutoff Valve Assembly
68E54-4	IDG Shutoff Valve Assembly
696V300	Fuel Control Water Signal Check Valve
699-095	Turbine Blade Temperature Pyrometer
699-098	Turbine Blade Temperature Pyrometer
699-099	Turbine Blade Temperature Pyrometer
699-108	Turbine Blade Temperature Pyrometer
70010-000	IDG Air/Oil Cooler
7003M94P06	Compressor Inlet Temperature SensorAssembly
7003M94P07	Compressor Inlet Temperature SensorAssembly
7003M94P09	Compressor Inlet Temperature SensorAssembly
7017M64G01	Pressurizing and Drain Valve
7017M64G02	Pressurizing and Drain Valve
7017M64G03	Pressurizing and Drain Valve
7017M64G04	Pressurizing and Drain Valve
7020M44G01	Pressurizing and Drain Valve
7020M44G02	Pressurizing and Drain Valve
704300-1	Fuel Pump
704300-10	Fuel Pump
704300-11	Fuel Pump
704300-12	Fuel Pump
704300-13	Fuel Pump
704300-14	Fuel Pump
704300-15	Fuel Pump
704300-2	Fuel Pump
704300-3	Fuel Pump
704300-4	Fuel Pump
704300-5	Fuel Pump
704300-6	Fuel Pump
704300-8	Fuel Pump
704300-9	Fuel Pump
705301-26	Main Fuel Gear Pump
705301-27	Main Fuel Gear Pump
705301-28	Main Fuel Gear Pump
705301-29	Main Fuel Gear Pump
705301-30	Main Fuel Gear Pump
705301-32	Main Fuel Gear Pump
705301-34	Main Fuel Gear Pump
705301-36	Main Fuel Gear Pump
705301-37	Main Fuel Gear Pump
705401-26	Main Fuel Gear Pump
705401-27	Main Fuel Gear Pump
705401-28	Main Fuel Gear Pump
705401-29	Main Fuel Gear Pump

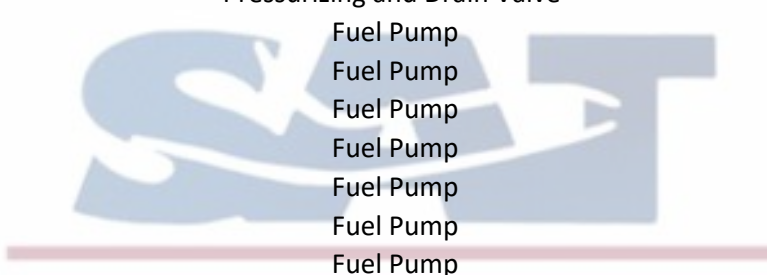 

705401-30	Main Fuel Gear Pump
705401-32	Main Fuel Gear Pump
705401-34	Main Fuel Gear Pump
705401-36	Main Fuel Gear Pump
705401-37	Main Fuel Gear Pump
705501-27	Main Fuel Gear Pump
705501-28	Main Fuel Gear Pump
705501-29	Main Fuel Gear Pump
705501-30	Main Fuel Gear Pump
705501-32	Main Fuel Gear Pump
705501-34	Main Fuel Gear Pump
705501-36	Main Fuel Gear Pump
705501-37	Main Fuel Gear Pump
7061M31G01	Turbine Clearance Control Valve
7061M31G02	Turbine Clearance Control Valve
7061M31G03	Turbine Clearance Control Valve
7061M31G04	Turbine Clearance Control Valve
7061M31G05	Turbine Clearance Control Valve
706400-2	Bleed Valve Fuel Gear Motor
706400-3	Bleed Valve Fuel Gear Motor
706400-4	Bleed Valve Fuel Gear Motor
706801-29	Main Fuel Gear Pump
706801-30	Main Fuel Gear Pump
706801-31	Main Fuel Gear Pump
706801-32	Main Fuel Gear Pump
706801-33	Main Fuel Gear Pump
706801-34	Main Fuel Gear Pump
706801-35	Main Fuel Gear Pump
706801-37	Main Fuel Gear Pump
7074-100	Actuator, V.B.V.
7074-200	Actuator, V.B.V.
7074-300	Actuator, V.B.V.
708300-1	Fuel Pump
708300-2	Fuel Pump
708300-4	Fuel Pump
708300-5	Fuel Pump
708300-6	Fuel Pump
708400-1	Fuel Pump
708400-2	Fuel Pump
708600-1	Fuel Pump
708600-2	Fuel Pump
708600-5	Fuel Pump
708600-6	Fuel Pump
708600-7	Pump-Fuel
7100M53P04	Temperature Transducers and Thermocouple Sensor
7101-01	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-02	Model 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)





7120M32P01	Temperature Transducers and Thermocouple Sensor
71396-3	Power Door System Actuator Assembly
71396-4	Power Door System Actuator Assembly
714109-1	Tubes Ducts and Hoses
714900-1	Main Fuel Gear Pump
714900-2	Fuel Pump
714900-3	Main Fuel Gear Pump
714900-4	Fuel Pump
714900-5	Fuel Pump
715001-29	Main Fuel Gear Pump
715001-30	Main Fuel Gear Pump
715001-31	Main Fuel Gear Pump
715001-32	Main Fuel Gear Pump
715001-33	Main Fuel Gear Pump
715001-34	Main Fuel Gear Pump
715001-35	Main Fuel Gear Pump
715001-36	Main Fuel Gear Pump
715001-37	Main Fuel Gear Pump
7156M75G01	Electrical Cables
7156M75G02	Electrical Cables
7156M75G03	Electrical Cables
7156M75G04	Electrical Cables
7156M75G05	Electrical Cables
7156M75G06	Electrical Cables
7156M76G01	Electrical Cables
7156M76G02	Electrical Cables
7156M76G03	Electrical Cables
7156M76G04	Electrical Cables
7156M76G05	Electrical Cables
7156M76G06	Electrical Cables
7156M77G01	Electrical Cables
7156M77G02	Electrical Cables
7156M77G03	Electrical Cables
7156M78G01	Electrical Cables
7156M78G02	Electrical Cables
7156M78G03	Electrical Cables
7156M79G01	Electrical Cables
7156M79G02	Electrical Cables
7156M79G03	Electrical Cables
7156M80G01	Electrical Cables
7156M80G02	Electrical Cables
7156M80G03	Electrical Cables
7156M81G01	Electrical Cables
7156M81G02	Electrical Cables
7156M81G03	Electrical Cables
7156M81G04	Electrical Cables
7156M81G05	Electrical Cables

7156M81G06	Electrical Cables
7161M60G01	Electrical Cables
7161M60G02	Electrical Cables
7161M60G03	Electrical Cables
7161M60G04	Electrical Cables
7161M61G01	Electrical Cables
7161M61G02	Electrical Cables
7161M61G03	Electrical Cables
7161M61G04	Electrical Cables
7161M61G05	Electrical Cables
7161M62G01	Electrical Cables
7161M62G02	Electrical Cables
7161M62G03	Electrical Cables
7161M63G01	Electrical Cables
7161M63G02	Electrical Cables
7161M63G03	Electrical Cables
7161M63G04	Electrical Cables
7161M63G05	Electrical Cables
7161M63G06	Electrical Cables
7161M64G01	Electrical Cables
7161M64G02	Electrical Cables
7161M64G03	Electrical Cables
7161M65G01	Electrical Cables
7161M65G02	Electrical Cables
7161M67G01	Electrical Cables
7161M67G02	Electrical Cables
718801-10	Fuel Pump
718801-11	Fuel Pump
718801-12	Fuel Pump
718801-5	Fuel Pump
718801-6	Fuel Pump
718801-7	Fuel Pump
718801-8	Fuel Pump
718801-9	Fuel Pump
719999-3	SACS 1-1 Stator Vane Actuator
719999-4	SACS 1-1 Stator Vane Actuator
719999-6	SACS 1-1 Stator Vane Actuator
720000-1	SACS 2-1 Bleed Valve Actuator
720000-10	SACS 2-1 Bleed Valve Actuator
720000-11	SACS 2-1 Bleed Valve Actuator
720000-12	SACS 2-1 Bleed Valve Actuator
720000-17	SACS 2-1 Bleed Valve Actuator
720000-18	SACS 2-1 Bleed Valve Actuator
720000-19	SACS 2-1 Bleed Valve Actuator
720000-20	SACS 2-1 Bleed Valve Actuator
720000-4	SACS 2-1 Bleed Valve Actuator
720000-6	SACS 2-1 Bleed Valve Actuator



720000-8	SACS 2-1 Bleed Valve Actuator
720000-9	SACS 2-1 Bleed Valve Actuator
720101-10	Fuel Pump
720101-11	Fuel Pump
720101-12	Fuel Pump
720101-6	Fuel Pump
720101-7	Fuel Pump
720101-8	Fuel Pump
720101-9	Fuel Pump
7-20275-1A	Flexible Thermocouple Harness
7-20275-2	Flexible Thermocouple Harness
7-20276-1	Flexible Thermocouple Harness
7-20276-3	Flexible Thermocouple Harness
7-20276-A	Flexible Thermocouple Harness
720301-10	Fuel Pump
720301-11	Fuel Pump
720301-12	Fuel Pump
720301-6	Fuel Pump
720301-7	Fuel Pump
720301-8	Fuel Pump
720301-9	Fuel Pump
721001-10	Fuel Pump
721001-11	Fuel Pump
721001-12	Fuel Pump
721001-7	Fuel Pump
721001-8	Fuel Pump
721001-9	Fuel Pump
7-21248-1	Flexible Thermocouple Harness
722101-10	Fuel Pump
722101-11	Fuel Pump
722101-12	Fuel Pump
722101-7	Fuel Pump
722101-8	Fuel Pump
722101-9	Fuel Pump
723301-10	Fuel Pump
723301-11	Fuel Pump
723301-12	Fuel Pump
723301-7	Fuel Pump
723301-8	Fuel Pump
724400-1	Fuel Pump
724400-2	Fuel Pump
7-27275-4	Stator Vane Feedback Control Assembly
7-27511-3	Stator Vane Feedback Control Assembly
7-29038-1	Stator Vane Feedback Control Assembly
7-29039-1	Stator Vane Feedback Control Assembly
7-29039-2	Stator Vane Feedback Control Assembly
72N620-351	Fan Cowl Damping Rod

72N620-353	Fan Cowl Damping Rod
72N620-361	Fan Cowl Damping Rod
72N620363	Fan Cowl Damping Rod
72N620-805	Fan Cowl Damping Rod
72N620-807	Fan Cowl Damping Rod
72N620-821	Fan Cowl Damping Rod
72N640-353	Telescoping Strut
72N640-361	Telescoping Strut
72N640-363	Telescoping Strut
72N640-365	Telescoping Strut
72N640-807	Telescoping Strut
72N640-811	Telescoping Strut
72N640-821	Telescoping Strut
732900-10	EVC 3-2 and EVC 3-4 Engine Vane
734444-1	Remote Temperature Sensor
740123A	Adapter: Qad
7-40614-1	Nacelle Temperature Sensor
7-40614-2	Nacelle Temperature Sensor
742600-3	EVC 3-2 and EVC 3-4 Engine Vane
742600-4	EVC 3-2 and EVC 3-4 Engine Vane
742600-5	EVC 3-2 and EVC 3-4 Engine Vane
7-43534-1	Nacelle Temperature Sensor
7-43534-3	Nacelle Temperature Sensor
7-43717-2	E.G.T. Harness and Junction Box
7-43717-3	E.G.T. Harness and Junction Box
7-43736-1	Scavenge Filter Pressure Switch
7-43736-2	Scavenge Filter Pressure Switch
7-43963-1	Throttle Control Box Assembly
7-43963-10	Throttle Control Box Assembly
7-43963-2	Throttle Control Box Assembly
7-43963-3	Throttle Control Box Assembly
7-43963-4	Throttle Control Box Assembly
7-43963-5	Throttle Control Box Assembly
7-43963-6	Throttle Control Box Assembly
7-43963-7	Throttle Control Box Assembly
7-43963-8	Throttle Control Box Assembly
7-43963-9	Throttle Control Box Assembly
7-44211-2	E.G.T. Harness and Junction Box
7-44828-2	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-3	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-6	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-7	Remote Starter Override Control Assembly (Douglas Installation)
747955-2	EVC 3-2 and EVC 3-4 Engine Vane
747955-3	EVC 3-2 and EVC 3-4 Engine Vane
747955-4	EVC 3-2 and EVC 3-4 Engine Vane
747955-5	EVC 3-2 and EVC 3-4 Engine Vane
747955-6	EVC 3-2 and EVC 3-4 Engine Vane


747955-7	EVC 3-2 and EVC 3-4 Engine Vane
747955-8	EVC 3-2 and EVC 3-4 Engine Vane
747955-9	EVC 3-2 and EVC 3-4 Engine Vane
74D10-6	Main Fuel Filter
755150-1	Remote Temperature Sensor
755300-2	EVC 3-5 Engine Vane Control
7590469-101	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-102	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-103	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-105	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-107	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7591030-1	Wire Harnesses
7591300-1	Wire Harnesses
7592174-101	Hydraulic Filter Assembly 1500 PSI
7592174-102	Hydraulic Filter Assembly 1500 PSI
7592174-103	Hydraulic Filter Assembly 1500 PSI
76-167-2	Oil Quantity Transmitter
76-167-3	Oil Quantity Transmitter
76-167-4	Oil Quantity Transmitter
76-167-5	Oil Quantity Transmitter
764224A	Lubrication and Scavenge Oil Pump
764224B	Lubrication and Scavenge Oil Pump
769606-11	EEC Permanent Magnet Alternator
769606-12	EEC Permanent Magnet Alternator
769606-5	EEC Permanent Magnet Alternator
769606-7	EEC Permanent Magnet Alternator
769606-8	EEC Permanent Magnet Alternator
7702-01	Fire/Overheat Detector Assembly
7702-02	Fire/Overheat Detector Assembly
7702-03	Fire/Overheat Detector Assembly
7702-04	Fire/Overheat Detector Assembly
770358D	Lubrication and Scavenge Pump
770358E	Lubrication and Scavenge Pump
77-139-2	Transmitter, Engine Oil
77-139-3	Transmitter, Engine Oil
77-167-2	Oil Level Temperature Sensor
77-167-3	Oil Level Temperature Sensor
77-167-4	Oil Level Temperature Sensor
772499-1	GTA-9 Engine Vane and Bleed Control
774500-1	Remote Temperature Sensor
774555-1	GTA-9 Engine Vane and Bleed Control
775538-1	Starter Control Valve
775538-10	Starter Control Valve
775538-11	Starter Control Valve
775538-12	Starter Control Valve
775538-13	Starter Control Valve
775538-15	Starter Control Valve

775538-16	Starter Control Valve
775538-3	Starter Control Valve
775538-6	Starter Control Valve
775538-7	Starter Control Valve
775538-9	Starter Control Valve
776555-3	GTA-9 Engine Vane and Bleed Control
776555-5	GTA-9 Engine Vane and Bleed Control
776555-6	GTA-9 Engine Vane and Bleed Control
776555-7	GTA-9 Engine Vane and Bleed Control
776950-1	Fuel Metering Unit Bypass Valve
782467-1	Fuel Pump/Fuel Control Coupling Clamp
782467-2	Fuel Pump/Fuel Control Coupling Clamp
782475-1	Ice Detection System
782475-2	Ice Detection System
7827-02	Fire/Overheat Detection System
7827-03	Fire/Overheat Detection System
783955-001	EVC 3-2 and EVC 3-4 Engine Vane
786333-1	Remote Temperature Sensor
786333-2	Remote Temperature Sensor
787V1100	Cooling Air Shutoff Valve
787V1300	Cooling Air Shutoff Valve
787V300	LP/HP Fuel Pump
787V500	Cooling Air Shutoff Valve
787V800	Cooling Air Shutoff Valve
787V900	Cooling Air Shutoff Valve
788366-1	Fuel Distribution Valve
788366-2	Fuel Distribution Valve
788366-3	Fuel Distribution Valve
788366-7	Fuel Distribution Valve
788377-1	Stator Vane Actuator
788377-2	Stator Vane Actuator
790210-1	Intercompressor (2.5) Bleed Actuator
790312-001	EVC 3-2 and EVC 3-4 Engine Vane
790424-4	Starter Control Valve
790425-2	Pneumatic Starter
790425-3	Pneumatic Starter
790425-4	Pneumatic Starter
790425-5	Pneumatic Starter
790425-6	Pneumatic Starter
790425A3	Pneumatic Starter
790425A4	Pneumatic Starter
790425A5	Pneumatic Starter
790425A6	Pneumatic Starter
791100-16-096	Engine Inlet Pressure and Temperature Sensor
791100-16-098	Engine Inlet Pressure and Temperature Sensor
791100-16-104	Engine Inlet Pressure and Temperature Sensor
791100-16-106	Engine Inlet Pressure and Temperature Sensor

791100-4-044	Engine Inlet Pressure and Temperature Sensor
791100-4-066	Engine Inlet Pressure and Temperature Sensor
791100-4-069	Engine Inlet Pressure and Temperature Sensor
791100-4-076	Engine Inlet Pressure and Temperature Sensor
791100-4-087	Engine Inlet Pressure and Temperature Sensor
791100-4-089	Engine Inlet Pressure and Temperature Sensor
791100-4-092	Engine Inlet Pressure and Temperature Sensor
791100-4-094	Engine Inlet Pressure and Temperature Sensor
791100-4-108	Engine Inlet Pressure and Temperature Sensor
791100-4-111	Engine Inlet Pressure and Temperature Sensor
791100-4-112	Engine Inlet Pressure and Temperature Sensor
791100-6-070	Engine Inlet Pressure and Temperature Sensor
791100-6-071	Engine Inlet Pressure and Temperature Sensor
791100-6-075	Engine Inlet Pressure and Temperature Sensor
791100-6-081	Engine Inlet Pressure and Temperature Sensor
791100-6-084	Engine Inlet Pressure and Temperature Sensor
791100-6-090	Engine Inlet Pressure and Temperature Sensor
791100-6-091	Engine Inlet Pressure and Temperature Sensor
791100-6-095	Engine Inlet Pressure and Temperature Sensor
791100-6-096	Engine Inlet Pressure and Temperature Sensor
791100-6-109	Engine Inlet Pressure and Temperature Sensor
791100-6-110	Engine Inlet Pressure and Temperature Sensor
792-6-19	T4.9 Thermocouple
792-6-20	T4.9 Thermocouple
7941-070	Limit Switch
796050-1	Fuel Distribution Valve
7U7941-4	Locking Actuator
7U7941-5	Locking Actuator
7U7942-3	Feedback Actuator
7U7942-4	Feedback Actuator
7U7942-5	Feedback Actuator
7U7942-6	Feedback Actuator
7U7943-1	Manual Drive
7U7943-3	Manual Drive Assembly
7U7943-4	Manual Drive
7U7945	Sync Tube Assembly
7U7946-1	Flex Tube Assembly
80010-000	IDG Air/Oil Cooler
805373-001	EVC 3-2 and EVC 3-4 Engine Vane
8062- 494	Servo Fuel Heater
8062-488	Servo Fuel Heater
8062-489	Servo Fuel Heater
8062-493	Servo Fuel Heater
8063- 201	Servo Fuel Heater
8063-202	Servo Fuel Heater
8063-208	Servo Fuel Heater
8063-209	Servo Fuel Heater

8063-214	Servo Fuel Heater
806808-1	Stator Vane Actuator
806808-2	Stator Vane Actuator
806808-3	Stator Vane Actuator
806818-1	Oil Bypass Valve
806818-2	Oil Bypass Valve
806833-1	Oil Bypass Valve
806833-2	Oil Bypass Valve
806833-3	Oil Bypass Valve
806833-4	Oil Bypass Valve
808118-4	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808118-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808119-4	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808119-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808120-4	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808120-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808726-1	Intercompressor (2.5) Bleed Actuator
808726-2	Intercompressor (2.5) Bleed Actuator
808810-1	Oil Bypass Valve
808810-2	Oil Bypass Valve
808884-5	In-Line Starter Valve
808884-6	In-Line Starter Valve
808891-01	Oil Cooler
808900-1	Engine Air/Oil Heat Exchanger Valve
8100-052	VBV Actuator
8100-151	VSV Actuator
811040-2	Starter Air Valve Solenoid
811040-3	Starter Air Valve Solenoid
811050-1	Pneumatic Starter
811050-2	Pneumatic Starter
811050-3	Pneumatic Starter
811050-4	Pneumatic Starter
811250-30	Engine Relay Unit
811250-7	Engine Relay Unit
813520-1	Fuel Metering Unit Bypass Valve
813664-1	Stator Vane Actuator
813664-2	Stator Vane Actuator
814890-1	Intercompressor (2.5) Bleed Actuator
814890-2	Intercompressor (2.5) Bleed Actuator
8-1575-1	Fuel Check Valve
815V700	Pneumatic Solenoid Valve
815V700-2	Pneumatic Solenoid Valve
818490-01	Fuel Distribution Valve
819802-1	Stator Vane Actuator
819810-1	Stator Vane Actuator
821M64G01	Electrical Cables
823742-2	Intercompressor (2.5) Bleed Actuator

825501-10	Fuel Pump
825501-11	Fuel Pump
825501-12	Fuel Pump
825501-8	Fuel Pump
825501-9	Fuel Pump
825720-1	GTA69-1 Turbine Case Cooling Valve
827104-2	Fuel Pump/Fuel Control Coupling Clamp
828300-1	Fuel Pump
828300-2	Fuel Pump
828300-3	Fuel Pump
828300-4	Fuel Pump
828300-5	Fuel Pump
828300-6	Fuel Pump
828300-7	Fuel Pump
828300-8	Fuel Pump
828501-1	Gear Type Main Fuel Pump Assembly
828501-2	Gear Type Main Fuel Pump Assembly
828501-3	Gear Type Main Fuel Pump Assembly
829500-10	Fuel Pump
829500-4	Fuel Pump
829500-5	Fuel Pump
829500-7	Fuel Pump
829500-8	Fuel Pump
829500-9	Fuel Pump
837600-3	Fuel Pump
837600-4	Fuel Pump
837600-5	Fuel Pump
838000-1	Gear Type Main Fuel Pump Assembly
838000-2	Gear Type Main Fuel Pump Assembly
847000-1	Fuel Pump
847000-2	Fuel Pump
85464-2	Stator And Housing Assembly
85465-1	lternating Current Generator,Model 5318
85465-2	lternating Current Generator,Model 5318
85465-3	lternating Current Generator,Model 5318
856-2-12	Pressure Probe
863-1-11	Twin Element Thermocouple
866-1-11	Pressure Probe
86815-1	Stator And Housing Assembly
87006-1	Stator And Housing Assembly
87006-10	Stator And Housing Assembly
87006-11	Stator And Housing Assembly
87006-12	Stator And Housing Assembly
87006-2	Stator And Housing Assembly
87006-3	Stator And Housing Assembly
87006-4	Stator And Housing Assembly
87006-5	Stator And Housing Assembly

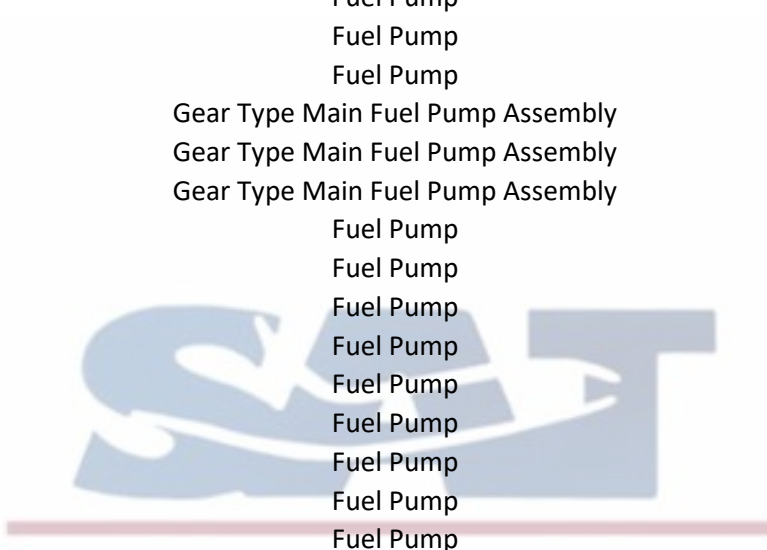 

87006-9	Stator And Housing Assembly
880400-1005	Variable Bypass Valve Actuator
880400-1006	Variable Bypass Valve Actuator
8901-062	CIT Sensor
8901-064	CIT Sensor
8901-074	CIT Sensor
8901-078	CIT Sensor
8901-100	CIT Sensor
8901-102	CIT Sensor
8901-104	CIT Sensor
8901-118	Compressor Inlet Temperature SensorAssembly
8901-124	Compressor Inlet Temperature SensorAssembly
8901-128	CIT Sensor
8901-132	CIT Sensor
8901-136	CIT Sensor
8901-170	Compressor Inlet Temperature SensorAssembly
8901-174	CIT Sensor
8901-180	CIT Sensor
8901-185	Sensor
8901-192	CIT Sensor
8901-194	CIT Sensor
8901-196	CIT Sensor
8901-198	CIT Sensor
8901-216	CIT Sensor
8901-218	CIT Sensor
8901-220	CIT Sensor
8901-222	CIT Sensor
8901-224	Sensor, Cf6-50
8901-248	T2C (CIT) Sensor
8901-254	Sensor, Cf6-80A
8901-274	Sensor, Cfm56
8901-314	Sensor, Cit
8901-318	N1 Sensor
8901-326	Sensor, Cfm56
8901-328	Fan Inlet Temperature SensorAssembly
8901-340	Fan Inlet Temperature SensorAssembly
8908-002	N1 Sensor
8908-004	N1 Sensor
8908-006	N1 Sensor
8908-007	Sensor N1, Speed Hydro- Mech Anical Restr
8910-100	Burner Selection Valve
8910-114	Burner Selection Valve
8910-322	Fuel Return Valve
8910-332	Cit Sensor
8910-342	Fuel Return Valve
8910-620	Air Modulating Valve
8EH20AAF1	EGT Harness Assembly



8EH35AAG1	T4.9 Thermocouple Cable Assemblies
8EH35AAH1	T4.9 Thermocouple Cable Assemblies
3 (SPEC No. 341D	Low Pressure Fuel Switch
8TC18AAP1	T3 Sensor Compressor Outlet Temperature
8TC19AAJ1	T3 Sensor Compressor Outlet Temperature
8TC19AAK1	T3 Sensor Compressor Outlet Temperature
8TC19AAN1	T3 Sensor Compressor Outlet Temperature
8TC19AAR1	T3 Sensor Compressor Outlet Temperature
8TC34ABW1	Thermocouple Temperature Probe
8TC34ABY1	Thermocouple Temperature Probe
8TC34ACA3	T3 Temperature Sensor
8TC58AAE4	T3 Probe
8TC58AAE6	T3 Probe
8TC58AAE7	T3 Probe
8TC58AAG2	T3 Probe
8TC58AAH1	T3 Probe
8TC58AAH2	T3 Probe
8TC65AAB1	Exhaust Gas Temperature (EGT) Probe Assembly
8TC65BAB1	T3 Temperature Probe
8TE32AAZ1	T5 Thermocouple Assembly
8TE32AAZ2	T5 Thermocouple Assembly
8TE32ABA1	T5 Thermocouple Assembly
8TE32ABA2	T5 Thermocouple Assembly
8TE32ABN3	EGT Probe
8TE32ABP2	EGT Probe
8TE32BAA1	EGT Probe
8TE32BAB1	EGT Probe
8TH32AAA1	Thermocouple Cable Harness
8TH32AAD1	Thermocouple Cable Harness
8TH32CAA1	Thermocouple Cable Harness
8TJ118AAC1	Fan Speed Pickup
8TJ124ERC1	Fuel Flow Transmitter
8TJ124ERE1	Fuel Flow Transmitter
8TJ124ERF1	Fuel Flow Transmitter
8TJ124ERG1	Fuel Flow Transmitter
8TJ124ERJ1	Fuel Flow Transmitter
8TJ124GGD1	Fuel Flow Transmitter
8TJ146AAW2	Oil Quantity Transmitter
8TJ146AAW3	Oil Quantity Transmitter
8TJ146CFB1	Oil Level Sensor
8TJ146CFE1	Oil Level and Temperature Sensor
8TJ146CFE2	Oil Level and Temperature Sensor
8TJ146CFF1	Oil Level and Temperature Sensor
8TJ160AAE1	Oil Pressure Sensor
8TJ163AAB1	N1 Speed Sensor
8TJ163AAC1	N1 Speed Sensor
8TJ163AAD1	Sensor, N1 Fan Speed

8TJ163AAF1	Sensor, N1 Fan Speed
8TJ167ERF1	Fuel Flow Transmitter
8TJ167ERG1	Fuel Flow Transmitter
8TJ167GHW1	Trnsmttr Fuel Flow Restricted Air Shipme
8TJ177AAB1	N1 Speed, Total Pressure and Total Temperature Probe
8TJ177AAB2	N1 Speed, Total Pressure and Total Temperature Probe
8TJ177AAE1	N1 Speed, Total Pressure and Total Temperature Probe
8TJ177AAE2	N1 Speed, Total Pressure and Total Temperature Probe
8TJ201JAA1	Differential Pressure Switch
8TJ204AAF1	N1, T2.5, P2.5 Probe
8TJ205AAE1	N2 Speed Sensor
8TJ205ABB1	N2 Sensor
8TJ99GGB3	Liquid Level Transmitter
8TJ99GGB4	Liquid Level Transmitter
8TU34AAL1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAC1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAE1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAH2	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU65AAD1	P4.9 Pressure Pickup Probe Assembly
8TW32AAB1	T2.5 Temperature Sensor
8TW32AAC1	T2.5 Temperature Sensor
8TW32BAA1	T1.2 Inlet Fan Temperature Sensor
8TW32BAA2	T1.2 Inlet Fan Temperature Sensor
900974-01	Fire/Overheat Detector Assemblies
900974-02	Fire/Overheat Detector Assemblies
9011440500-1	Hydraulic Pulsation Dampener
9011440500-2	Hydraulic Pulsation Dampener
9011440500-3	Hydraulic Pulsation Dampener
9015M46P09	Main Fuel Pump
9015M46P10	Main Fuel Pump
9015M46P12	Main Fuel Pump
9015M46P13	Main Fuel Pump
9015M81P04	Fuel Filter
9015M96P01	Fuel Manifold Drain Valve
9015M96P02	Fuel Manifold Drain Valve
9015M96P03	Fuel Manifold Drain Valve
9039M45P03	Main Fuel Pump
9039M45P04	Main Fuel Pump
9039M45P05	Main Fuel Pump
9039M45P06	Main Fuel Pump
9039M45P07	Main Fuel Pump
9039M45P08	Main Fuel Pump
9039M45P09	Main Fuel Pump
9039M45P10	Main Fuel Pump
9039M45P11	Main Fuel Pump
9039M45P12	Main Fuel Pump
9039M45P13	Main Fuel Pump

9039M45P14	Main Fuel Pump
9039M45P15	Main Fuel Pump
9039M45P16	Main Fuel Pump
9039M45P17	Main Fuel Pump
9040465-1	Dual Relay Box
9040M61P01	Temperature Transducers and Thermocouple Sensor
9045465-2	Permanent Magnet Alternator Rotor & Stator
9049380-1	Permanent Magnet Alternator
9049385-3	Permanent Magnet Alternator
9049385-5	Permanent Magnet Alternator
9049385-7	Permanent Magnet Alternator
9052301-1	EEC Wiring Harnesses
9052302-1	EEC Wiring Harnesses
9052303-1	EEC Wiring Harnesses
9052304-1	EEC Wiring Harnesses
9069M91P02	CIT Sensor
9069M91P03	CIT Sensor
9121M47P01	Temperature Transducers and Thermocouple Sensor
9154M97P01	Servo Fuel Heater
9154M98P01	Fuel Filter
9154M98P02	Fuel Filter
9154M98P06	Fuel Filter
9154M98P07	Fuel Filter
9154M98P08	Fuel Filter
9154M98P10	Fuel Filter
9154M98P11	Fuel Filter
9154M98P12	Fuel Filter
9154M98P15	Fuel Filter
9154M98P16	Fuel Filter
9154M98P17	Fuel Filter
9154M98P18	Fuel Filter
9154M98P19	Fuel Filter
9154M98P20	Fuel Filter
9172M81P03	Reverse Thrust Limiter Valve
9172M81P04	Reverse Thrust Limiter Valve
9172M81P06	Reverse Thrust Limiter Valve
9172M81P07	Reverse Thrust Limiter Valve
9175M50P01	CIT Sensor
9175M50P02	CIT Sensor
9175M50P04	CIT Sensor
9175M50P05	CIT Sensor
9175M50P06	CIT Sensor
9175M50P08	CIT Sensor
9175M50P09	CIT Sensor
9175M50P10	CIT Sensor
9175M50P11	CIT Sensor
9178M37P02	CIT Sensor

9-217-46	Fuel Flow Transmitter
9-217-59	Fuel Flow Transmitter
9-217-63	Fuel Flow Transmitter
922-232-000-121	No. 1 Bearing Transducer Wiring Harness
922-316-000-511	Fuel Cooled IDG Oil Cooler
9242-09	Main Fuel Pump
9242-10	Main Fuel Pump
9242-12	Main Fuel Pump
9242-13	Main Fuel Pump
9255-03	Main Fuel Pump
9255-04	Main Fuel Pump
9255-05	Main Fuel Pump
9255-06	Main Fuel Pump
9255-07	Main Fuel Pump
9255-08	Main Fuel Pump
9255-09	Main Fuel Pump
9257-01	Main Fuel Gear Pump
9257-02	Main Fuel Gear Pump
9257-03	Main Fuel Gear Pump
9257-04	Main Fuel Gear Pump
9257-05	Main Fuel Gear Pump
9257-06	Main Fuel Gear Pump
9257-07	Main Fuel Gear Pump
9257-08	Main Fuel Gear Pump
9261M73P01	CIT Sensor
9261M74P01	CIT Sensor
9261M74P02	CIT Sensor
9261M74P03	CIT Sensor
9261M74P04	CIT Sensor
9261M74P05	CIT Sensor
9261M74P06	CIT Sensor
9261M74P07	CIT Sensor
9261M74P08	CIT Sensor
9268M32P02	Inlet Temperature Sensor
9268M32P03	Inlet Temperature Sensor
9268M32P04	Inlet Temperature Sensor
9268M48P02	Heater, Servo Fuel
9271M86P02	Combustor Drain Valve
9280-08A1	Main Fuel Pump
9280-14A1	Main Fuel Pump
9280-15A1	Main Fuel Pump
9280-16A1	Main Fuel Pump
9280-16A2	Main Fuel Pump
9280-16A3	Main Fuel Pump
9280-17A3	Main Fuel Pump
9280-17A4	Main Fuel Pump
9280-17A5	Main Fuel Pump

9280-17A6	Main Fuel Pump
9280-18A6	Main Fuel Pump
9280M60P02	IDG Fuel/Oil Heat Exchanger
9285M28P01	CIT Sensor
9295A4	Main Fuel Pump
9295A5	Main Fuel Pump
9297-01A3	Main Fuel Pump
9297-01A4	Main Fuel Pump
9297-01A5	Main Fuel Pump
9297-01A6	Main Fuel Pump
9297-01A8	Main Fuel Pump
930085-2-4	IDG Oil Cooler
930090-06	IDG Oil Cooler
930090-07	IDG Oil Cooler
9304M23P08	Main Fuel Pump
9304M23P14	Main Fuel Pump
9304M23P15	Main Fuel Pump
9304M23P16	Main Fuel Pump
9304M23P17	Main Fuel Pump
9304M23P18	Main Fuel Pump
9334M96P02	CIT Sensor
9366M91P02	T2 Sensor
9368M57P13	Servo Fuel Heater
9368M57P15	Servo Fuel Heater
9368M57P16	Servo Fuel Heater
9368M57P17	Servo Fuel Heater
9377M44P01	IDG Fuel/Oil Heat Exchanger
9377M63P01	IDG Latching Pressure Relief Valve
9377M63P02	IDG Oil Pressure Relief Valve
9377M64P05	Air/Oil-IDG Cooler Assembly
9377M64P06	Air/Oil-IDG Cooler Assembly
9377M65P01	Shutoff Valve Assembly
9377M65P02	Shutoff Valve Assembly
9377M65P03	Shutoff Valve Assembly
9377M65P04	Shutoff Valve Assembly
9377M65P05	Shutoff Valve Assembly
9377M65P06	Shutoff Valve Assembly
9377M65P07	Shutoff Valve Assembly
9377M65P08	Shutoff Valve Assembly
9377M65P09	Shutoff Valve Assembly
9377M65P11	Shutoff Valve Assembly
9377M65P12	Shutoff Valve Assembly
9377M65P13	Shutoff Valve Assembly
9377M66P01	Temperature Transducers and Thermocouple Sensor
9378M87P02	N1 Sensor
9378M87P03	N1 Sensor
9378M87P04	N1 Sensor

9378M87P05	N1 Sensor
9378M87P06	N1 Sensor
9387M16P01	lternating Current Generator,Model 5318
9387M16P02	lternating Current Generator,Model 5318
9387M16P03	lternating Current Generator,Model 5318
9387M17P01	lternating Current Generator,Model 5318
9387M17P02	lternating Current Generator,Model 5318
9387M17P04	lternating Current Generator,Model 5318
9387M17P05	lternating Current Generator,Model 5318
9387M17P06	lternating Current Generator,Model 5318
9387M17P07	lternating Current Generator,Model 5318
9387M17P08	lternating Current Generator,Model 5318
9387M17P09	lternating Current Generator,Model 5318
9387M17P10	lternating Current Generator,Model 5318
9387M17P11	lternating Current Generator,Model 5318
9387M17P12	lternating Current Generator,Model 5318
938V100	LP/HP Fuel Pump
938V200	LP/HP Fuel Pump
938V400	LP/HP Fuel Pump
938V500	LP/HP Fuel Pump
941V0400	LP/HP Fuel Pump
941V0500	LP/HP Fuel Pump
941V100	LP/HP Fuel Pump
941V200	LP/HP Fuel Pump
941V300	LP/HP Fuel Pump
949-1-11	N1 Fan Speed Sensor
979912-1	Electrical Selector Valve
979912-2	Electrical Selector Valve
979919-3	Electrical Selector Valve
979919-4	Electrical Selector Valve
9928-513	Hook Latch and Keeper Assembly
9929-502	Hook Latch and Keeper Assembly
9930-511	Hook Latch and Keeper Assembly
9931-505	Hook Latch and Keeper Assembly
9971M46P07	VSV Actuator
A10109-501	Tubes Ducts and Hoses
A10109-503	Tubes Ducts and Hoses
A10109-505	Tubes Ducts and Hoses
A10109-507	Tubes Ducts and Hoses
A2776-1A	Core & Reverser Cowl Strut Assembly
A2841-1	Engine Cowl Strut Assembly
A3056-1	Strut Assembly
A3363-4	Fan Cowl Damping Rod
A3363-5	Fan Cowl Damping Rod
A3445-1	Fan Cowl Door Hold-Open Rod
A3445-10	Fan Cowl Door Hold-Open Rod
A3497-2	Hold Open Rod

A39707A	Pressure Ratio Bleed Control
A39707A/K	Pressure Ratio Bleed Control
A39707B	Pressure Ratio Bleed Control
A39707C	Pressure Ratio Bleed Control
A39707D	Pressure Ratio Bleed Control
A39707E	Pressure Ratio Bleed Control
A39707F	Pressure Ratio Bleed Control
A39707G	Pressure Ratio Bleed Control
A39707H	Pressure Ratio Bleed Control
A39707J	Pressure Ratio Bleed Control
A39708J	Pressure Ratio Bleed Control
A39708K	Pressure Ratio Bleed Control
A39709J	Pressure Ratio Bleed Control
A39709K	Pressure Ratio Bleed Control
A39710J	Pressure Ratio Bleed Control
A39710K	Pressure Ratio Bleed Control
A55201B	Surge Detector Control
A55201C	Surge Detector Control
A55201D	Surge Detector Control
A60302B	Differential Pressure Switch
A76602C	Fuel De-icing Valve
A76602D	Fuel De-icing Valve
A76602E	Fuel De-icing Valve
A76602F	Fuel De-icing Valve
A76602G	Fuel De-icing Valve
A76602H	Fuel De-icing Valve
A76602J	Fuel De-icing Valve
A76602K	Fuel De-icing Valve
A76602L	Fuel De-icing Valve
A76602M	Fuel De-icing Valve
A76602N	Fuel De-icing Valve
A76602P	Fuel De-icing Valve
A76602S	Fuel De-icing Valve
A76602T	Fuel De-icing Valve
A76602U	Fuel De-icing Valve
AA1051-00	HPC Stage 7 Solenoid Valve
AA1056-00	HPC Stage 7 Solenoid Valve
AA1060-00	HPC Stage 10 Solenoid Valve
AA1064-00	HPC Stage 10 Solenoid Valve
AC69254	HPC Stage 7 Bleed Valve
AC69262	Stage 10 Air Solenoid Valve
AC69378	HPC Stage 10 Solenoid Valve
AC69386	HPC Stage 7 Solenoid Valve
AC69514	HPC Stage 10 Bleed Valve
AC69518	Cabin Air Solenoid Valve
AC69572	HPC Stage 7 Solenoid Valve
AC69574	HPC Stage 10 Solenoid Valve

AC69576	Cabin Air Solenoid Valve
AC69674	Stage 10 Air Solenoid Valve
AC69859	HPC Stage 7 Bleed Valve
AC69861	HPC Stage 10 Bleed Valve
AC69922	HPC Stage 10 Bleed Valve
AC69924	HPC Stage 7 Bleed Valve
AD9227-1640	Fuel Filter
AD9227-1649	Fuel Filter
AD9227-1650	Fuel Filter
AD9227-1750	Fuel Filter
AD9227-1780	Fuel Filter
AD9227-1850	Fuel Filter
AD9227-1950	Fuel Filter
AD9227-2050	Fuel Filter
AD9227-2080	Fuel Filter
AD9227-2350	Fuel Filter
AD9227-2450	Fuel Filter
AD9227-2480	Fuel Filter
AD9227-2550	Fuel Filter
AD9227-2750	Fuel Filter
AD9227-2780	Fuel Filter
AD9227-2850	Fuel Filter
AD9227-2950	Fuel Filter
AD9227-3050	Fuel Filter
AE0405B04	FADEC Cooling Fan
AE0405B06	FADEC Cooling Fan
AEB999-30	Fuel Filter
AEC325-12	Main Fuel Filter
AEC46816	Main Fuel Filter Assembly
AEC55516	Main Fuel Filter Assembly
AH2574-02	Electro Hydraulic T/R Opening Powerpack (Douglas Installation Aircraft)
PS-731500-18BAF	Fuel Filter Clogging Indicator
APS-73A18-BARD	Fuel Filter Clogging Indicator
APS-73B18-BARD	Fuel Filter Clogging Indicator
\PT-15-1250-950\	Fuel Manifold Pressure Sensor
\PT-194A-1000-50\	APT Pressure Transducers
\PT-23B-1500-50\	Fuel Strainer Delta Pressure Transducer
PT-7A-1500-7BAR	Oil Pressure Sensor
PT-7B-1500-7BAR	Oil Pressure Sensor
\PT-8A-1500-120\	APT Pressure Transducers
\PT-9A-1500-340\	APT Pressure Transducers
\PTE-177F-1000-5\	Pressure Interface Unit
\PTE-4-1250-130\	Oil Pressure Transmitter
PTE-4A-1250-130	Oil Pressure Transmitter
PTE-4C-1250-130	Oil Pressure Transmitter
B1316-00084	Oil Tank
B1316-00177	Vent Valve



B1316-00829	Oil Tank
B1316-02236	Oil Tank
B1548-05-12	Valve-Check
B-403-11394-103	Starter Control Valve
B4902	Pressure Oil Filter Element
B4903	Pressure Oil Filter Element
B5241-04	Aft Sump Supply Check Valve
B5241-06	Aft Sump Supply Check Valve
C143620-2	Intermediate Pressure Bleed Check Valve
C143620-3	Intermediate Pressure Bleed Check Valve
C143621-2	Anti-Ice Pressure Reducing and Shutoff Valve
C143621-4	Anti-Ice Pressure Reducing and Shutoff Valve
C143622-1	Nacelle Core Compartment Cooling Air Valve
C144704-2	Power Pack
C144704-3	Power Pack
C144704-4	Power Pack
C145531-2	Anti-Ice Pressure Reducing and Shutoff Valve
C145660-2	Nacelle Core Compartment Cooling Air Valve
C145660-3	Nacelle Core Compartment Cooling Air Valve
C148275-1	Nacelle Core Compartment Cooling Air Valve
C24466000	Thrust Reverser Hydraulic Control Unit
C24466000-102	Thrust Reverser Hydraulic Control Unit
C24466000-103	Thrust Reverser Hydraulic Control Unit
C24466000-104	Thrust Reverser Hydraulic Control Unit
C24466000-3	Thrust Reverser Hydraulic Control Unit
C24466000-4	Thrust Reverser Hydraulic Control Unit
C24466001-102	Thrust Reverser Hydraulic Control Unit
C24466001-103	Thrust Reverser Hydraulic Control Unit
C24466001-2	Thrust Reverser Hydraulic Control Unit
C24466001-3	Thrust Reverser Hydraulic Control Unit
C24669000	Thrust Reverser Hydraulic Control Unit
C24672000	Check Valve
C24784000	Air Valve LPTACC Module
C24792000	Air Valve LPTACC Module
C24792000-1	Air Valve LPTACC Module
C24792000-2	Air Valve LPTACC Module
C24937001-1	LPTACC Valve
C24937001-1A	LPTACC Valve
C24937001-2A	LPTACC Valve
C24937001-3	LPTACC Valve
C25149000	Air Valve LPTACC Module
C25149000-1	Air Valve LPTACC Module
C25175000	Lptacc Module Air Valve
C25175000-1	Lptacc Module Air Valve
C25175000-2	Lptacc Module Air Valve
C25175000-3	Lptacc Module Air Valve
C25175100	Lptacc Module Air Valve

C25175100-1	Lptacc Module Air Valve
C2608-01	Valve - Idg Press Relief
CA115-01	RH and LH T495 Thermocouple Wiring Segments
CA115-03	RH and LH T495 Thermocouple Wiring Segments
CA116-01	RH and LH T495 Thermocouple Wiring Segments
CA116-03	RH and LH T495 Thermocouple Wiring Segments
CA129-01	RH and LH T495 Thermocouple Wiring Harness
CA130-00	T495 Thermocouple Wiring Harness
CA131-00	T495 Thermocouple Wiring Harness
CA132-00	T495 Thermocouple Wiring Harness
CA146-00	T495 Wiring Harness
CA146-01	T495 Wiring Harness
CA146-02	T495 Wiring Harness
CA147-00	T495 Wiring Harness
CA147-01	T495 Wiring Harness
CA147-02	T495 Wiring Harness
CA148-00	T495 Wiring Harness
CA148-01	T495 Wiring Harness
CA148-02	T495 Wiring Harness
CA149-00	T495 Thermocouple Wiring Harness
CA150-00	T495 Thermocouple Wiring Harness
CA150-01	T495 Thermocouple Wiring Harness
CA150-02	T495 Thermocouple Wiring Harness
CA151-00	T495 Thermocouple Wiring Harness
CA151-01	T495 Thermocouple Wiring Harness
CA151-02	T495 Thermocouple Wiring Harness
CA152-00	T495 Thermocouple Wiring Harness
CA152-01	T495 Thermocouple Wiring Harness
CA152-02	T495 Thermocouple Wiring Harness
CA152-03	T495 Thermocouple Wiring Harness
CA152-04	T495 Thermocouple Wiring Harness
CA156-00	T495 Thermocouple Wiring Harness
CA156-01	T495 Thermocouple Wiring Harness
CA156-02	T495 Thermocouple Wiring Harness
CA170-00	T495 Wiring Harness
CA170-01	T495 Wiring Harness
CA170-02	T495 Wiring Harness
CA171-00	T495 Wiring Harness
CA171-01	T495 Wiring Harness
CA171-02	T495 Wiring Harness
CA172-01	T495 Wiring Harness
CA172-02	T495 Wiring Harness
CA172-03	T495 Wiring Harness
CA172-04	T495 Wiring Harness
CA174-00	T495 Thermocouple Wiring Harness
CA174-01	T495 Thermocouple Wiring Harness
CA174-02	T495 Thermocouple Wiring Harness

CA174-03	T495 Thermocouple Wiring Harness
CA174-04	T495 Thermocouple Wiring Harness
CA174-05	T495 Thermocouple Wiring Harness
CA175-00	T495 Thermocouple Wiring Harness
CA175-01	T495 Thermocouple Wiring Harness
CA175-02	T495 Thermocouple Wiring Harness
CA175-03	T495 Thermocouple Wiring Harness
CA175-04	T495 Thermocouple Wiring Harness
CA175-05	T495 Thermocouple Wiring Harness
CA194-00	T495 Thermocouple Wiring Harness
CA194-01	T495 Thermocouple Wiring Harness
CA194-02	T495 Thermocouple Wiring Harness
CA195-00	T495 Thermocouple Wiring Harness
CA195-01	T495 Thermocouple Wiring Harness
CA195-02	T495 Thermocouple Wiring Harness
CA211-00	T495 Wiring Harness
CA212-00	T495 Wiring Harness
CA213-00	T495 Wiring Harness
CD419V	Oil Drain Valve
CH1806T02	Thrust Reverser Transmission, C-Duct Drives and Tubes
D1876-1000A	No. 4 Bearing Compartment Air Cooler
D1876-5000A	No. 4 Bearing Compartment Air Cooler
D22357000	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357000-1	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357000-2	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100-1	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100-2	Thrust Reverser Cowl Opening Hydraulic Actuator
D22AA1022	Fuel Return Valve
D22AA1023	Fuel Return Valve
D22AA1031	Fuel Return Valve
D22AA1032	Fuel Return Valve
D22AA1034	Fuel Return Valve
D22AA1035	Fuel Return Valve
D22AA1036	Fuel Return Valve
D22AA1042	Fuel Return Valve
D22AA1043	Fuel Return Valve
D54D44	Fuel Heater
EB101729B	HPC Stage 7 Bleed Valve
FA00914D	Fuel Nozzle Filter
H158006-700CD	Tubes Ducts and Hoses
H158006-702CD	Tubes Ducts and Hoses
H158010-700FM	Tubes Ducts and Hoses
H158010-700HP	Tubes Ducts and Hoses
H158010-702FM	Tubes Ducts and Hoses
H158010-702HP	Tubes Ducts and Hoses
H158016-700HR	Tubes Ducts and Hoses

H158016-702HR	Tubes Ducts and Hoses
H158016-704HR	Tubes Ducts and Hoses
H158020-702FS	Tubes Ducts and Hoses
H3272	Adjusta-Keeper Latches
H3272-5	Adjusta-Keeper Latches
H3404-1	Hold-Open Rod Assembly (Douglas Aircraft Installation)
H3404-3	Hold-Open Rod Assembly (Douglas Aircraft Installation)
H3782-11	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-12	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-21	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-23	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-25	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-27	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3797 series	Fan Cowl Door Support Latches
HA1363-1	Hook Latch Assembly
HA1365-1	Latch Assembly
HA1365-2	Latch Assembly
HA1366-1	Hook Latch Assembly
HA1367-1	T-Bolt Keeper Assembly
HA1367-2	T-Bolt Keeper Assembly
HA1448-1	Keeper Assembly
HA1449-1	Hook Latch Assembly
HA1460-1	Hold Open Rod Assembly
HA1460-5	Hold Open Rod Assembly
HA1461-1	Hold Open Rod Assembly
HA1461-5	Hold Open Rod Assembly
HA1462-1	Adjustable Hook Latch Assembly
HA1462-2	Adjustable Hook Latch Assembly
HA1462-3	Adjustable Hook Latch Assembly
HA1463-1	Keeper Assembly
HA1463-3	Keeper Assembly
HA1479-1	Hook Latch Assembly
HA1480-1	Keeper Assembly
HAC18339	Resistor Wiring Harness (Tt2 Probe)
HAC19037	Shutoff Valve Assembly
HAC1936	Hi-Stage Temperature Sensor Cable Assembly
HAC19460	Immersion Thermocouple
HAC19481	EEC Fuel/Oil Temperature Thermocouple Probe
HAC19822	EEC Fuel/Oil Temperature Thermocouple Probe
HAC19827	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD 18286	EEC Oil Temperature Thermocouple Probe
HAD17076	Immersion Thermocouple
HAD17818	EEC Wiring Harnesses
HAD17819	EEC Wiring Harnesses
HAD17958	Exhaust Gas Temperature (EGT) Wiring Harnesses
HAD18052	EEC Wiring Harnesses
HAD18053	EEC Wiring Harnesses

HAD18054	EEC Wiring Harnesses
HAD18185	EEC Wiring Harnesses
HAD18186	EEC Wiring Harnesses
HAD18187	EEC Wiring Harnesses
HAD18227	EEC Wiring Harnesses
HAD18269	EGT (T4.9) Thermocouple Probe
HAD18280	Immersion Thermocouple
HAD18286	EEC Oil Temperature Thermocouple Probe
HAD18306	EEC Wiring Harnesses
HAD18307	EEC Wiring Harnesses
HAD18308	EEC Wiring Harnesses
HAD18314	EEC Wiring Harnesses
HAD18520	EEC Wiring Harnesses
HAD18522	EEC Wiring Harnesses
HAD18675	EEC Wiring Harnesses
HAD18700	EEC Fuel Temperature Thermocouple Probe
HAD18760	EEC Fuel/Oil Temperature Thermocouple Probe
HAD18775	EEC Wiring Harnesses
HAD18776	EEC Wiring Harnesses
HAD18777	EEC Wiring Harnesses
HAD18778	EEC Wiring Harnesses
HAD18919	EGT (T4.9) Thermocouple Box and Cable
HAD18927	EGT (T4.9) Thermocouple Box and Cable
HAD18952	EEC Thermocouple Probe (Tt3)
HAD19012	EEC Wiring Harnesses
HAD19013	EEC Wiring Harnesses
HAD19142	EEC Wiring Harnesses
HAD19147	EEC Wiring Harnesses
HAD19247	EEC Fuel/Oil Temperature Thermocouple Probe
HAD19412	EGT (T4.9) Thermocouple Box and Cable
HAD19490	EGT (T4.9) Thermocouple Box and Cable
HAD19555	EEC Wiring Harnesses
HAD19669	E.G.T. Harness and Junction Box
HAD19687	Engine Bleed Air Thermocouple Probe
HAD19697	EEC Wiring Harnesses
HAD19701	EEC Wiring Harnesses
HAD19704	EEC Wiring Harnesses
HAD19705	EEC Wiring Harnesses
HAD19708	EEC Wiring Harnesses
HAD19709	EEC Wiring Harnesses
HAD19768	EEC Wiring Harnesses
HAD19824	E.G.T. Harness and Junction Box
HAD19831	EEC Wiring Harnesses
HAD19926	EEC Wiring Harnesses
HAD20458	EGT (T4.9) Thermocouple Box and Cable
HAD20530	EEC Wiring Harnesses
HAD20594	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES

HAD20758	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD20759	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD20836	Engine Core Compartment Temperature Thermocouple Probe
HAD20899	Exhaust Gas Temperature (EGT) T4.95
HAD20973	EEC Thermocouple Probe (Tt3)
HAD21021	EEC Fuel/Oil Temperature Thermocouple Probe
HAD21226	TCA Thermocouple Probe
HAD21339	Exhaust Gas Temperature (EGT)/T3 Harness
HAD21364	T3/TCA Harness Assembly
HAD21365	Exhaust Gas Temperature (EGT) Harness Assembly
HAD21368	Exhaust Gas Temperature (EGT) T4.95
HAD21986	Exhaust Gas Temperature (EGT) Harness Assembly
HAD21987	T3/TCA Harness Assembly
HAD21988	Exhaust Gas Temperature (EGT)/T3 Harness
HAD22308	Fuel Temperature Thermocouple
HAD22501	EEC Fuel/Oil Temperature Thermocouple Probe
HAD22615	TCA Thermocouple Probe
HAD22739	T3/TCA Harness Assembly
ITC34ACC1	Turbine Clearance Temperature Sensor
J1913-02	Combustor Drain Valve
J2714-01	Combustor Drain Valve
K2482-10	Oil Tank Pressurizing Valve
K3123	Adjusta-Keeper Latches
L902503	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
LR47050D	Lube and Scavenge Pump
LR47050E	Lube and Scavenge Pump
LR47050F	Lube and Scavenge Pump
LR47050G	Lube and Scavenge Pump
LR47050H	Lube and Scavenge Pump
LR47050J	Lube and Scavenge Pump
LR47170	Oil Filter Module
LR47170A	Oil Filter Module
LR47690	Lube and Scavenge Pump
LR47730	Oil Filter Module
M1796-501	Tubes Ducts and Hoses
M1796-503	Tubes Ducts and Hoses
M1796-505	Tubes Ducts and Hoses
M1796-519	Tubes Ducts and Hoses
M1796-521	Tubes Ducts and Hoses
M1796-527	Tubes Ducts and Hoses
M1796-529	Tubes Ducts and Hoses
M1796-531	Tubes Ducts and Hoses
M1796-533	Tubes Ducts and Hoses
M1796-535	Tubes Ducts and Hoses
M1796-537	Tubes Ducts and Hoses
M1796-539	Tubes Ducts and Hoses
M1796-541	Tubes Ducts and Hoses

M1796-543	Tubes Ducts and Hoses
M1796-545	Tubes Ducts and Hoses
M1796-547	Tubes Ducts and Hoses
M1796-549	Tubes Ducts and Hoses
M1796-551	Tubes Ducts and Hoses
M1796-553	Tubes Ducts and Hoses
M1796-555	Tubes Ducts and Hoses
M1796-557	Tubes Ducts and Hoses
M1796-559	Tubes Ducts and Hoses
M1796-561	Tubes Ducts and Hoses
M1796-563	Tubes Ducts and Hoses
M1796-565	Tubes Ducts and Hoses
M1796-567	Tubes Ducts and Hoses
M1796-569	Tubes Ducts and Hoses
M1796-571	Tubes Ducts and Hoses
M1796-573	Tubes Ducts and Hoses
M1796-575	Tubes Ducts and Hoses
M1796-577	Tubes Ducts and Hoses
M1796-579	Tubes Ducts and Hoses
M1796-581	Tubes Ducts and Hoses
M1796-583	Tubes Ducts and Hoses
M1796-585	Tubes Ducts and Hoses
M1796-587	Tubes Ducts and Hoses
N/A	Valve Assembly
OA2730-001	Air Cooled Oil Cooler
OA3150-001	Air Cooled Oil Cooler
OF25-001	Fuel Oil Heat Exchanger
OF25-101	Fuel Oil Heat Exchanger
OF25-201	Fuel Oil Heat Exchanger
OF25-301	Fuel Oil Heat Exchanger
OF25-401	Fuel Oil Heat Exchanger
OF32-001	Fuel Oil Heat Exchanger
OF32-101	Fuel Oil Heat Exchanger
OF33-001	Fuel Oil Heat Exchanger
P528A0001-01	Isolation Control Unit
P528A0001-02	Isolation Control Unit
P528A0001-04	Isolation Control Unit
P529A0001-00	Direction Control Unit
P535A0001-01	D-Duct Actuator
P536A0001-01	Isolation Control Unit
P537A0001-01	Direction Control Unit
P547A0001-00	PDO Actuator
P547A0001-01	PDO Actuator
P547A0001-02	PDO Actuator
P611A0001-00	Cowl Lock
PA9512-200-246	Oil Pressure Transmitter
'D8158-100-2462	Delta P3 Sensor

'D9902-100-4008	Delta P3 Sensor
'2-02 (SPEC No. 3	Anti-Ice Pressure Transducer
PS9512-200-246	Oil Pressure Transmitter
QA06249	Pressure Oil Filter Element
QA06305	Hydraulic Filter Assembly
QA07670	Fuel Differential Pressure Switch
QA07985	Fuel Differential Pressure Switch
QA07995	Fuel Differential Pressure Switch
R4101M2	Rotary Actuator Assembly
R4101M2-1	Rotary Actuator Assembly
R4101M2-11	Rotary Actuator Assembly
R4101M3	Rotary Actuator Assembly
RD910VL086	Oil Filter By-Pass Sensor
RD910VL086Y2	Oil Filter By-Pass Sensor
RD910VL086Y4	Oil Filter By-Pass Sensor
RG38020A	A-Sump Oil Scavenge Pump
RP162-01	Nacelle Temperature Sensor
RP162-02	Nacelle Temperature Sensor
RP302-03	Fan Inlet Temperature Transmitter
RP302-04	Fan Inlet Temperature Transmitter
RP302-05	Fan Inlet Temperature Transmitter
RYLB52192-2	Pressure Regulator Valve
RYLB52192-3	Pressure Regulator Valve
RYLB52192-4	Pressure Regulator Valve
S2861-02	Drain Manifold
SP8833	Door Rate Control Strut Damper
SP8834	Door Rate Control Strut Damper
ST104-515	Hold Open Rod Strut
ST104-523	Hold Open Rod Strut
ST105-517	Hold Open Rod Strut
ST105-525	Hold Open Rod Strut
ST106-519	Hold Open Rod Strut
ST174-1	Telescoping Strut
ST174-3	Telescoping Strut
SYLZ52613-1	Cooling Valve Electronic Sumulator
TC153-00	thermocouple
TC153-01	thermocouple
TC173-00	T495 Thermocouple Wiring Harness
TC174-00	T495 Thermocouple Wiring Harness
TC174-01-	T495 Thermocouple Wiring Harness
TC174-02	T495 Thermocouple Wiring Harness
TC194-00	T495 Wiring Harness
TC194-01	T495 Wiring Harness
TC194-02	T495 Wiring Harness
TC195-00	T495 Wiring Harness
TC195-01	T495 Wiring Harness
TC195-02	T495 Wiring Harness



TC199-00	T5 Temperature Sensor
TC199-01	T5 Temperature Sensor
TC200-00	T495 Thermocouple Wiring Harness
TC200-01	T495 Thermocouple Wiring Harness
TC200-02	T495 Thermocouple Wiring Harness
TC236-00	T5 Temperature Sensor
TC254-01	T495 Wiring Harness
TC254-02	T495 Wiring Harness
TC255-01	T495 Wiring Harness
TC255-02	T495 Wiring Harness
TC255-03	T495 Wiring Harness
TC255-04	T495 Wiring Harness
TC262-00	T495 Thermocouple Wiring Harness
TC262-01	T495 Thermocouple Wiring Harness
TC262-02	T495 Thermocouple Wiring Harness
TC263-00	T495 Thermocouple Wiring Harness
TC263-01	T495 Thermocouple Wiring Harness
TC263-02	T495 Thermocouple Wiring Harness
TC266-00	T5 Temperature Sensor
TC266-01	T5 Temperature Sensor
TC272-00	T495 Thermocouple Wiring Harness
TC272-01	T495 Thermocouple Wiring Harness
TC272-02	T495 Thermocouple Wiring Harness
TC273-00	T495 Thermocouple Wiring Harness
TC273-01	T495 Thermocouple Wiring Harness
TC273-02	T495 Thermocouple Wiring Harness
TC274-00	T5 Temperature Sensor
TC274-01	T5 Temperature Sensor
TC292-01	T5 Temperature Sensor
TC292-02	T5 Temperature Sensor
TC296-02	T495 Wiring Harness
TC296-03	T495 Wiring Harness
TC296-04	T495 Wiring Harness
TC315-00	T495 Wiring Harness
TC315-01	T495 Wiring Harness
TC315-02	T495 Wiring Harness
TC316-00	T495 Wiring Harness
TC316-01	T495 Wiring Harness
TC316-02	T495 Wiring Harness
TC321-01	Thermocouple Assembly
TC322-01	Thermocouple Assembly
TC371-01	Thermocouple Assembly
TC372-01	Thermocouple Assembly
TC477-02	Thermocouple Assembly
TC481-02	Thermocouple Assembly
TC490-00	Thermocouple Assembly
TC491-00	Thermocouple Assembly

TC492-00	Thermocouple Assembly
TC493-00	Thermocouple Assembly
TC532-00	Thermocouple Assembly
TC533-00	Thermocouple Assembly
TCL165-00	RH and LH T495 Thermocouple Wiring Harness
TCR165-00	RH and LH T495 Thermocouple Wiring Harness
TY1558-51	Air Modulating Valve
TY1558-52	Air Modulating Valve
TY1628-01	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-02	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-03	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-04	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1629-06	Synchronised Non-Locking Actuator (Douglas Aircraft Installation)
TY1629-07	Synchronised Non-Locking Actuator (Douglas Aircraft Installation)
TY1629-10	Synchronised Non-Locking Actuator (Douglas Aircraft Installation)
TY1629-15	Synchronised Non-Locking Actuator (Douglas Aircraft Installation)
TY1629-20	Synchronised Non-Locking Actuator (Douglas Aircraft Installation)
TY1630-06	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-07	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-10	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-14	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-15	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-17	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-18	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-20	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-50	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1632-02	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1633-01	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1634-02	Manual Drive (Douglas Aircraft Installation)
TY1634-03	Manual Drive (Douglas Aircraft Installation)
TY1635-01	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1795-52	Air Modulating Valve
TY1795-53	Air Modulating Valve
TY1801-03	T/R Inner Actuator
TY1801-50	T/R Inner Actuator
TY1802-03	Outer Locking / Feedback Actuator
TY1802-04	Outer Locking / Feedback Actuator
TY1802-50	Outer Locking / Feedback Actuator
TY1805-02	T/R Hydraulic Control Unit
TY1882-03	T/R Hold Open Rod
TY1882-04	T/R Hold Open Rod
TY1914 -02	T/R Hand Wind Mechanism
TY2082 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2083 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2084 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2085 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2086 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes

TY2135-01	Hand Wind Assembly
TY2518	Synchronizing Shaft Lock
UA538283-2	Heater, Servo Fuel
UA538342-2	IDG Fuel/Oil Heat Exchanger
UA538404-9	Fuel Flow Diverter and Return Valve
UA538728-1	CF6-IDG FUEL
UA538950-3	Servo Fuel/Oil Heat Exchanger
UA538950-4	Servo Fuel/Oil Heat Exchanger
UA538950-7	Servo Fuel/Oil Heat Exchanger
UA538950-8	Servo Fuel/Oil Heat Exchanger
UA541461-12	Lube/Servo Fuel/Oil Cooler
UA541461-14	Lube/Servo Fuel/Oil Cooler
UA541461-4	Lube/Servo Fuel/Oil Cooler
UA541461-5	Lube/Servo Fuel/Oil Cooler
UA541462-7	IDG/VSCF Air/Oil Cooler Interface
UA541462-8	IDG/VSCF Air/Oil Cooler Interface
UA541462-9	IDG/VSCF Air/Oil Cooler Interface
UA541463-4	VSCF/Lube Oil/Oil Cooler Interface
UA541464-4	IDG Fuel/Oil Cooler
UA541464-5	IDG Fuel/Oil Cooler
UA541464-6	IDG Fuel/Oil Cooler
UA544011-1	IDG/VSCF Air/Oil Cooler Interface
UA544011-2	IDG/VSCF Air/Oil Cooler Interface
UA544051-2	Fuel/Oil Heat Exchanger
UA544051-3	Fuel/Oil Heat Exchanger
UA544494-1	Oil Cooler and Relief Bypass Valve Assembly
VG11-03	VBV Position Sensor
VG11-04	VBV Position Sensor
VG14-00	VBV Position Sensor
VG14-01	VBV Position Sensor
VG17-00	VBV Position Sensor
VG17-01	VBV Position Sensor
VG22-00	Vbv Sensor Position
VG22-01	Vbv Sensor Position
VT-0304C	Oil Pressure Transmitter
VTO304S	Oil Pressure Transmitter
VTO304S-1	Oil Pressure Transmitter
Z2171-01	Drain Module Assembly
Z2171-03	Drain Module Assembly
Z2171-04	Drain Module Assembly