

Part Number	Description
1651	Hydraulic Sh
1652	Hyd Shuttle
1800	Relief Valve
3360	Actuator, Dc
3715	Actuator, Dc
3862	Starting Ejector Solenoid Valve
4227	Pump Unloader Valve
3601	Fire/Overheat Detector
5057	Hydraulic Shuttle Valve
5059	Valve, Hydra
5228	EEC Fuel Temperature Thermocouple Probe
5232	EEC Oil Temperature Thermocouple Probe
5631	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
6015	Valve Assy-Solenoid Operated
6144	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
6252	Fuse, Hyd Quantity
6257	Fuse
6562	Valve-Fuel Shutoff-M
6563	Fuel Valve
6568	Motor
6867	Refuel Overpress Reg & Adapte
8543	Pump, Potable Water
9255	Pump
9257	Pump
9295	Main Fuel Pump
9297	Main Fuel Pump
9477	Main Fuel Pump, Two Stage
12664	Cabin Pressu
13298	Fuel Flow Diverter and Return Valve
17051	Mlg Uplock Actuator
17279	Mlg Uplock Actuator
17300	Fuel Flow Diverter and Return Valve
18286	EEC Oil Temperature Thermocouple Probe
19075	EEC Oil Temperature Thermocouple Probe
19248	EEC Oil Temperature Thermocouple Probe
20471	Hi-Stage Temperature Sensor Cable Assembly
20732	Ball Screw
26949	Recirc Fan
28420	Shutt Off Va
30220	Accumulator - Hydraulic (200 Cu In)
30230	Accumulator (25 Cu In)
30490	Ground Spoiler Actuator Assy
30730	Accumulator - Hydraulic Assembly
31073	Aileron Servo Control

31076	Spoiler Servo Control - Outboard
31077	I/B Spoiler Actuator
40070	Hydraulic Motor
40109	Pump Hyd Electric Motor
40160	Hydraulic Accumulator
40574	Dc Actuator
40575	Actuator, Dc
40884	Valve
40885	Control Unit
42049	Motor, Hydraulic, Constant Displacement
44981	Hanger
45099	Permanent Magnet Alternator
45100	Permanent Magnet Alternator
45391	EEC Wiring Harnesses
45497	EEC Wiring Harnesses
45503	EEC Wiring Harnesses
45506	EEC Wiring Harnesses
45508	EEC Wiring Harnesses
45524	EEC Wiring Harnesses
45529	EEC Wiring Harnesses
45531	EEC Wiring Harnesses
45657	EEC Wiring Harnesses
45722	EEC Wiring Harnesses
45753	EEC Wiring Harnesses
45755	EEC Wiring Harnesses
45774	EEC Wiring Harnesses
45775	EEC Wiring Harnesses
45778	EEC Wiring Harnesses
45779	EEC Wiring Harnesses
45791	EEC Wiring Harnesses
45792	EEC Wiring Harnesses
45793	EEC Wiring Harnesses
45794	EEC Wiring Harnesses
45795	EEC Wiring Harnesses
45796	EEC Wiring Harnesses
45797	EEC Wiring Harnesses
45798	EEC Wiring Harnesses
45851	EEC Wiring Harnesses
45852	EEC Wiring Harnesses
45853	EEC Wiring Harnesses
45854	EEC Wiring Harnesses
45855	EEC Wiring Harnesses
45857	EEC Wiring Harnesses
45858	EEC Wiring Harnesses
45859	EEC Wiring Harnesses
45860	EEC Wiring Harnesses
45861	EEC Wiring Harnesses

45862	EEC Wiring Harnesses
45863	EEC Wiring Harnesses
45864	EEC Wiring Harnesses
45865	EEC Wiring Harnesses
45866	EEC Wiring Harnesses
45906	EEC Wiring Harnesses
45907	EEC Wiring Harnesses
45909	EEC Wiring Harnesses
45915	EEC Wiring Harnesses
45918	EEC Wiring Harnesses
45920	EEC Wiring Harnesses
45924	EEC Wiring Harnesses
45928	EEC Wiring Harnesses
45929	EEC Wiring Harnesses
45932	EEC Wiring Harnesses
45933	EEC Wiring Harnesses
45934	EEC Wiring Harnesses
45935	EEC Wiring Harnesses
45936	EEC Wiring Harnesses
45937	EEC Wiring Harnesses
45982	EEC Wiring Harnesses
45983	EEC Wiring Harnesses
45984	EEC Wiring Harnesses
45985	EEC Wiring Harnesses
45986	EEC Wiring Harnesses
45987	EEC Wiring Harnesses
45988	EEC Wiring Harnesses
45989	EEC Wiring Harnesses
45990	EEC Wiring Harnesses
45991	EEC Wiring Harnesses
45992	EEC Wiring Harnesses
45993	EEC Wiring Harnesses
46012	Motor
46038	Permanent Magnet Alternator
46052	EEC Wiring Harnesses
46053	EEC Wiring Harnesses
46054	EEC Wiring Harnesses
46055	EEC Wiring Harnesses
46092	EEC Wiring Harnesses
46094	EEC Wiring Harnesses
46097	EEC Wiring Harnesses
46100	EEC Wiring Harnesses
46147	EEC Wiring Harnesses
46148	EEC Wiring Harnesses
46149	EEC Wiring Harnesses
46150	EEC Wiring Harnesses
46151	EEC Wiring Harnesses

46152	EEC Wiring Harnesses
46153	EEC Wiring Harnesses
46154	EEC Wiring Harnesses
46155	EEC Wiring Harnesses
46156	EEC Wiring Harnesses
46167	EEC Wiring Harnesses
46168	EEC Wiring Harnesses
46169	EEC Wiring Harnesses
46188	EEC Wiring Harnesses
46224	EEC Wiring Harnesses
46228	EEC Wiring Harnesses
46231	EEC Wiring Harnesses
46233	EEC Wiring Harnesses
46243	EEC Wiring Harnesses
46244	EEC Wiring Harnesses
46330	EEC Wiring Harnesses
46331	EEC Wiring Harnesses
46332	EEC Wiring Harnesses
46333	EEC Wiring Harnesses
46334	EEC Wiring Harnesses
46335	EEC Wiring Harnesses
46366	EEC Wiring Harnesses
46367	EEC Wiring Harnesses
46368	EEC Wiring Harnesses
46369	EEC Wiring Harnesses
46382	EEC Wiring Harnesses
46383	EEC Wiring Harnesses
46384	EEC Wiring Harnesses
46385	EEC Wiring Harnesses
46452	EEC Wiring Harnesses
46453	EEC Wiring Harnesses
46454	EEC Wiring Harnesses
46455	EEC Wiring Harnesses
46456	EEC Wiring Harnesses
46457	EEC Wiring Harnesses
46458	EEC Wiring Harnesses
46459	EEC Wiring Harnesses
46460	EEC Wiring Harnesses
46461	EEC Wiring Harnesses
46462	EEC Wiring Harnesses
46463	EEC Wiring Harnesses
46464	EEC Wiring Harnesses
46465	EEC Wiring Harnesses
46466	EEC Wiring Harnesses
46467	EEC Wiring Harnesses
46474	EEC Wiring Harnesses
46475	EEC Wiring Harnesses

46476	EEC Wiring Harnesses
46477	EEC Wiring Harnesses
46478	EEC Wiring Harnesses
46479	EEC Wiring Harnesses
46480	EEC Wiring Harnesses
46623	EEC Wiring Harnesses
46696	EEC Wiring Harnesses
46742	EEC Wiring Harnesses
46780	EEC Wiring Harnesses
46781	EEC Wiring Harnesses
46782	EEC Wiring Harnesses
46902	EEC Wiring Harnesses
46962	EEC Wiring Harnesses
46963	EEC Wiring Harnesses
46964	EEC Wiring Harnesses
46965	EEC Wiring Harnesses
46966	EEC Wiring Harnesses
51165	Power Transfer Unit
51166	Pump Motor Package
55076	Hydraulic Pump
55098	Hydraulic Pump
57186	Pump Motor Package
58120	Actuator
58173	Motor Assy Wing Flap
60051	Fuel S/O Valve
60128	Fuel S/O Valve
60160	Pressure Fueling Shutoff
60213	Pressure Fueling Receptacle
60470	Thrust Reverser Actuator
60605	Fuel Shutoff Valve
61163	Fuel Shut-Off Valve
61183	Fuel S/O Valve
61185	Fuel S/O Valve
61358	Gate & Actuator Assy
62702	Position Indicating Switch
62716	Position Indicating Switch
62721	Position Indicating Switch
62740	Position Indicating Switch
62742	Position Indicating Switch
62743	Position Indicating Switch
62744	Position Indicating Switch
63169	Power Transfer Unit
63178	Hydraulic Motor Generator
65001	Actuator
65075	Hydraulic Pump
65860	2-Position Motor Operated Valve Assy
66079	Hmg Hydraulic Motor Generator

66087	Pump, Variable Delivery Hyd.
66360	Door Opening-Manifold Assembly
66508	Hanger
66950	VALVE
70200	Valve 2 2 Way Manual Blee
70599	Valve Assy
70825	Switch Pressure
71205	Valve Assy
71208	Fuel Swing Check Valve
71234	Pump Manual-
71404	Valve
71756	Flow Control Module Priority Valve
72181	Valve Servo, Ib-Ob Spoiler Equiv 2228073
72196	Valve Servo, Spoiler Control Alt S251N11
72470	Transfer Valve - Hydraulic
72909	Hydraulic Reservoir Pressure Regulator
73016	Servo Valve Autopilot
73020	Servo Valve
73030	Pressure Switch (Douglas Aircraft
73163	Servo Valve
74149	Valve Module Assy - Autobrake
74150	Servo Valve Autobrake
74152	Servo Valve Power Control Actuator
75130	Servo Valve
77445	Thrust Reverser Assembly
101671	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
101672	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
102842	Actuator Assy
107484	Regulator, High Stage
107970	Valve Body
109522	Pneumatic Linear Actuator
120793	Hydraulic Motor
121174	Gearbox Assembly
124536	Fuel Control Unit (Apu)
125120	Valve Body Assembly
125334	Valve Body Assembly
129525	Press. Reg.
130595	Slide Shutoff Valve
141825	Swivel
141830	Multiport Swivel
141835	Swivel
147465	Rotary Shutoff Valve
148995	Valve Shut Off Rudder Motor Pu
157740	Actuator Assembly
160142	Heat Exchanger – Fuel/Oil
218363	Pump - Electric
218387	Apu Fuel Pump

221408	Boddy Assy
227848	Fuel Filter
228632	Body
229065	Pump Fuel Feed
229165	Motor Actuated Butterfly Valve
229702	Body
229717	Shaft
233145	Valve, Flow
243600	Main Fuel Gear Pump
265567	Fixed Stroke Hyd Motorpump
287357	Hydraulic Pump
316565	Hyd Valve
320115	Motor Actuated Butterfly Valve
320717	Shaft
323031	Body
323180	Body
323636	Shutoff Valv
324080	Shaft
324082	Shaft
324425	Valve, Intake Anti-Ice
324495	Start Bleed Valve
324697	Shaft
324779	Shaft
326975	Anti-Ice On/Off Valve
327915	Solenoid Valve
329257	Valve Shaft
340015	Motor Operated 3-Way V/A
340125	Hydraulic Shutoff Valve
340545	Motor Actuated Valve
340565	Valve
341525	Rotary Shutoff Valve
342381	Motor
358200	Main Fuel Gear Pump
371380	Pump,Engine Driven Hyd.
371900	Main Fuel Gear Pump
373400	Main Fuel Gear Pump
378051	End Bell
378200	Fuel Valve
382400	Main Fuel Gear Pump
384300	Main Fuel Gear Pump
389400	Main Fuel Gear Pump
396362	Elec Motr Assy, Hyd
396462	Flow Control & Shutoff Valve
398188	Oil Tank Drain Valve
400267	Valve
405894	Hyd. Pump Assy
408593	Hyd.Motorpump

414469	Elec Motr Assy, Hyd
414470	Hyd Pump
418575	Motor Ay Primary Trim Hydr Sys
420012	EEC Wiring Harnesses
420015	EEC Wiring Harnesses
420016	EEC Wiring Harnesses
420017	EEC Wiring Harnesses
420018	EEC Wiring Harnesses
420020	EEC Wiring Harnesses
420021	EEC Wiring Harnesses
420054	EEC Wiring Harnesses
420060	EEC Wiring Harnesses
420061	EEC Wiring Harnesses
420062	EEC Wiring Harnesses
420075	EEC Wiring Harnesses
420076	EEC Wiring Harnesses
420077	EEC Wiring Harnesses
420078	EEC Wiring Harnesses
420079	EEC Wiring Harnesses
420080	EEC Wiring Harnesses
420081	EEC Wiring Harnesses
420082	EEC Wiring Harnesses
420083	EEC Wiring Harnesses
420084	EEC Wiring Harnesses
420085	EEC Wiring Harnesses
420086	EEC Wiring Harnesses
420087	EEC Wiring Harnesses
420088	EEC Wiring Harnesses
420090	EEC Wiring Harnesses
420091	EEC Wiring Harnesses
420092	EEC Wiring Harnesses
420094	EEC Wiring Harnesses
420095	EEC Wiring Harnesses
420096	EEC Wiring Harnesses
420097	EEC Wiring Harnesses
420098	EEC Wiring Harnesses
420099	EEC Wiring Harnesses
420100	EEC Wiring Harnesses
420101	EEC Wiring Harnesses
420102	EEC Wiring Harnesses
420103	EEC Wiring Harnesses
420104	EEC Wiring Harnesses
420135	EEC Wiring Harnesses
420172	EEC Wiring Harnesses
420173	EEC Wiring Harnesses
420174	EEC Wiring Harnesses
420179	EEC Wiring Harnesses

420181	EEC Wiring Harnesses
420185	EEC Wiring Harnesses
420186	EEC Wiring Harnesses
420187	EEC Wiring Harnesses
420188	EEC Wiring Harnesses
420190	EEC Wiring Harnesses
420206	EEC Wiring Harnesses
420207	EEC Wiring Harnesses
420208	EEC Wiring Harnesses
420437	EEC Wiring Harnesses
420438	EEC Wiring Harnesses
420439	EEC Wiring Harnesses
420440	EEC Wiring Harnesses
420441	EEC Wiring Harnesses
420442	EEC Wiring Harnesses
420443	EEC Wiring Harnesses
420445	EEC Wiring Harnesses
420446	EEC Wiring Harnesses
420467	EEC Wiring Harnesses
420560	EEC Wiring Harnesses
420561	EEC Wiring Harnesses
420562	EEC Wiring Harnesses
420563	EEC Wiring Harnesses
420578	EEC Wiring Harnesses
420611	EEC Wiring Harnesses
420612	EEC Wiring Harnesses
420613	EEC Wiring Harnesses
420630	EEC Wiring Harnesses
420650	Fire Detection Conduit And Thrust Reverser Harnesses
420651	EEC Wiring Harnesses
420652	EEC Wiring Harnesses
420653	EEC Wiring Harnesses
420654	EEC Wiring Harnesses
420655	EEC Wiring Harnesses
420656	EEC Wiring Harnesses
420658	EEC Wiring Harnesses
420659	EEC Wiring Harnesses
420660	Fire Detection Conduit And Thrust Reverser Harnesses
420661	Fire Detection Conduit And Thrust Reverser Harnesses
420662	Fire Detection Conduit And Thrust Reverser Harnesses
420663	Fire Detection Conduit And Thrust Reverser Harnesses
420664	Fire Detection Conduit And Thrust Reverser Harnesses
420665	Fire Detection Conduit And Thrust Reverser Harnesses
420666	Fire Detection Conduit And Thrust Reverser Harnesses
420684	EEC Wiring Harnesses
420686	EEC Wiring Harnesses
420687	EEC Wiring Harnesses

420692	EEC Wiring Harnesses
420695	EEC Wiring Harnesses
420745	EEC Wiring Harnesses
420746	EEC Wiring Harnesses
420747	EEC Wiring Harnesses
420748	EEC Wiring Harnesses
420749	EEC Wiring Harnesses
420750	EEC Wiring Harnesses
420751	EEC Wiring Harnesses
420752	EEC Wiring Harnesses
420754	Fire Detection Conduit And Thrust Reverser Harnesses
420755	Fire Detection Conduit And Thrust Reverser Harnesses
420761	EEC Wiring Harnesses
420768	EEC Wiring Harnesses
420777	EEC Wiring Harnesses
420788	EEC Wiring Harnesses
420789	EEC Wiring Harnesses
420790	EEC Wiring Harnesses
420805	EEC Wiring Harnesses
420806	EEC Wiring Harnesses
420814	EEC Wiring Harnesses
420815	EEC Wiring Harnesses
420816	EEC Wiring Harnesses
420832	EEC Wiring Harnesses
420833	EEC Wiring Harnesses
420834	EEC Wiring Harnesses
420839	EEC Wiring Harnesses
420841	EEC Wiring Harnesses
420844	EEC Wiring Harnesses
420900	EEC Wiring Harnesses
420916	EEC Wiring Harnesses
420917	EEC Wiring Harnesses
421101	EEC Wiring Harnesses
421260	EEC Wiring Harnesses
421273	EEC Wiring Harnesses
421341	EEC Wiring Harnesses
421342	EEC Wiring Harnesses
421343	EEC Wiring Harnesses
421495	Motor Actuated Butterfly Shutoff Valve
421660	EEC Wiring Harnesses
421661	EEC Wiring Harnesses
421775	Sump Eductor Valve
422625	Hand Operated Shutoff Valve
424244	Hydraulic Pump
428117	Valve, Shuto
430071	Permanent Magnet Alternator
430073	EEC Permanent Magnet Alternator (Rotor and Stator)

430074	EEC Permanent Magnet Alternator (Rotor and Stator)
430192	Permanent Magnet Alternator
430193	Permanent Magnet Alternator
430219	Permanent Magnet Alternator
442187	Fuel Pressurizing &
442274	Unit Fuel Hydromechanical
446469	Fuel Heater
457574	Switch, Differential Pressure
474815	Fuel Heater
478317	Stage 10 Air Solenoid Valve
480732	Fuel Manifold
480733	Fuel Manifold
480737	Fuel Manifold
480738	Fuel Manifold
489084	Thermocouple Box and Cable (Tt6)
489085	Thermocouple Box and Cable (Tt6)
490830	Thermocouple (Tt6)
491018	Oil Cooler
492110	Oil Cooler
492143	EVC 3-2 and EVC 3-4 Engine Vane
499527	Fuel Pressurizing &
500799	Stage 10 Air Solenoid Valve
501295	Thermocouple Box and Cable (Tt6)
501718	Fuel Manifold
501723	Fuel Manifold
502042	EVC 3-5 Engine Vane Control
502938	Fuel Heater
506540	Stage 10 Air Solenoid Valve
510224	Thermocouple Box and Cable (Tt6)
511193	Thermocouple (Tt6)
511194	Thermocouple Box and Cable (Tt6)
515233	Fuel Manifold
515240	Fuel Manifold
518735	Hyd Actuator
520609	Hyd. Pump Assy
521424	Fixed Displacement Hydraulic Motor Assembly
521449	Hydraulic Pump
522442	Fuel Manifold
522443	Fuel Manifold
522649	Fuel Heater
522829	Fuel Heater
524378	Fuel Manifold
524379	Fuel Manifold
525374	Actuator, El
531380	Thermocouple (Tt6)
534096	Oil Cooler
536359	Fuel Manifold

536361	Fuel Manifold
537850	Thermocouple Box and Cable (Tt6)
540967	Thermocouple Box and Cable (Tt6)
540978	Thermocouple Box and Cable (Tt6)
544275	Fuel Manifold
544276	Fuel Manifold
544280	Fuel Manifold
544281	Fuel Manifold
548003	Oil Cooler
549965	Oil Cooler
564651	EVC 3-2 and EVC 3-4 Engine Vane
567219	Oil Cooler
569653	Hydraulic Pump
569668	Constant DisplacementHydraulic Motor
569670	Constant DisplacementHydraulic Motor
571191	Unit,Power Transfer
571813	Solenoid Valve
581028	Fuel Manifold
581029	Fuel Manifold
581031	Fuel Manifold
581033	Fuel Manifold
587772	Fuel Manifold
587773	Fuel Manifold
593211	Tie Rod Fan
593764	EVC 3-2 and EVC 3-4 Engine Vane
596026	Fuel Manifold
596029	Fuel Manifold
611693	Total Pressure Probe & Total Pressure and Temperature Probe
612600	Fuel Heater
614107	Thermocouple Box and Cable (Tt7)
614350	Fuel P&D Valve
616530	EVC 3-5 Engine Vane Control
622492	Oil Tank Drain Valve
622634	Hydraulic Motor
623272	Variable Displacement Hydraulic Pump
623303	Hyd Motor Pump
623337	Pump,Engine Driven Hyd.
623339	Hydraulic Pump
623595	Thermocouple (Tt6)
623977	Variable Displacement Hydraulic Pump
624022	Adapter Block
624372	Hyd.Motorpump
627710	Stage 10 Air Solenoid Valve
627711	Immersion Thermocouple (Tt7)
629141	Fuel Manifold
629148	Fuel Manifold
629154	Fuel Manifold

629155	Fuel Manifold
634995	EVC 3-5 Engine Vane Control
638302	Total Pressure Probe & Total Pressure and Temperature Probe
646526	Fuel Heater
649927	LPC Bleed Master Actuator
650698	LPC Bleed Master Actuator
654233	Fuel Pressurizing &
654777	Hand Wind Assembly
655394	Oil Tank Drain Valve
655570	Thermocouple Box and Cable (Tt6)
655571	Thermocouple Box and Cable (Tt6)
656468	T/R Hand Wind Mechanism
658385	Prbc
658490	Prbc
660136	Thermocouple (Tt6)
660925	HPC Stage 7 Bleed Valve
662114	Fuel Pressurizing and Dump/Drain Valve
663446	Thermocouple (Tt6)
664203	Fuel P&D Valve
664236	Thermocouple Box and Cable (Tt6)
665203	Fuel Pressurizing &
668013	HPT/LPT ACC Valve Assembly
668043	Hand Wind Assembly
670333	HPC Stage 10 Solenoid Valve
671613	Water Injection Regulator
672423	T/R Hand Wind Mechanism
672727	Oil Cooler
674358	Fuel Heater
674977	LPC Bleed Master Actuator
675754	HPC Stage 10 Solenoid Valve
677003	Immersion Thermocouple (Tt4.5)
677006	Thermocouple (Tt3)
677415	LPC Bleed Master Actuator
691630	Fuel Control Water Signal Check Valve
692644	Total Pressure Probe & Total Pressure and Temperature Probe
692645	Total Pressure Probe & Total Pressure and Temperature Probe
692791	Immersion Thermocouple (Tt4.5)
693335	Fuel Gate Va
693716	Total Pressure Probe & Total Pressure and Temperature Probe
693830	Pump,Hydraulic
693878	Fuel Pressurizing and Dump/Drain Valve
693939	Total Pressure Probe & Total Pressure and Temperature Probe
693943	Total Pressure Probe & Total Pressure and Temperature Probe
694926	Hand Wind Assembly
694927	Hand Wind Assembly
696108	Fuel Pressurizing and Dump/Drain Valve
697729	Input Housing

697836	Output Housi
698158	Thermocouple (Tt6)
701650	Oil Cooler
701923	Fuel Pressurizing and Dump/Drain Valve
701933	Water Injection Regulator
701934	Water Injection Regulator
702657	Oil Cooler
704044	Thermocouple Box and Cable (Tt6)
704073	Fuel Heater
704300	Fuel Pump
705300	Main Fuel Gear Pump
705375	Oil Cooler
705400	Main Fuel Gear Pump
705500	Main Fuel Gear Pump
705942	HPC Stage 7 Bleed Valve
706357	Thermocouple (Tt6)
706800	Main Fuel Gear Pump
706920	Fuel Heater
707658	Fuel Control
707999	Housing Csd
708300	Fuel Pump
708400	Fuel Pump
708503	Total Pressure Probe & Total Pressure and Temperature Probe
708600	Fuel Pump
709792	Oil Cooler
710425	Stage 10 Air Solenoid Valve
710755	Fuel Pressurizing and Dump/Drain Valve
710777	Fuel Control
710828	HPC Stage 10 Solenoid Valve
711000	Fuel Pump
711483	Hand Wind Assembly
711484	Hand Wind Assembly
711659	Fuel Heater
711732	Thermocouple (Tt6)
711744	Oil Cooler
712484	Thermocouple (Tt3)
712485	Thermocouple (Tt3)
712500	Oil Cooler
712759	Oil Cooler
712799	Bleed Control Ps4 Tube Restrictor
714810	Actuator
714900	Main Fuel Gear Pump
715000	Main Fuel Gear Pump
715223	Oil Cooler
715445	Thermal Relief Valve
715776	Hyd.Motorpump
716617	Oil Cooler

716618	Oil Cooler
718142	Fuel Heater
718348	Stage 10 Air Solenoid Valve
718453	LPC Bleed Slave Actuator
718702	Fuel Filter
718800	Main Fuel Gear Pump
719306	Hand Wind Assembly
719530	LPC Bleed Slave Actuator
720050	Fuel Control
720100	Main Fuel Gear Pump
720300	Main Fuel Gear Pump
721000	Main Fuel Gear Pump
722100	Main Fuel Gear Pump
723300	Main Fuel Gear Pump
724400	Main Fuel Gear Pump
725126	Immersion Thermocouple (Tt7)
725127	Immersion Thermocouple (Tt7)
725175	Refueling Coupling
725185	Refueling Coupling
725513	Stage 10 Air Solenoid Valve
726218	Fuel Pressurizing &
726895	Oil Cooler
727037	Oil Cooler
728964	Fuel Manifold
728965	Fuel Manifold
728966	Fuel Manifold
728967	Fuel Manifold
728968	Fuel Manifold
728969	Fuel Manifold
728973	Oil Cooler
728975	Oil Cooler
729122	Fuel Manifold
729123	Fuel Manifold
729124	Fuel Manifold
729125	Fuel Manifold
729199	Oil Cooler
729202	Oil Cooler
729203	Oil Cooler
729225	Oil Cooler
731229	Fuel Heater
731376	Axial Flow Fan
731378	Axial Flow Fan
731966	Pump, Motor
732229	Fuel Distribution Valve
732591	Fan,Air Cooling
733698	Pressure Probe (Ps3, Pt3)
734183	Gearbox Assembly

734467	Fuel Heater
735697	Housing,Csd
735780	Fuel Manifold
735781	Fuel Manifold
736802	Fuel Heater
737062	Fuel Heater
739666	Fuel Control
740783	Housing
742511	Fuel Control
742522	Fuel Control
743522	Fuel Control
743801	Fuel Control
743802	Fuel Control
743803	Fuel Control
743963	Fuel Pressurizing and Dump/Drain Valve
743964	Fuel Pressurizing and Dump/Drain Valve
744037	Stage 10 Air Solenoid Valve
744470	Immersion Thermocouple (Tt7)
744471	Immersion Thermocouple (Tt7)
744975	Gearbox Assembly
745439	Hand Wind Assembly
745608	Fuel Heater
746529	Fuel Heater
747674	Thermocouple Box and Cable (Tt7)
747864	Thermocouple (Tt6)
748328	Oil Cooler
749965	Oil Cooler
750712	Fuel Pressurizing and Dump/Drain Valve
751825	HPC Stage 10 Solenoid Valve
751852	Pump & Motor Assy
752091	Immersion Thermocouple (Tt4.5)
752092	Immersion Thermocouple (Tt4.5)
752095	Carrier Shaft Assy
752110	Scavenge Pump Assy
752118	Charge Pump Assy
752124	Inversion Pump Assy
752137	Fuel Heater
752262	Governor & Inversion Pump
752384	HPC Stage 10 Solenoid Valve
752685	Stator Housing Assy
754317	EVC 3-5 Engine Vane Control
755280	Fuel Heater
755425	Fuel Heater
755677	Housing
756099	Thermocouple (Tt6)
756158	Flap Drive Torque Sensor Assembly
756247	Immersion Thermocouple (Tt7)

756711	HPC Stage 10 Solenoid Valve
756714	HPC Stage 10 Solenoid Valve
756718	HPC Stage 10 Solenoid Valve
756720	HPC Stage 10 Solenoid Valve
756722	Solenoid Valve
756725	HPC Stage 10 Solenoid Valve
756910	Stator Housing Assy
757318	Input Housing
758303	Generator Mount
758399	HPC Stage 10 Solenoid Valve
758847	Fuel Heater
759250	Fuel Pressurizing and Dump/Drain Valve
759456	Fuel Manifold
759460	Fuel Manifold
759461	Fuel Manifold
759467	Fuel Manifold
759586	Fuel Manifold
759612	Fuel Manifold
759613	Fuel Manifold
759675	Fuel Manifold
759679	Fuel Manifold
759680	Fuel Manifold
760362	HPC Stage 10 Solenoid Valve
760363	HPC Stage 10 Solenoid Valve
760367	HPC Stage 10 Solenoid Valve
760433	Fuel Distribution Valve
761366	Thermocouple (Tt6)
762140	Spacer
762622	Fuel Manifold
762623	Fuel Manifold
762624	Fuel Manifold
762625	Fuel Manifold
762710	Oil Cooler
762812	HPC Stage 10 Solenoid Valve
762815	HPC Stage 10 Solenoid Valve
762816	HPC Stage 10 Solenoid Valve
762817	HPC Stage 10 Solenoid Valve
762818	HPC Stage 10 Solenoid Valve
764224	Lube Pump
764930	Stator Housing Assy
765412	Thermocouple (Tt6)
765763	Oil Cooler
766342	Fuel Pressurizing &
766381	Gearbox
766592	Thermocouple (Tt6)
766624	Oil Cooler
767188	Rotor Balance Assy

769220	EVC 3-5 Engine Vane Control
769486	Hand Wind Assembly
769606	EEC Permanent Magnet Alternator
770037	Power Driven Rotary Pump
770106	Thermocouple (Tt6)
770114	Thermocouple (Tt6)
770306	Fuel Distribution Valve
770308	HPT/LPT ACC Valve Assembly
770330	Total Pressure Probe & Total Pressure and Temperature Probe
770604	Rotor Balance Assy
771095	Thermocouple (Tt6)
771169	HPC Stage 10 Solenoid Valve
772374	Oil Cooler
772540	Fuel Pressurizing and Dump/Drain Valve
772969	Fuel Heater
772997	Fuel Heater
773456	Hand Wind Assembly
774203	Fuel P&D Valve
774205	Fuel Heater
774217	Oil Cooler
774677	HPT/LPT ACC Valve Assembly
774812	Thermocouple Box and Cable (Tt7)
774987	Valve-Pneu Starter Cont
776287	Oil Cooler
776443	Thermocouple Box and Cable (Tt6)
776859	Thermocouple (Tt3)
776961	HPC Stage 10 Solenoid Valve
777086	Thermocouple (Tt3)
777087	Thermocouple (Tt3)
777925	Thermocouple (Tt6)
777928	Thermocouple (Tt6)
781767	Fuel Pressurizing and Dump/Drain Valve
782250	Immersion Thermocouple (Tt7)
782262	Stage 10 Air Solenoid Valve
782267	Fuel Heater
782471	Immersion Thermocouple (Tt7)
783448	Stage 10 Air Solenoid Valve
783955	Prbc
785353	Fuel Manifold
785354	Fuel Manifold
785355	Fuel Manifold
785356	Fuel Manifold
785357	Fuel Manifold
785358	Fuel Manifold
785359	Fuel Manifold
785360	Fuel Manifold
786392	Fuel Control

786443	Fuel Pressurizing and Dump/Drain Valve
786445	Fuel Heater
786464	Pt2/Tt2 Probe
787350	Stage 10 Air Solenoid Valve
788012	HPT/LPT ACC Valve Assembly
788013	HPT/LPT ACC Valve Assembly
788014	HPT/LPT ACC Valve Assembly
789466	Thermocouple Box and Cable (Tt7)
789642	EVC 3-5 Engine Vane Control
789643	EVC 3-5 Engine Vane Control
789644	Fuel Heater
789762	Fuel Heater
789803	EVC 3-5 Engine Vane Control
790144	Air/Oil Heat Exchanger Valve
790312	Prbc
790770	HPT/LPT ACC Valve Assembly
791288	Fuel Heater
792755	Pneumatic Prv Controller
792863	Thermocouple Box and Cable (Tt6)
792864	Thermocouple Box and Cable (Tt6)
792917	EVC 3-5 Engine Vane Control
792919	EVC 3-5 Engine Vane Control
793272	Stage 10 Air Solenoid Valve
793274	Stage 10 Air Solenoid Valve
793322	Pressure Probe (Ps3, Pt3)
793396	Hand Wind Assembly
793477	Thermocouple Box and Cable (Tt7)
793515	Thermocouple Box and Cable (Tt7)
793528	Fuel Pressurizing and Dump/Drain Valve
793859	Fuel Pressurizing and Dump/Drain Valve
794106	Oil Cooler
794412	Motional Pickup Transducer (Stator Vane Angle)
794699	Outer Locking/Feedback Actuator
794915	Outer Locking/Feedback Actuator
794999	Air/Oil Heat Exchanger Valve
795111	HPT/LPT ACC Valve Assembly
795233	Thermocouple Box and Cable (Tt7)
795246	Oil Cooler
796257	EVC 3-5 Engine Vane Control
796258	EVC 3-5 Engine Vane Control
796812	Pt2/Tt2 Probe
797555	Differential Pressure Switch
798073	Fuel Pressurizing and Dump/Drain Valve
798095	Fuel Pressurizing and Dump/Drain Valve
798133	Pt2/Tt2 Probe
798275	Hydraulic Return Fuel Heater
798287	Thermocouple Box and Cable (Tt7)

798380	Thermocouple Box and Cable (Tt6)
798409	Oil Cooler
798587	Hydraulic Return Fuel Heater
798759	Air/Oil Heat Exchanger Valve
798850	Air/Oil Heat Exchanger Valve
799120	Hydraulic Return Fuel Heater
799419	Hydraulic Return Fuel Heater
799607	Thermocouple Box and Cable (Tt7)
799628	Thermocouple Box and Cable (Tt7)
801673	EVC 3-5 Engine Vane Control
801677	EVC 3-5 Engine Vane Control
801868	Hand Wind Assembly
801941	HPT/LPT ACC Valve Assembly
803509	Stage 10 Air Solenoid Valve
804228	Hand Wind Assembly
805373	Prbc
805783	Outer Locking/Feedback Actuator
806266	Fuel Manifold
806267	Fuel Manifold
806636	Thermocouple Box and Cable (Tt7)
806637	Thermocouple Box and Cable (Tt7)
808893	Oil Cooler
808894	Oil Cooler
808895	Oil Cooler
808896	Oil Cooler
808897	Oil Cooler
808898	Oil Cooler
808899	Oil Cooler
808900	Oil Cooler
811040	Starter Air Valve Solenoid
811094	HPC Stage 10 Solenoid Valve
811945	Oil Cooler
814067	Thermocouple Box and Cable (Tt7)
821249	Fuel Pump
825500	Main Fuel Gear Pump
828300	Main Fuel Gear Pump
830100	Main Gear Fuel Pump Assembly
835800	Main Fuel Gear Pump
835900	Main Fuel Gear Pump
848354	Variable Displacement Hyd. Pump Assy
848847	Motor Pump Assy
849589	Variable Displacement Hydraulic Pump
856107	Valve Body
861555	Pump - Auxiliary Hydraulic (Hp)
861686	Pump
861716	Adapter Block
887087	Hydraulic Motor

887111	Variable Displacement Hydraulic Pump
887477	Actuator Ass
887479	Actuator
887480	Motorpump Hydraulic
887673	Variable Displacement Hydraulic Pump
887692	Hyd Pump
893635	Actuator Assembly
899727	Pump, Power Rotary
903546	Fire/Overheat Detector Assembly
903547	Fire/Overheat Detector Assembly
920449	Fixed Displacement Hydraulic Motor Assembly
920550	Fixed Displacement Hydraulic Motor Assembly
933239	Fixed Displacement Hydraulic Motor Assembly
933249	Fixed Displacement Hydraulic Motor Assembly
933252	Fixed Displacement Hydraulic Motor Assembly
961627	Actuator Val
971844	Variable Displacement Hyd. Pump Assy
972630	Variable Displacement Hyd. Pump Assy
973600	Anti-Ice Val
973604	Dual Fuel Filter Differential Pressure Sensor
974301	Dual Main Oil Pressure Sensor
974302	No. 4 Scavenge Pressure Sensor
974401	P4.9 Pressure Sensor
974540	Hydraulic Pump
974800	Variable Displacement Hyd. Pump Assy
974947	Variable Displacement Hyd. Pump Assy
974976	Variable Displacement Hyd. Pump Assy
1122364	Hydraulic Switch
1122696	Temperature Transducers and Thermocouple Sensor
1122797	Oil Temperature Resistance Temperature Detectors
1226400	Actuator
1527102	Piston
1540502	Piston
1542600	POWER CONTROL ACTUATOR OUTBOARD SPOILER
1542606	Piston
1700637	Flap Angle Gearbox
1700639	Flap Angle Gearbox
1703452	Governor & Inversion Pump
1703909	Slat Actuator Type D
1703911	Slat Actuator Type E
1704208	Slat Angle Gearbox
1706630	Shaft
1713255	Slat Actuator
2022432	Ram Air Door Actuator
2022480	Cabin Pressure Outflow Valve Actuator
2326776	Actuator-FI
2605004	Ram Air Check Valve

2606573	Axle Sleeve
2607293	Axle Sleeve
2607484	Axle Sleeve
2610742	Axle Sleeve
2610743	Axle Sleeve
2613552	Axle Sleeve
2630327	Swing Check Valve
2650102	Actuator, Sp
2670112	Modular Assy
2670136	Control Valve
2670137	Control Valve
2670296	Valve Assy
2680337	Ac Actuator
2701298	Body
2720021	Cartridge Cone Check Valve
2730661	Pressure Fueling Shutoff Valve
2830007	Valve, Shutoff
3028266	Housing Rgb
3028282	Rear Gearbox
3032481	Power Driven Rotary Pump
3034620	Power Driven Rotary Pump
3035526	Power Driven Rotary Pump
3037610	Power Driven Rotary Pump
3038492	Power Driven Rotary Pump
3038655	Power Driven Rotary Pump
3038824	Power Driven Rotary Pump
3038892	Power Driven Rotary Pump
3038893	Power Driven Rotary Pump
3039679	Power Driven Rotary Pump
3039902	Power Driven Rotary Pump
3039903	Power Driven Rotary Pump
3040627	Power Driven Rotary Pump
3040628	Power Driven Rotary Pump
3100013	Temperature Transducers and Thermocouple Sensor
3100050	Sensor, Brake Temperature
3100051	Brake Temperature Monitor Unit
3100065	Brake Temperature Sensor (Bts, 757)
3100072	Temperature Transducers and Thermocouple Sensor
3100130	Temperature Transducers and Thermocouple Sensor
3100152	Sensor
3167453	Piston
3170341	Piston, Forw
3176770	Cover
3199958	Temperature Transducers and Thermocouple Sensor
3202130	6.0 Inch Diameter Check Valve
3204908	Override Valve
3214334	4.0 Inch Diameter Regulating & Shut-Off Valve

3214446	High Stage Valve
3214552	Pressure Regulator And Shutoff Valve
3215302	High Pressure Shutoff/Pressure Regulating Shutoff Valve
3275506	Ball Bearing Type Screw And Nut
3275538	Ballscrew Gearbox Assembly
3289562	Four Inch Diameter Precooler Control Valve
3289630	Three-Inch Diameter Starter Control Valve
3291186	Hpt Clearance Valve
3291238	3.0 Inch Diameter Surge Control Valve
3321944	Piston
3505582	Air Turbine Starter
3505814	Air Turbine Starter
3505945	Air Turbine Starter
3505953	Air Turbine Starter
3602310	Fuel Control Unit
3603879	Valve & Flow Divider Assy
3617750	Fuel Control Unit, Apu
3830041	Modulated Actuator 2.5"
3876046	Solenoid Valve Assy
3882550	Flow Divider/Drain Valve
3882639	Fuel Check Valve
3900276	Starter Motor
3900357	Starter Motor
3900377	Starter Motor
3900460	Starter Motor
3900616	Starter Motor
4018001	Electric Motor Driven
4100149	Lavatory/Galley Vent
4100941	Fan 9 Mix Flow
4100947	Vscf Supplemental Cooling Fan
4101184	Bcv Actuator
4101636	Axial Vane Fan
4101638	Recirculation Fan
4101722	Recirculation Fan
4101966	Outline, Fan, Mixed Flow
4191695	Retractable Landing Light
4205400	Hydraulic Pump
4205401	Actuator
4205603	Hydraulic Pump
4207902	Hydraulic Pump
4279198	Motor Converter
4279204	Motor Converter
4298117	Hydraulic Ac
4503526	HARNESS
4503653	Fuel Control
4503762	Fuel Control
4504086	Igv Actuator

4506061	HARNESS
4950074	SOLENOID VALVE
4950136	Starter Motor
4951093	OIL COOLER
4951289	VALVE
4951304	Fuel Pump
4951652	OIL COOLER
4951701	Anti-Surge Valve
4951957	Starter Motor
4952164	Starter Motor
4952361	Bleed Air Valve
4952447	Bleed Air Valve
4952897	Anti-Surge Valve
4953014	Anti-Surge Valve
5000482	Inboard Whee
5006002	Main Fuel Boost Pump
5006003	Fuel Pump
5006283	Fuel Boost Pump
5006286	Fuel Boost Pump
5006488	Power Driven Rotary
5006834	Main Fuel Gear Pump
5007246	Fuel Pump
5007436	Lube Pump
5008269	Fuel Pump
5008437	Lube Pump
5008591	Axle Sleeve
5008735	Main Fuel Gear Pump
5009913	Main Fuel Gear Pump
5009980	Rotary Pump
5009982	Rotary Pump
5009984	Power Driven Rotary
5009986	Power Driven Rotary
5010216	Lp/Hp Fuel Pumps
5010224	Main Fuel Gear Pump
5010276	Axle Sleeve
5010277	Axle Sleeve
5011637	Axle Sleeve
5013236	Axle Sleeve
5701802	Ball Screw Assy
5701803	Jackscrew
5701804	Jackscrew
5702224	Ballscrew Gr
5702226	Ballscrew As
5817201	Hydraulic Motor Inboard Flap
5912833	Actuator Mas
5912952	Power Drive Motor
6002868	Actuator-Loc

6005305	Transducer Assy-Wheel Speed Indicator
7505639	System B Return Filter Assy
7554270	Modular Assy - Return Filter
7578944	Filter Assembly
7579078	Hydraulic Filter Assy
7589149	Solenoid Air Filter
7820665	Ball Nut
7820686	Ball Nut
7821202	Screw
7821342	Screw Assy
7821344	Actuator Ass
7825221	Ballscrew And Nut Assy
7825222	Ballscrew And Nut Assy
7825223	Ballscrew And Nut Assy
9508175	Valve Float Vent
9811820	Valve Non Return
9811839	Valve Non Return
9815715	Valve Pressure Relief
10300167	Engine Core Compartment Temperature Sensor
11082101	Flexible Shaft Assembly
11150300	T/R Hydraulic Control Unit
11408700	Hydraulic Bypass Selector Valve
22608100	Terminal Lug Sensing Elements
23801100	Terminal Lug Sensing Elements
24201700	Terminal Lug Sensing Elements
24601700	Terminal Lug Sensing Elements
24602000	Terminal Lug Sensing Elements
26402000	Terminal Lug Sensing Elements
26804000	Terminal Lug Sensing Elements
27041907	LPC Bleed Slave Actuator
27044923	EEC Permanent Magnet Alternator
27044941	EEC Permanent Magnet Alternator
27141198	LPC Bleed Slave Actuator
27241337	LPC Bleed Slave Actuator
73983600	Fuel Temperature Thermocouple
73983700	A.C.O.C. Oil Temperature Thermo-couple
73984200	Fuel Temperature Thermocouple
73984300	A.C.O.C. Oil Temperature Thermo-couple
77086590	Pump Housing Assy
77086983	Pump Housing Assy
77087740	Pump Housing Assy
77157010	Seal Housing
81207425	Actuator Sta
104652001	Actuator Ass
114080003	Mlg Door Selector Manifold
114083003	Vent Valve
114086001	Mlg Cutout Valve

114087005	Lg Door Bypass Valve
114087006	Bypass Valve
114087007	Lg Door Bypass Valve
114094001	Retraction Actuator
114094002	Retraction Actuator
114094003	Retraction Actuator
114094004	Retraction Actuator
114094005	Retraction Actuator
114094006	Retraction Actuator
114094007	Retraction Actuator
114094008	Retraction Actuator
114094009	Retraction Actuator
114095004	Actuator
114122002	Mlg Door Actuator
114122003	Mlg Door Actuator
114122004	Mlg Door Actuator
114122006	Mlg Door Actuator
114122007	Mlg Door Actuator
114122008	Mlg Door Actuator
114122009	Mlg Door Actuator
114122010	Mlg Door Actuator
114122011	Mlg Door Actuator
114122012	Mlg Door Actuator
114122014	Mlg Door Actuator
114122015	Mlg Door Actuator
114151004	Relief Valve
114160005	Rat Ejection Jack
114161003	Rat Actuator Control Module
114193001	Retraction Actuator
114193003	Retraction Actuator
114193004	Retraction Actuator
114193005	Retraction Actuator
114193006	Retraction Actuator
114193007	Retraction Actuator
114193008	Retraction Actuator
114193009	Retraction Actuator
114193010	Retraction Actuator
201117013	Mlg Uplock
201117014	Mlg Uplock
201117017	Mlg Uplock
201117018	Mlg Uplock
201117021	Uplock Mlg Lh
201117022	Uplock Mlg Rh
201122008	Mlg Door Uplock
201218008	Actuator
201590001	Retraction Actuator
201590002	Retraction Actuator

285689001	Check Valve
335205040	FAN ASSY
335708140	HARNESS
471111232	Fuel Cooled Oil Cooler
4305990050	Sensor
4305990091	Sensor
9550170900	Starter Motor
60-755100	Fuel Boost Pump
0050010100-4	Valve
0091520200-3	Valve: Hyd Reservoir Vent
010-57354-1B	Deflector Jet Servovalve
0111160-001	Hydraulic Manifold Assembly
0154CL	Inlet Temperature Sensor
0154CN	Inlet Temperature Sensor
0154DA	Inlet Temperature Sensor
0154DN	Engine Inlet Total TemperatureSensor
0154DN2	Engine Inlet Total TemperatureSensor
0154DN3	Engine Inlet Total TemperatureSensor
0154DN6	Engine Inlet Total TemperatureSensor
0154DN8	Engine Inlet Total TemperatureSensor
0154EW2	CIT/P25 Probe
0154EW3	CIT/P25 Probe
0154EW4-1	CIT/P25 Probe
0154GF10	PT25 Temperature Sensor
0154GF11	T25/PT25 Temperature Sensor
0154GF12	PT25 Temperature Sensor
0154GF13	T25/PT25 Temperature Sensor
0154GF4	T25/PT25 Temperature Sensor
0154GF6	PT25 Temperature Sensor
0154GF7	T25/PT25 Temperature Sensor
0154GF9	PT25 Temperature Sensor
0154JU	Total Pressure and Total Temperature
0154LG	Engine Inlet Pressure and Temperature Sensor
015T0850-1	Power Unit
015T0850-4	Power Unit
015T0850-6	Power Unit
015T0850-8	Power Unit
015T0850-9	Power Unit
0171520100-3	VALVE PRIORITY IN LINE
023104-023	Fuel Pump
023104-025	Fuel Pump
023104-027	Fuel Pump
023104-030	Fuel Pump
023104-032	Fuel Pump
025323-101-03	Pump Power Driven Rotary
0263KTU03	Sensor: Qty,Fuel Tank
0267KTU03	Sensor: Qty,Fuel Tank

0275KTU03	Sensor: Qty,Fuel Tank
0287KTU03	Unit: Tank
030-22229-1	Assembly-Aft: Plugprimary,Exhaust
033000-00	Actuator, Pilot Seat
033000-0-01	Actuator, Pilot Seat
0332KTU02	Sensor: Qty,Fuel Tank
0333KTU02	Sensor: Qty,Fuel Tank
0334KTU02	Sensor: Qty,Fuel Tank
033638	Blower, Smoke Detector
033638500	Fan - Smoke Detector
0336KTU02	Sensor: Qty,Fuel Tank
0337KTU02	Sensor: Qty,Fuel Tank
0338KTU02	Sensor: Qty,Fuel Tank
0339KTU02	Sensor: Qty,Fuel Tank
0340KTU02	Sensor: Qty,Fuel Tank
0341KTU02	Sensor: Qty,Fuel Tank
0342KTU02	Sensor: Qty,Fuel Tank
0344KTU02	Sensor: Qty,Fuel Tank
0345KTU02	Sensor: Qty,Fuel Tank
0349KTU02	Sensor: Qty,Fuel Tank
0350KTU02	Tank Unit: Fuel
0351KTU02	Sensor: Qty,Fuel Tank
0352KTU02	Sensor: Qty,Fuel Tank
0353KTU02	Sensor: Qty,Fuel,Tank
0354KTU02	Sensor: Qty,Fuel,Tank
0356KTU02	Sensor: Qty,Fuel Tank
0363KTU01	Sensor: Qty,Fuel Tank
03P75-1	Turbine Vane and Blade Cooling Air Valve
03P75-2	Turbine Vane and Blade Cooling Air Valve
03P75-3	Turbine Vane and Blade Cooling Air Valve
04P23	No. 3 Bearing Compartment Breather Restrictor Valve
04P23-1	3-Way Pneumatic Solenoid Valve
04P23-10	3-Way Pneumatic Solenoid Valve
04P23-11	3-Way Pneumatic Solenoid Valve
04P23-12	Solenoid-Bleed Valve
04P23-4	3-Way Pneumatic Solenoid Valve
04P23-5	3-Way Pneumatic Solenoid Valve
04P23-6	3-Way Pneumatic Solenoid Valve
04P23-7	3-Way Pneumatic Solenoid Valve
04P23-8	3-Way Pneumatic Solenoid Valve
04P23-9	3-Way Pneumatic Solenoid Valve
0513AB1	Ice Detection System
0513AB2	Ice Detection System
0513AB2-1	Ice Detection System
0711346-003	Actuator Rat
0712171-004	Variable Geometry Actuator
0712171-005	Variable Geometry Actuator

0712171-series	Variable Geometry Actuator
07124P000-02	Ballscrew: Actuator,Flap
07126P000-02	Ballscrew: Actuator,Flap
07311P000-01	Ballscrw Assy
07311P000-02	Ball Screw Assemblies
07312P000-01	Ball Screw Assemblies
07313P000-01	Ball Screw Assemblies
07323P000-01	Ballscrw Assy
07324P000-01	Ballscrw Assy
07325P000-01	Ballscrw Assy
07P95	Pneumatic Relay Valve
07P951	Pneumatic Relay Valve
07P95-1	Pneumatic Relay Valve
07P952	Pneumatic Relay Valve
07P95-2	Pneumatic Relay Valve
07P953	Pneumatic Relay Valve
07P95-3	Pneumatic Relay Valve
07P954	Pneumatic Relay Valve
07P95-4	Pneumatic Relay Valve
07P957	Pneumatic Relay Valve
07P95-7	Pneumatic Relay Valve
07P958	Pneumatic Relay Valve
07P95-8	Pneumatic Relay Valve
07P959	Pneumatic Relay Valve
07P95-9	Pneumatic Relay Valve
084006-1	Pwa, A2, Capacitor (Internal)
0871GD1	Ice Detection System
088256-04644	Hydraulic Brake Accumulator
088259-04644	Accumulator-Power
094B0000-01	Actuator,Krueger Flap
094B0000-01 AMDT A	Krueger Actuator
094B0000-01 AMDT B	Krueger Actuator
098C00160	Valve, Mlg Downlock Door Sequence
098C-00160	Sequence Valve
098C00210	Gear Sequencing Valv
098C-00210	Valve
100000-29	Actuator
1000508-5	Starter Valve
1000649-1	Anti-Ice Valve
1000649-2	Anti-Ice Valve
1000851-3	PS400-2 Starter Control Valve
1001000-3	In-Line Starter Valve
1001000-4	In-Line Starter Valve
1001100-3	In-Line Starter Valve
1001246-1	High Stage Bleed Vlave
1001246-2	High Stage Bleed Vlave
1001246-3	High Stage Bleed Vlave

1001248-1	Bleed Isolation Valve
1001248-2	Bleed Isolation Valve
1001249-1	Slat Wing Anti-Ice Valve
1001249-2	Slat Wing Anti-Ice Valve
1001250-1	Low-Limit Bypass Valve
1001250-2	Low-Limit Bypass Valve
1001250-3	Low-Limit Bypass Valve
1001250-4	Low-Limit Bypass Valve
1001250-5	Low-Limit Bypass Valve
1001253-1	Torque Motor Control
1001436-13	Housing
1001436-2	Housing
1001436-3	Housing
1001436-3	Valvevalvee Housing
1001448-2	Apu Bleed Check Valve
1001449-1	Fan Bypass Check Valve
1001452-2	Check Valve
1001452-3	Check Valve
1001452-4	Check Valve
1001454-1	Check Valve
1001456-2	Pack Control Valve
1001456-3	Pack Control Valve
1001456-4	Pack Control Valve
1001456-6	Pack Control Valve
1001456-8	Pack Control Valve
1001479-2	Electric Linear Actuator
1001479-3	Electric Linear Actuator
1001479-4	Electric Linear Actuator
1001497-1	Cargo Compartment Valve
1001497-2	Cargo Compartment Valve
1001807-2	GTA67-2 IDG Oil Bypass Valve
1002166-1	Fan Air Valve
1002166-2	Fan Air Valve
1002166-3	Fan Air Valve
1002166-4	Fan Air Valve
1002166-6	Fan Air Valve
1002822-1	Fuel Control
100-5383Y-00	Landing Gear Selector Valve
1007086-1	Fan Air Valve
1007086-2	Fan Air Valve
1007086-3	Fan Air Valve
1007086-5	Fan Air Valve
1007086-7	Fan Air Valve
1007A0000-04	Brake Wing Tip
1007A0000-05	Brake Wing Tip
1007A0000-06	Brake Wing Tip
1008520-9	Valve,Balanced Relief

1010099-6-2	Boiler: Water
101050A1	Fuel De-Icing Valve
101050A2	Fuel De-Icing Valve
101050A3	Fuel De-Icing Valve
101050A4	Fuel De-Icing Valve
101050A5	Fuel De-Icing Valve
101180A1	Pressure Ratio Bleed Control
1011V0200	Pneumatic Solenoid Valve
1011V0200-2	Pneumatic Solenoid Valve
1011V0400	Pneumatic Solenoid Valve
1011V0400-1	Pneumatic Solenoid Valve
1011V0400-2	Pneumatic Solenoid Valve
1012830-1	Flow Regulating Valve
1012831-1	Main Deck Shutoff Valve
1012831-2	Main Deck Shutoff Valve
101-389006-X	Actuator
1013952-1	High Stage Bleed Valve
1013952-5	High Stage Bleed Valve
1015080-1	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
1015080-2	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
1015080-3	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
102-00000	Sensor
102-344-1	Fuel, Valve
1026V0600	No. 4 Bearing Scavenge Valve
1026V0600-1	No. 4 Bearing Scavenge Valve
1026V0600-2	No. 4 Bearing Scavenge Valve
1026V0600-3	No. 4 Bearing Scavenge Valve
1026V0700	No. 4 Bearing Scavenge Valve
1026V0800	No. 4 Bearing Scavenge Valve
1027T100-15	Actuator Ele
102842B	Actuator
102842DB	Hydraulic System Group
102842DJ	Actuator Assy.
102842HE	Actuator Assy.
102842MB	Actuator Assy Override
102842MW	Hydraulic System Group
1029D100-1	Actuator
102LA2AG	Total Temperature Sensor
103-00080	IDG Oil Temperature Sensor
103-00082	Oil Temperature Sensor
103-00084	Engine Oil Temperature Sensor
103642-3	Valve: Pressure Relief
10-376001-000	Nlg Actuating Cylinder
1040T100-5	Actuator, Ground Spoiler, Automatic Ctrl
1043V0300	Fuel/Oil Heat Exchanger Bypass Valve
10-451701-000	Retraction Actuator
10470-2	Pump Motor Driven Hyd

1051T100-11	Actuator
1051T100-13	Actuator
1051T100-15	Actuator
1051T100-17	Actuator
1051T100-9	Actuator
1058V0100	Start Bleed Control
1058V0100-1	Start Bleed Control
1058V0100-2	Start Bleed Control
1058V0100-3	Start Bleed Control
1058V0400	Start Bleed Control
1058V0400-1	Start Bleed Control
1058V0400-2	Start Bleed Control
1058V0400-3	Start Bleed Control
1058V0600	Start Bleed Control
10-60133-3	Switch
10-60470-10	Hydraulic Pump
10-60470-11	Hydraulic Pump
10-60470-3	Hydraulic Pump
10-60470-8	Hydraulic Pump
10-60552-11	Press Switch
10-60552-21	Switch
10-60556-10	Pump Motor Package
10-60556-12	Pump Motor Package
10-60556-15	Pump Motor Package
10-60556-16	Pump Motor Package
10-60556-17	Pump Motor Package
10-60556-18	Pump Motor Package
10-60556-20	Pump Motor Package
10-60783-4	Valve Fill
10-60784-2	Ball Drain V
10-609445-1	Dual Relay Box
10-609455-1	Dual Relay Box
10-609481-10	EEC Wiring Harnesses
10-609481-11	EEC Wiring Harnesses
10-609481-3	EEC Wiring Harnesses
10-609481-5	EEC Wiring Harnesses
10-609481-51	EEC Wiring Harnesses
10-609481-6	EEC Wiring Harnesses
10-609481-61	EEC Wiring Harnesses
10-609481-7	EEC Wiring Harnesses
10-609481-81	EEC Wiring Harnesses
10-609481-9	EEC Wiring Harnesses
10-609482-10	EEC Wiring Harnesses
10-609482-11	EEC Wiring Harnesses
10-609482-3	EEC Wiring Harnesses
10-609482-5	EEC Wiring Harnesses
10-609482-51	EEC Wiring Harnesses

10-609482-6	EEC Wiring Harnesses
10-609482-61	EEC Wiring Harnesses
10-609482-7	EEC Wiring Harnesses
10-609482-81	EEC Wiring Harnesses
10-609482-9	EEC Wiring Harnesses
10-609483-3	EEC Wiring Harnesses
10-609483-4	EEC Wiring Harnesses
10-609483-41	EEC Wiring Harnesses
10-609484-3	EEC Wiring Harnesses
10-609484-4	EEC Wiring Harnesses
10-609484-41	EEC Wiring Harnesses
10-609491-3	EEC Wiring Harnesses
10-609491-4	EEC Wiring Harnesses
10-609491-41	EEC Wiring Harnesses
10-609600-1	EEC Wiring Harnesses
10-609600-11	EEC Wiring Harnesses
10-609600-12	EEC Wiring Harnesses
10-609600-2	EEC Wiring Harnesses
10-609600-31	EEC Wiring Harnesses
10-609600-4	EEC Wiring Harnesses
10-609600-5	EEC Wiring Harnesses
10-609600-6	EEC Wiring Harnesses
10-609640-1	EEC Wiring Harnesses
10-609640-11	EEC Wiring Harnesses
10-609640-2	EEC Wiring Harnesses
10-609640-31	EEC Wiring Harnesses
10-609640-4	EEC Wiring Harnesses
10-609640-5	EEC Wiring Harnesses
1061-0010	Pressure Switch (Douglas Aircraft
10-61093-201	Regulator
106-1-1100-02	Apu Air Intake Actuator
10-61312-13	Ball Screw Assy
10-61312-21	Ballscrw Assy
10-61312-22	Ball Screw Assemblies
10-61312-4	Screwjack
10-614960-2	EEC Generator (Rotor and Stator)
10-614965-1	EEC Generator (Rotor and Stator)
10-61897-2	Surge Tank Pressure Relief Valve
10-62025-3	Actuator, El
10-62026-1	Lateral Trim Actuator
10-62027-1	Rudder Pedal Release
10-621595-2	Permanent Magnet Alternator Rotor & Stator
10-621920-1	EEC Alternator
10-621920-2	EEC Alternator
1065V0100	Three Way Valve
106778B190	Actuator / Valve
106778B224	Actuator / Valve

106785C100	Actuator
106786A121	Actuator
106786A310	Actuator / Valve
106786A375	Actuator / Valve
106788A119	Switch
106788A131	Actuator Ass
106788A165	Actuator
106788A210-X	Actuator
106788A216	Actuator
106788A216-1	Actuator
106788A216-2	Actuator
106788A217	Actuator
106788A217-1	Actuator
106788A217-2	Actuator
106788A219	Actuator
106788A219-1	Actuator
106788B107	Actuator
106788B108	Actuator
106788B160	Actuator
106788B164	Actuator
106788B165	Actuator
106788B196	Actuator
106788B200	Actuator
10688A216	Actuator
10688A216-1	Actuator
10688A216-2	Actuator
10688A217	Actuator
10688A217-1	Actuator
10688A217-2	Actuator
10688A219	Actuator
10688A219-1	Actuator
1070B0000-04	Flap Actuator
1070C0000-01	Actuator, Flap
1071B0000-04	Flap Actuator
1072D0000-01	Actuator, Flap
1073A0000-04	Flap Actuator
107460-12	Pilot
107460-16	Valve-High Stage Pilot
107460-17	High Stage Pilot
107474-1	Pressure Regulator Shutoff Pilot
107484-1	High Stage Regulator
107484-2	High Stage Regulator
107484-3	High Stage Regulator
107484-4	High Stage Regulator
107484-5	High Stage Regulator
107484-6	High Stage Regulator
107484-7	High Stage Regulator

107492-1	Bleed Air Regulator
107492-2	Bleed Air Regulator
107492-3	Bleed Air Regulator
107492-5	Bleed Air Regulator
107492-6	Bleed Air Regulator
107494-1	Reverse Flow Check Control Valve
107494-2	Reverse Flow Check Control Valve
107494-3	Reverse Flow Check Control Valve
107494-4	Reverse Flow Check Control Valve
1074A0000-04	Flap Actuator
107729A100	Motor Assy
107796A108	Actuator
107796A110	Actuator
107796A115	Actuator
107796A1XX	Actuator
107970-1	Valve Body
108032-3	REGULATOR
108032-8	Valve Shutof
10845T01Y00	Hydraulic Fluid Probe
10845T02Y00	Hydraulic Fluid Probe
1085000-4	Isolation Valve Assembly
1086000-4	Directional Control Valve
1086000-5	Directional Control Valve
10885E	Engine Air/Oil Heat Exchanger
1092T100-MBB	Actuator
109382-35-1	VALVE
109486-1-1	Valve, Butte
109486-4-1	Pneumatic Butterfly Shutoff Valve
109486-5-1	Pneumatic Butterfly Shutoff Valve
109486-6-1	Pneumatic Butterfly Shutoff Valve
109486-7	Pneumatic Butterfly Shutoff Valve
109486-8	Pneumatic Butterfly Shutoff Valve
109522-1-1	Pneumatic Linear Actuator
109612-3	Shutoff Butterfly Valve
109612-4	Shutoff Butterfly Valve
109700-2	Fluid Pressure Regulating Valve
109700-3	Fluid Pressure Regulating Valve
109700-4	Fluid Pressure Regulating Valve
109700-5	Fluid Pressure Regulating Valve
109700-6	Fluid Pressure Regulating Valve
109700-7	Fluid Pressure Regulating Valve
109800A1	Serge Dect'R. (Modl. Esd-20)
109800A2	Serge Dect'R. (Modl. Esd-20)
109800A3	Serge Dect'R. (Modl. Esd-20)
109854-5	VALVE
10P18	No. 3 Bearing Compartment Breather Restrictor Valve
10P18-10	Valve Assy.

10P18-14	Brethr. Rstctr. Valve
10P18-15	Brethr. Rstctr. Valve
10P22	No. 3 Bearing Oil Shutoff Valve
10P22-2	No. 3 Bearing Oil Shutoff Valve
10P22-3	No. 3 Bearing Oil Shutoff Valve
10P22-4	No. 3 Bearing Oil Shutoff Valve
10P22-5	No. 3 Bearing Oil Shutoff Valve
1101V0200	Pneumatic Solenoid Valve
1101V0400	Pneumatic Solenoid Valve
1102V0500-4	HPC Secondary Flow Control Valve
1102V0500-5	HPC Secondary Flow Control Valve
1102V0500-7	HPC Secondary Flow Control Valve
1102V0500-8	HPC Secondary Flow Control Valve
1102V1000	HPC Secondary Flow Control Valve
1102V1000-2	HPC Secondary Flow Control Valve
1102V1000-3	HPC Secondary Flow Control Valve
1102V1100	HPC Secondary Flow Control Valve
1102V1100-1	HPC Secondary Flow Control Valve
1102V1100-2	HPC Secondary Flow Control Valve
1108V0100	Dual 3-Way Pneumatic Solenoid Air Valve
1108V0100-1	Dual 3-Way Pneumatic Solenoid Air Valve
1108V0100-2	Valve-Sole.Clg Air Shutoff
1108V0100-3	Dual 3-Way Pneumatic Solenoid Air Valve
1109V0300	Dual 3-Way Pneumatic Solenoid Air Valve
1109V0300-1	Dual 3-Way Pneu. Solenoid Air Valve
1109V0300-2	Valve-Sole.Seconda,Flow.Ctrl
1109V0300-3	Dual 3-Way Pneu. Solenoid Air Valve
1110V0500-6	Valve-Turb Vane
1110V0700	Turbine Blade/Vane Cooling Valve
1110V0700-2	Turbn. Vane & Blade Cooling S/O Valve
1110V0700-3	Turbn. Vane & Blade Cooling S/O Valve
1110V0700-4	Turbn. Vane & Blade Cooling S/O Valve
1110V0700-5	Valve, Turbine Blade
1110V0700-9	Valve Assy., Bleed Air
1111-568084	Check Valve
1115V0300-1	T/R Hydraulic Control Unit
1115V0300-4	T/R Hydraulic Control Unit
1115V0300-6	T/R Hydraulic Control Unit
1115V0700	T/R Hydraulic Control Unit
1115V0700-10	T/R Hydraulic Control Unit
1115V0700-3	T/R Hydraulic Control Unit
1115V0700-4	Valve-Bleed Air
1115V0700-5	T/R Hydraulic Control Unit
1115V0700-9	BLEED AIR VA
111E9034G01	Electrical Cables
111E9035G01	Electrical Cables
111E9073G01	Electrical Cables

111E9073G02	Electrical Cables
111E9073G03	Electrical Cables
111E9073G04	Electrical Cables
111E9074G01	Electrical Cables
111E9074G02	Electrical Cables
111E9074G03	Electrical Cables
111E9074G04	Electrical Cables
111E9074G05	Electrical Cables
111E9075G01	Electrical Cables
111E9075G02	Electrical Cables
111E9075G03	Electrical Cables
111E9076G01	Electrical Cables
111E9076G02	Electrical Cables
111E9076G03	Electrical Cables
111E9076G04	Electrical Cables
111E9076G05	Electrical Cables
111E9076G06	Electrical Cables
111E9077G01	Electrical Cables
111E9077G02	Electrical Cables
111E9077G03	Electrical Cables
111E9078G01	Electrical Cables
111E9078G02	Electrical Cables
111E9232G01	Electrical Cables
111E9232G02	Electrical Cables
111E9232G03	Electrical Cables
111E9233G01	Electrical Cables
111E9233G02	Electrical Cables
111E9233G03	Electrical Cables
111E9233G04	Electrical Cables
111E9266G01	Electrical Cables
111E9266G02	Electrical Cables
111E9266G03	Electrical Cables
111E9266G04	Electrical Cables
111E9266G05	Electrical Cables
111E9266G06	Electrical Cables
111E9267G01	Electrical Cables
111E9267G02	Electrical Cables
111E9267G03	Electrical Cables
111E9267G04	Electrical Cables
111E9267G05	Electrical Cables
111E9267G06	Electrical Cables
111E9268G01	Electrical Cables
111E9268G02	Electrical Cables
111E9268G03	Electrical Cables
111E9269G01	Electrical Cables
111E9269G02	Electrical Cables
111E9269G03	Electrical Cables

111E9270G01	Electrical Cables
111E9270G02	Electrical Cables
111E9270G03	Electrical Cables
111E9271G01	Electrical Cables
111E9271G02	Electrical Cables
111E9271G03	Electrical Cables
111E9272G0	Electrical Cables
111E9272G01	Electrical Cables
111E9272G02	Electrical Cables
111E9272G03	Electrical Cables
111E9272G04	Electrical Cables
111E9272G05	Electrical Cables
111E9272G06	Electrical Cables
111RAA3	Autothrottle Actuator Assy
1121S1-12-14-0	Valve Regualtor
11222-6-1-0	Hydraulic Flow Regulator Valve
11225-6-1-7	Regulator: Flow,Brake System
112N6101-1	Door: AI,Assembly
112N6101-11	Fuel: Panel,Door,Assembly
112N6101-6	Door: Assembly
112N6102-1	Door: Fuel Tank,Assembly
11307-4	IDG Latching Pressure Relief Valve
1139-6-4500	Hydraulic Relief Vlv- Overpress
113N1302-2	Track
113N1322-	Track
113N1322-1	Track Assy, Flap
113N1786-1	Snubber
113N2100-8	Carriage Assy-Inbd Flap I
113N2108-1	Tube Failsafe Torque
113N2108-1	Torque Tube
113N3058-12	TRACK
113N3058-12	Track
113T1341-3	Shaft Assy L
113T2276-5	TRACK
113T2276-5	Track
113T8115-1	Link Ay
113W6910-1	Link: Assembly
1140-0174-1	Stick: Measuring,Fuel Level
1140-0174-3	Stick: Measuring,Fuel Level
1140-0174-4	Stick: Measuring,Fuel Level
1140-0174-5	Stick: Measuring,Fuel Level
1140-0174-6	Stick: Measuring,Fuel Level
1140-0174-7	Stick: Measuring,Fuel Level
1140-0174-8	Stick: Measuring,Fuel Level
1140-0183-1	Stick: Assy
114079016	Selector: Gear,Electro Hyd
114079017	Selector: Gear,Electro Hyd

114079018	Selector: Gear,Electro Hyd
114079019	Selector: Gear,Electrohydraulic
114095004	Actuator: Lockstay
114122014	Actuator Assy., Mlg Door
114160004A	Rat Ejection Jack
114160005	Rat Ejection Jack
114160005	Ejection Jack
114170009	Manifold: Selector,Assembly
114193008	RETRACTION A
114193118	Actuator Rh
114N4062-3	TRACK
1150-11	Piston
1150-12	Housing Assy
1158000-21	Valve Refuel
1163P18-1	Pressure Switch
1163P18-2	Pressure Switch
1163P18-5	Pressure Switch
1163P18-7	Pressure Switch
11-6537-7	Valve
11-6537-9	Check Valve
1168-18	Piston
11688-000	Fuel Flow Diverter and Return Valve
1169-14	Piston
11698-000	HEAT EXCHNG-
1171-092	Piston
1171-115	Piston
1171-46	Cylinder Assy
1171-46-1	Cylinder
1171-47	Piston
1173T183-2	Switch
1176T100-1	Drive Unit
1176T100-3	Drive Unit
11-841193-2	Oil/Fuel Heat Exchanger
11-841193-3	Oil/Fuel Heat Exchanger
11-841193-4	Oil/Fuel Heat Exchanger
11-841193-5	Oil/Fuel Heat Exchanger
11-841193M1	Oil/Fuel Heat Exchanger
1211073-8	Actuator, Variable Stator Vane, Vsv
1211092-108	Piston
1211175 -018	Actuat Or, Variable Stator
1211175-007	Vsv Actuator
1211175-008	Vsv Actuator
1211175-010	Vsv Actuator
1211175-011	Vsv Actuator
1211175-018	Actuator-Variable Stator
1211175-108-2	Variable Stator
1211175-series	Actuator, Variable Stator Vane, Vsv

1211233-005	Actuator Ass
1211245-010	Actuator - Var Sttr Vane
1211245-011	Variable Stator Actuator
1211245-016	Variable Stator Actuator
1211245-020	Actuator, Variable Stator Vane, Vsv
1211245-025	Variable Stator Actuator
1211245-026	Actuator, Variable Stator Vane, Vsv
1211245-15	Actuator, Variable Stator Vane, Vsv
1211245-17	Actuator, Variable Stator Vane, Vsv
1211245-series	Actuator, Variable Stator Vane, Vsv
1211260-002	Actuator
1211260-200	Piston Rod
1211285-001	Variable Bypass Valve Actuator
1211285-002	Variable Bypass Valve Actuator
1211285-003	Variable Bypass Valve Actuator
1211285-004	Variable Bypass Valve Actuator
1211285-005	Variable Bypass Valve Actuator
1211285-006	Variable Bypass Valve Actuator
1211285-007	Variable Bypass Valve Actuator
1211285-008	Variable Bypass Valve Actuator
1211285-009	Variable Bypass Valve Actuator
1211285-series	Actuator, Variable Bypass Valve, Vbv
1211313 -010	Actuator, Variable Stator
1211313-002	Actuator, Variable Stator
1211313-003	Actuator, Variable Stator
1211313-004	Actuator, Variable Stator
1211313-005	Actuator, Variable Stator
1211313-006	Actuator, Variable Stator
1211313-007	Actuator, Variable Stator
1211313-008	Actuator, Variable Stator
1211313-009	Actuator, Variable Stator
1211313-010	Variable Stator Actuator
1211313-215	ROD END CLEV
1211313-215	Rod End Clevalve
1211313-218	Rod, End Clevis
1211313-series	Actuator, Variable Stator Vane, Vsv
1211318-001	Variable Bypass Valve Actuator
1211318-001	Actuator Variable Bypass
1211318-002	Variable Bypass Valve Actuator
1211318-003	Variable Bypass Valve Actuator
1211318-004	Variable Bypass Valve Actuator
1211318-005	Variable Bypass Valve Actuator
1211318-006	Variable Bypass Valve Actuator
1211318-00X	Actuator, Vbv
1211318-202	Piston
1211318-series	Actuator, Variable Bypass Valve, Vbv
1211342-003	Variable Stator Actuator

1211342-004	Variable Stator Actuator
1211342-005	Variable Stator Actuator
1211342-223	Piston
1211342-229	Piston
1211342-series	Actuator, Variable Stator Vane, Vsv
1211350-001	Vsv Actuator
1211419-004	Vbv Actutr. Assy.
1211419-006	Vbv Actutr. Assy.
1211419-007	Vbv Actutr. Assy.
1211420-002	Vsv Actuator
1211425-002	Actuator, Variable Stator Vane, Vsv
1211425-003	Actuator, Variable Stator Vane, Vsv
1211426-004	Actuator, Variable Bypass Valve, Vbv
1211426-006	Actuator, Variable Bypass Valve, Vbv
1211426-007	Actuator, Variable Bypass Valve, Vbv
1211427-004	Actuator, Variable Bypass Valve, Vbv
1211427-006	Actuator, Variable Bypass Valve, Vbv
1211427-007	Actuator, Variable Bypass Valve, Vbv
1211443-001	Actuator C-Duct Opening Upper
1211444-001	Actuator C-Duct Opening Upper
1211445-004	Actuator: Ram Air Turbine
1211508-005	Actuator, Cvg Master
1211508-007	Actuator, Cvg Master
1211509-005	Cvg Slave Actuator
1211523-002	Actutr. Ram Air Turbn.
121278-4	GEAR BOX
121282-25	SHAFT ASSY
121664-10	Ballscrew Actuator
121664-11	Ballscrew Actuator
121664-12	Ballscrew Actuator
121664-3	Ballscrew Actuator
121664-4	Ballscrew Actuator
121664-5	Ballscrew Actuator
121664-6	Ballscrew Actuator
121664-7	Ballscrew Actuator
121664-8	Ballscrew Actuator
121664-9	Actuator Vbv
121664-series	Actuator, Ballscrew Assembly
121666-11	Master Ballscrew Actuator
121666-13	Master Ballscrew Actuator
121666-14	Master Ballscrew Actuator
121666-15	Master Ballscrew Actuator
121666-16	Master Ballscrew Actuator
121666-17	Master Ballscrew Actuator
121666-18	Master Ballscrew Actuator
121666-19	Master Ballscrew Actuator
121666-21	Master Ballscrew Actuator

121666-3	Master Ballscrew Actuator
121666-4	Master Ballscrew Actuator
121666-5	Master Ballscrew Actuator
121666-6	Master Ballscrew Actuator
121666-7	Master Ballscrew Actuator
121666-8	Master Ballscrew Actuator
121666-9	Master Ballscrew Actuator
121666-series	Actuator, Ballscrew Assembly, Master
121668-1	Flexible Shaft Assembly
121668-2	Flexible Shaft Assembly
121762-1	Flexible Shaft Assembly
121762-2	Flexible Shaft Assembly
121762-3	Flexible Shaft Assembly
121762-4	Flexible Shaft Assembly
12243-12	Solenoid Valve
12243-14	Solenoid Valve
12243-2	Solenoid Valve
12243-3	Solenoid Valve
12243-5	Solenoid Valve
12243-9	Solenoid Valve
1225P39	Selector Val
123100-3	Power Drive Unit
123226-130-01	Fuel Pump
123266-2-1	Valve: Check,Hot Air,3.5In
123268-1-1	Valve
123510-011-01	Fuel Pump
123558-1-4	Actuator
123934-1-1	Check Valve
123934-2-1	Ck. Valve
123934-4-1	Ck. Valve
125120-1	Valve Body Assembly
125143B	Valve Body Assy
125144D	VALVE, FUEL
125329B5	Shaft: Adaptor,Assembly
125329D1	Actuator
125334-1	Valve Body Assembly
125334D	Valve Body
125334D1	Valve: Body,Assembly
125334D-1	Valve Body Assembly
125334D2	Body: Valve,Fuel Control,Svc
125334F	Valve Body Assembly
125613A	Shutoff Valve Body
126100-1	Power Drive Unit
126100-107	Power Drive Unit
126100-7	Power Drive Unit
126236-4-2	Actuator
126248	L/E Pneumatic Drive Actuator

126248-4-1	Peumatic Drive Actuator
126344	L/E Peumatic Drive Actuator
126344-100	Peumatic Drive Actuator
126344-10-1	Peumatic Drive Actuator
126344-1-1	Peumatic Drive Actuator
126344-11-1	Peumatic Drive Actuator
126344-12-1	Peumatic Drive Actuator
126344-13-1	Peumatic Drive Actuator
126344-14-1	Peumatic Drive Actuator
126344-15-1	Peumatic Drive Actuator
126344-16-1	Peumatic Drive Actuator
126344-17-1	Peumatic Drive Actuator
126344-18-1	Peumatic Drive Actuator
126344-19-1	Peumatic Drive Actuator
126344-20-1	Peumatic Drive Actuator
126344-2-1	Peumatic Drive Actuator
126344-21-1	Peumatic Drive Actuator
126344-22-1	Peumatic Drive Actuator
126344-23-1	Peumatic Drive Actuator
126344-24-1	Peumatic Drive Actuator
126344-25-1	Peumatic Drive Actuator
126344-26-1	Peumatic Drive Actuator
126344-27-1	Peumatic Drive Actuator
126344-3-1	Peumatic Drive Actuator
126344-4-1	Peumatic Drive Actuator
126344-5-1	Peumatic Drive Actuator
126344-6-1	Peumatic Drive Actuator
126344-7-1	Peumatic Drive Actuator
126344-8-1	Peumatic Drive Actuator
126344-9-1	Peumatic Drive Actuator
126366-10	Pneumatic Drive Actuator
126366-11	Pneumatic Drive Actuator
126366-12	Pneumatic Drive Actuator
126366-13	Pneumatic Drive Actuator
126366-14	Pneumatic Drive Actuator
126366-15	Pneumatic Drive Actuator
126366-16	Pneumatic Drive Actuator
126366-17	Pneumatic Drive Actuator
126366-18	Pneumatic Drive Actuator
126366-19	Pneumatic Drive Actuator
126366-20	Pneumatic Drive Actuator
126366-21	Pneumatic Drive Actuator
126366-22	Pneumatic Drive Actuator
126366-23	Pneumatic Drive Actuator
126366-24	Pneumatic Drive Actuator
126366-4	Pneumatic Drive Actuator
126366-5	Pneumatic Drive Actuator

126366-6	Pneumatic Drive Actuator
126366-7	Pneumatic Drive Actuator
126366-8	Pneumatic Drive Actuator
126366-9	Pneumatic Drive Actuator
126602-1	Peumatic Drive Actuator
126602-2	Peumatic Drive Actuator
126602-4	Peumatic Drive Actuator
12664	CHECK VALVE
126748	L/E Pneumatic Drive Actuator
126748-1	Pneumatic Drive Actuator
126748-100	L/E Pneumatic Drive Actuator
126748-2	Pneumatic Drive Actuator
126748-3	Pneumatic Drive Actuator
126748-4	Pneumatic Drive Actuator
126748-5	Pneumatic Drive Actuator
126748-6	Pneumatic Drive Actuator
126748-7	Pneumatic Drive Actuator
126748-8	Pneumatic Drive Actuator
126758-3	Pneumatic Drive Actuator
126758-5	Pneumatic Drive Actuator
126758-5-2	Pneumatic Drive Actuator
126758-6	Pneumatic Drive Actuator
126758-6-2	Pneumatic Drive Actuator
126758-7	Pneumatic Drive Actuator
126758-8	Pneumatic Drive Actuator
126762	Pneumatic Drive Actuator
126762-1	Pneumatic Drive Actuator
126762-10	Pneumatic Drive Actuator
126762-2	Pneumatic Drive Actuator
126762-5	Pneumatic Drive Actuator
126762-6	Pneumatic Drive Actuator
126762-7	Pneumatic Drive Actuator
126762-8	Pneumatic Drive Actuator
126762-9	Pneumatic Drive Actuator
126784-10	Center Drive Unit Actuator
126784-11	Center Drive Unit Actuator
126784-12	Center Drive Unit Actuator
126784-2	Center Drive Unit Actuator
126784-3	Center Drive Unit Actuator
126784-4	Center Drive Unit Actuator
126784-5	Center Drive Unit Actuator
126784-6	Center Drive Unit Actuator
126784-7	Center Drive Unit Actuator
126784-8	Center Drive Unit Actuator
126784-9	Center Drive Unit Actuator
126842-2-1	Actuator Apu Diffuser
12688-000	Fuel Flow Diverter and Return Valve

12698-000	Idgs Air / Oil Heat Exchngr.
1289M48G05	Drain Module Assembly
1289M48G06	Drain Module Assembly
1289M48G09	Drain Module Assembly
1290M18P02	Core Compartment Cooling Valve
1290M18P03	Core Compartment Cooling Valve
1290M18P04	Core Compartment Cooling Valve
1290M18P07	Core Compartment Cooling Valve
1290M18P08	Core Compartment Cooling Valve
1290M18P09	Core Compartment Cooling Valve
1290M18P10	Core Compartment Cooling Valve
1290M18P11	Core Compartment Cooling Valve
1291M30P02	Valve
1293M37P01	CIT Sensor
129440-1	THERMOSTAT A
129448-2	THERMOSTAT A
129666-1	Precooler Control Valve Sensor
129666-2	Precooler Control Valve Sensor
129666-3	Precooler Control Valve Sensor
129682-3	Bleed Air Overtemperature Sensor
129682-4	Bleed Air Overtemperature Sensor
129682-5	Bleed Air Overtemperature Sensor
129694-1	Bleed Air Overtemperature Sensor
129694-2	Bleed Air Overtemperature Sensor
129694-3	Bleed Air Overtemperature Sensor
1298A0000-01	Trim Air Check Valve
12A073-4	Vsv Actuator
12A073-5	Actuator, Variable Stator Vane, Vsv
12A073-6	Vsv Actuator
12A073-7	Vsv Actuator
12A073-8	Vsv Actuator
12A073-9	Actuator, Variable Stator Vane, Vsv
12A073-series	Actuator, Variable Stator Vane, Vsv
12A092-3	Vbv Actuator
12A092-4	Vbv Actuator
12A092-series	Actuator, Variable Bypass Valve, Vbv
12D117-13	Drain Valve
12D117-4	Valve, Ball Drain
12D117-6	Valve: Drain
12D124-10	Valve
12D124-3	Fuel Scaveng
12D151	Valve: Fill Water
12D151-2	Valve: Fill Water
12SN108	Valve-Shutoff, Solenoid, Fuel
130005P	Valve
1303-1	Starter
1303-3	Starter

1303A0000-01	Flow Control Valve
1303A0000-02	Flow Control Valve
1303A0000-03	Flow Control Valve
1303A0000-04	Flow Control Valve
1303M20P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1303M21P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1303M21P02	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1304M10P01	Pressure Probe EGT Probe Plug Pressure Probe Plugs
1306M13P01	Servo Fuel/Oil Heat Exchanger
1306M13P02	Servo Fuel/Oil Heat Exchanger
1307M66P04	Fan Inlet Temperature Sensor Assembly
1307M68P03	Fan Inlet Temperature Sensor; Assembly
130E100-13	Actuator, Emergency Door
130E100-15	Actuator, Emergency Door
1311-126	Solenoid Valve Assembly
1311-526	Solenoid Valve Assembly
1312A0000-01	Bypass Valve
1312B0000-01	Bypass Valve
1312B0000-02	Bypass Valve
1313M34G35	Actuator
1313M34G36	Actuator
1313M34G37	Actuator
1313M34G38	Actuator
1313M34G39	Actuator
1313M34G40	Actuator
1313M34G41	Actuator
1313M34G42	Actuator
1313M95G01	Actuator
1313M95G02	Actuator
1313M95G03	Actuator
1313M95G04	Actuator
1313M95G07	Actuator
1313M95G08	Actuator
1313M95G09	Actuator
1313M95G10	Actuator
1313M95G19	Actuator
1313M95G20	Actuator
1313M95G21	Actuator
1313M95G22	Actuator
1313M95G23	Actuator
1313M95G24	Actuator
1313M95G25	Actuator
1313M95G26	Actuator
1313M95G27	Actuator
1313M95G28	Actuator
1313M95G29	Actuator
1313M95G30	Actuator

1314M27P02	Ballscrew Gearbox Assy
1314M27P03	Ballscrew Gearbox Assy
1314M27P04	Ballscrew Gearbox Assy
1320600-1	Valve
1323-566187M1	Pilot Float Valve
1324M12P02	Actuator, Variable Stator
1324M12P03	Actuator, Variable Stator
1324M12P04	Actuator, Variable Stator
1324M12P05	Actuator, Variable Stator
1324M12P06	Actuator, Variable Stator
1324M12P07	Actuator, Variable Stator
1324M12P08	Actuator, Variable Stator
1324M12P09	Actuator, Variable Stator
1324M12P10	Variable Stator Actuator
1325M60P01	Engine Inlet Total TemperatureSensor
1325M60P02	Engine Inlet Total TemperatureSensor
1325M60P03	Engine Inlet Total TemperatureSensor
1325M60P06	Engine Inlet Total TemperatureSensor
1325M60P08	Engine Inlet Total TemperatureSensor
1325M60P09	Engine Inlet Total Temperature Sensor
1329-576530	Solenoid Pre-Check Valve
132ABK	Fuel/Oil Temperature Sensor
132VJ1RL13	Actuator, Linear Stop/Lock
132VJ1RL13A	Actuator, Linear Stop/Lock
132VJ2RL17B	Actuator: Linear,Assembly
1332M27P01	Check Valve
1339M62P05	Oil Press.Transmitter
1339M62P06	Oil Press.Transmitter
1339M80P01	Variable Bypass Valve Actuator
1339M80P02	Actuator Vbv
1339M80P03	Actuator Vbv
1339M80P04	Actuator Vbv
1339M80P05	Actuator Vbv
1339M80P06	Actuator Vbv
1339M80Pseries	Actuator, Variable Bypass Valve, Vbv
1348M21P01	T3 Sensor Compressor Outlet Temperature
1348M21P04	T3 Sensor Compressor Outlet Temperature
1348M21P05	T3 Sensor Compressor Outlet Temperature
135W1860-1	Gearbox: Cargo Door Handle
135W3320-3	Balance: Counter,Assembly,Ar
1374M59P02	CIT/P25 Probe
1374M59P03	CIT/P25 Probe
1374M98P03	Actuator
1374M98P04	Actuator
1374M98P05	Actuator
1374M98Pseries	Actuator, Variable Stator Vane, Vsv
1379098D401	4 Way Selector

1383M18P02	N1 Speed Sensor
1383M18P03	N1 Speed Sensor
1383M64P01	Temperature Transducers and Thermocouple Sensor
1383M67P04	Turbine Clearance Control Valve
1383M67P06	Valve, Clearance Control
1383M67P07	Valve, Clearance Control
1383M67Pseries	Turbine Clearance Control Valve
138400-5	Actuator: Ram Air
1387T100-11	Actuator
1387T100-13	Landing Gear Door Rotary Actuator
1387T100-3	Landing Gear Door Rotary Actuator
1387T100-5	Landing Gear Door Rotary Actuator
1387T100-7	Landing Gear Door Rotary Actuator
1387T100-9	Landing Gear Door Rotary Actuator
1399M80P02	Variable Bypass Valve Actuator
1399M80P03	Variable Bypass Valve Actuator
1399M80P04	Variable Bypass Valve Actuator
1399M80P05	Variable Bypass Valve Actuator
1399M80P06	Variable Bypass Valve Actuator
13P44-3	Turbine Cooling Air Valve
13P44-4	Turbine Cooling Air Valve
13P44-5	Turbine Cooling Air Valve
13P44-6	Turbine Cooling Air Valve
140N2780-4	Gearbox Assy, No 2 Cargo Door
1410-2067-04	Servo Valve
1411-324	Ball Bearing
141935-1	Multiport Swivel
141935-2	Multiport Swivel
141A6105-10	Snubber
141A6105-12	Snubber Assy
141A6105-6	Door Snubber
141A6105-7	Rod Assy
141T7835-2	Hinge: Arm,Assembly
141T7862-3	Hinge: Arm,Assembly
141W5610-3	Latch: Assembly
141W5610-4	Latch: Assembly
141Z1631-501	OUTBOARD SLAT TRACK ASSEMBLY
141Z1651-501	CENTER/MID TRACK ASSEMBLY,
141Z1671-501	INBOARD SLAT TRACK ASSEMBLY,
142443-1	Valve Body
142444-3	BODY
142Z1631-501	OUTBOARD SLAT TRACK ASSEMBLY
142Z1671-501	INBOARD SLAT TRACK ASSEMBLY,
14320-020	Valve Assy., Waste Drain
14330-230	Actuator
14330-350	Actuator
14330-375	Vacuum Generator Assembly

143N6191-8	Counterbalance Assy, Pass Door Rh
143Z1631-501	OUTBOARD SLAT TRACK ASSEMBLY
143Z1671-501	INBOARD SLAT TRACK ASSEMBLY,
144151000-201	Outer Locking/Feedback Actuator
144151000M2-01	Outer Locking/Feedback Actuator
1443M60P03	ECU Cooling Valve
144Z1671-501	INBOARD SLAT TRACK ASSEMBLY,
145-22310-403	Valve Assy
1457M11P01	VSV Actuator
1457M12P02	HPTCC Valve
1457M12P03	HPTCC Valve
1457M12P05	HPTCC Valve
1457M12P06	HPTCC Valve
1457M12P08	HPTCC Valve
1459M16P01	Temperature Transducers and Thermocouple Sensor
1459M16P03	Temperature Transducers and Thermocouple Sensor
145Z1631-501	OUTBOARD SLAT TRACK ASSEMBLY
145Z1671-501	INBOARD SLAT TRACK ASSEMBLY,
146Z1621-501	OUTBOARD SLAT TRACK ASSEMBLY
146Z1652-501	CENTER/MID TRACK ASSEMBLY,
146Z1682-501	INBOARD SLAT TRACK ASSEMBLY,
1471M29P01	RACC Valve
147645-1	Rotary Shutoff Valve
1477M56P02	Ball Screw Gearbox Assy
1477M56P03	Ball Screw Gearbox Assy
14844-000	Idg Oil --B164:1164 Fuel Cooler
148975-1	Motor Operated Rotary Selector Valve
148975-2	Motor Operated Rotary Selector Valve
148995	Motor Act. Rotary Shutoff Valve
148995-1	Valve Shut Off Rudder Motor Pu
149T6903-8	Uplock: Assembly
149W4170-10	Upstop:
149W4170-9	Upstop:
149W6850-31	Fitting: Assembly
149W6850-38	Fitting: Assembly
14A1	Main Fuel Pump
1500P119	Pressure Indicator
1500P31-1	Pressure Indicator
1519M43P05	Racc Valve
1519M43P06	Racc Valve
1519M43P07	Racc Valve
1520M27P05	High Pres. Turbine Clearance Cont. Valve
1520M27P06	High Pres. Turbine Clearance Cont. Valve
1520M27P07	HPTCC Valve
1520M27P08	High Pres. Turbine Clearance Cont. Valve
1520M99P02	Fuel Filter
1520M99P03	Fuel Filter

1520M99P04	Fuel Filter
1521M72P01	VSV Actuator
1521M72P05	Variable Stator
1525-020-1	PISTON
1527100-1	Actuator
1527100-3	Actuator
1527100-5	Actuator
1527700-3	Aileron Control Unit
1527M33P07	Fuel Manifold Staging Valve
1527M33P08	Fuel Manifold Staging Valve
1527M33P10	Fuel Manifold Staging Valve
1527M90P01	Valve
1529200-1	Servo Assy
1529202-1	Piston
1536500-71	Actuator Ass
1536600-1	Actuator, Po
1536600-3	Yaw Damper Servo
1536600-5	Actuator Spo
1536600-7	Yaw Damper Servo
153DH6R217A	Self-Retracting Power Drive Unit
1540500-1	Yaw Damper Servo
1540500-11	Actuator Ass
1540500-13	Actuator Ass
1540500-5	Actuator Ass
1540500-7	Yaw Damper Servo
1540500-9	Valve, Bypas
1540600-1	Pcu
1540600-3	Power Control Unit Assy
1542500-1	Valve, Bypas
1542500-13	Valve, Bypas
1542500-15	INBOARD SPOI
1542500-5	Actuator: Aileron,lb
1542500-9	Actuator
1542600-1	Actuator
1542600-13	Spoiler Actr
1542600-17	Actuator
1542600-5	Actuator
1542600-9	Actuator
15434-1	Solenoid Valve Assembly
15434-10	Solenoid Valve
15434-11	Solenoid Valve
15434-16	Solenoid Valve
15434-17	Solenoid Valve
15434-19	Solenoid Valve
15434-21	Solenoid Valve
15434-25	Solenoid Valve
15434-29	Solenoid Valve

15434-30	Solenoid Valve
15434-32	Solenoid Valve
15434-34	Solenoid Valve Assembly
15434-40	Solenoid Valve Assembly
15434-9	Solenoid Valve
1544100-5	Control Unit: Power,Flaperon
1544100-7	Control Unit: Power,Flaperon
1544200-1	Control Unit: Power,Assembly
1544200-3	AILERON PCU
1544300-3	Elevator: Power Control Unit
1544400-3	Control Unit: Power
1548-05-12	Check Valve
1548200-1	Rudder Power Control Unit (-200Er Only)
154DB3	Total Pressure and Total Temperature
154DB4	I-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154DN9	Engine Inlet Total Temperature Sensor
154ED	I-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154ED2	I-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
154GF3	T25/PT25 Temperature Sensor
154GT	I-Pressure and Total-Temperature EEC-Inlet (PT2/TT2) or (P2/T2) Probe
155750-1	Valve
1561300-1	Rudder Power Control Unit (-300Er Only)
15622-000	HEAT EXCHNG-
1564100	Actuator
1564101	Actuator
1564T00	Actuator
1564T00-5	Actuator
1564T00-9	Actuator
1564T013	Actuator
1564T100	Actuator
1564T100-1	Actuator
1564T100-13	Actuator
1567700-3	Flaperon Pcu Assy
1567714-1	Piston
1567A0000-01	MANUAL SELEC
157710-18	Actuator Assembly
157710-23	Actuator Assembly
157710-4	Valve Assy
1579100-7	Inboard Aileron Actuator
1579200-5	Outboard Aileron Actuator
1579300-3	Inboard Spoiler Pcu
1579400-3	Outboard Spoiler Pcu
158000-104	Hydraulic Auto Pilot Actuator Assy
158000-105	Hydraulic Auto Pilot Actuator Assy
15800-348A	Valve: Rinse,Assembly
15800-358	Valve: Disk
1581000-5	Pacs Servo Actuator Assembly

158300-100	Autopilot Hydraulic Actuator
158300-101	Actuator Assy., Autopilot
158300-102	Autopilot Hydraulic Actuator
1583M24P01	IDG Air/Oil Cooler
1583M24P02	IDG Air/Oil Cooler
1583M24P03	IDG Air/Oil Cooler
1583M30P04	Shutoff Valve Assembly
1583M30P05	Shutoff Valve Assembly
1583M30P06	IDG Shutoff Valve Assembly
1583M30P07	Shutoff Valve Assembly
1583M30P08	IDG Shutoff Valve Assembly
1583M30P09	Shutoff Valve Assembly
1583M30P11	Shutoff Valve Assembly
15844-000	Idg Oil Fuel Cooler
158440-3	Apu Oil Cooler
15A1	Main Fuel Pump
160000-101	Stabilizer Trim Control Module
160000-102	Stabilizer Trim Control Module
160000-103	Stabilizer Trim Control Module
160000-104	Stabilizer Trim Control Module
160000-105	Stabilizer Trim Control Module
160000-106	Stabilizer Trim Control Module
160000-107	Stabilizer Trim Control Module
160000-108	Stabilizer Trim Control Module
160100-106	Module Assy
160142-1	Oil To Fuel Heat Exchanger
160142-2	Oil To Fuel Heat Exchanger
160142-4	Oil To Fuel Heat Exchanger
160142-5	Oil To Fuel Heat Exchanger
160186-1	Regulator
160192-1	Oil Cooler
160200-102	Module-Assy
160200-104	Control Module Assembly
160300-101	Module: Control,Stabilizer Trim
160300-102	Module: Control,Stabilizer Trim
160424-2	Oil Temperature Regulator
160426-2	Oil Cooler
1604300-001	Turbine Cooling Valve Control Cable
160480-1	Oil Cooler
160482-6	Servo Fuel Heater
160488-2	AIR OIL COOL
160492-1	OIL COOLER
1605000-1	Thrust Reverser Actuator
160500-101	Brake: Hyd Motor.Stabilizer Trim
160500-901	Brake, Stab Trim Motor
1605130-001	Turbine Cooling Valve Control Cable
160550-1	Control Valve

160564-2	OIL COOLER
1608000-7	T/R Actuator
160U0100-11	Load Sensor Assembly
1610000-10	Thrust Reverser Actuator Assembly
1610000-11	Thrust Reverser Actuator Assembly
1610000-9	Thrust Reverser Actuator Assembly
1616000-1	Tras - Locking
1616000-2	Actuator
1616040-2	Piston Rod
161A1126-1	Cylinder
161A1127-1	Sleeve
161A1130-3	Axle
161A1130-4	Axle
161A1131-1	Axle Sleeve
161A1140-3	Torsion Link Assy
161A1142-3	Torsion Link Assy
161A1168-1	Carrier
161A2101-301	Strut: Side,Assembly,Ar
161N0001-115	Mlg Retract Actuator Assembly
161N0001-116	Mlg Retract Actuator Assembly
161N0001-136	Mlg Retract Actuator Assembly
161N0001-147	Mlg Retract Actuator Assembly
161N0001-148	Mlg Retract Actuator Assembly
161N0001-54	Mlg Retract Actuator Assembly
161N0001-55	Mlg Retract Actuator Assembly
161N1611-13	MGL TRUCK BE
161N5002-7	Uplock Assy, Main Landing Gear
161T1131-	Beam Assy
161T1131-12	Beam Assy
161T1133-	Fitting
161T1133-3	Fitting
161T1138-	Axle Assy
161T1138-10	Axle Assy
161T1138-9	AXLE ASSY
161T1140-	Link Assy To
161T1140-8	Link Assy To
161T1149-	Sleeve Brake
161T1149-1	SLEEVE BRAKE
161T1149-1	Slevalvee Brake
161T1175-	Pin - Base
161T1175-7	Pin - Base
161T1214-	Nut
161T1214-2	Nut
161T1214-4	Nut
161T1231-	Bolt-Apex
161T1231-2	Bolt-Apex
161T2008-	Spindle Assy

161T2008-5	Spindle Assy
161T2015-	Nut
161T2015-1	Nut
161T6005-4	SPINDLE ASSY
161T6005-4	Spindle Assy
161T6018-	Pin-Fuse
161T6018-8	Pin-Fuse
161U0202-1	Uplock Assembly - Wing Landing Gear
161U0202-2	Uplock Assembly - Wing Landing Gear
161U0225-2	Complete Walking Beam Assembly - Wing La
161U1000-89	L/H WLG ASSY
161U1000-89	L/H Wlg Assy
161U1000-90	R/H WLG ASSY
161U1000-90	R/H Wlg Assy
161W1211-1	Sleeve - Brake, Main Landing Gear
161W1211-1	Brake Sleeve
161W6000-4	Uplock: Mlg,Assembly
162000	Computer: Elevator Feel
162000-014	Elevator Feel System Comp. Assy
162000-101	Elevator Feel System Comp. Assy
162000-101	Elevator Feel Computer Assy
162000-102	Elevator Feel System Comp. Assy
162000-102	Elevator Feel Computer Assy
162000-103	Elevator Feel System Comp. Assy
162000-104	Elevator Feel System Comp. Assy
162000-105	Feel Computer
162000-106	Elevator Feel System Comp. Assy
162005-102	Computer Assy., Feel
162300-103	Elevator Feel Computer
162400-101	Feel Computer Assy
162500-100	Comp. Elevator Feel
162700-100	Elevator Feel Computer
162A1100-	Landing Gear
162N0001-43	Gear Instl, Nose Landing
162N5001-2	NLG LWR RET
162N5001-2	Nlg Lwr Ret
162T1118-1	PIN-UPR
162T1118-1	Pin-Upr
162T5008-4	PIN-SPRT LIN
162T5008-4	Pin-Sprt Lin
162U0211-2	Drag Strut - Upper, Nose Landing Gear
162U0212-2	Drag Strut - Lower, Nose Landing Gear
162U0213-2	Shaft - Drag Strut Pivot, Nose Landing G
162U0215-1	Bolt - Drag Strut Apex, Nose Landing Gea
162U1000-89	NLG BUILDUP
162U1000-89	Nlg Buildup
162U2601-2	Side Brace - Nose Landing Gear

162U2603-2	Brace - Lower Tripod, Nose Landing Gear
162U2604-2	Torsion Link - Upper, Nose Landing Gear
162U2605-2	Torsion Link - Lower, Nose Landing Gear
162U2607-1	Pin - Tripod Apex, Nose Landing Gear
162U2608-1	Bolt - Upper Tripod, Nose Landing Gear
162U2609-1	Bolt - Upper Side Brace, Nose Landing Ge
162U2610-1	Bolt - Lower Tripod, Nose Landing Gear
162U2621-2	Pin - Torsion Link Apex, Nose Landing Ge
162U2626-2	Bolt - Torsion Link, Nose Landing Gear
162U2627-1	Pin - Trunnion, Nose Landing Gear
162U2628-1	Bolt - Lower Side Brace, Nose Landing Ge
162W1600-3	TOW FITTING
163000-103	Lateral Ctrl Autopilot Servo
163000-104	Lat Ctrl Autopilot Servo
163000-105	Auto Pilot
163000-108	Lateral Ctrl Autopilot Servo
16300-101	Steering Actuator
163100-101	Pitch Ctrl Autopilot Servo
163100-102	Pitch Ctrl Autopilot Servo
163100-103	Pitch Ctrl Autopilot Servo
163100-104	Pitch Ctrl Autopilot Servo
163100-107	Pitch Ctrl Autopilot Servo
16310-1	Piston
16314-	Cylinder
163200-100	Assembly,A/P Servo
163200-102	Autopilot Servo Assembly
163200-105	Autopilot Servo Assembly
163396-02-01	Actuator
163T0000-021	ACTUATOR ASSY BUMP
163T1000-1	Lever: Ftg,Assembly
163T2000-3	Strut: Tail Skid,Assembly
163U1000-63	L/H BLG ASSY
163U1000-63	L/H Blg Assy
163U1000-64	R/H BLG ASSY
163U1000-64	R/H Blg Assy
1648MK2	No 4 Bearing Compartment Scavenge Valve
1651M73G02	Lube Oil Tank
165W01020	Valve, Butte
1663M53P02	Servo Fuel/Oil Heat Exchanger
1663M79P03	IDG Oil/Fuel Heat Exchanger
1663M96P04	IDG Shutoff Valve Assembly
16650-101	Steering Control Module
1665M97001	Lube Pump
1665M97P01	Lube Pump
1666MK5	Actuator, L.P.C. Bleed Master, A1
1667MK3	Actuator, L.P.C. Bleed Slave, A1
166Z9421-501	AUXILIARY TRACK ASSEMBLY

166Z9451-501	AUXILIARY TRACK ASSEMBLY
166Z9481-501	AUXILIARY TRACK ASSEMBLY
16720-2	Fan-Axial FI
16844-000	Idg Oil Fuel Cooler
1685-3002	Piston Assembly
1685MK1	Variable Stator Vane
1685MK2	Variable Stator Vane
1685MK3	Variable Stator Vane
1685MK4	Variable Stator Vane
1685MK4-7	Variable Stator Vane Actuator
1685MK5	Variable Stator Vane
1685MK6	Variable Stator Vane
1685MK7	Variable Stator Vane
1685MK8	Variable Stator Vane
1685MKseries	Actuator, Variable Stator Vane, Vsv
1687M90P02	Fuel/Oil Temperature Sensor
1689M10P07	Gear Type Main Fuel Pump Assembly
1689M10P08	Gear Type Main Fuel Pump Assembly
1689M10P09	Gear Type Main Fuel Pump Assembly
1689M62P01	Permanent Magnet Alternator
1689M63P03	Permanent Magnet Alternator
1689M63P05	Permanent Magnet Alternator
1689M63P06	Permanent Magnet Alternator
1691M44P03	Fuel Filter
1692M85P03	Turbine Blade Temperature Pyrometer
1692M85P04	Turbine Blade Temperature Pyrometer
1692M85P05	Turbine Blade Temperature Pyrometer
1692M85P06	Turbine Blade Temperature Pyrometer
1692M86P02	APT Pressure Transducers
1693M16P02	APT Pressure Transducers
1693M17P02	APT Pressure Transducers
1693M78P03	Flexible Thermocouple Harness
1693M78P04	Flexible Thermocouple Harness
1694M23P06	High Pressure Turbine Active Clearance Control Valve
1694M24P02	Low Pressure Turbine Active Clearance Control Valve
1694M24P07	Low Pressure Turbine Active Clearance Control Valve
1694M25P03	Core Compartment Cooling Valve
1694M25P05	Core Compartment Cooling Valve
1694M25P07	Core Compartment Cooling Valve
1694M26P06	Start Transient Bleed Valve
1694M26P07	Start Transient Bleed Valve
1694M66P02	Flexible Thermocouple Harness
1694M66P03	Flexible Thermocouple Harness
1694M66P05	Flexible Thermocouple Harness
1694M81P04	Variable Bypass Valve Actuator
1694M81P05	Variable Bypass Valve Actuator
1696M81P07	Twin Element Thermocouple

1696M97P02	Shaft
1697EA	Module Reser
1697EA1	Valve Assy- Speed Brake
1697EA-1	Valve Assy- Speed Brake
16P138-1	Pressure Actuator Relief Valve
16P29-7	Remote Fill Valve
16P29-8	Remote Fill Valve
16P29-9	Remote Fill Valve
1700591A	Flap/Slat Power Drive Unit
1700593B	Slat Actuator
1700593C	Slat Actuator
1700593D	Slat Actuator
1700593E	Slat Actuator
1700597B	Slat Actuator
1700597C	Slat Actuator
1700597D	Slat Actuator
1700597E	Slat Actuator
1700597F	Slat Actuator
1700637	144 Degree Angle Gearbox
1700639	161 Degree Angle Gearbox
1701736-08	INPUT HOUSIN
1701736-08	Input Housing
1703909A	Slat Actuator Type D
1703911A	Slat Actuator
1703911B	Slat Actuator
1704208	190 Degree Angle Gearbox
1704600-1	Actuator, Lo
1704600-3	Actuator
1704600-5	Actuator
17051-01	Mlg Uplock Actuator
17051-101	Mlg Uplock Actuator
1705800-1	Elevator Feel Shift Module
1706	Hydraulic Relief Valve
1706-1	Hydraulic Relief Valve
1706-2	Valve Flow L
1706630	SHAFT AND RO
170684-100	OIL PUMP ASSY
1713255A	Slat Actuator
171808-103B	HARNESS ASSY
172625-5	Nose Cowl Thermal Anti-Ice Valve
172625-6	Nose Cowl Thermal Anti-Ice Valve
172625-7	Nose Cowl Thermal Anti-Ice Valve
17279-101	Mlg Uplock Actuator
172934-001	Lavatory Dra
172938-001	Lavatory Dra
17300G04	Fuel Diverter And Return Valve
17300G05	Fuel Diverter And Return Valve

17300G06	Fuel Diverter And Return Valve
17300G07	Fuel Diverter And Return Valve
17300G08	Fuel Diverter And Return Valve
17300G09	Fuel Diverter And Return Valve
17300G11	Fuel Diverter And Return Valve
1752M18P05	Fuel Gear Pump Assembly
1752M18P06	Fuel Gear Pump Assembly
1752M18P07	Fuel Gear Pump Assembly
1752M18P08	Fuel Gear Pump Assembly
1752M18P09	Fuel Gear Pump Assembly
1754M59P01	Combustor Drain Valve
1777MK1	Lpc Bleed Master Actuator
1777MK2	Lpc Bleed Master Actuator
1777MK3	Actuator, L.P.C. Bleed Master, A5
1777MKseries	Actuator, L.P.C. Bleed Master, A5
1778MK1	Lpc Bleed Slave Actuator
1779MK1	No 4 Bearing Compartment Scavenge Valve
1779MK2	Valve Assy
178800-105	Flap Actuator Assy
178800-109	Flap Actuator Assy
178800-205	Flap Actuator Assy
178800-209	Flap Actuator Assy
178900-5	Flap Actuator Assy
179120-3	Starter Motor
179625-1	Solenoid Fuel Valve
1797M98P01	Pressure Probe
1797M98P02	Pressure Probe
1797MK1	Actuator, L.P.C. Bleed Master, D5
1797MK2	Actuator Master, Furnished With Selected
1797MK3	Actuator Master, Furnished With Selected
1797MKseries	Actuator, L.P.C. Bleed Master, D5
1798MK1	Actuator, L.P.C. Bleed Slave, D5
17P67-1	Damper Oil S/O Valve
1800	Valve: Pressure Relief
1806A0000-02	Flow Control Valve
1806A0000-02 AMDT A	Flow Control Valve
1806A0000-02 AMDT B	Flow Control Valve
1806B0000-01	Flow Control Valve
1806B0000-01 AMDT A	Flow Control Valve
1806B0000-01 AMDT B	Flow Control Valve
1806B0000-02	Flow Control Valve
1806D0000-01	Flow Control Valve
1806M46P01	Lock Brake
1806M46P02	Lock Brake
1806M46P05	Lock Brake
1806M46P06	Lock Brake
1806M62P01	Air Supply Valve

1806M62P02	Air Supply Valve
1806M62P03	Air Supply Valve
1806M62P04	Air Supply Valve
1809A0000-01	Ram Air Inlet Actuator
1811M82P02	Drain Manifold
1815KTU01	Sensor: Qty,Fuel Tank
1816KTU01	Sensor: Qty,Fuel Tank
1819-4	Piston Assy
181RA71R206B	Unit, Self-Er/Retr Pwr Drive
181RA71R206C	Pwr Drive Unit
1820KTU01	Sensor: Qty,Fuel Tank
1820M35P01	Burner Selection Valve
18-2141-2	Transmitter
18-2141-3	PRESSURE TRA
1821M59P05	Valve Hpt Clearance
1821M59P06	Valve Hpt Clearance
1821M59P07	Valve Hpt Clearance
1821M60P01	Transient Bleed Air Valve
1821M60P02	Transient Bleed Valve
1821M60P04	Transient Bleed Valve
1821M62G01	Electrical Cables
1821M62G02	Electrical Cables
1821M62G03	Electrical Cables
1821M63G01	Electrical Cables
1821M63G02	Electrical Cables
1821M63G03	Electrical Cables
1821M63G04	Electrical Cables
1821M64G02	Electrical Cables
1821M64G03	Electrical Cables
1821M64G04	Electrical Cables
1821M64G05	Electrical Cables
1821M64G06	Electrical Cables
1821M65G01	Electrical Cables
1821M65G02	Electrical Cables
1821M65G03	Electrical Cables
1821M65G04	Electrical Cables
1821M65G05	Electrical Cables
1821M65G06	Electrical Cables
182570-1	Switch
1827T100-7	Actuator, Linear Stop
183010-2	Actuator, Ro
183010-3	Actuator, Ou
1830T100-5	Apu Door Actuator
1835KTU01	Sensor: Qty,Fuel Tank
1836KTU01	Sensor: Qty,Fuel Tank
1837KTU01	Sensor: Qty,Fuel Tank
1838M12P02	Fuel Flow Transmitter

1838M12P03	Fuel Flow Transmitter
1838M12P04	Fuel Flow Transmitter
1838M12P05	Fuel Flow Transmitter
1838M12P06	Fuel Flow Transmitter
1838M12P08	Fuel Flow Transmitter
1838M12P09	Fuel Flow Transmitter
1838M88P03	Lube/Servo Fuel/Oil Cooler
1838M88P06	Lube/Servo Fuel/Oil Cooler
1838M88P11	Lube/Servo Fuel/Oil Cooler
1838M88P13	Lube/Servo Fuel/Oil Cooler
1838M89P03	IDG Fuel/Oil Cooler
1838M89P04	IDG Fuel/Oil Cooler
1838M89P05	IDG Fuel/Oil Cooler
1838M90P03	VSCF/Lube Oil/Oil Cooler Interface
1838M91P06	IDG/VSCF Air/Oil Cooler Interface
1838M91P07	IDG/VSCF Air/Oil Cooler Interface
1838M91P08	IDG/VSCF Air/Oil Cooler Interface
184250-1	Gearbox: Flap,Assembly
1846T100-3	Linear Actuator
1849KTU01	Sensor: Qty,Fuel Tank
1851M36P02	Air Turbine Starter
1851M36P03	Air Turbine Starter
1851M36P04	Air Turbine Starter
1851M36P05	Air Turbine Starter
1851M36P06	Air Turbine Starter
1851M36P08	Air Turbine Starter
1851M36P09	Air Turbine Starter
1851M36P10	Air Turbine Starter
1851M36P11	Air Turbine Starter
1851M36P12	Air Turbine Starter
1851M60P02	CIT/P25 Probe
1853M12P01	Transient Bleed Valve
1853M12P02	Transient Bleed Valve
1853M12P04	Transient Bleed Valve
1853M29G01	Electrical Cables
1853M30G01	Electrical Cables
1853M47P01	T3 Sensor Compressor Outlet Temperature
1853M47P02	T3 Sensor Compressor Outlet Temperature
1853M60G01	CABLE
1853M61G01	CABLE - W10
1853M89P01	Fuel Manifold Pressure Sensor
185450-2	Actuator: Rotary
18-6800-1	Valve:
1875MK5	V.S.V Control Unit
1876MK3	V.S.V Actuator
1877B1	Pressure Transmitter
187900-9	Exchanger-Heat

18-8000-2	Valve Assy-Shut Off
1880T100-11	Actuaror, Cargo Drive Motor Rotary
1880T100-9	Actuaror, Cargo Drive Motor Rotary
1886-306	Torque Motor
192AD1R218B	Drive Unit: Power,Cargo
194270-1	HEAT EXCHANGER PRIMARY
194272-31	HEAT EXCHANGER
194274-3	REHEATER
194274-4	HEAT EXCHANGER
194276-5	HEAT EXCHANGER
194278-4	Actuator
194792-4	Bleed Air Pr
1959M18P03	Burner Selection Valve
1960M28P04	High Pressure Turbine Clearance Valve
1960M28P05	Valve Turbine Clearance Control
1960M28P06	Valve Turbine Clearance Control
1960M28P07	High Pressure Turbine Clearance Valve
1960M28P08	High Pressure Turbine Clearance Valve
1960M28P09	High Pressure Turbine Clearance Valve
1960M64P01	Rotor Active Clearance Valve
1960M77P02	Nacelle Cooling and Transient Bleed Valve
1962M36P01	Servo Fuel/Oil Heat Exchanger
1962M37P01	Gear Type Main Fuel Pump Assembly
1962M37P02	Gear Type Main Fuel Pump Assembly
1962M80P03	Unit, Engine, Fuel,Hydromechanical, Ge90
1962M84P01	IDG/VSCF Air/Oil Cooler Interface
1962M86P01	Thermocouple Temperature Probe
1962M86P02	Thermocouple Temperature Probe
1962M87P03	T4.9 Thermocouple Cable Assemblies
1962M91P03	Variable Bypass Valve Actuator
1962M91P04	Variable Bypass Valve Actuator
1962M95P02	Starter Air Valve
1963M51P01	Sump Eductor Valve
1964A0000-02	Rudder Servo Control
1964A0000-03	Rudder Servo Control
1964A0000-04	Rudder Servo Control
1A094-0000-04	Actuator
1A094-0000-05	Actuator
1A094-0000-06	Actuator
1A094-0000-07	Actuator
1A111-0237	Gear Drive
1A6132	EGT (T4.9) Thermocouple Probe
1A6133	EGT (T4.9) Thermocouple Probe
1A6134	EGT (T4.9) Thermocouple Probe
1A6473	Pressure Oil Filter Element
1A6505	Pressure Oil Filter Element
1A6596	EGT (T4.9) Thermocouple Probe

1A9053	Fuel Injector and Support Assembly
1B0012	EEC Fuel Temperature Thermocouple Probe
1B0085	Actuator
1B3122	Fuel Injector and Support Assembly
1B3125	Actuator
1B5847	Actuator
1B5965	Actuator
1B6287	Actuator
1B6288	Actuator
1B6488	Pressure Oil Filter Element
1F7514	Oil Separator
1FA01114-3	Valve: Thrust Reverser
1FA01134-1	Landing Gear Selector Bypass Valve
1FA01134-2	Landing Gear Selector Bypass Valve
1FA06101-11	Valve Assy, Mlg Door Act Solenoid
1FA10019-5	Actuator Fan
1FA13012-6	Fan Thrust Reversor Hydraulic Power Unit
1FA13017-1	Alternate Extension Hydraulic Power Pack
1FA13050-2	Alt Extension Pwr Pack
1FA13050-3	Alternate Extension Hydraulic Power Pack
1FA13050-4	Alt Extension Pwr Pack
1FA13050-5	Alternate Extension Hydraulic Power Pack
1FA1401228	ROD PISTON
1FA1401228	Rod Piston
1FA1401243	PISTON ROD
1FA14012-6	T/R Cowl Actuator
1FA14012-7	T/R Cowl Actuator
1FA14012-8	T/R Cowl Actuator
1FA14013	Tr Actuator
1FA14013-4	T/R Cowl Actuator
1FA14013-5	T/R Cowl Actuator
1FA14013-6	T/R Cowl Actuator
1FA14013-7	T/R Cowl Actuator
1FA14013-8	T/R Cowl Actuator
1FA14013-9	T/R Cowl Actuator
1G259-1	Pressure Switch
1G259-2	Pressure Switch
1G386	Switch, Pres
1U1095	Leading Edge Slat Actuator Cylinder
1U1095-5	Leading Edge Slat Actuator Cylinder
1U1103	Leading Edge Slat Actuator Cylinder
1U1103-2	Leading Edge Slat Actuator Cylinder
1U1103-2-2	Leading Edge Slat Actuator Cylinder
1U1110	Leading Edge Hydraulic Flap Actuator
1U1136	Shutoff Valve, Solenoid Operated, 3-Way,
1U1150	Power Control Unit
1U1150-1	Actuator, Ca

1U1150-2	Auxiliary Rudder Control Valve
1U1150-3	Actuator
1U1150-4	Actuator
1U1168	Actuator
1U1169	Actuator
1U1171-	Actuator
1U1171-5	Body Gear Steering Actuator
1U1192-8	Actuator Assy
1U1193-7	Body Gear Door Actuator
1U1198-3	Nose Gear Door Actuator
1U1198-4	Nose Gear Door Actuator
1U1198-5	Nose Gear Door Actuator
1U1198-6	Actuator Assy
1U1204-3	Nose Gear Door Actuator
1U1204-4	Nose Gear Door Actuator
1U1220-2	Flt Ctrl Hyd
1U1234	Shut Off Valve
1U1261-3	Valve,Ground Spoiler
1U1302	Landing Gear Selector Valve
1U1302-1	Landing Gear Selector Valve
1U1503-2	Valve: Directional Control
1U1508	Valve: Control,Sync Lock
1U1509-5	Lock: Assembly,Sync
1U1524-6	Actuator: Non-Locking
1U1525-6	Actuator: Lkg
1U1525-6	Tr Actuator
1U1525-7	Actuator: Lkg
1U1527-22	ROTARY VARIA
1U1554-4	Non-Locking Actuator Assy
1U1558-1	Hydraulic Isolation Valve
1U1559	Directional Control Valve
1U1594-2	Actuator Assy, Wing Main Gear Door
1U1595-2	Actuator Assy, Body Main Gear Door
2000866-2	Dc Motor
20032-2	Ball Screw
200900-5011	Actuator
200941-1	Forward Cylinder
200942-1	Aft Cylinder
200946-1	Aft Piston
200947-1	Forward Piston
20101420-004	AUTOBRAKE VALVE MODULE
20102060-103	Valve Module, Autobrake 737/747
201590002	MLg Retraction Actuator
201590002-020	MLG RETRACTO
2021136-4	Actuator Ay
2021814-1	Accumulator
20219-0101	Transmitter: Qty,Hyd Oil,Svc

2021974-2	Actuator
2022014-1	Actuator
2022432-1	Actuator: Ram Air Door
2022432-3	Valve
2022432-4	Actuator: Ram Air Door
2022432-4	Actuator
2022478-4	Actuator, Ele
2022480-13	ACTUATOR
2022480-13	Actuator
2022480-9	Actuator
2022494-1	Rotary Electromechanical Actuator
2022494-2	Rotary Electromechanical Actuator
2022494-3	Rotary Electromechanical Actuator
2022494-4	Rotary Electromechanical Actuator
2022494-5	Rotary Electromechanical Actuator
2022494-6	Rotary Electromechanical Actuator
2022494-7	Rotary Electromechanical Actuator
2022536-6	Rotary Actuator
2022536-7	Rotary Actuator
2022538-4	Accumulator
2022538-7	POWERED DRIVE UNIT ASSY - CARGO
2022550-5-1	Actuator Tms
2022550-5-3	Actuator Tms
202500-5009	Actuator Assy Upper Rudder
202500-5011	Actuator Assy Upper Rudder
202600	Upper Rudder Actuator Assy
202912-3	SEAL PLATE
202912-3	Seal Plate
203478-1	SEAL PLATE
203478-1	Seal Plate
203718-5	SEAL
203718-5	Seal
2040061-101	Filter Differential Pressure Switch
2040061-102	Filter Differential Pressure Switch
2040061-103	Filter Differential Pressure Switch
2040142-104	Engine Supply Shutoff (Essov)
204050-11	Cooling Turbine
204-060-762-11	Actuator
2041444-0401	Drive Unit
2041444-0402	Drive Unit
2041444-0403	Drive Unit
2041444-0404	Drive Unit
2041446-0401	Planar Array
2041M24P03	T4.9 Thermocouple Cable Assemblies
2041M34P02	IDG Air Cooled Oil Cooler
2042024-1	Tube Nut Assy
2043M10P05	Fmu Unit

2043M12P05	Main Fuel Pump
2043M13P01	Starter Valve
2043M18P02	Variable Stator Vane Actuator
2043M19P01	Main Fuel Filter Assembly
2043M45P02	Transient Bleed Air Valve
2043M45P03	Transient Bleed Air Valve
2043M45P04	Transient Bleed Air Valve
2043M46P05	Valve Hptcc
2043M46P06	High Pressure Turbine Clearance Valve
2043M81P01	Hand Operated Shutoff Valve
2044M22P01	Flexible Thermocouple Harness
2047158-1	Tube Nut Assy
2048150-1	Actuator, Cargo Door Hinge
204975-22	Valve
2052C	Booster Pump
2052C08	Booster Pump
2052C08D	Booster Pump
2052C09	Booster Pump
2052C12	Canister - Fuel Booster Pump
2052C20	Booster Pump
2052C21	Booster Pump
2052C22	Booster Pump
2052C23	Booster Pump
205300-5005	Actuator
205300-5005-600U	Actuator
2056C0000-01	Chamber: Air Plenum
20700-300	Apu Fuel Valve
20790-01AA	Outflow Valve
20790-01AC	Outflow Valve
20790-02AC	Cabin Pressure Outflow Valve
20790-03AC	Valve Outflow
20790-10BA	Outflow Valve
20790-20BA	Outflow Valve
20798-01	Valve: Regulator,Air Pressure
20856FA	TORQUE PINIO
20856FA	Torque Pinio
20863FA	CLUTH PINION
20863FA	Cluth Pinion
2092D	Apu Fuel Pump Supply
2094-0004	Transducer
2094-0011	Transducer
20C144-3	Valve Boost Pump Check
20C144-4	Valve
20C144-5	Valve:
20C144-6	Valve: Check,Pump,Boost,Svc
20E68-3	Oil Cooler Assembly
21029-01	Gearbox

21029-02	Gearbox
21029-03	Gearbox
2119786-1	Valve: Pressure Relief
211C117-222	Switch, Pressure Hydraulic
211C223-297	Switch, Pressure Hydraulic
211C223-301	Switch, Pressure Hydraulic
211C223-319	Switch, Pressure Hydraulic
211C223-320	Switch, Pressure Hydraulic
211C223-326	Switch, Pressure Hydraulic
211C223-327	Switch, Pressure Hydraulic
211C223-516	Switch, Pressure Hydraulic
211C223-518	Switch, Pressure Hydraulic
211C223-520	Switch, Pressure Hydraulic
211C223-521	Switch, Pressure Hydraulic
211C223-522	Switch, Pressure Hydraulic
211C223-523	Switch, Pressure Hydraulic
211C223-526	Switch, Pressure Hydraulic
211C223-527	Switch, Pressure Hydraulic
211C223-534	Switch, Pressure Hydraulic
211C233-326	Switch, Pressure Hydraulic
212-075-418-105	Actuator
2121M86P01	Resistance Temperature Detector Probe
2121M92P01	Active Clearance Control Valve; Assembly
2122M27P01	Permanent Magnet Alternator
2122M28P01	Permanent Magnet Alternator
21230-01AB	Outflow Valve
21230-02AC	Outflow Valve
21230-03AC	Outflow Valve
21230-10BA	Outflow Valve
2123M62P01	Permanent Magnet Alternator
2123M63P02	Permanent Magnet Alternator
2123M63P03	Permanent Magnet Alternator
2123M78P01	High Pressure Turbine Clearance Valve
212C139-1	Switch Hyd Module
212C139-3	Switch: Pressure,Absolute
2139M60P01	Starter Valve
21425-01	Outflow Valve
21450-11	Accumulator
21450-14	Hyd Power Control Actuator
214A3110-1	Duct: Assy
214C40-1-110	Switch Temp
214C40-1-115	Switch Temp
214C40-1-122	Switch Temp
214C40-1-57	Switch Temp
214C40-1-75	Switch Temp
214C40-1-77	Switch Temp
214W6402-1	Plenum: Assembly

21520-1	FAN, MIXED F
21598-01	Outflow Valve Actuator
216000-5007	Elevator Actuator
216000-5009	Elevator Actuator
2160-9	Actuator
21671-01	Ram Air Valve
217200-4	Valve Shuttl
218386-2	Scavenge Fuel Pump
218386-3	Scavenge Fuel Pump
2189000-15	Accumulator
2189000-18	Accumulator
218T1103-5	Duct: Assembly
218T1106-8	Duct Assembly - Wing Leading Edge, Therm
2190000-15	Accumulator
2190000-20	Locking Actuator
2190000-22	Valve Contro
2190000-23	Thrust Rev Assy, Non-Locking
2190000-32	Actuator Assy
2190000-46	Actuator Assy, Thrust Reverser
2190000-48	Locking Actuator
2190000-50	Thrust Rev Assy, Locking
2190160-7	PISTON
2190160-7	Piston
2192000-3	Thrust Reverser Actuator
2192000-4	Thrust Reverser Actuator
2192000-5	Thrust Reverser Actuator
2192000-6	Thrust Reverser Actuator
2192000-7	Thrust Reverser Actuator
219972-2	PUMP COVER
219972-2	Pump Covalveer
21C1-1-16B	Pressure Switch
21C1-1-22	No 4 Bearing Scavenge Valve Pressure Switch
21C1-3-21	Switch-Pressure
21C1517A	Low Oil Pressure Switch
21SN04-104D	Switch-Oil Filter Diff Pressure
21SN04-104E	Switch-Return Oil Filter Diff Pressure
21SN04-104F	Oil Filter Pressure Switch
21SN04-158B	Switch Assy-Fuel Diff. Pressure
21SN04-159B	Switch Assy-Fuel Low Pressure
21SN04-180	Differential Pressure Switch
21SN04-180A	Differential Pressure Switch
21SN04-183	Differential Pressure Switch
21SN04-183A	Differential Pressure Switch
21SN04-209	Differential Pressure Switch
21SN04-209A	Differential Pressure Switch
21SN04-211	Differential Pressure Switch
21SN04-211A	Differential Pressure Switch

21SN04-223	Switch-Fuelpressure
21SN04-223A	Fuel Pressure Switch
21SN04-224	Switch-Oil Pressure
21SN04-225	Switch-Oilpressure
21SN04-226	Pressure Switch
21SN04-226A	Pressure Switch
21SN04-23H	Lp Fuel/Oil Warning Switch
21SN04-23J	Low Oil Press Switch
21SN04-259	Switch, Low Oil
21SN04-260	Press Switch
21SN04-260A	Switch, Differential Press.
21SN04-268	Switch - Diff Press
21SN04-269	Differential Pressure Switch
21SN04-275A	Switch
21SN04-298A	Scavenge Filter Pressure Switch A1/A5
21SN04-300B	Switch
21SN04-323A	Fuel Pressure Switch
21SN04-324	Differential Press. Switch
21SN04-325	Differential Press. Switch
21SN04-33	Switch
21SN04-333	Fuel Diff Press Sw
21SN04-334	Differential Press. Switch
21SN04-335	Differential Press. Switch
21SN04-33A	Differential Pressure Switch
21SN04-34	Switch - Press
21SN04-352	Eng. Oil Lp Switch
21SN04-353	Eng. Oil Lp Switch
21SN04-354	Eng. Oil Lp Switch
21SN04-355	Eng. Oil Lp Switch
21SN04-356D	Main Oil Filter Differential Pressure Switch
21SN04-370	Low Oil Press. Switch
21SN04-371	Scvng. Filter Switch
21SN04-372	Fuel Fillter Differential Press. Switch
21SN04-383A	Oil Filter Differential Pressure Switch
21SN04-389A	Oil Filter Differential Press. Switch
21SN04-389B	Oil Filter Differential Press. Switch
21SN04-391	Oil Filter Differential Pressure Switch
21SN04-391A	Oil Filter Differential Pressure Switch
21SN04-401	Main Oil Filter Differential Pressure Switch
21SN04-402	Oil Filter Differential Press. Switch
21SN04-403	Oil Filter Differential Press. Switch
21SN04-404	Oil Filter Differential Pressure Switch
21SN04-405	Oil Filter Differential Pressure Switch
21SN04-411	Switch-Oil Pressure
21SN04-413	Main Oil Filter Differential Pressure Switch
21SN04-413A	Switch
21SN04-414	Oil Filter Differential Press. Switch

21SN04-415	Switch - Diff
21SN04-416	Oil Filter Differential Pressure Switch
21SN04-417	Oil Filter Differential Pressure Switch
21SN04-436-1	Switch Ay Pump Low Press
21SN04-437-1	Switch Press. Diff
21SN04-459	Main Oil Filter Differential Pressure Switch
21SN04-460	Switch-Differential
21SN04-461	Oil Filter Differential Press. Switch
21SN04-466	Pressure Swi
21SN04-467	Differential Press. Switch
21SN04-468	Differential Press. Switch
21SN04-70	Pressure Switch
21SN04-70A	Pressure Switch
21SN04-71	Pressure Switch
21SN04-89	Pressure Switch Assembly
21SN41-109A	TAI Pressure Switch
21SN41-42	Pressure Switch
21SN41-52	Pressure Switch
21SN41-82A	Actuator
21SN41-84	Actuator
21SN41-88	Pressure Switch (Douglas Aircraft
21SN41-88A	Pressure Switch (Douglas Aircraft
21W4152-501	WIRE HARNESS
2202317-1	Duct: Pressure,High,Assembly
2206400-1	Machine: Air Cycle
221-0240-501	Foward Engine Mount
221-0240-503	Foward Engine Mount
221-0240-505	Foward Engine Mount
221-0240-507	Foward Engine Mount
221-0240-509	Foward Engine Mount
221-0240-511	Foward Engine Mount
221-0240-513	Foward Engine Mount
221-0301-511	Bleed Valve
221-0558-525	Door
221-112-501	Fire Detector
221-1210	Wire Harnesses
221-1211	Fire Detector
221-4049-503	Foward Engine Mount
221-4049-507	Foward Engine Mount
2214079-1	Extractor: Water,Duct
221408	BODDY ASSY (
221-4086-507	Foward Engine Mount
221-4086-509	Foward Engine Mount
221-4086-515	Foward Engine Mount
221-4086-517	Foward Engine Mount
221-4125-1001	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1003	Thrust Reverser Assembly (Airbus Aircraft Installation)

221-4125-1005	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1007	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1009	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1011	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1013	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-1015	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-509	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-511	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-517	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-519	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-549	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-551	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-565	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-567	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-569	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-571	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-577	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-579	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-585	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-587	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-589	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4125-591	Thrust Reverser Assembly (Airbus Aircraft Installation)
221-4550-509	Fire Detector
221-4550-513	Fire Detector
221-4550-517	Fire Detector
221-4550-519	Fire Detector
221-4550-523	Fire Detector
221-5127-1001	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1003	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1007	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1025	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1027	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1029	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-1031	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-509	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-511	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-517	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-519	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-521	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-523	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-525	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-527	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-529	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5127-531	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1001	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1003	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-1013	Thrust Reverser Assembly (Douglas Aircraft Installation)

221-5129-1015	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-505	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-509	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-511	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-513	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5129-515	Thrust Reverser Assembly (Douglas Aircraft Installation)
221-5560-503	Fire Detector
221-5560-505	Fire Detector
221-5560-507	Fire Detector
2240A0000-01	FLAP ACTUATO
2241A0000-01	ACTUATOR
224D9217-501	On/Off Anti-Ice Valve
224D9217-507	On/Off Anti-Ice Valve
224D9217-513	On/Off Anti-Ice Valve
224D9430-505	Hydraulic Filter Assembly
224D9430-507	Hydraulic Filter Assembly
224D9430-509	Hydraulic Filter Assembly
224D9430-511	Hyd Filter Assembly
22640-005	Immersion Thermocouple
22715-000-02	Nlg Door Actuating Cylinder
22868-001	Exhaust Gas Temperature (EGT) Harness Assembly
22890-2	Valve, Hydro Lock
2290B010000	Check Valve
2290B020000	Check Valve
22912-000	Fuel Temperature Thermocouple
2293B010000	Check Valve
2293B020000	Check Valve
22953-002	Stage 10 to HPT Air Valve
22969-002	T3/TCA Harness Assembly
23080-013A	Apu Starter Gen
23080-031	Dc Generator
2309-2058-001	PISTON TUBE
2309-2058-001	Piston Tube
2309-3700	Actuator Assembly
23095-002	Dc Generator
2313M-334-1	Motor-Converter Assy, L.H. Side Window
2313M-335-1	Motor-Converter Assy, R.H. Side Window
232T4BT	VALVE CHECK
232T-4BT	VALVE CHECK
233T3244-1	Pcu
233W3204-6	Actuator
2340406-1	Extractor
2341744-1	Precoole
2341790-1	Heat Exchanger
2341H000-001	Hydraulic Reservoir, Sys 1
2341H000-002	Hydraulic Reservoir, Sys 1
2341H000-003	Hydraulic Reservoir, Sys 1

2342176-1	Exchange
234700-1001	Ob Elevator Control Package
234700-1003	Ob Elevator Control Package
234700-1005	Outboard Elevator
2350-0012	Actuator Motor
2350-0035	Actuator
23504-001	EEC Thermocouple Probe (Tt3)
23546-01BA	Electronic Box
2377H000-002	Hydraulic Reservoir, Sys 2
238-1105-505	Actuator
23830-000	Exhaust Gas Temperature (EGT)/T3 Harness
238D1025-511	Fan Cowl Hold Open Rod
23E59-2	Valve
23E59-3	Valve
23E59-4	Valve
23E59-5	Valve
23E59-6	Valve
23E59-7	Valve
23E59-7M	Valve, Shutoff
23E59-8	Valve
23E59-9	Valve
240863	Motor Assy, Constant Displacement Hyd
243601-26	Main Fuel Gear Pump
243601-27	Main Fuel Gear Pump
243601-28	Main Fuel Gear Pump
243601-29	Main Fuel Gear Pump
243601-30	Main Fuel Gear Pump
243601-31	Main Fuel Gear Pump
243601-32	Main Fuel Gear Pump
243601-33	Main Fuel Gear Pump
243601-34	Main Fuel Gear Pump
243601-35	Main Fuel Gear Pump
243601-36	Main Fuel Gear Pump
243601-37	Main Fuel Gear Pump
243601-38	Main Fuel Gear Pump
2465T100-1	Motor Assy, Slat Pdu Elec Alternate
246700-1001	Lower Rudder
246700-1003	Lower Rudder Actuator
2473T100-1	Motor, Te Elec Alternate
2474T100-1	Motor, Otbd Le Slat Drive
2475T100-1	Inboard L.E. Slat Alt. Valve
24E17-3	Shutoff Valve Assembly
24E507009G01	Water Heater
24E507009G02	Water Heater
24E507009G03	Water Heater
24F5002	Oil Tank
24F5202	Oil Tank

24F5402	Oil Tank
2518000-4	Actuator, Sp
251A1240-3	Spoiler Actuator
251A1240-4	Spoiler Actuator Power Control Unit Assy
251A1240-5	Spoiler Actuator Power Control Unit Assy
251A1250-1	Hold Down Check & Relief Valve Assy
251A1265-1	Bracket
251A1270	Spoiler Actuator
251A1270-2	Ground Spoiler Act
251A1270-4	Spoiler Pcu
251A1270-5	Ground Spoiler Act
251A1510-3	Outboard Ground Spoiler Actuator Assembly
251A1641 -1	Aileron Centering Unit
251A1641 -5	Aileron Centering Unit
251A1641 -6	Aileron Centering Unit
251A1641 -7	Aileron Centering Unit
251A1641-1	Mechanism: Assy
251A1661-1	Control: Power,Ar
251A1661-4	Control: Power
251A1741-3	Spoiler Actuator
251A1741-4	Spoiler Actuator
251A1741-5	Spoiler Actuator
251A1741-6	Spoiler Actuator
251A1741-7	Spoiler Actuator
251A1741-8	Spoiler Actuator
251A1741-9	Spoiler Actuator
251A2145-1	Control
251A2145-3	Control
251A2145-7	Control
251A2160-2	Switch Assy
251A2420-1	Control Valve
251A2420-7	Control Valve
251A4430-2	Stabilizer J
251A4510-10	Trim Actuator Stabilizer
251A4510-11	Trim Actuator Stabilizer
251A4510-12	Trim Actuator Stabilizer
251A4510-13	Trim Actuator Stabilizer
251A4510-14	Trim Actuator Stabilizer
251A4510-15	Stab Trim Actuator
251A4510-4	Stab Trim Actuator
251A4510-5	Stab Trim Actuator
251A4510-6	Trim Actuator Stabilizer
251A4510-9	Trim Actuator Stabilizer
251N2051-1	Trim Actuator Stabilizer
251N2051-10	Stabilizer Trim Act Assy
251N2051-11	Trim Actuator Stabilizer
251N2051-12	Trim Actuator Stabilizer

251N2051-13	Trim Actuator Stabilizer
251N2051-14	Trim Actuator Stabilizer
251N2092-11	Control Link Assy
251N2092-7	Control Link Assy
251N2241-14	Elevator Feel Centering
251N2241-18	Elev Ctrl Feel And Center Unit
251N2241-20	Elev Ctrl Feel And Center Unit
251N2241-21	Actuator Assy, Elev Feel
251N3135-3	Link Assy, Pcu Reaction
251N3135-5	Link Assembly
251N3244-5	Valve Assy, Pressure Reducer
251N4022-10	Flap Transmission Assembly
251N4022-11	Flap Transmission Assembly
251N4022-12	Flap Transmission Assembly
251N4022-13	Flap Transmission Assembly
251N4022-14	Flap Transmission Assembly
251N4022-15	Flap Transmission Assembly
251N4022-16	Flap Transmission Assembly
251N4022-17	Flap Transmission Assembly
251N4022-18	Flap Transmission Assembly
251N4022-19	Flap Transmission Assembly
251N4022-20	Flap Transmission Assembly
251N4022-21	Flap Transmission Assembly
251N4022-22	Flap Transmission Assembly
251N4022-23	Flap Transmission Assembly
251N4022-24	Flap Transmission Assembly
251N4022-25	Flap Transmission Assembly
251N4022-26	Flap Transmission Assembly
251N4022-27	Flap Transmission Assembly
251N4022-28	Flap Transmission Assembly
251N4022-29	Flap Transmission Assembly
251N4022-30	Flap Transmission Assembly
251N4022-31	Flap Transmission Assembly
251N4022-32	Flap Transmission Assembly
251N4022-33	Flap Transmission Assembly
251N4022-34	Flap Transmission Assembly
251N4022-35	Flap Transmission Assembly
251N4022-8	Flap Transmission Assembly
251N4022-9	Flap Transmission Assembly
251N4050-17	Flap Transmission Assembly
251N4050-18	Flap Transmission Assembly
251N4050-45	Transmission
251N4050-46	Te Flap Transmission
251N4050-61	Transmission Flap
251N4052-21	Unit Assy, Flight Controls
251N4077-4	Flap Drive And Control
251N4080-1	Angle Gearbox Assy

251N4080-2	Angle Gearbox Assy
251N4098-6	Flap Drive & Control
251N4204-4	Gearbox Assy, Te Flap Tee
251N4218-5	Gearbox Assy, Te Flap Tee
251N4222-5	Gearbox Assy, Te Flap Drive Angle
251N4222-6	Gearbox Assy, Angle
251N4241-19	Angle Tee Gearbox Assembly
251N4241-20	Angle Tee Gearbox Assembly
251N4241-22	ANGLE TEE GE
251N5091-14	POWER DRIVE
251T1205-27	Aileron Feel Mech.
251T1505-19	Aileron Control Quad O/R Assy
251T1505-2	Aileron Control Quad O/R Assy
251T1505-20	Aileron Control Quad O/R Assy
251T1505-3	Aileron Control Quad O/R Assy
251T1505-4	Aileron Control Quad O/R Assy
251T1505-5	Aileron Control Quad O/R Assy
251T1505-6	Aileron Control Quad O/R Assy
251T1505-7	Aileron Control Quad O/R Assy
251T1505-8	Aileron Control Quad O/R Assy
251T1710-5	Aileron Lockout Mechanism Assy
251T2210-10	Elevator Feel & Centering Assy
251T2210-11	Elevator Feel & Centering Assy
251T2210-12	Elevator Feel & Centering Assy
251T2210-13	Elevator Feel & Centering Assy
251T2210-14	Elevator Feel & Centering Assy
251T2210-15	Elevator Feel & Centering Assy
251T2210-16	Elevator Feel & Centering Assy
251T2210-17	Elevator Feel & Centering Assy
251T2210-7	Elevator Feel & Centering Assy
251T2210-8	Elevator Feel & Centering Assy
251T3700-2	Damper & Servo Summing
251T4110-14	Actuator Assy., Stab Trim Ballscrew
251T4310-1	Actuator, Stab Trim
251T4310-2	Actuator Assy
251T4310-3	Actuator Assy
251T4310-4	Actuator: Ballscrew
251T4310-5	Actuator Assy
251T4310-6	Actuator Ass
251W4110-13	Stabilizer Trim Actuator Assembly
251W4110-14	Stabilizer Trim Actuator Assembly
251W4110-15	Stabilizer Trim Actuator Assembly
251W4110-16	Stabilizer Trim Actuator Assembly
251W4110-18	Stabilizer Trim Actuator Assembly
251W4110-6	Stabilizer Trim Actuator Assembly
251W4110-7	Stabilizer Trim Actuator Assembly
251W4110-8	Screw: Jack

252A3515-	Flap Actuation Gearbox
252T1171-4	Link Assy, Actuator To Rear Spar
252T1301-1	Inboard Spoiler
252T1301-2	I/B Spoiler Power Control Unit
252T1301-3	Inboard Spoiler Actuator
252T1401-1	Outboard Spoiler Power Control Actuator
252T1401-2	Outboard Spoiler Power Control Actuator
252T1401-3	Outboard Spoiler Power Control Actuator
252T1401-3	Outboard Spoiler
252T1403-1	Swivalveel Shaft
252T1407-1	Piston
252T1407-2	Piston
252T1407-3	Piston
252T1407-3	Piston
252T1437-1	SHAFT SWIVEL
252T1437-1	Shaft Swivalveel
252T2100-3	Link Assy, Elev Actuator
252T2110-3	Elevator Actuator Input Rod
252T2110-4	Elevator Actuator Input Rod
252T2171-1	Trunion, Elev Actuator
252T3100-3	Link Assy, Rudder Actuator
252T3111-1	Link Assy, Rudder Actuator
2535-3	Ac Actuator
253T1200-5	Speed Brake Actuator
253T5623-1	Lever Assy, Speed Brake
253T5710-1	Lever Assy, Flap Position Control
253T5723-2	Gearbox Assy, Flap Position Signal
253T5800-9	Lever Assy, Control Stand Thrust
253T7114-1	Gearbox: Assembly
2-541501-1	Fwd & Aft Cargo Door Snubber
2-541501-1A	Actuator
2-541501-2	Actuator Ass
2-541501-3	Actuator Ass
2547000-5	C-Duct Opening Actuator - Rh
254A1147-1	Gearbox
254A1147-3	Gearbox: Assembly
254A1290-1	Brake: Assembly
254A1290-2	Brake: Engine Start
254A1295-2	Lever: Assy
254N1053-	Speed Brake
254N1185-14	Microswitch Pack Assembly - Autothrottle
256A3110	Flap Transmission
256A3110-7	Transmission:
256A3110-8	Transmission: Flap #8 Assembly
256A3210	Flap Transmission
256A3210-4	Transmission: Assy
256A3210-7	Transmission Assy

256A3210-8	Transmission: Flap,#7,Assembly
256A3310	Flap Transmission
256A3310-3	Transmission: Flap Actuation,Assembly
256A3310-6	Transmission: Assy
256A3310-7	Transmission Assy
256A3410	Flap Transmission
256A3410-3	Transmission: Flap #4
256A3410-6	Transmission: Flap #5
256A3410-8	Transmission Assembly
256A3515-1	Gear:
256A3515-2	Flap Actuation Gearbox
256A3515-3	Flap Actuation Gearbox
256A3515-4	Gear Bx
256A3550-2	Control Unit: Flap,Assembly
256A3580	T/E Flap Control Valve
256A3580-1	Valve Assy
256A3630-1	Gearbox Assy
256A3640-1	Angle Gearbox Install Asszz
256A3640-2	Gearbox: Angle Mlg Beam/Flap
256A3650-1	Gearbox
256A3650-2	Flap Actuation Wheel Well Gearbox
256A3650-3	Flap Actuation Wheel Well Gearbox
256A3650-4	Flap Actuation Wheel Well Gearbox
256A3650-5	Flap Actuation Wheel Well Gearbox
256A3650-6	Flap Actuation Wheel Well Gearbox
256A3650-7	Flap Actuation Wheel Well Gearbox
256A3650-8	Flap Actuation Wheel Well Gearbox
256T2110-1	Slat Actuator
256T2110-2	Slat Actuator
256T2110-3	Actuator, Inbd Le Slat
256T2110-4	Slat Actuator
256T2110-5	Slat Actuator
256T2110-6	Slat Actuator
256T2110-7	Slat Actuator
256T2120-10	Outboard Leading Edge Actuator
256T2120-11	Actuator
256T2120-12	Outboard Leading Edge Actuator
256T2120-3	Outboard Leading Edge Actuator
256T2120-4	Outboard Leading Edge Actuator
256T2120-5	Actuator
256T2120-6	Actuator
256T2120-9	Outboard Leading Edge Actuator
256T2220-10	Outboard Leading Edge Slat Drive Gearbox
256T2220-12	Outboard Leading Edge Slat Drive Gearbox
256T2220-13	Outboard Leading Edge Slat Drive Gearbox
256T2220-14	Outboard Leading Edge Slat Drive Gearbox
256T2220-3	Outboard Leading Edge Slat Drive Gearbox

256T2220-4	Outboard Leading Edge Slat Drive Gearbox
256T2220-5	Outboard Leading Edge Slat Drive Gearbox
256T2220-6	Outboard Leading Edge Slat Drive Gearbox
256T2220-7	Outboard Leading Edge Slat Drive Gearbox
256T2220-8	Outboard Leading Edge Slat Drive Gearbox
256T2310-1	Gearbox Assy, Le Slat
256T2320-1	Gearbox Assy, Le Slat
256T2330-1	Inboard Leading Edge Slat Gearbox
256T2610-1	Power Drive Unit Assy
256T2610-10	Inboard Leading Edge Slat Pdu
256T2610-11	Inboard Leading Edge Slat Pdu
256T2610-12	Inboard Leading Edge Slat Pdu
256T2610-13	Power Drive Unit Assy
256T2610-14	Power Drive Unit Assy
256T2610-15	Power Drive Unit Assy
256T2610-16	Power Drive Unit Assy
256T2610-2	Power Drive Unit Assy
256T2610-3	Power Drive Unit Assy
256T2610-4	Power Drive Unit Assy
256T2610-5	Inboard Leading Edge Slat Pdu
256T2610-6	Power Drive Unit Assy
256T2610-7	Inboard Leading Edge Slat Pdu
256T2610-8	Inboard Leading Edge Slat Pdu
256T2610-9	Inboard Leading Edge Slat Pdu
256T2611-1	Gearbox: Assembly
256T2611-1	Inboard Leading Edge Slat Drive
256T2710-1	Power Driveslat
256T2710-10	Outboard Leading Edge Slat Pdu
256T2710-11	Outboard Leading Edge Slat Pdu
256T2710-12	Outboard Leading Edge Slat Pdu
256T2710-5	Outboard Leading Edge Slat Pdu
256T2710-6	Outboard Leading Edge Slat Pdu
256T2710-7	Outboard Leading Edge Slat Pdu
256T2710-8	Outboard Leading Edge Slat Pdu
256T2710-9	Outboard Leading Edge Slat Pdu
256T2711-1	Gearbox: Assembly
256T2760-4	Unit Assy, Slat Control
256T3110	Flap Pdu Assy
256T3110-10	Trailing Edge Flap Drive Pdu
256T3110-11	Trailing Edge Flap Drive Pdu
256T3110-12	Trailing Edge Flap Drive Pdu
256T3110-13	Trailing Edge Flap Drive Pdu
256T3110-14	Flap Pdu Assy
256T3110-15	Flap Pdu Assy
256T3110-16	Flap Pdu Assy
256T3110-17	Flap Pdu Assy
256T3110-2	Trailing Edge Flap Drive Pdu

256T3110-3	Trailing Edge Flap Drive Pdu
256T3110-4	Trailing Edge Flap Drive Pdu
256T3110-5	Trailing Edge Flap Drive Pdu
256T3110-6	Trailing Edge Flap Drive Pdu
256T3110-7	Trailing Edge Flap Drive Pdu
256T3110-8	Trailing Edge Flap Drive Pdu
256T3110-9	Actuator Fla
256T3130-4	Gearbox Assy, Te Flap Pdu
256T3130-5	Gearbox Assembly
256T3210-2	Rotary Actuator
256T3210-2	Rotary Actuator Assembly
256T3210-4	ACTUATOR ASSY
256T3210-4	Rotary Actuator Assembly
256T3250-2	ACTUATOR
256T3250-2	Rotary Actuator
256T3250-4	Actuator: Rotary
256T3271-1	INPUT SHAFT
256T3271-1	Input Shaft
256T3310-2	Gearbox, Bhd Te Flap Drive
256T3311-1	GEAR BOX FLAP DRIVE
256T3340-2	Gearbox Assy, Te Flap Angular
256T3410-4	Gearbox: Angle,Assembly
256T3430-3	Gr Bx Te Flap Drive Lh
256T3430-4	Gearbox Assy, Te Flap Drive
256T3436-1	GEARBOX ASSY
256T3510	T.E Flap Drive Aut. Gearbox
256T3510-3	Gearbox Assy, Te Flap Drive Act
256T3510-4	Gearbox Assy, Te Flap Drive Act
256T3540-3	Gearbox Assy, Flap Act Offset Tee
256T3570-3	Gearbox: Assembly
256T3570-5	Gearbox: Assembly
256T3751-1	Shaft, Flap Xmtr Gearbox
256T5120-1	Actuator: Rotary
256T5220-1	Gearbox: Offset
256T5610-1	Inboard Leading Edge Slat Pdu
256U3110-11	Power Pack
256U3110-12	Power Pack
256U3110-13	Power Pack
256U3110-14	Power Pack
256U3110-15	Power Pack
256U3110-16	Power Pack
256U3110-17	Power Pack
256W2110-1	Actuator: Rotary,Assembly
256W2110-3	Actuator: Rotary,Assembly
256W2140-1	Gearbox: Offset
256W2140-2	Slat Actuation Assy
256W2210-1	Outboard Rotary Actuator

256W2210-2	Outboard Rotary Actuator
256W2210-2	Outboard Rotary Actuator
256W2210-3	Outboard Rotary Actuator
256W2210-4	Outboard Rotary Actuator
256W2210-4	Outboard Rotary Actuator
256W2240-1	Outboard No-Back/Offset Gearbox
256W2240-2	Outboard No-Back/Offset Gearbox
256W2280-1	Sensor No-Back/Offset Gearbox
256W2280-2	Sensor No-Back/Offset Gearbox
256W2310-1	Rotary Actuator
256W2310-2	Seal Krueger Rotary Actuator
256W2310-3	Seal Krueger Rotary Actuator
256W2310-4	Seal Krueger Rotary Actuator
256W2340-1	Gearbox: Offset,Krueger,Seal,Assembly,Ar
256W2340-2	Offset Gearbox
256W2410-3	Mechanism: Assembly
256W2510-4	Slat Pwr Drive Unit Assy
256W2510-5	Slat Pwr Drive Unit Assy
256W2510-6	Slat Pwr Drive Unit Assy
256W2510-8	Slat Pwr Drive Unit Assy
256W2610-1	Gearbox: Slat,Offset,Assembly
256W2640-1	Gearbox: Angle,Assembly
256W3110-1	Flap Actuation Transmission Assemblies
256W3110-10	Flap Actuation Transmission Assemblies
256W3110-2	Flap Actuation Transmission Assemblies
256W3110-3	Flap Actuation Transmission Assemblies
256W3110-4	Flap Actuation Transmission Assemblies
256W3110-5	Flap Actuation Transmission Assemblies
256W3110-6	Flap Actuation Transmission Assemblies
256W3110-7	Flap Actuation Transmission Assemblies
256W3110-8	Flap Actuation Transmission Assemblies
256W3110-9	Flap Actuation Transmission Assemblies
256W3210-1	Flap Actuation Transmission Assemblies
256W3210-10	Flap Actuation Transmission Assemblies
256W3210-2	Flap Actuation Transmission Assemblies
256W3210-3	Flap Actuation Transmission Assemblies
256W3210-4	Flap Actuation Transmission Assemblies
256W3210-5	Flap Actuation Transmission Assemblies
256W3210-6	Flap Actuation Transmission Assemblies
256W3210-7	Flap Actuation Transmission Assemblies
256W3210-8	Flap Actuation Transmission Assemblies
256W3210-9	Flap Actuation Transmission Assemblies
256W3310-1	Flap Actuation Transmission Assemblies
256W3310-10	Flap Actuation Transmission Assemblies
256W3310-2	Flap Actuation Transmission Assemblies
256W3310-3	Flap Actuation Transmission Assemblies
256W3310-4	Flap Actuation Transmission Assemblies

256W3310-5	Flap Actuation Transmission Assemblies
256W3310-6	Flap Actuation Transmission Assemblies
256W3310-7	Flap Actuation Transmission Assemblies
256W3310-8	Flap Actuation Transmission Assemblies
256W3310-9	Flap Actuation Transmission Assemblies
256W3410-3	Transmission Actuation Assembly
256W3410-4	Transmission: Actuation,Assembly
256W3510-4	Drive Unit Power,Actuation,Flap
256W3610-1	ANGLE GEARBO
256W3610-2	ANGLE GEARBO
256W3630-1	ANGLE GEARBO
256W3630-2	ANGLE GEARBO
256W3640-1	Gearbox Assy
256W3720-1	Torque Tube Support
256W3720-2	Torque Tube Support
256W3721-1	Torque Tube Support
256W3722-1	Torque Tube Support
256W3722-2	Torque Tube Support
256W3731-1	Torque Tube Support
256W3731-2	Torque Tube Support
256W3732-1	Torque Tube Support
256W3732-2	Torque Tube Support
257T4120-2	Gearbox Assy, Nose Wheel Steering
257T4311-1	NLG SPRING C
257U3010-3	Drive Unit And Actuator Assy- Alternate
258000-2	Booster Pump, Plug-In
258000-3	Plug-In Booster Pump
258000-5	Plug-In Booster Pump
258T5001-1	GEAR BOX
258T7200-6	Pump: Hyd Module,Assembly
25910-09	Ejector Pump & Tank
25910-5	Ejector Pump & Tank
25910-6	Ejector Pump & Tank
25910-7	Ejector Pump & Tank
25910-8	Ejector Pump & Tank
2594366-904	Actuator
25975-000	E.G.T. Harness and Junction Box
2604880-001	Feedback Control Assembly, Variable Stator Vane, Vsv
2604880-002	Feedback Cable Assembly, Variable Bleed Valve, Vbv
2605290-001	Feedback Control Assembly, Variable Stator Vane, Vsv
2605290-002	Feedback Control Assembly, Variable Bleed Valve, Vbv
2607-1001	Variable Stator Vane Actuator
2607-1002	Variable Stator Vane Actuator
2607-1003	Variable Stator Vane Actuator
2607MK1	Variable Stator Vane Actuator
2607MK2	Variable Stator Vane Actuator
2607MK3	Variable Stator Vane Actuator

2607MKseries	Actuator, Variable Stator Vane, Vsv, A5/D5
2609472-4	Brake assy
2613552	MLG AXLE SLE
2617M97P01	Core Compartment Cooling Valve
26257-000	BOX AND CABL
2651-278-7	VALVE ASSY LAV DRAIN
2660472-2	Starter Valv
2660472-5	Check Valve
2660591-1	Cartridge Cone Check Valve
2660591-4	Cartridge Cone Check Valve
2660608M2	Boost Pump Removal Check Valve
2-670001-1	Actuator Ass
2670005M2	Nose Steering Metering Valve
2670005M21	Nose Steering Metering Valve
2670005M4	Nose Steering Metering Valve
2670005M5	Nose Steering Metering Valve
2670005M6	Nose Steering Metering Valve
2670005M7	Valve
2670054M2	Valve
2670112	Modular Assy, Mlg Door
2670112M1	Nose Lndg Gear Door Sfty Valve
2670136	Valve: Refueling,Shutoff
2670150-7	Refueling Manifold
2670169M4	By-Pass Reducer Valve
2670169M6	Valve Ay
2670282M2	Valve, Drain Fuel Tank Vent
2670288-6	Valve Assy
2670288-7	Valve Assy
2670288-8	Valve Assy, Mlg Door Sequence
2670288-9	Valve
2670296M1	Valve Assy, Nlg Door Sequence
2670324-101	Surge Tank Drain Check Valve
2671T100-1	Alternate I/B Flap Motor
2680215M4	Valve, Shuto
2680215M5	Spoiler Actuator
2680346-4	Float Valve
2680355M1	PUMP OUTLET
2690040M1	Transmitter
2691552	Valve Assy
2701298-1	Body
2704204-1	Alternating Current Geared Motor
2704204-2	Alternating Current Geared Motor
2704204-3	Alternating Current Geared Motor
2704376-1	Direct Current Motor
2704376-2	Direct Current Motor
2704376-3	Direct Current Motor
2704376-5	Direct Current Motor

2704400-1	Motor
2704442-3	Direct Current Motor
2704442-4	Direct Current Motor
2704442-5	Direct Current Motor
2704458-1	Switch
2704480-1	Permanent Magnet Alternator
2704506-1	Direct Current Motor
2704506-2	Direct Current Motor
2704506-3	Direct Current Motor
2704506-4	Direct Current Motor
2704M03P01	Exhaust Gas Temperature Probe
270T4640-2	Pump: Hand
2710540-1	Permanent Magnet Alternator
2710880M2	Reverse Thrust Limiter Valve
2710880M3	Reverse Thrust Limiter Valve
2710880M4	Reverse Thrust Limiter Valve
2717-90	Actuator
2717--901	Actuator
2717-902	Actuator
271A1441-20	Pump: Hyd,Assembly,Ar
271A7449	Hydraulic Te Priority Valve Assy
271N6113-3	Mlg Retract Actuator Assembly
271N6113-4	Mlg Retract Actuator Assembly
271T0001-2	Module Assy, Hyd Sys Return
271T0001-3	Module Assy, Hyd Filter
271T0042-3	Module, Hyd Pump Pressure
271T0042-4	Module Assy, Ac Motor Pump
271T0068-10	MODULE- ENGINE DRIVEN PUMP
271T0068-12	Module Assy, Eng/Air Driven Pump
271T0068-5	Module: Assembly
271T0068-7	Module Assy, Main Hyd Sys
271T4592-8	VALVE ASSY
271T4630-2	Filter: Assembly
271T4640-2	Pump Assy, Rsvr Fill Hyd Hand
271T5212-41	Reservoir Assy, Hyd Lh
271T5212-42	Reservoir Assy, Hyd Rh
271W1307-10	Pump Assy
271W1307-6	Pump Assy
271W1307-7	Pump Assy
271W1307-9	Pump Assy
271W2240-1	Filter: Module,Hyd
271W3203-2	Module
271W5311-9	Valve:
2720121M3	Fill Shutoff Valve
2720121M5	Fill Shutoff Valve
27216-3	CLEVIS
27216-3	Clevis

272T4502-5	VALVE ASSY
2730426	Starter Shutoff Valve
27344-000	EEC Thermocouple Probe (Tt3)
273A1101-1	Actuator Ass
273A1101-2	Actuator Assembly
273A1102-1	Cylinder Assy
273A1102-2	Cylinder
273A1103-1	Head End Assy
273A1104-1	Piston
273A1201-1	Gear Lock Actuator
273A1201-2	Lock Actuator Assembly - Nose Landing Ge
273A1201-201	Lock Actuator Assembly - Nose Landing Ge
273A1203-1	Piston Rod
273A2101-10	Actuator Assy - Main Gear Retract, Retro
273A2101-101	Actuator Assy - Main Gear, Retract
273A2101-2	Actuator Assy
273A2101-3	Actuator Assy - Main Gear Retract
273A2101-4	Actuator Assy - Main Gear Retract
273A2101-5	Actuator Assy - Main Gear, Retract
273A2101-6	Actuator Assy - Main Gear Retract, Retro
273A2101-7	Actuator Assy - Main Gear Retract, Retro
273A2101-8	Actuator Assembly - Main Gear Retract, R
273A2101-9	Actuator Assy - Main Gear Retract, Retro
273A2201-1	Downlock Assembly - Mlg
273A2501-1	Actuator Assy
273A3610-4	Damper: Shimmy, Assy
273A3610-7	Shimmy Damper Assy - Mlg
273N1004-3	Actuator Assy, Nlg Retract
273N1004-4	Actuator Assy, Nlg Retract
273N1004-5	Actuator Assy - Nose Gear Retract
273N1005-1	Actuator Assy
273N1005-2	Actuator Assy
273N1007-	Piston Rod
273N1014-	Gland Assy
273N1095-2	Valve Assy, Nlg Sequence Bypass
273N2000-3	Mlg Retract Actuator Assembly
273N2000-4	Mlg Retract Actuator Assembly
273N2000-7	Mlg Retract Actuator Assembly
273N2000-8	Mlg Retract Actuator Assembly
273N2004-1	Actuator Ass
273N2004-2	Actuator
273N2004-3	Actuator Assy - Landing Gear Truck Posit
273N2004-6	Actuator Assy
273N2006-	Actuator
273N2006-1	Mlg Retract Actuator Assembly
273N2006-2	Actuator Assy, Mlg Retract Rh
273N2006-3	Actuator Assy, Mlg Retract Lh

273N2006-4	Actuator Assembly - Main Gear Retract
273N2006-5	Actuator Assembly - Main Gear Retract
273N2007-1	Actuator Assy
273N2008-3	Actuator Assy
273N2036-6	HOUSING
273N2036-6	Housing
273N2038-1	Piston Rod
273N2038-2	Piston Rod
273N2041-1	Rod End
273N2050-1	BARREL
273N2050-1	Barrel
273N2051-	Piston
273N2051-5	PISTON
273N2051-5	Piston
273N2051-6	PISTON
273N2051-6	Piston
273N2052-	Head End Assy
273N2052-1	Head End Assy
273N2052-2	Head End
273N2052-4	Head End
273N2052-6	Head End
273N2053-	Cap End Assy
273N2053-1	End Cap Assy
273N2053-1	End Cap Assy
273N2053-2	End Cap
273N2055-	Feed Tube
273N2070-1	SEAL RETAINE
273N2070-1	Seal Retaine
273N2088-1	Mlg Truck Positioner
273N2088-2	Valve Module Assembly
273N4004-2	ALTN-UP LOCK
273N4005-2	Actuator Assy, Nlg Uplock Release
273N4006-3	Actuator Assy, Nlg Door Release
273N4051-1	Piston Rod
273N4069-1	Piston Rod
273N4171-3	Actuator Assy
273N4171-4	Actuator Assy, Nlg Door Lock
273T0073-1	Actuator Assy, Mlg Door
273T0073-9	Mlg Door Actuator Assembly
273T0075-	Piston Rod
273T1100-5	Mlg Retract Actuator Assembly
273T1100-6	Mlg Retract Actuator Assembly
273T1102-	Actuator
273T1102-7	Actuator, Re
273T1102-8	Actuator, Mlg Retract
273T1103-1	Barrel
273T1104-	Piston

273T1104-4	Actuator Ass
273T1104-6	PISTON
273T1104-6	Piston
273T1105-1	HEAD END
273T1105-2	Head End
273T1107-	Cap End Assy
273T1107-1	CAP ASSY
273T1107-1	Cap Assy
273T1110-1	Feed Tube
273T1400-7	MLG SEQUENCE VALVE
273T1400-8	MLG SEQUENCE VALVE
273T1401-3	Box Assy, Cam Lh
273T1401-4	Box Assy, Cam Rh
273T4110-4	Nlg Retract Actuator Assembly
273T4110-6	Nlg Retract Actuator Assembly
273T4110-8	Nlg Retract Actuator Assembly
273T4112-3	Nlg Retract Actuator Assembly
273T4112-4	Actuator, Nlg Retract
273T4112-5	Actuator Assy - Retract, Nose Landing Ge
273T4120-2	Actuator
273T4121-1	Nlg Lock Actuator Assembly
273T4561-9	Actuator
273T4572-1	Actuator: Uplock Release
273T4702-2	Actuator Assy - Tailskid
273T6101-	Truck Actuator
273T6101-9	Actuator
273T6107	Piston
273T6111-	Piston
273T6200-2	Mlg Side Brace Lock Actuator Assembly
273T6200-4	Mlg Side Brace Lock Actuator Assembly
273T6200-6	Mlg Side Brace Lock Actuator Assembly
273T6200-9	Mlg Side Brace Lock Actuator Assembly
273T6201-1	Mlg Side Brace Lock Actuator Assembly
273T6201-2	Mlg Side Brace Lock Actuator Assembly
273T6201-3	Mlg Side Brace Lock Actuator Assembly
273T6201-4	Lock Actuator Assy - Mlg, Side Brace
273T6300-11	Mlg Drag Brace Lock Actuator Assembly
273T6300-2	Mlg Drag Brace Lock Actuator Assembly
273T6300-3	Mlg Drag Brace Lock Actuator Assembly
273T6300-4	Mlg Drag Brace Lock Actuator Assembly
273T6300-6	Mlg Drag Brace Lock Actuator Assembly
273T6300-8	Mlg Drag Brace Lock Actuator Assembly
273T6301-1	Mlg Drag Brace Lock Actuator Assembly
273T6301-2	Mlg Drag Brace Lock Actuator Assembly
273T6301-3	Mlg Drag Brace Lock Actuator Assembly
273T6301-4	Mlg Drag Brace Lock Actuator Assembly
273T6301-5	Mlg Drag Brace Lock Actuator Assembly

273T6301-6	Mlg Drag Brace Lock Actuator Assembly
273T6301-7	Actuator Assy - Drag Brace, Main Landing
2740166-1	Electromechanical Rotary Actuator
2741686-1	Ram Actuator, Ngs
2-7457-10	Actuator
2-7457-11	Valve Autobr
2-7457-11P	Actuator
2-7457-11-P	Door Actuator Assy
2-7457-12	Actuator Assy
2-7457-4	Actuator Assembly,
2-7457-6	Actuator Assy
2-7457-8	Actuator Assembly,
2-7457-9	Actuator Ass
2-7457-9P	Actuator Ass
2-7460-1	Anti Skid Valve
2-7460-2	Anti Skid Valve
2-7460-3	Anti Skid Valve
2-7460-4	Anti Skid Valve
2-7460-5	Valve: Antiskid Shuttle
2-7462-2	Valve Assy
2-7462-3	Valve-Auto Brake Shuttle
2-7462-4	Valve: Shuttle,Autobrake
2-7462-5	Valve: Shuttle,Autobrake
2-7464-5B	Actuator
2-7464-6	Actuator Nlg Door
2-7464-7	Actuator Assy -
2-7464-7B	Actuator Nlg Door
274832-02	Tachometer G
274N1051-3	Valve Assy
274T4620-10	Valve: Relief,Hydraulic
274T4621-4	Valve Assy, Brake Selector
274T4630-5	Valve: Assembly
275A1101-10	Actuator Assembly, Nose Gear Steering
275A1101-3	Steering Actuator
275A1101-4	Actuator Assy
275A1101-5	Actuator Assembly
275A1101-6	Actuator Assembly
275A1101-7	Actuator Assembly, Nose Gear Steering
275A1101-8	Actuator Assembly, Nose Gear Steering
275A1101-9	Actuator Assembly, Nose Gear Steering
275A1103-	Piston
275A1104-1	Trunnion
275A1104-10	Trunnion
275A1104-3	Trunnion
275A1104-9	Trunnion
275GV3	Pressure Swi
275N1211-2	Steering Actuator

275N1225-	Piston
275N1228-	Trunnion
275N1228-1	TRUNNION
275N1228-1	Trunnion
275N1230-1	Steering Actuator
275N1235-	Piston
275N1238-	Trunnion
275N2059-3	Cartridge Assy-Nose Wheel
275N2101-13	Mechanism Assy
275N2116-1	Nose Steering Torque Limiter
275N2116-2	Nose Wheel Steering Torque Limiter
275N2116-3	Nose Wheel Steering Torque Limiter
275N2116-4	Nose Wheel Steering Torque Limiter
275N2116-5	Nose Wheel Steering Torque Limiter
275N2116-6	Nose Wheel Steering Torque Limiter
275N2116-7	Nose Wheel Steering Torque Limiter
275N2116-8	Nose Wheel Steering Torque Limiter
275T4112-3	Valve: Check,Module Assembly
275T6221-	Steering Actuator
275T6221-1	Nose Gear Steering Actuator
275T6221-2	Nose Gear Steering Actuator
275T6221-3	Nose Gear Steering Actuator
275T6221-3	Nlg Steering
275T6223-	Trunnion
275T6223-1	TRUNNION
275T6223-1	Trunnion
275T6223-4	Trunion
275T6224-	Piston
2760000-101	Air Isolation Valve
2763543-105	Motor
2-7679-1	Fuse Assy, Flow Rate
2-7679-2	Fuse: Assembly
2-7680-1	Fuse Assy, Flow Rate
2-7680-2	Fuse: Assembly,Ohc
2-7681-1	Hyd. Fuse
2-7681-2	Fuse
276A2001-2	Stand-By System Modular
2-7729-1	Fuse Assembly
2-7734-1	Fuse Assembly
2-7735-1	Fuse Assembly
2-7736-1	Fuse Assembly
2-7737-1	Fuse Assembly
2-7756-1	Fuse Assembly
2780436-102	Reverse Thrust Limiter Valve
2780475-103	Valve: Pressure Relief
2780536-102	Press Relief
2780537-103	Pressure Rel

2780537-104	Valve Anti-Ice
2780539-	Valve
2780539-101	Valve Assy
2780539-102	Valve Assy
2780539-103	Fuel Valve S
2780539-104	Valve Assy
2780539-105	Valve: Isolation
2780539-106	Valve Assy
2780539-107	Valve Assy
2780539-109	Valve Assy
2780539-110	Valve Assy
2780540-102	Actuator Inb
2780641-101	Lube Oil Press. Fuel Solenoid
2-7857-3	Actuator: Door,Nlg
2-7884-1	Fuse Assy, Quantity Measuring
2-7892-2	Snubber
2-7897-3	Fuse: Qty Measure
2-7898-2	Fuse: Qty Measure
2-7898-3	Fuse: Volumetric
2790409-102	Adapter: Fueling
2790475-101	Surge Tank Pressure Relief Valve
2790475-102	Actuator Inb
2790475-103	Actuator
2790475-109	VALVE PRESS RELIEF SURGE TANK
2790481-102	Valve,Fuel Vent
2790482-101	Vent Valve
2790482-102	Valve, Fuel Vent Float
2790521-102	Valve Assy, Cartridge Check
2790523-101	Valve, Cartridge Chk
2790523-103	Cartridge Check Valve
2790545-101	Valve, Air Supply Duct Check
2790546-102	Valve, Vent Sys Air Check
2790583-106	Actuator
2790583-108	Valve: Thrust Reverser
2790592-101	3.5 Inch Shutoff Valve Assembly
2790592-102	3.5 Inch Shutoff Valve Assembly
2790592-103	3.5 Inch Shutoff Valve Assembly
2790598-102	Valve, Isolation
2790598-103	Valve, Isolation
2-7914-3	Fuse: Qty Measuring
2793616-1	Body
2793616-101	Body Assy
2793745-101	Valve Body
2793745-101	Body
2800003-103	Surge Tank Press. Relief Valve
2800015-101	Pressure Relief And Dump Valve
2800015-102	Pressure Relief And Dump Valve

2800015-103	Pressure Relief And Dump Valve
2801T100-1	Unit, Power Drive
2-8020-1	Hydraulic Fuse, Auto Quantity Measuring
2-8020-11	Fuse Assembly
2-8020-12	Fuse Assembly
2-8020-13	Shut Off Air
2-8020-15	Fuse Assembly
2-8020-16	Fuse Assembly
2-8020-2	Fuse
2-8020-24	Fuse Assembly
2-8020-25	System A Tr Fuse
2-8020-26	Standby Tr Fuse
2-8020-27	Stby Le Fuse
2-8020-28	Mlg Up Fuse
2-8020-29	Hyd. Fuse
2-8020-3	Fuse
2-8020-4	Hyd. Fuse
2-8020-5	Fuse Assembly, Quantity Measuring
2803803-101	Body
2803803-102	Body
2-8041-1	Fuse: Assy
2-8051-1	Anti-Skid Shuttle Valve Module
2810012-101	Aux. Tank Shut-Off Valve
2810015-101	4" Flapper Air Check Valve
2810039-101	Valve
2810193-111	Valve, Air Shutoff
2810194-106	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-108	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-114	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-115	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-116	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-117	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-118	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-119	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-120	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-121	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-122	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-123	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-124	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-125	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-126	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810194-127	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
2810219-101	Valve - Cooling Air
2820095-101	Valve
282700-1005	Elevator Power Control
282700-1007	Actuator, Po
282700-1009	Actuator, Po

282700-1011	Actuator Ass
282710-103	Lap Assy
282741-3	PISTON
282741-3	Piston
282800-1003	Inboard Aileron Power Control Actuator
282800-1005	Inboard Aileron Power Control Actuator
282800-1007	Actuator Assy, Ail Pwr Control
282800-1009	Actuator Assy, Ail Pwr Control
282800-1011	Actuator: Aileron,Ib
282841-1	Rod Assy
282841-3	Piston
282842-1	Barrel
282900-1003	Rudder Pcu
282900-1005	Rudder Pcu
282900-1007	Rudder Pcu
282900-1009	Rudder Pcu
282900-1011	Rudder Pcu
282900-1013	Accumulator
282941-3	Piston
282942-	Barrel
2-8295-8	Actuator: Retract,Mlg,Svc
2830007-101	Accumulator
2831-37	Heater: Air,Assembly
283200-1005	Actuator, Ail Pwr Cont
283200-1007	Actuator, Ail Power Control
283200-1009	Outboard Aileron Power Control Actuator
283241-1	Piston Rod
283241-3	PISTON ROD
283241-3	Piston Rod
283242-1	Barrel
283554	Pump Motor Package
2841-90	Threeway Hyd
2846T100-1	Actuator
2860069-101	5" Flapper Air Check Valve
2860100-101	Surge Tank Press. Relief Valve
2863-901	Actuator
286467100-1	Servo-Valve
2872-2	Actuator
287265-1-1	Electrical Engine Starter
2872-90	Actuator
2872-90-1	Actuator
287T6102-7	Bracket Assy
28823-1	Power Unit,C
28823-9	Power Unit,C
2885000-2	Primary Lock Assembly, Thrust Reverser
2885000-3	Primary Lock Assembly, Thrust Reverser
2885000-5	Primary Lock Assembly, Thrust Reverser

2885000-6	Primary Lock Assembly, Thrust Reverser
2885000-7	Primary Lock Assembly, Thrust Reverser
2885000-8	Primary Lock Assembly, Thrust Reverser
2885000-9	Primary Lock Assembly, Thrust Reverser
28B263-13	Valve
28B263-13A	Ac Generator
28B263-13B	Apu Generator
290D8014-513	Actuator, Ra
2910022-101	Valve: Shutoff
2910024-101	Shutoff: Fuel,Scavenge
2910024-102	Float Operated Shut-Off Valve
2910040-101	Valve:
2910043-101	Hydraulic Center System Return Manifold
2920016-101	Motor Operated Fill Overflow Valve
2920033-103	Motor Operated Gray Water Restrictor
2920033-104	Motor Operated Gray Water Restrictor
2920033-105	Valve
292-201B	Trailing Edge Power Drive
292-205B	Switch Pack Assy
292-206B	Switch Pack Assy
29300-12	Pcu Control Unit
293U4202-1	Actuator
293U4202-2	Actuator Assembly - Truck Positioner, Ma
293W2202-2	Nlg Lock Actuator
293W2302-2	Nose Landing Gear Retract Actuator
293W2302-3	Nose Landing Gear Retract Actuator
293W2352-1	Nlg Retract Actuator
293W3001-1	Mlg Braces Downlock Actr
293W3130-1	Swivel Valve
293W3130-4	Swivel Valve
293W3130-8	Swivel Valve
293W3130-9	Swivel Valve
293W3172-2	Mlg Braces Downlock Actr
293W3172-3	Mlg Braces Downlock Actr
293W3180-4	Swivel
293W3180-5	Swivel Ip5
293W3302-4	Actuator
293W3302-5	Landing Gear Actuator
293W3322-1	Mlg Retract Actuator
293W3352-1	Mlg Retract Actuator
293W3702-6	Mlg Door Actuator
293W3702-8	Mlg Door Actuator
293W3702-9	Mlg Door Actuator
293W3902-2	Mlg Uplock Actuator
293W3922-3	Mlg Door Uplock Actr
293W4201-3	Semi Lever Gear Actuator
293W4201-4	Semi Lever Gear Actuator

293W5502-1	Nlg Alt Uplock Rel Actr
293W5602-2	Actuator: Uplock Release
2944T100-1	Power Drive Unit
2944T100-3	Unit: Drive,Power
294W5130-13	In Axle
294W5130-15	In Axle
294W5140-12	Cap: Hub
294W5204-10	Hubcap:
2950004-304	Fuel Shutoff Valve Actuator
2950012-101	Motor Operated Fill Valve
2955810-3	Roller:
295W1110-1	Gearbox
295W1301-2	Compensator: Assembly
295W1401-1	Mechanism: Ctr,Assembly
295W1701-1	Nose Steering Actuator
295W1701-2	Nose Gear Steering Actuator
295W1702-3	Trunnion
295W1703-	Piston
295W3200-1	Actuator
295W3200-3	Actuator
2960019-103	Valve Assembly
2960034-101	Gate Motor Operated Shut-Off Valve
2960035-101	2-Port Motor Operated Shut-Off Valve
2960035-103	Valve
2960035-104	Valve: Ohc
2960036-101	Valve Assy Shutoff
2990051-102	Fuel Shutoff Valve
2A0526	Fuel Distribution Valve
2A0528	Total Pressure and Total Temperature
2A097-0269	Actuator
2A1380	E.G.T. Harness and Junction Box
2A1609	E.G.T. Harness and Junction Box
2A2160	Thermocouple:
2A3343	Total Pressure and Total Temperature
2A3580	E.G.T. Harness and Junction Box
2A7200A	Mach Trim Actuator
2A7-200A	Linear Act
2B7-201E	Actuator
2ISY3008B1	Acc Signal Valve Assembly
2R5206B	Actuator
2R54415001-5	Flywheel
2S2566	Check-Engine Fuel F
2S6296	VALVE, CHECK
2S6392-2	Check Valve, Bleed Air 4.50 inch
2S6392-3	Check Valve, Bleed Air 4.50 inch
2S6392-4	Check Valve, Bleed Air 4.50 inch
2U2202-3	Lower Left/Right Actuator

2U2202-4	Lower Right Loc Actuator
2U2202-6	Tras Locking Actuator Assy
2U2203-4	Feedback Actuator Assembly
2VA39-25G1	Damper
300013000-003	Lateral Control Package
300013000-003	Anti-Ice Val
300900-1	Fuel, Valve
301-1180	Valve Cabin
301-548-007-0	Oil Tank
301-572-030-0	Lubrication Unit
301-572-031-0	Lubrication Unit
301-572-032-0	Lubrication Unit
30-1667-7	Speed Switch
30-1685-1	Speed Switch
30-1685-2	Speed Switch
30-1691-1	Speed Switch
30-1691-2	Switch
301-771-503-0	Variable Bleed Valve Feedback Cable
301-772-101-0	Flexible Shaft Assembly
301-772-601-0	Stop Mechanism
301-772-602-0	Stop Mechanism
301-772-652-0	Stop Mechanism Sb 75-0049
301-772-901-0	Servo Fuel Heater
301-774-201-0	Flexible Shaft Assembly
301-774-702-0	Bleed Valve Fuel Gear Motor
301-774-703-0	Bleed Valve Fuel Gear Motor
301-774-704-0	Bleed Valve Fuel Gear Motor
301-774-705-0	Bleed Valve Fuel Gear Motor
301-774-706-0	Bleed Valve Fuel Gear Motor
301-774-707-0	Bleed Valve Fuel Gear Motor
301-774-708-0	Bleed Valve Fuel Gear Motor
301-774-709-0	Bleed Valve Fuel Gear Motor
301-775-701-0	RH and LH T495 Thermocouple Wiring Segments
301-775-703-0	RH and LH T495 Thermocouple Wiring Segments
301-775-801-0	RH and LH T495 Thermocouple Wiring Segments
301-775-803-0	RH and LH T495 Thermocouple Wiring Segments
301-775-901-0	thermocouple
301-775-902-0	thermocouple
301-776-101-1	Fuel Pump
301-776-102-0	Fuel Pump
301-776-103-0	Fuel Pump
301-776-104-0	Fuel Pump
301-776-105-0	Fuel Pump
301-776-106-0	Fuel Pump
301-776-108-0	Fuel Pump
301-776-109-0	Fuel Pump
301-776-110-0	Fuel Pump

301-776-111-0	Fuel Pump
301-776-112-0	Fuel Pump
301-776-113-0	Fuel Pump
301-776-114-0	Fuel Pump
301-776-115-0	Fuel Pump
301-776-206-0	Master Ballscrew Actuator
301-776-207-0	Master Ballscrew Actuator
301-776-305-0	Ballscrew Actuator
301-776-306-0	Ballscrew Actuator
301-776-501-0	Servo Fuel Heater
301-776-702-0	Vbv Gearmotor
301-776-703-0	Vbv Gearmotor
301-776-704-0	Vbv Gearmotor
301-777-301-0	Feedback Cable, Variable Bleed Valve, Vbv
301-777-701-0	Flexible Shaft Assembly
301-777-702-0	Flexible Shaft Assembly
301-777-801-0	Flexible Shaft Assembly
301-777-802-0	Flexible Shaft Assembly
301-778-401-0	RH and LH T495 Thermocouple Wiring Harness
301-778-501-0	RH and LH T495 Thermocouple Wiring Harness
301-778-801-0	Fuel Pump
301-778-802-0	Fuel Pump
301-778-804-0	Fuel Pump
301-778-805-0	Fuel Pump
301-778-806-0	Fuel Pump
301-779-001-0	Fuel Pump
301-779-002-0	Fuel Pump
301-779-005-0	Fuel Pump
301-779-006-0	Fuel Pump
301-779-007-0	Fuel Pump
301-779-101-0	Fuel Pump
301-779-102-0	Fuel Pump
301-779-201-0	IDG Oil Cooler
301-779-501-0	Servo Fuel Heater
301-779-502-0	Servo Fuel Heater
301-779-701-0	T495 Thermocouple Wiring Harness
301-779-801-0	T495 Thermocouple Wiring Harness
301-779-802-0	T495 Thermocouple Wiring Harness
301-779-803-0	T495 Thermocouple Wiring Harness
301-780-102-0	RH and LH T495 Thermocouple Wiring Harness
301-780-201-0	T495 Thermocouple Wiring Harness
301-780-401-0	T495 Thermocouple Wiring Harness
301-780-702-0	Bleed Valve Fuel Gear Motor
301-780-703-0	Bleed Valve Fuel Gear Motor
301-780-704-0	Bleed Valve Fuel Gear Motor
301-780-707-0	Bleed Valve Fuel Gear Motor
301-780-708-0	Bleed Valve Fuel Gear Motor

301-780-804-0	VBV Position Sensor
301-780-805-0	VBV Position Sensor
301-781-402-0	Stop Mechanism
301-781-403-0	Stop Mechanism
301-781-404-0	Stop Mechanism
301-781-405-0	Stop Mechanism
301-783-701-0	Fuel Return Valve
301-783-702-0	Fuel Return Valve
301-784-101-0	RH and LH T495 Thermocouple Wiring Harness
301-784-201-0	T495 Thermocouple Wiring Harness
301-784-202-0	T495 Thermocouple Wiring Harness
301-784-203-0	T495 Thermocouple Wiring Harness
301-784-401-0	T495 Wiring Harness
301-784-402-0	T495 Wiring Harness
301-784-403-0	T495 Wiring Harness
301-784-501-0	T495 Wiring Harness
301-784-502-0	T495 Wiring Harness
301-784-503-0	T495 Wiring Harness
301-784-601-0	T495 Wiring Harness
301-784-602-0	T495 Wiring Harness
301-784-603-0	T495 Wiring Harness
301-784-701-0	T495 Wiring Harness
301-784-702-0	T495 Wiring Harness
301-784-703-0	T495 Wiring Harness
301-784-801-0	T495 Wiring Harness
301-784-802-0	T495 Wiring Harness
301-784-803-0	T495 Wiring Harness
301-784-901-0	T5 Temperature Sensor
301-784-902-0	T5 Temperature Sensor
301-785-001-0	T495 Thermocouple Wiring Harness
301-785-002-0	T495 Thermocouple Wiring Harness
301-785-003-0	T495 Thermocouple Wiring Harness
301-785-101-0	T495 Thermocouple Wiring Harness
301-785-102-0	T495 Thermocouple Wiring Harness
301-785-103-0	T495 Thermocouple Wiring Harness
301-785-201-0	T495 Thermocouple Wiring Harness
301-785-202-0	T495 Thermocouple Wiring Harness
301-785-203-0	T495 Thermocouple Wiring Harness
301-785-204-0	T495 Thermocouple Wiring Harness
301-785-205-0	T495 Thermocouple Wiring Harness
301-785-301-0	T495 Thermocouple Wiring Harness
301-785-501-0	Fuel Pump
301-785-502-0	Fuel Pump
301-785-503-0	Fuel Pump
301-785-504-0	Fuel Pump
301-787-001-0	Air Valve LPTACC Module
301-787-401-0	Solenoid Valve

301-787-701-0	Air Valve LPTACC Module
301-787-702-0	Air Valve LPTACC Module
301-787-703-0	Air Valve LPTACC Module
301-787-801-0	T495 Thermocouple Wiring Harness
301-787-802-0	T495 Thermocouple Wiring Harness
301-787-803-0	T495 Thermocouple Wiring Harness
301-787-902-0	IDG Oil Cooler
301-787-903-0	IDG Oil Cooler
301-789-101-0	Servo Fuel Heater
301-789-102-0	Servo Fuel Heater
301-790-101-0	IDG Oil Cooler
301-790-301-0	Vbv Sensor Position
301-790-302-0	Vbv Sensor Position
301-791-301-0	Master Ballscrew Actuator
301-791-302-0	Master Ballscrew Actuator
301-791-901-0	T5 Temperature Sensor
301-792-701-0	Master Ballscrew Actuator
301-792-702-0	Master Ballscrew Actuator
301-792-703-0	Master Ballscrew Actuator
301-792-751-0	Master Ballscrew Actuator
301-792-801-0	Ballscrew Actuator
301-792-802-0	Ballscrew Actuator
301-792-803-0	Ballscrew Actuator Assembly
301-792-901-0	Bleed Valve Fuel Gear Motor
301-792-951-0	Stop Mechanism Sb 75-0049
301-793-901-0	Master Ballscrew Actuator
301-793-902-0	Master Ballscrew Actuator
301-793-951-0	Master Ballscrew Actuator
301-793-952-0	Master Ballscrew Actuator
301-794-101-0	Air Valve LPTACC Module
301-794-102-0	Air Valve LPTACC Module
301-795-401-0	Fuel Return Valve
301-795-402-0	Fuel Return Valve
301-795-702-0	T495 Wiring Harness
301-795-703-0	T495 Wiring Harness
301-795-704-0	T495 Wiring Harness
301-795-705-0	T495 Wiring Harness
301-795-706-0	T495 Wiring Harness
301-795-707-0	T495 Wiring Harness
301-795-708-0	T495 Wiring Harness
301-795-802-0	T495 Wiring Harness
301-795-803-0	T495 Wiring Harness
301-795-804-0	T495 Wiring Harness
301-795-805-0	T495 Wiring Harness
301-795-806-0	T495 Wiring Harness
301-795-901-0	T495 Wiring Harness
301-795-902-0	T495 Wiring Harness

301-795-903-0	T495 Wiring Harness
301-795-904-0	T495 Wiring Harness
301-795-951-0	Master Ballscrew Actuator Assembly
301-796-001-0	T495 Wiring Harness
301-796-002-0	T495 Wiring Harness
301-796-003-0	T495 Wiring Harness
301-796-004-0	T495 Wiring Harness
301-796-102-0	T495 Wiring Harness
301-796-301-0	Lptacc Module Air Valve
301-796-302-0	Lptacc Module Air Valve
301-796-303-0	Lptacc Module Air Valve
301-796-304-0	Lptacc Module Air Valve
301-796-311-0	Lptacc Module Air Valve
301-796-312-0	Lptacc Module Air Valve
301-797-001-0	T495 Thermocouple Wiring Harness
301-797-002-0	T495 Thermocouple Wiring Harness
301-797-003-0	T495 Thermocouple Wiring Harness
301-797-101-0	T495 Thermocouple Wiring Harness
301-797-102-0	T495 Thermocouple Wiring Harness
301-797-103-0	T495 Thermocouple Wiring Harness
301-797-201-0	T495 Thermocouple Wiring Harness
301-797-202-0	T495 Thermocouple Wiring Harness
301-797-203-0	T495 Thermocouple Wiring Harness
301-797-301-0	T495 Thermocouple Wiring Harness
301-797-302-0	T495 Thermocouple Wiring Harness
301-797-303-0	T495 Thermocouple Wiring Harness
301-797-304-0	T495 Thermocouple Wiring Harness
301-797-401-0	Fuel Pump
301-797-402-0	Fuel Pump
301-797-501-0	Master Ballscrew Actuator
301-797-502-0	Master Ballscrew Actuator
301-797-503-0	Master Ballscrew Actuator
301-797-601-0	Ballscrew Actuator
301-797-602-0	Ballscrew Actuator
301-797-603-0	Ballscrew Actuator
301-797-901-0	T495 Thermocouple Wiring Harness
301-798-001-0	T495 Thermocouple Wiring Harness
301-798-101-0	T495 Thermocouple Wiring Harness
301-798-201-0	T495 Thermocouple Wiring Harness
301-798-204-0	T495 Thermocouple Wiring Harness
301-798-401-0	T5 Temperature Sensor
301-798-402-0	T5 Temperature Sensor
301-798-501-0	Fuel Return Valve
301-798-801-0	Fuel Return Valve
301-798-901-0	Fuel Return Valve
301-799-001-0	T5 Temperature Sensor
301-799-002-0	T5 Temperature Sensor

301-799-101-0	T495 Thermocouple Wiring Harness
301-799-102-0	T495 Thermocouple Wiring Harness
301-799-103-0	T495 Thermocouple Wiring Harness
301-799-201-0	T495 Thermocouple Wiring Harness
301-799-202-0	T495 Thermocouple Wiring Harness
301-799-203-0	T495 Thermocouple Wiring Harness
301-800-101-0	T495 Wiring Harness
301-800-102-0	T495 Wiring Harness
301-800-103-0	T495 Wiring Harness
301-800-104-0	T495 Wiring Harness
301-801-201-0	Master Ballscrew Actuator
301-801-301-0	Ballscrew Actuator
301-806-201-0	IDG Oil Cooler
301-807-301-0	Fuel Return Valve
301-807-401-0	Fuel Return Valve
301-807-901-0	VBV Position Sensor
301-807-902-0	VBV Position Sensor
301-808-001-0	VBV Position Sensor
301-808-002-0	VBV Position Sensor
301-809-502-0	Oil Tank
301-809-602-0	Oil Tank
301-809-702-0	Oil Tank
301-809-801-0	T495 Thermocouple Wiring Harness
301-809-901-0	T495 Thermocouple Wiring Harness
301-810-001-0	T495 Thermocouple Wiring Harness
301-810-101-0	T495 Thermocouple Wiring Harness
301-810-201-0	T495 Thermocouple Wiring Harness
301-810-301-0	T495 Thermocouple Wiring Harness
301-810-602-0	Starter Control Valve
301-810-603-0	Starter Control Valve
301-810-604-0	Starter Control Valve
301-810-703-0	Fuel Return Valve
301-810-803-0	Fuel Return Valve
301-810-903-0	Fuel Return Valve
301-812-601-0	Feedback Cable Assembly, Variable Bleed Valve, Vbv
3018-290	Spring Assembly
301-910-005-0	Lptacc Valve
301-910-006-0	Bleed Valve
301-910-007-0	Lptacc Valve
3022016-000	Valve, Parking Brake
3022017-001	Fixed Displacement Hydraulic Motor Assembly
3022053-000	Variable Displacement Hydraulic Pump
3022053-001	Pump
3022151-000	Variable Displacement Hydraulic Pump
30-2481-3	Spd Switch
3031863-001	Pump
3042000-	Power Control Actuator

3042000-1	Actuator:
3042032-	Piston
304443-1	WIRING HARNE
304546-6	HARNESS ASSY
304-785-503-0	Fuel Pump
304-785-504-0	Fuel Pump
3048695-01	Propeller ,
30490	Actuator Spoiler
3049592-01	Power Driven Rotary Pump
30501-510	All Speed Servocontrol
30501-550	All Speed Servocontrol
30501-630	All Speed Servocontrol
30501-650	Actuator
30502-510	Servocontrol
30503-310	Servo Control Rudder
30503-350	Servo Control Rudder
30503-630	Servo Control Rudder
30503-650	Servo Control Actuator
30504-310	Servo Control
30504-350	Elevator Servo Control
30505-411	Spoiler And Airbrake
30505-450	Spoiler And Airbrake
30513-124	Motor, Autopilot Servo
30513-126	Auto Pilot Servo
30513-136	Motor, Autopilot Servo
30514-111	Auto Pilot Servo
3054488-01	Propeller Sh
305-620-502-0	Thrust Reverser Actuator
305-620-503-0	Thrust Reverser Actuator
305-620-504-0	Thrust Reverser Actuator
305-620-505-0	Thrust Reverser Actuator
305-620-506-0	Thrust Reverser Actuator
305-620-801-0	Thrust Reverser Hydraulic Control Unit
305-620-804-0	Thrust Reverser Hydraulic Control Unit
305-620-805-0	Thrust Reverser Hydraulic Control Unit
305-620-806-0	Thrust Reverser Hydraulic Control Unit
305-620-807-0	Thrust Reverser Hydraulic Control Unit
305-620-808-0	Thrust Reverser Hydraulic Control Unit
305-620-809-0	Thrust Reverser Hydraulic Control Unit
305-620-810-0	Thrust Reverser Hydraulic Control Unit
305-620-811-0	Thrust Reverser Hydraulic Control Unit
305-620-812-0	Thrust Reverser Hydraulic Control Unit
305-621-201-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-202-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-203-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-204-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-205-0	Thrust Reverser Cowl Opening Hydraulic Actuator

305-621-206-0	Thrust Reverser Cowl Opening Hydraulic Actuator
305-621-701-0	Check Valve
305-621-801-0	Thrust Reverser Hydraulic Control Unit
305-621-901-0	Check Valve
305-622-101-0	Thrust Reverser Actuator
305-643-902-0	Thrust Reverser Flexible Shafts
305-644-002-0	Thrust Reverser Flexible Shafts
305-644-602-0	Thrust Reverser Flexible Shafts
3059103-1	Accumulator
30829-100	Outer Hydraulic Block
30973-242	Electrovalve Solenoid
30973-262	Electrovalve Solenoid
31042-150	Rudder Servo Control
31043-130	Pitch Control
31043-150	Pitch Servo Control
31055-130	Servo Control
31055-150	Servo Control
31058-311	Spoiler Jack
31073-052	Elevator Servo Control
31073-053	Elevator Servo Control
31073-054	Elevator Servo Control
31073-055	Elevator Servo Control
31073-057	Elevator Servo Control
31073-058	Elevator Servo Control
31073-060	Elevator Servo Control
31073-063	Elevator Servo Control
31073-064	Elevator Servo Control
31073-065	Elevator Servo Control
31073-067	Elevator Servo Control
31073-068	Aileron Servo Control
31073-068 -110	Servocontrol
31073-080	Aileron Pcu
31073-090	Elevator Servo Control
31073-100	Elevator Servo Control
31073-110	Elevator Servo Control
31075-103	Elevator Servo Control
31075-104	Elevator Servo Control
31075-105	Elevator Servo Control
31075-107	Elevator Servo Control
31075-110	Elevator Servo Control
31075-115	Elevator Servo Control
31075-117	Elevator Servo Control
31075-118	Elevator Servo Control
31075-120	Elevator Servo Control
31075-130	Elevator Servo Control
31075-140	Elevator Servo Control
31075-150	Elevator Servo Control

31075-160	Elevator Servo Control
31075-170	Elevator Servo Control
31075-200	Elevator Servo Control
31075-204	Elevator Servo Control
31075-205	Elevator Servo Control
31075-207	Elevator Servo Control
31075-210	Elevator Servo Control
31075-215	Elevator Servo Control
31075-217	Elevator Servo Control
31075-218	Elevator Servo Control
31075-220	Elevator Servo Control
31075-230	Elevator Servo Control
31075-240	Elevator Servo Control
31075-250	Elevator Servo Control
31075-260	Elevator Servo Control
31075-270	Elevator Servo Control
31075-310	Elevator Servo Control
31075-320	Elevator Servo Control
31075-330	Elevator Servo Control
31075-340	Elevator Servo Control
31075-410	Elevator Servo Control
31075-420	Elevator Servo Control
31075-430	Elevator Servo Control
31075-440	Elevator Servo Control
31075-607	Elevator Servo Control
31075-610	Elevator Servo Control
31075-618	Elevator Servo Control
31075-630	Elevator Servo Control
31075-650	Elevator Servo Control
31075-660	Servocontrol-Elevator
31075-670	Elevator Servo Control
31075-820	Elevator Servo Control
31075-840	Servo Control Elevator
31076-080	Outboard Spoiler Actuator
31076-110	Outboard Spoiler Actuator
31077-050	Inboard Spoiler Actuator
31077-060	Inboard Spoiler Actuator
31077-070	Inboard Spoiler Actuator
31077-100	Spoiler Servo Control - Inboard
31077-100-111	Spoiler Servo Control - Inboard
31077-110	Spoiler Servo Control - Inboard
31077-111	Actuator Pit
31077-112	Inboard Spoiler Actuator
31077-200	Inboard Spoiler Actuator
31077-211	Actuator Assy., Spoiler Ib
310A1041-5	CONE BOLT
310T1036-24	BOLT

310T1036-24	Bolt
310T4021-4	Fitting-Fwd Mount
310T4021-5	Fwd-Engine Mount
310T4031-6	Hanger-Aft Mount
310U4020-5	Aft-Engine, Mount
310U8021-4	Hanger Fitting, Fwd Engine Mount
310U8031-6	Hanger Fitting, Aft Engine Mount
310U8041-7	Thrust Link Assy - Genx-2B
310U8041-8	Thrust Link Assy - Genx-2B
31110-080	Rudder Servocontrol
3-111794	Valve, Drain
3114792-03	Harness Electrical Wiring
3114793-01	Harness Electrical Wiring
3116499-02	Valve,Fuel P
3117095-01	Power Driven Rotary Pump
311U0050-21	BEAM, SPRING
311U0050-21	Beam, Spring
311U0050-23	BEAM ASSY R/
311U0050-23	Beam Assy R/
311U0050-50	BEAM
311U0050-50	Beam
311U0050-52	BEAM
311U0050-52	Beam
312U8332-1	Duct: Assembly,Precooler,Intercon
31330-1	Valve, Elctr
313A2310-7	Rod
314W3114-20	Hinge:
314W3114-23	Hinge:
314W3115-3	Hinge:
314W3115-4	Hinge:
314W3116-3	Hinge:
314W3116-4	Hinge:
314W3117-3	Hinge:
314W3117-4	Hinge:
314W3126-1	Latch:
314W3126-8	Latch:
314W3128-3	Keeper:
314W3129-1	Receptacle: Assembly
314W3129-12	Receptacle: Assembly
314W3134-10	Bracket: Assembly
314W3134-5	Bracket: Stowage
314W3134-8	Bracket: Assembly
314W3142-1	Bracket: Assembly
314W3142-2	Bracket: Assembly
314W3143-1	Bracket: Assembly
315A1036-7	Rack
315A1040-10	Engine Throttle Box

315A1040-11	Engine Throttle Box
315A1040-3	Engine Throttle Box
315A1040-4	Engine Throttle Box
315A1040-5	Engine Throttle Box
315A1040-6	Engine Throttle Box
315A1040-7	Engine Throttle Box
315A1040-8	Engine Throttle Box
315A1040-9	Engine Throttle Box
315A1800-5	Thrust Reverser Locking Actuator
315A1800-6	Thrust Reverser Locking Actuator
315A1800-7	Thrust Reverser Locking Actuator
315A1801-13	Thrust Reverser Locking Actuator
315A1801-14	Thrust Reverser Locking Actuator
315A1801-15	Thrust Reverser Locking Actuator
315A1801-17	Thrust Reverser Locking Actuator
315A1801-18	Thrust Reverser Locking Actuator
315A1801-19	Thrust Reverser Locking Actuator
315A1801-21	Thrust Reverser Locking Actuator
315A1801-22	Thrust Reverser Locking Actuator
315A1801-23	Thrust Reverser Locking Actuator
315A1801-25	Thrust Reverser Locking Actuator
315A1801-26	Thrust Reverser Locking Actuator
315A1801-27	Thrust Reverser Locking Actuator
315A1803-2	Drive Assy
315A1816-2	Piston
315A1816-2	Piston
315A1816-3	Piston
315A1816-3	Piston
315A1819-3	Piston Assy
315A1819-4	Piston Assy
315A1842-2	PISTON
315A1842-2	Piston
315A1842-4	PISTON
315A1842-4	Piston
315A2800-1	Thrust Rever
315A2800-2	Actuator: Non-Lkg,Assembly,Ohc
315A2801-1	Actuator
315A2801-4	Actuator: Lkg,Ohc
315A2801-5	Actuator Assembly - Locking
3160156-2	Body Assy-Valve
3160156-2	Body Assy Valve
3160730-1	Body Assy, Valve
3160730-1	Valvevalve Body A
3160753-	Body
3160753-7	Housing
3160753-7	Housing
3160753-8	Housing

 
3160753-8	Housing
3160785-15	Shutoff Valv
3160828-2	Body
3160828-2	Body Assy Valve
3160908-1	Cover Assy,Actuator
3160908-1	Covalveer
3161656-2	Body
3161656-3	Body
3161656-3	Valvevalvee Body
3161680-1	Shaft
3161683-2	Flapper, Valve, Check
3161683-3	Flapper, Valve, Check
3161684-1	Cover
3161725-2	COVER ASSY V
3161725-2	Covalveer Assy Valve
3163207-16	Valve Body
3163207-23	VALVE BODY
3163207-23	Valvevalvee Body
3164013-1	Pin
3164696-3	Body
3164696-7	Body
3164696-8	Body
3164696-9	Body
3164699-5	Actuator Housing
3165141-17	Body, Valve
3165141-18	Body
3165141-18	Body, Valvevalvee
316565	Valve
3166095-1	Shaft Assy
3166204-3	Shaft
3166207-18	Valve Body
3166207-6	Shaft
3166339-1	Cover
3166340-1	Cover
3166857-5	Valve Body
3167453	PISTON
3168622-3	Actuator Housing
3169743-1	Body Assembly, Valve
3169743-1	Body Assembl
3169756-4	Body Assembly, Valve
3169756-4	Body
3169834-1	Shaft
3169836-2	Body
3169836-2	Body Valvevalvee
3169904-	Valve Body
3169904-2	BODY
3169904-2	Body

3169904-3	Body Assy, Valve
3169904-5	BODY ASSY VA
3169904-5	Body Assy Valve
3169904-9	VALVE BODY
3169904-9	Valvevalvee Body
3169965-2	Valve Body
3169965-3	Valve Body
3169965-3	Body Assy, Valve
3169965-4	Valve Body
3170008-2	Actuator Housing
3170072-1	Shaft
3170120-2	I/B Aileron Power Control
3170120-3	Inb Aileron Power Control Pkg
3170120-4	I/B Aileron Power Control
3170120-6	Inb Aileron Power Control Pkg
3170120-7	I/B Aileron Power Control
3170120-8	Aileron Pcu
3170130	O/B Control Package
3170130-1	O/B Control Package
3170130-2	O/B Control Package
3170130-3	O/B Control Package
3170130-4	O/B Control Package
3170130-5	O/B Control Package
3170130-6	O/B Control Package
3170130-7	O/B Control Package
3170130-8	O/B Control Package
3170152-1	Valve
3170158-5	Shaft
3170276-2	Flow Housing
3170276-2	Flow Housing
3170317-1	Valve Body
3170322-2	Valve Body
3170322-3	Body Assembly, Valve
3170322-4	Valve Body
3170322-4	Body Assy
3170324-1	Actuator Cover
3170325-1	Actuator Cover
3170325-1	Covalveer
3170329-1	Shaft
3170329-2	Shaft
3170329-3	Shaft
3170329-3	Shaft Assy B
3170329-4	Shaft
3170341	PISTON, FORW
3170353-1	Check Valve Body
3170375-4	HOUSING ASSY
3170375-4	Housing Assy

3170425-3	Body Assy, Valve
3170425-3	Body Assy Valve
3170425-6	Body
3170426-2	Shaft Assy Butterfly
3170426-2	Shaft Assy B
3170599-4	Body
3170678-4	Valve Body
3170679-4	Body
3170679-5	Body
3170680-5	Shaft
3170718-2	Check Valve
3170718-2	Valvevalvee Body
3170719-1	Flapper
3170719-1	Flapper
317100-1003	Press Diff Sensor Assembly
317100-1005	Pressure Diff Switch
317100-1007	Pressure Differential Sensor Elevator
3171081-	Valve Body
3171081-1	VALVE BODY
3171081-1	Valvevalvee Body
3171187-5	Valve Body
3171187-5	Valvevalvee Body
3171536-2	Valve, Body
3171536-3	Body Assembly, Valve
3171536-3	Body Assy Valve
3171538-2	Shaft
3171538-2	Shaft
3171540-2	Cover
3171540-2	Actuatorator Covalve
3171594-1	Butterfly Shaft
3171594-2	Butterfly Shaft
3171632-4	Shaft, Butterfly
3171657-2	Valve Body
3171657-3	Valve Body
3171657-3	Body Assy
3171657-4	VALVE BODY
3171657-4	Valvevalvee Body
3171675-1	Shaft
3171675-2	Shaft
3171675-2	Shaft Butterfly
3171786-2	Plate
3171892-3	Body Assy, Valve
3171973-1	Housing
3171973-2	Housing
3171973-2	Housing
3171973-4	Housing
3171973-4	Housing Actuator

3171974-2	Cover Assy, Actuator
3171974-2	Actuatorator Covalve
3172152-2	Body Assembly, Valve
3172152-2	Valvevalvee Body A
3172185-1	Cover, Actuator
3172185-1	Covalveer
3174079-1	Body
3174140-8	Body
3174423-2	COVER ASSY,
3174423-2	Covalveer Assy,
3174607-1	Valve Body
3174628-3	Shaft
3174632-3	Body
3174695-3	BODY
3175533-3	Body
3176314-2	PISTON - VAL
3176314-2	Piston - Valve
3176700-1	Valve
3176715-1	Shaft
3176715-2	Shaft
3176769-4	Actuator Housing
3176769-4	Housing, Act
3176769-5	Actuator Housing
3176770-1	COVER ACTUAT
3176770-1	Covalveer Actuatorat
3176770-2	Cover, Actuator
3176770-2	Covalveer
3176813-1	SHAFT BUTTER
3176813-1	Shaft Butter
3176813-2	Shaft
3176934-1	Body Assembly, Valve
3176993-1	Valve Body
3177208-1	Shaft
3177216-1	Valve Body
3177216-2	Valve Body
3177225-1	Body Assy
3177237-1	Shaft
3177614-1	Housing
3177938-2	Body, Valve
3177938-2	Body Valvevalvee
3178012-1	Flapper
3178149-1	Shaft Butterfly
3178149-1	Shaft
3178357-2	SHAFT
3178357-2	Shaft
3178811-	Valve Body
3178856-1	Hinge Pin

3179401-3	Housing
3179412-2	Piston Assy
3179412-3	Piston Assy
3179533-1	Body Assembly, Valve
3179542-2	BODY
3179542-2	Body
3179546-1	Body Assy
3179546-2	Body Assy
3179642-2	Shaft
3179684-1	VALVE BODY
3179684-1	Valvevalvee Body
3179828-1	Shaft
3179870-1	Body Assembly, Valve,
3180131-1	Accumulator
3180131-2	Accumulator
3180131-3	Accumulator
3180203-1	Leading Edge Actuator Assy - I.B. And O.B.
3180252-2	Piston
3181777-1	Body Assy
3181777-2	Body Assy
3181780-1	Butterfly Shaft
3181991-1	Shaft, Butterfly
3181991-1	Shaft
3181991-2	Shaft
3181991-2	Shaft, Butte
3185800-2	Actuator
3185800-4	Actuator
3185800-5	Ib & Ob Slat Actuating Cylinder
3187007	Conversion
3189690-1	Outboard Slat Actuator
319525-11	Valve Cab Ai
319545-75	Solenoid Assy
3197850-1	Leading Edge Slat Actuator
320 212-201-0	Electrical Harness CJ13
320-083-101-0	Thrust Reverser Wiring Harness
320-113-902-0	Thrust Reverser Wiring Harness
320-198-001-0	Electrical Harness J7
320-198-101-0 -	Electrical Harness J8
320-198-401-0	Electrical Harness J11
320-198-501-0	Electrical Harness J12
320-198-902-0	Electrical Harness CJ11R
320-199-001-0	Electrical Harness CJ12R
320-199-101-0	Electrical Harness CJ13
320-199-201-0	Electrical Harness CJ11L
320-199-401-0	Electrical Harness J10
320-199-501-0	Electrical Harness J9
320-199-601-0	Electrical Harness J13

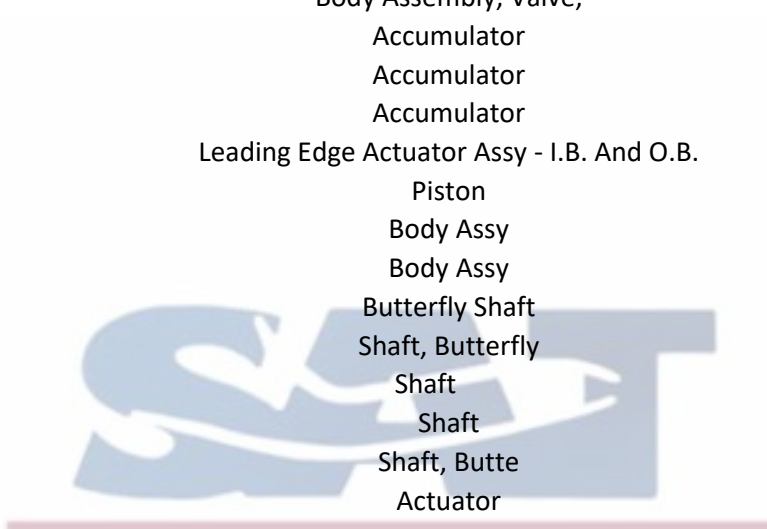


3202096-2	Valve Assy, Cabin Air
320-212-001-0	Electrical Harness J9
320-212-101-0	Electrical Harness J10
320-212-102-0	Electrical Harness J10
320-212-301-0	Electrical Harness J8
3202130-1	Check Valve
3202130-2	Check Valve
3202130-3	Check Valve
320-213-501-0	Electrical Harness CJ11R
320-213-601-0	Electrical Harness CJ12R
320-213-801-0	Electrical Harness J9
320-213-802-0	Electrical Harness J9
3202142-1	Bleed Air Ch
3202142-2	VALVE CHECK CONDITIONED AIR
3202154-	Check Valve
3202154-1	Valve
3202176-1	Thrust Reverser Feedback Mechanism Assembly
3202176-2	Thrust Reverser Feedback Mechanism Assembly
3202176-3	Valve
3202222-1	Valve-Bleed
3202232-1	Valve
3202248-1	Apu/Lp Bleed Check Valve
3202278-1	Check Valve
3202278-2	Actuator
3202278-3	Check Valve
320-228-001-0	Electrical Harness CJ13
320-228-002-0	Electrical Harness CJ13
320-228-801-0	Electrical Harness J11
3202442-2	Check Valve
3202444-1	Check Valve
3202446-1	Valve
320-248-301-0	Electrical Harness J15
3202500-2	Valve
320-253-201-0	Electrical Harness J5
320-253-202-0	Electrical Harness J5
320-253-302-0	Electrical Harness J6
320-253-602-0	Electrical Harness J9
320-253-603-0	Electrical Harness J9
320-253-701-0	Electrical Harness J10
320-253-702-0	Electrical Harness J10
320-254-401-0	Electrical Harness CJ9R
3202544-2	Shutoff Valv
320-254-501-0	Electrical Harness CJ 10R
32-0260-4	Ac Actuator
320-261-301-0	Electrical Harness J15
320-261-701-0	Electrical Harness J7
320-261-702-0	Electrical Harness J7

3202726-1	Valve, Hot Air Check
3202804-1	Ip Check Valve
320-282-901-0	Electrical Harness CJ11L
320-284-701-0	Electrical Harness CJ10L
320-284-801-0	Electrical Harness J7
320-284-802-0	Electrical Harness J7
320-284-901-0	Electrical Harness J8
320-284-902-0	Electrical Harness J8
320-284-903-0	Electrical Harness J8
320-284-904-0	Electrical Harness J8
3202854-1	CHECK VALVE
320-290-101-0	Electrical Harness CJ11R
320-290-102-0	Electrical Harness CJ11R
320-290-201-0	Electrical
320-290-301-0	Electrical Harness CJ12R
320-290-302-0	Electrical Harness CJ12R
320-292-301-0	Electrical Harness CJ9L
320-292-401-0	Electrical Harness CJ10L
320-295-601-0	Electrical Harness J8
320-295-602-0	Electrical Harness J8
320-296-801-0	Electrical Harness J12
320-298-101-0	Electrical Harness DPM
320-298-601-0	Electrical Harness J8
320-298-602-0	Electrical Harness J8
320-298-801-0	Electrical Harness J7
320-298-802-0	Electrical Harness J7
320-323-001-0	Electrical Harness CJ9R
320-323-201-0	Electrical Harness CJ9L
320-323-301-0	Electrical Harness CJ9L
320-323-701-0	Electrical Harness CJ10L
320-323-801-0	Electrical Harness CJ10L
320-323-901-0	Electrical Harness CJ10L
320-346-001-0	Electrical Harness CJ13
320-346-101-0	Electrical Harness CJ13
320-346-201-0	Electrical Harness CJ13
320-346-301-0	Electrical Harness CJ13
320-346-401-0	Electrical Harness CJ13
320-357-001-0	Electrical Harness J15
320358-2	Shutoff Solenoid Valve
320358-4	Shutoff Solenoid Valve
320-359-401-0	Electrical Harness CJ 10R
320-359-501-0	Electrical Harness CJ9L
320362-2-1	Valve Shutoff Sol
320-363-201-0	Electrical Harness CJ9L
320-363-301-0	Electrical Harness CJ10L
320-364-001-0	Electrical Harness J7
320-364-101-0	Electrical Harness J8

320-364-201-0	Electrical Harness J9
320-364-202-0	Electrical Harness J9
320-364-203-0	Electrical Harness J9
320-364-401-0	Electrical Harness 11
320-364-501-0	Electrical Harness J13
320-366-201-0	Electrical Harness J11
320-366-301-0	Electrical Harness J12
320-366-401-0	Electrical Harness J13
320-366-402-0	Electrical Harness J13
320-366-501-0	Electrical Harness CJ11R
320-366-601-0	Electrical Harness CJ12R
320-366-701-0	Electrical Harness CJ13
320-370-301-0	Electrical Harness CJ12R
320-372-601-0	Electrical Harness J10
320-372-602-0	Electrical Harness J10
320-383-202-0	Fan Electrical Harness
320-383-203-0	Fan Electrical Harness
320-383-204-0	Fan Electrical Harness
320-387-101-0	Core Electrical Harness
320-387-102-0	Core Electrical Harness
320-387-201-0	Core Electrical Harness
320-387-202-0	Core Electrical Harness
320-387-301-0	Core Electrical Harness
320-387-302-0	Core Electrical Harness
320-387-401-0	Core Electrical Harness
320-387-402-0	Core Electrical Harness
320-387-501-0	Core Electrical Harness
320-387-502-0	Core Electrical Harness
320-387-503-0	Core Electrical Harness
320-390-701-0	Fan Electrical Harness
320-392-601-0	Electrical Harness J7
320-392-602-0	Electrical Harness J7
320-392-701-0	Electrical Harness J8
320-392-801-0	Electrical Harness J7
320-392-802-0	Electrical Harness J7
320-392-901-0	Electrical Harness J8
320-392-902-0	Electrical Harness J8
320-394-003-0	Fan Electrical Harness
320-394-004-0	Fan Electrical Harness
320-394-103-0	Fan Electrical Harness
320-394-104-0	Fan Electrical Harness
320-394-203-0	Fan Electrical Harness
320-394-204-0	Fan Electrical Harness
320-394-303-0	Fan Electrical Harness
320-394-304-0	Fan Electrical Harness
320-394-403-0	Fan Electrical Harness
320-394-404-0	Fan Electrical Harness

320-394-503-0	Fan Electrical Harness
320-394-504-0	Fan Electrical Harness
320-394-603-0	Fan Electrical Harness
320-394-604-0	Fan Electrical Harness
320-394-703-0	Fan Electrical Harness
320-394-704-0	Fan Electrical Harness
320-394-803-0	Fan Electrical Harness
320-394-804-0	Fan Electrical Harness
320-395-903-0	Fan Electrical Harness
320-396-003-0	Fan Electrical Harness
320-396-004-0	Fan Electrical Harness
320-397-002-0	Core Electrical Harness
320-397-003-0	Core Electrical Harness
320-397-004-0	Core Electrical Harness
320-397-005-0	Core Electrical Harness
320-397-104-0	Core Electrical Harness
320-397-106-0	Core Electrical Harness
320-397-107-0	Core Electrical Harness
320-397-302-0	Core Electrical Harness
320-397-304-0	Core Electrical Harness
320-397-305-0	Core Electrical Harness
320-397-402-0	Core Electrical Harness
320-397-404-0	Core Electrical Harness
320-397-405-0	Core Electrical Harness
320-397-702-0	Core Electrical Harness
320-397-703-0	Core Electrical Harness
320-397-704-0	Core Electrical Harness
320-397-802-0	Core Electrical Harness
320-397-803-0	Core Electrical Harness
320-397-804-0	Core Electrical Harness
320-397-902-0	Core Electrical Harness
320-397-904-0	Core Electrical Harness
320-397-905-0	Core Electrical Harness
320-398-002-0	Core Electrical Harness
320-398-004-0	Core Electrical Harness
320-398-005-0	Core Electrical Harness
320-398-102-0	Core Electrical Harness
320-398-103-0	Core Electrical Harness
320-398-104-0	Core Electrical Harness
320-398-202-0	Core Electrical Harness
320-398-204-0	Core Electrical Harness
320-398-205-0	Core Electrical Harness
320-398-501-0	Electrical Harness CJ10L
320-398-502-0	Electrical Harness CJ10L
320-398-601-0	Electrical Harness CJ9L
320-398-602-0	Electrical Harness CJ9L
320-398-701-0	Electrical Harness CJ11R

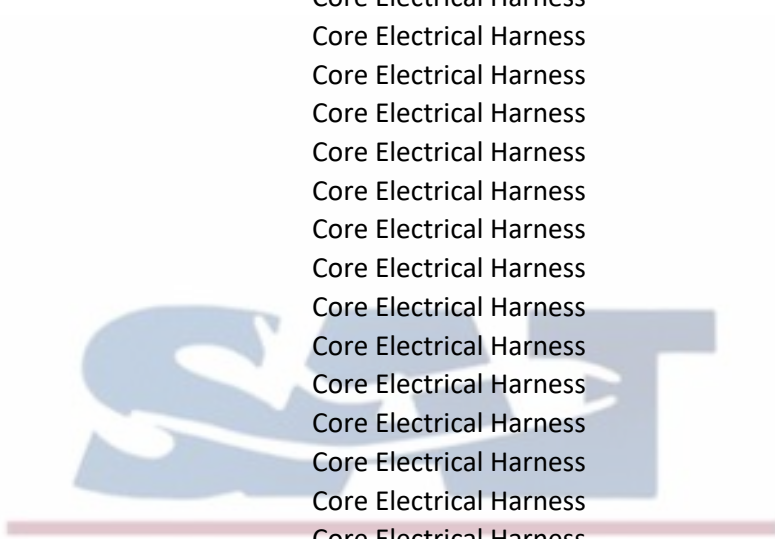 

320-398-801-0	Electrical Harness CJ12R
320-399-001-0	Electrical Harness J7
320-399-101-0	Electrical Harness J8
320-399-201-0	Electrical Harness CJ11R
320-399-301-0	Electrical Harness CJ12R
320-400-101-0	Electrical Harness CJ10L
320-400-301-0	Electrical Harness CJ13
320-401-101-0	Electrical Harness J13
320-401-201-0	Electrical Harness CJ13
320-401-401-0	Electrical Harness J7
320-401-501-0	Electrical Harness J7
320-401-701-0	Electrical Harness CJ12R
320-402-101-0	Electrical Harness CJ11R
320-402-201-0	Electrical Harness CJ12R
320-402-301-0	Electrical Harness CJ11L
320-402-401-0	Electrical Harness CJ12L
320-407-001-0	Electrical Harness J8
320-410-102-0	Core Electrical Harness
320-410-202-0	Core Electrical Harness
320-410-301-0	Core Electrical Harness
320-410-401-0	Core Electrical Harness
320-410-702-0	Electrical Harness CJ9L
320-410-711-0	Electrical Harness CJ9R
320-410-726-0	Electrical Harness CJ10L
320-410-731-0	Electrical Harness CJ 10R
320-413-301-0	Electrical Harness CJ9L
320-413-401-0	Electrical Harness CJ9L
320-413-501-0	Electrical Harness CJ9L
320-413-601-0	Electrical Harness CJ9L
320-413-701-0	Electrical Harness CJ10L
320-413-801-0	Electrical Harness CJ10L
320-413-901-0	Electrical Harness CJ10L
320-414-001-0	Electrical Harness CJ10L
320-414-101-0	Electrical Harness CJ10L
320-414-201-0	Electrical Harness CJ10L
320-414-301-0	Electrical Harness CJ9R
320-414-401-0	Electrical Harness CJ 10R
320482-2	Solenoid Val
3204908-5	Valve
3204958-1	Solenoid Val
320499-5	Solenoid Val
320501-10	Solenoid Valve Assembly
320501-12	Solenoid Valve Assembly
320501-13	Solenoid Valve Assembly
320501-2	Solenoid Valve Assembly
320501-3	Solenoid Valve Assembly
320501-4	Solenoid Valve Assembly

320501-5	Solenoid Valve Assembly
320501-6	Valve
320501-7	Solenoid Valve Assembly
320501-9	Solenoid Valve Assembly
320503-12	Solenoid Valve Assy
320522-7	Dpv Valve
320548-2	Valve, Solenoid
320625-7	Valve - Pressure Relief
320717	SHAFT
320-802-401-0	N2 Speed Sensor
320-802-402-0	N2 Speed Sensor
320-802-403-0	N2 Speed Sensor
320-802-602-0	N1 Speed Sensor
320-802-603-0	N1 Speed Sensor
320-802-605-0	N1 Speed Sensor
320-802-606-0	N1 Speed Sensor
320995-4	Valve: Air Shutoff
321000M03	Unit: Transducer,Side Stick
3213754-1	Pressure Regulating Valve
3213754-2	Pressure Regulating Valve
3213868-3	Shutoff Regulator Valve
3213868-4	Shutoff Regulator Valve
321-400-503-0	DOOR SWITCH
321-400-603-0	SWITCH DEPLO
321-400-604-0	DEPLOY DOOR
321-400-705-0	Actuator Door Opening Hyd
321-400-705-5	Actuator Assy., T/R Door Opening
321-403-002-0	PIPE
3214230-2	Anti-Ice Val
3214230-3	Anti-Ice Val
3214230-4	Anti-Ice Val
3214236-2	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-3	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-4	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-5	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-6	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-7	Two and One-Half Inch Diameter Regulator and Shutoff Valve
3214236-8	Regulator Shut-Off Valve
3214304-	Valve
3214304-2	Valve Modulating
3214304-3	Valve
3214304-4	Valve Assy-High Stag
3214306-1	Pressure Regulator And Shutoff Valve
3214306-4	Pressure Regulator And Shutoff Valve
3214306-5	Pressure Regulator And Shutoff Valve
3214306-6	Pressure Regulator And Shutoff Valve
3214306-7	Pressure Regulator And Shutoff Valve

3214306-8	Pressure Regulator And Shutoff Valve
3214306-9	Press Reg S/O Valve
3214330-	Valve
3214330-4	Regulating And Shutoff Valve
3214330-5	VALVE ASSY
3214330-6	Regulating And Shutoff Valve
3214334-1	PRESSURE REGULATING VALVE ASSY
3214334-3	Valve, Pressure Regulator
3214334-3	Valve
3214442-4	VALVE SHUTOF
3214446-1	High Stage Valve
3214446-2	Valve-High Stage
3214446-3	Valve-High Stage
3214446-4	Valve High Stage
3214488-2	Valve
3214488-5	Valve Dual Purpose
3214488-6	Valve
3214488-7	Valve, Dual Purpose
3214552-1	Pressure Regulator And Shutoff Valve
3214552-2	Pressure Regulator And Shutoff Valve
3214552-3	Pressure Regulator And Shutoff Valve
3214552-4	Valve, Pressure
3214552-5	Valve, Pressure
3214552-6	Valve: Shutoff,Svc
3214862-1	Anti-Ice Val
3214888-1	Pressure Regulating Valve
3214888-2	Pressure Regulator
3214960-2	Anti-Ice Val
3214960-3	Anti-Ice Val
3214962-1	Anti-Ice Val
3214972-1	Anti-Ice Val
3215302-4	Valve Pressure Relief,Shutoff
3215302-5	Valve, Hpsov/Prsov
3215358-2	Starter Control Valve
3215394-3	Valve
3215394-4	Valve
3215394-5	Modulating & Shutoff Valve Assembly
3215394-6	Modulating & Shutoff Valve Assembly
3215394-7	Modulating & Shutoff Valve Assembly
3215394-8	Modulating & Shutoff Valve Assembly
3215395-3	Valve
3215395-4	Valve
3215395-5	Valve
3215395-6	Valve
3215395-7	Valve
3215395-8	Valve
3215618-2	Nose Cowl Thermal Anti-Ice Valve

3215618-3	Nose Cowl Thermal Anti-Ice Valve
3215618-4	Nose Cowl Thermal Anti-Ice Valve
3215618-5	Nose Cowl Thermal Anti-Ice Valve
3215622-2	Air Shutoff
3215790-3	Nacelle Anti-Ice Valve
3215886-1	Pressurize Regulating Valve
3215886-2	Pressurize Regulating Valve
3215922-3	Shut Off Valve, Ngs
321674-3-1	Electric Shutoff Butterfly Valve
321674-4-1	Electric Shutoff Butterfly Valve
3216868-4	Shutoff Regulator Valve
3217KGB01	N1 Speed Sensor
321812-2-1	Valve, Shuto
321942-1-1	Valve
3224700-2	Ground Air Supply T/R Valve
3224892-1	Valve
32-2684-003	Motor Operated Air Shutoff Valve
32-2684-004	Motor Operated Air Shutoff Valve
32-2684-007	Motor Operated Air Shutoff Valve
32-3110-004	Cowl Anti-Ice Valve
32-3110-005	Cowl Anti-Ice Valve
32-3110-006	Cowl Anti-Ice Valve
3231756-3	Housing, Gear Drive
3232138-6	Valve Assy - Plate
3236211-1	Valve Assy - Plate
3236211-2	Valve Assy - Plate
3236211-series	Valve Assy - Plate
3237920-1	Valve Assy - Plate
3238052-1	Valve Assy - Plate
3238052-2	Valve Plate
3238052-2	Valvevalvee Assy
3238052-3	Valve Assy - Plate
3238052-4	Valve Assy - Plate
3238052-5	Valve Assy - Plate
3238052-series	Valve Assy - Plate
3238736-2	Electric Brake
3238911-1	Ball Screw Assembly
3238911-2	Ball Screw Assembly
3239794-4	Linear Hydraulic Actuator
324195-1	Eng Anti-Ice Valve
3244871-1	Fuel Control
3244871-2	Fuel Control
3244871-3	Fuel Control
3244871-4	Fuel Control
3244871-5	Fuel Control
3244871-6	Fuel Control
3244871-7	Fuel Control

324495	Valve Air Bleed Starting
324685-1	Turbine Clearance Control Valve
324685-2	Turbine Clearance Control Valve
324685-2A	Turbine Clearance Control Valve
324685-4	Turbine Clearance Control Valve
324685-5	Turbine Clearance Control Valve
324705-1	Valve-Shutoff
325-014-802-0	Electrical Harness CJ11L
325-014-901-0	Electrical Harness CJ12L
325-015-001-0	Fire Detection Harness,
325-025-201-0	Engine Harness J9, J10
325-025-202-0	Engine Harness J9, J10
325-025-301-0	Engine Harness J9, J10
325-025-302-0	Engine Harness J9, J10
325-025-401-0	Engine Harness CJ9, CJ10
325-025-402-0	Engine Harness CJ9, CJ10
325-025-701-0	Engine Harness J5, J6 J7, J8
325-025-702-0	Engine Harness J5, J6 J7, J8
325-025-801-0	Engine Harness J5, J6 J7, J8
325-025-802-0	Engine Harness J5, J6 J7, J8
325-025-803-0	Engine Harness J5, J6 J7, J8
325-025-804-0	Engine Harness J5, J6 J7, J8
325-026-001-0	Engine Harness J5, J6 J7, J8
325-026-101-0	Engine Harness J5, J6 J7, J8
325-026-401-0	Fire Detection Harness,
325-026-501-0	Fire Detection Harness,
325-026-701-0	Fire Detection Harness,
325-026-801-0	Fire Detection Harness,
325-026-901-0	Fire Detection Harness,
325-026-902-0	Fire Detection Harness,
325-027-302-0	Fire Detection Harness,
325-027-303-0	Fire Detection Harness,
325-027-402-0	Fire Detection Harness,
325-027-403-0	Fire Detection Harness,
325-027-404-0	Fire Detection Harness,
325-027-503-0	Fire Detection Harness,
325-027-504-0	Fire Detection Harness,
325-027-505-0	Fire Detection Harness,
325-027-506-0	Fire Detection Harness,
325-027-603-0	Fire Detection Harness,
325-027-604-0	Fire Detection Harness,
325-027-605-0	Fire Detection Harness,
325-027-606-0	Fire Detection Harness,
325-027-701-0	Engine Harness CJ9, CJ10
325-027-702-0	Engine Harness CJ9, CJ10
325-029-901-0	Fire Detection Harness,
325-029-902-0	Fire Detection Harness,

325-029-903-0	Fire Detection Harness,
325-029-904-0	Fire Detection Harness,
325-029-905-0	Fire Detection Harness,
325-029-906-0	Fire Detection Harness,
325-029-907-0	Fire Detection Harness,
325-029-908-0	Fire Detection Harness,
325-034-801-0	Engine Harness J9, J10
325-034-802-0	Engine Harness J9, J10
325-034-803-0	Engine Harness J9, J10
325-034-804-0	Engine Harness J9, J10
325-034-805-0	Engine Harness J9, J10
325-034-806-0	Engine Harness J9, J10
325-034-901-0	Engine Harness J5, J6 J7, J8
325-034-902-0	Engine Harness J5, J6 J7, J8
325-035-001-0	Engine Harness J5, J6 J7, J8
325-035-002-0	Engine Harness J5, J6 J7, J8
325-035-003-0	Engine Harness J5, J6 J7, J8
325-035-201-0	Fire Detection Harness,
325-035-501-0	Fire Detection Harness,
325-035-502-0	Fire Detection Harness,
325-035-503-0	Fire Detection Harness,
325-042-001-0	Fire Detection Harness,
325-042-502-0	Engine Harness J5, J6 J7, J8
325-042-503-0	Engine Harness J5, J6 J7, J8
325-042-601-0	Engine Harness J5, J6 J7, J8
325-042-602-0	Engine Harness J5, J6 J7, J8
325-042-701-0	Engine Harness J5, J6 J7, J8
325-042-801-0	Engine Harness J5, J6 J7, J8
325-042-902-0	Fire Detection Harness,
325-043-400-0	Engine Harness J9, J10
325-043-401-0	Engine Harness J9, J10
325-043-402-0	Engine Harness J9, J10
325-043-403-0	Engine Harness J9, J10
325-043-500-0	Engine Harness J9, J10
325-043-501-0	Engine Harness J9, J10
325-043-502-0	Engine Harness J9, J10
325-043-503-0	Engine Harness J9, J10
325-043-504-0	Engine Harness J9, J10
325-043-505-0	Engine Harness J9, J10
325-045-201-0	Engine Harness CJ9, CJ10
325-045-202-0	Engine Harness CJ9, CJ10
325-045-301-0	Fire Detection Harness,
325-045-401-0	Fire Detection Harness,
325-045-501-0	Engine Harness CJ9, CJ10
325-045-502-0	Engine Harness CJ9, CJ10
3250514-3	Pneumatic Drive Unit
325-100-702-0	Engine Harness J5, J6 J7, J8

325-100-703-0	Engine Harness J5, J6 J7, J8
325-100-802-0	Engine Harness J5, J6 J7, J8
325-100-803-0	Engine Harness J5, J6 J7, J8
325-101-101-0	Engine Harness J5, J6 J7, J8
325-101-102-0	Engine Harness J5, J6 J7, J8
325-101-201-0	Engine Harness J5, J6 J7, J8
325-101-202-0	Engine Harness J5, J6 J7, J8
325-101-203-0	Engine Harness J5, J6 J7, J8
325-101-301-0	Engine Harness J9, J10
325-101-401-0	Engine Harness J9, J10
325-101-402-0	Engine Harness J9, J10
325-102-001-0	Engine Harness CJ9, CJ10
325-102-502-0	Fire Detection Harness,
325-102-503-0	Fire Detection Harness,
325-102-504-0	Fire Detection Harness,
325-102-505-0	Fire Detection Harness,
325365-4	Nacelle Cooling Valve
325365-5	Nacelle Cooling Valve
325855-1	Nacelle Cooling Valve (Douglas Aircraft Installation)
325855-2	Nacelle Cooling Valve (Douglas Aircraft Installation)
325855-3	Nacelle Cooling Valve (Douglas Aircraft Installation)
326215-1	On/Off Anti-Ice Valve
326215-2	On/Off Anti-Ice Valve
326215-3	On/Off Anti-Ice Valve
326215-4	On/Off Anti-Ice Valve
3264-100	Solenoid Timer Valve
326625-1	Racc Valve
326625-2	Racc Valve
326625-3	Racc Valve
326635-1	High Pres. Turbine Clearance Cont. Valve
326635-2	High Pres. Turbine Clearance Cont. Valve
326635-3	Valve Assy., Hptcc
326635-4	High Pres. Turbine Clearance Cont. Valve
3268792-1	Air Turbine Driven Pump System
3268792-10	Turbine Pump
3268792-2	Air Turbine Driven Pump System
3268792-3	Air Turbine Driven Pump System
3268792-4	Air Turbine Driven Pump System
3268792-5	Air Turbine Driven Pump System
3268792-6	Air Turbine Driven Pump System
3268792-7	Air Turbine Driven Pump System
3268792-8	Air Turbine Driven Pump System
3268792-9	Air Turbine Driven Pump System
3269086-39	Actuator
3269086-40	Actuator
3269086-41	Actuator
3269086-42	Actuator

3269264-10	Actuator, Ba
3269264-20	Thrust Reverser Centre Drive & Feedback
3269264-22	Thrust Reverser Centre Drive & Feedback
3269264-27	Actuator-F/R
3269264-28	Actr Fdbk Subsys
3269264-7	L/H Assy. Actuator
326975	Valve:
3270514-1	Pneumatic Drive Unit
3270514-2	Pneumatic Drive Unit
327155-1	On/Off Anti-Ice Valve
327155-2	On/Off Anti-Ice Valve
327155-3	On/Off Anti-Ice Valve
3272558-2	Slave Ballscrew Actuator
3272560-2	Master Ballscrew Actuator
3272560-3	Master Ballscrew Actuator
3272560-4	Master Ballscrew Actuator
3272560-5	Master Ballscrew Actuator
3272564-1	Synchronizing Shaft Lock
3272602-	Ballscrew
3272602-1	Ballscrew Gearbox Assembly
3272602-2	Actuator
3272602-3	Ballscrew And Gearbox Assembly
3272602-4	Ballscrew
3272604-2	Gearbox Actuator Assy
3272636-1	Locking Actuator Gearbox
3272636-2	Locking Actuator Gearbox
3272638-1	Locking Actuator Gearbox
327400-1009	Actuator Power Control Unit Inbd Elev
327400-9009	Inboard Elevator Pca
3275538-	Ballscrew
3275538-2	Act. Ballscrew And Gearbox Ay
3275538-3	Act. Ballscrew And Gearbox Ay
3275548-1	Locking Actuator Assy
3275548-2	Locking Actuator Assy
3282556-1	Bleed Valve Stop Mechanism
3282556-1 Series 2	Stop Mechanism
3282556-1 Series 3	Stop Mechanism
3282556-11	Stop Mechanism Sb 75-0049
328-2556-11	Bleed Valve Fuel Gear Motor
3282556-2	Bleed Valve Stop Mechanism
3282556-21	Stop Mechanism Sb 75-0049
328-2556-21	Bleed Valve Fuel Gear Motor
3282556-series	Stop Mechanism
3282756-1	Throttle Feedback Balk Mechanism
3282756-2	Throttle Feedback Balk Mechanism
3282812-4	Lock-T/R Act
3282886-2	Gearbox, Throttle Feedback

3282936-1	Throttle Feedback Gearbox
3282936-2	Throttle Feedback Gearbox
3282936-3	Throttle Feedback Gearbox
3282936-4	Throttle Feedback Gearbox
3282948-3	Thrust Reverser Feedback Mechanism Assembly
3282948-4	Thrust Reverser Feedback Mechanism Assembly
3282948-5	Thrust Reverser Feedback Mechanism Assembly
3282948-6	Thrust Reverser Feedback Mechanism Assembly
3282970-2	Stop Mechanism
3282970-3	Stop Mechanism
3282970-4	Stop
3282970-5	Stop Mechanism
3282982-1	V2500 C-Duct Linear Hydraulic Actuator
3282982-2	V2500 C-Duct Linear Hydraulic Actuator
3282982-3	Actuator, Linear
3282984-1	Manifold - V2500 C - Duct
3282984-2	Manifold - V2500 C - Duct
3283076-2	Apu Starter Valve
3283076-3	Apu Starter Valve
3283076-4	Apu Starter Valve
3283076-5	Apu Starter Valve
3283086-1	Lock Brake
3283086-3	Valve-Fan Ai
3283086-30	Lock Brake
3283086-32	Lock Brake
3283096-2	Starter Control Valve Manual Release
3283096-3	Starter Control Valve Manual Release
3283124-1	Valve Precoo
3283124-2	Valve
3283124-3	Trans Lock Assy
3283124-4	Trans Lock Assy
3283124-6	Valve Precoo
3283142-5	Linear Hydraulic Actuator
3289562-1	Precooler Valve
3289562-2	Precooler Valve
3289562-3	Precooler Valve
3289562-4	Precooler Valve
3289562-5	Precooler Valve
3289562-6	Valve
3289562-7	Valve-Precooler
3289590-2	Valve
3289590-3	Valve-Engine
3289626-5	Fan Air Modulating Valve
3289628-5	Valve Modulating Cooling Air Precooler
3289630-1	Starter Control Valve
3289630-2	Starter Control Valve
3289630-3	Starter Control Valve

3289630-4	Three Inch Diameter Starter Control Valve
3289630-5	Start Valve
3289696-1	Valve: Control,Low Limit
3289834-4	Valve Assy, Anti Icfe
3290050-1	Surge Control Valve
3290050-2	Apu Surge Control Valve
3290050-3	Surge Control Valve
3290050-4	Surge Control Valve
3290052-1	Shutoff Valve
3290052-2	Shutoff Valve
3290052-3	Apu Load Control Valve
3290054-1-1	Butterfly Valve
3290064-10	Start Valve
3290064-11	Starter Valve Assembly
3290064-13	Starter Valve Assembly
3290064-14	Starter Valve Assembly
3290064-15	Starter Valve Assembly
3290064-16	Starter Valve Assembly
3290064-17	Starter Valve Assembly
3290064-18	Starter Valve Assembly
3290064-19	Starter Valve Assembly
3290064-20	Starter Valve Assembly
3290064-30	Starter Valve Assembly
3290104-1	Valve
3290206-1	Valve, Control,
3290206-2	Pack Temp Control Valve
3290272-3	High Stage Valve
3290272-6	Valve, Control Hp
3290274-1	Valve
3290278-1	Anti-Ice Valve
3290280-3	Valve,Reg,Pneu.
3290280-4	Regulator Valve
3290290-1-1	Butterfly Shutoff Valve
3290376-2	Valve, Ovrprsr
3290406-2	Surge Control Valve
3290432-2-1	High Stage Bleed Air Valve
3290432-2-2	High Stage Bleed Air Valve
3290432-2-3	High Stage Bleed Air Valve
3290476-3	Surge Control Valve
3290476-4	Surge Control Valve
3290476-5	Surge Control Valve
3290488-3	Anti-Ice Valve
3290488-5	Anti-Ice Valve
3290628-2	Air Supply Valve
3290628-3	Air Supply Valve
3290662-1	Nose Cowl Thermal Anti-Ice Valve
3290662-2	Nose Cowl Thermal Anti-Ice Valve

3290718-1	Overpressure Valve
3290736-1	Dual Purpose Valve
3290744-10	Fan Air Modulating Valve
3290744-11	Valve: Modulating, Fan Air
3290744-3	Fan Air Modulating Valve
3290744-4	Fan Air Modulating Valve
3290744-5	Fan Air Modulating Valve
3290744-6	Fan Air Modulating Valve
3290744-7	Fan Air Modulating Valve
3290744-8	Fan Air Modulating Valve
3290744-9	Fan Air Modulating Valve
3290756-2	Pressure Regulator Valve
3290770-3	Isolation Valve
3290770-4	Isolation Valve
3290770-5	Isolation Valve
3290770-6	Valve
3290814-2	Surge Control Valve
3290814-3	Surge Control Valve
3290814-4	Surge Control Valve
3290814-5	Surge Control Valve
3290814-6	Surge Control Valve
3290888-1	Valve
3290888-2	Valve
3290888-3	Valve
3290976-2	Air Turbine Valve Assembly
3290976-4	Air Turbine Valve Assembly
3291046-2	Control Valve
3291048-1	Regulator Valve
3291172-1	Surge Contro
3291172-2	Surge Contro
3291172-3	Surge Contro
3291184-1	Valve: Bleed, Ohc
3291184-2	Transient Bleed Valve
3291186-5	Transient Bl
3291186-6	Transient Bl
3291186-7	Valve
3291186-X	Valve Turbine Clearance Control
3291192-1	Nacelle Cooling Valve
3291192-2	Nacelle Cooling Valve
3291192-3	Nacelle Cooling Valve
3291192-4	Nacelle Cooling Valve
3291210-1	Load Control Valve
3291210-2	Load Control Valve
3291210-3	Load Control Valve
3291210-4	Load Control Valve
3291210-5	Load Control Valve
3291210-6	Load Control Valve

3291210-7	Load Control Valve
3291214-2	3.5" Dia Apu Bleed Air Valve
3291238-1	Surge Control Valve
3291238-2	Valve, Control, Surge
3291339-2	Starter Control Valve
3291339-3	Starter Control Valve
3291390-1	Transient Bleed Valve
3291390-2	Transient Bleed Valve
3291390-3	Transient Bleed Valve
3291390-4	Transient Bleed Valve
3291432-1	Load Control Valve
3291432-2	Load Control Valve
3291522-1	Starter Shutoff Valve
3291522-2	Valve, Shutoff
3291552-2	Start Operability Bleed Valve
3291556-1	Starter Control Valve
3291556-2	Starter Control Valve
3291556-3	Starter Control Valve
3291675-1	Starter Valve
3291675-2	Starter Valve
3291676-2	Starter Valve
3291677-1	Starter Valve
3291677-2	Starter Valve
3291680-2	Transient Bleed Air Valve
3291680-3	Transient Bleed Air Valve
3291680-4	Transient Bleed Air Valve
3291682-5	High Pressure Turbine Clearance Valve
3291682-6	High Pressure Turbine Clearance Valve
3291682-7	High Pressure Turbine Clearance Valve
3291708-1	Nose Cowl Anti-Ice Valve
3291766-1	Ngs Shutoff Valve
3291766-2	Ngs Shutoff Valve
3291798-2	Nose Cowl Anti-Ice Valve
3291824-2	Ngs Temperature Control Valve - 3.0 Inch
3291828-1	Ngs Ram Air Valve
329695-3	High Pressure Turbine Clearance Valve
329695-4	High Pressure Turbine Clearance Valve
329695-5	Shaft
329695-6	High Pressure Turbine Clearance Valve
329695-7	High Pressure Turbine Clearance Valve
329695-8	High Pressure Turbine Clearance Valve
329705-1	Rotor Active Clearance Valve
329715-2	Valve: Shutoff,Cargo
32C173	Valve: Check
32C205	Valve
32C253	Valve:
32F0003	Valve Oil

330-005-702-0	N1 Speed Sensor
330-005-703-0	N1 Speed Sensor
330-009-201-0	Oil Pressure Sensor
330400-1 M00	Throttle Control Unit
330400M01	Throttle Control Unit
330471-2	Body
33-065-1	Valve Anti Skid
33-065-2	Valve Module Assembly, Antiskid, 4-Valve
33-067-1	Alternative Antiskid Valve
33-067-2	Valve Module Assembly, Antiskid, 2-Valve
3311586	Accumulator
3311586-1	Accumulator
3311586A	Accumulator
33135-3	Manometer
3320500-1	Spoiler Power Cont Package
3320500-2	I/B Spoiler Pwr Ctrl
3320500-3	Package-Flt Spoiler
3320550-1	Spoiler Power Cont Package
3320550-2	Otbd Pcu
3320550-3	Otbd Pcu
3320550-4	Package Assy-Flt Spoil Hyd Pwr
3320550-5	Spoiler Power Cont
3320550-6	Actuator Spoiler
3320600-1	Spoiler Power Control Package
3320600-2	Power Control Package
3320731-3	Ground Spoiler Actuator
3320740-10	I/B Spoiler Pwr Ctrl
3320740-11	I/B Spoiler Pwr Ctrl
3320740-12	I/B Spoiler Pwr Ctrl
3320740-6	I/B Spoiler Pwr Ctrl
3320740-60	I/B Spoiler Pwr Ctrl
3320740-7	I/B Spoiler Pwr Ctrl
3320740-8	I/B Spoiler Pwr Ctrl
3320740-8A	I/B Spoiler Pwr Ctrl
3320740-8B	I/B Spoiler Pwr Ctrl
3320740-9	I/B Spoiler Pwr Ctrl
3321480-10A	Actuator Assy
3321480-12A	Spoiler Power Control
3321480-14	Spoiler Power Control Act
3321480-16	Inb Flight Spoiler Pcu
3321480-6A	Flight Spoiler Pcu
3321480-7A	Inb Flight Spoiler Pcu
3321480-8A	Spoiler Actuator
3321500-10	Power Control Unit
3321500-10A	Power Control Unit
3321500-11	Flight Spoiler Pcu
3321500-11A	Flight Spoiler Pcu

3321500-12	Flight Spoiler Pcu
3321500-12A	Power Control Unit
3321500-13	Flight Spoiler Pcu
3321500-14	Power Control Unit
3321500-15	Spoiler Power Actuator
3321500-16	Spoiler Actuator
3321500-3	Non Locking Actuator
3321500-6A	Actuator Spoiler
3321500-7A	Spoiler Actuator
3321500-8	Power Control Unit
3321500-8A	Power Control Unit
3321500-9	Power Control Unit
3321500-9A	Actuator Spoiler
3321520-10	Rudder Pcu
3321520-5	Rudder Pcu
3321520-6	Power Control
3321520-7	Power Control
3321520-8	Rudder Pcu
3321530-10	Elevator Actuator
3321530-11	Pcu,Elevator
3321530-12	Pcu,Elevator
3321530-8	Power Control Unit
3321530-9	Power Control
3321944	PISTON
3321990-2	Valve Assy, Pressure Reducing
332700-1003	Upper Rudder Control Valve Assy
332700-1005	Upper Rudder Control Valve Assy
332700-1007	Upper Rudder Control Valve Assy
332700-1009	Upper Rudder Control Valve Assy
332700-1011	Upper Rudder Control Valve Assy
332700-9003	Upper Rudder Control Valve Assy
332700-9005	Upper Rudder Control Valve Assy
332700-9007	Upper Rudder Control Valve Assy
333200-1009	Lower Rudder Control
3337458-59	Otbd Aileron Servo Control
3338660-4	Valve, Pressure Reducer
33-524023-67	Actuator
33-524023-73	Actuator
335-261-001-0	Lubrication Unit
335-261-002-0	Lubrication Unit
335-261-003-0	Lubrication Unit
335-261-004-0	Lubrication Unit
335-261-005-0	LUBRICATION
335-261-202-0	Oil Tank
335-261-203-0	Oil Tank
336-010-003-0	Lubrication Unit
336-010-004-0	Lubrication Unit

336-010-005-0	Lubrication Unit
3362-3	Dump/Thermal Relief Valve
337-039-501-0	Oil Tank
337-075-103-0	Lubrication Unit
337-075-104-0	Lubrication Unit
337-075-105-0	Lubrication Unit
338-013-801-0	Oil Tank
338100-5005	Outboard Aileron Actuator
338100-5007	Outboard Aileron Actuator
338100-5009	Outboard Aileron Actuator
338100-5011	Outboard Aileron Actuator
3399004-1	14Th Stage Pilot Control
3399004-2	14Th Stage Pilot Control
3399004-3	14Th Stage Pilot Control
3399004-5	14Th Stage Pilot Control
3399004-6	14Th Stage Pilot Control
3399004-7	14Th Stage Pilot Control
3399004-9	14Th Stage Pilot Control
3399046-1	High Stage Pilto Valve
3399046-2	Pilot Valve
3399048-3	Pressure Valve
3399100-20	Contrllr
3399100-31	Controller, High Pressure
3399102-	Pressure Regulator
3399102-30	Controller
3399102-40	Prsov
3399150-1	Switcher Valve
3399150-2	Switcher Valve
340015-1	Valve: Assembly
340-400-004-0	Lube Pump
340-400-005-0	Lube Pump
340-402-003-0	Lptacc Valve
340-402-004-0	Lptacc Valve
340-402-005-0	Lptacc Valve
340-402-006-0	Lptacc Valve
340-402-101-0	Fuel Pump
340-402-102-0	Fuel Pump
340-402-103-0	Fuel Pump
340-402-104-0	Fuel Pump
340-402-105-0	Fuel Pump
340-402-106-0	Fuel Pump
340-402-107-0	Fuel Pump
340-402-108-0	Fuel Pump
340-402-402-0	T5 Temperature Sensor
340-402-403-0	T5 Temperature Sensor
340-402-503-0	T495 Wiring Harness
340-402-504-0	T495 Wiring Harness

340-402-505-0	T495 Wiring Harness
340-402-602-0	Actuator. V. B. V.
340-402-603-0	Actuator. V. B. V.
340-402-604-0	Actuator. V. B. V.
340-402-653-0	Actuator. V. B. V.
340-402-701-0	Fuel Differential Pressure Switch
340-402-704-0	Fuel Differential Pressure Switch
340-402-706-0	Fuel Differential Pressure Switch
340-402-902-0	Oil Pressure Sensor
340-403-101-0	Idg Oil Cooler
340-403-102-0	Idg Oil Cooler
340-403-802-0	Oil Tank
340-406-801-0	Fire Detection Harness,
340-406-802-0	Fire Detection Harness,
340-406-811-0	Fire Detection Harness,
340-406-901-0	Fire Detection Harness,
340-406-902-0	Fire Detection Harness,
340-406-911-0	Fire Detection Harness,
340-408-001 -0	Fuel Filter Clogging Indicator
340-408-002-0	Fuel Filter Clogging Indicator
340545	Valve
340861-100	EYE END ROD
341203-500	Rod End: Equipped
341525	Valve
341525-1	Motor Actuated Rotary Shutoff Valve
341595-1	Shut Off Valve
341D010000	Solenoid Thermostat
341E010000	Solenoid Thermostat
341E020000	Solenoid Thermostat
341E030000	Solenoid Thermostat
341E030000 AMDT A	Solenoid Thermostat
341F010000	Solenoid Thermostat
342300M01	Transducer:
342381	Pump
3500063-1	Shaft
3500433-5	Turbine Wheel
350-050-005-0	Lubrication Unit
350-050-006-0	Lubrication Unit
3500693-1	Carrier Assembly, (Pull)
350-106-403-0	Static Anti-Leak Valve
350-123-216-0	Lube Oil Tank
350-123-217-0	Lube Oil Tank
350-123-218-0	Lube Oil Tank
350-123-268-0	Lube Oil Tank
3501743-1	Housing
3501751-7	Housing Assembly, Inlet
3501758-1	Hub

3502094-2	T Wheel
3502096-7	Inlet/Exhaust Housing Assy
3502104-14	Stator Assy
3502104-4	Stator Assy
3502144-4	Wheel
350-328-005-0	Lubrication Unit
350-328-006-0	Lubrication Unit
350-328-007-0	Lubrication Unit
350-328-008-0	Lubrication Unit
350-328-009-0	Lubrication Unit
3503754-1	Housing
3503986-3	Housing
3504420-1	T Wheel
3504528-1	Housing`
3504746-1	Gear Carrier
3504827-3	Housing
3504974-3	Carrier Assy Gear
3504974-3	Carrier Asse
3505188-11	Air Turbine Engine Starter
3505188-7-1	Air Turbine Engine Starter
3505188-7-2	Air Turbine Engine Starter
3505188-7-3	Air Turbine Engine Starter
3505188-7-4	Air Turbine Engine Starter
3505188-9	Air Turbine Engine Starter
3505436-2-1	Air Turbine Engine Starter
3505436-4-1	Air Turbine Engine Starter
3505436-5-1	Air Turbine Engine Starter
3505436-6-1	Air Turbine Engine Starter
3505436-7	Air Turbine Engine Starter
3505448-3-1	Air Turbine Engine Starter
3505448-5-1	Air Turbine Engine Starter
3505526-1-1	Air Turbine Engine Starter
3505526-3-1	Air Turbine Engine Starter
3505526-4-1	Air Turbine Engine Starter
3505526-5-1	Air Turbine Engine Starter
3505526-6-1	Air Turbine Engine Starter
3505526-7-1	Air Turbine Engine Starter
3505526-8-1	Air Turbine Engine Starter
3505526-9-1	Air Turbine Engine Starter
3505582-1	Air Engine Turbine Starter
3505582-12	Air Engine Turbine Starter
3505582-14	Air Engine Turbine Starter
3505582-15	Air Engine Turbine Starter
3505582-2	Air Engine Turbine Starter
3505582-22	Air Engine Turbine Starter
3505582-23	Air Engine Turbine Starter
3505582-24	Air Engine Turbine Starter

3505582-25	Air Engine Turbine Starter
3505582-26	Air Engine Turbine Starter
3505582-27	Starter Outline Eng
3505582-28	Air Turbine Starter
3505582-3	Air Engine Turbine Starter
3505582-4	Air Engine Turbine Starter
3505582-40	Air Engine Turbine Starter
3505582-41	Air Engine Turbine Starter
3505582-42	Air Engine Turbine Starter
3505582-43	Air Engine Turbine Starter
3505582-44	Air Engine Turbine Starter
3505582-45	Air Engine Turbine Starter
3505582-60	Air Engine Turbine Starter
3505582-61	Air Engine Turbine Starter
3505582-62	Air Engine Turbine Starter
3505582-63	Air Engine Turbine Starter
3505582-64	Air Engine Turbine Starter
3505582-65	Air Engine Turbine Starter
3505716-3	Air Engine Turbine Starter
3505716-4	Air Engine Turbine Starter
3505716-5	Air Engine Turbine Starter
3505716-6	Air Engine Turbine Starter
3505786-1	Air Engine Turbine Starter
3505788-4	Air Engine Turbine Starter
3505788-5	Air Engine Turbine Starter
3505788-6	Air Engine Turbine Starter
3505788-7	Air Engine Turbine Starter
3505788-8	Air Engine Turbine Starter
3505788-8	T Wheel
3505814-3	Air Engine Turbine Starter
3505814-3	Air Engine Turbine Starter
3505830-10	Air Engine Turbine Starter
3505830-11	Air Engine Turbine Starter
3505830-12	Air Engine Turbine Starter
3505830-13	Air Engine Turbine Starter
3505830-2	Air Engine Turbine Starter
3505830-3	Air Engine Turbine Starter
3505830-31	Air Engine Turbine Starter
3505830-32	Air Engine Turbine Starter
3505830-33	Air Engine Turbine Starter
3505830-4	Air Engine Turbine Starter
3505830-41	Air Engine Turbine Starter
3505830-5	Air Turbine Starter
3505830-51	Air Turbine Starter
3505830-8	Air Turbine Starter
3505830-9	Air Turbine Starter
3505910-2	Air Turbine Starter

3505910-3	Air Turbine Starter
3505910-4	Air Turbine Starter
3505910-5	Air Turbine Starter
3505910-6	Air Turbine Starter
3505920-8	Drive Unit: Air
3505920-9	Drive Unit: Air,Isolator,Ohc
3505945-10	Air Turbine Engine Starter
3505945-11	Air Turbine Starter
3505945-12	Air Turbine Starter
3505945-2	Air Turbine Starter
3505945-3	Air Turbine Starter
3505945-4	Air Turbine Starter
3505945-5	Air Turbine Starter
3505945-6	Air Turbine Starter
3505945-7	Air Turbine Starter
3505945-8	Air Turbine Starter
3505945-9	Starter
3505953-1	Air Turbine Starter
3505953-2	Air Turbine Starter
3505953-4	Air Turbine Starter
3505953-5	Air Turbine Starter
3505953-6	Air Turbine Starter
3505953-7	Air Turbine Starter
350-708-806-0	Air Turbine Valve Assembly
350-708-808-0	Air Turbine Valve Assembly
350-711-501-0	T25/PT25 Temperature Sensor
350-711-604-0	T3 Probe
350-711-606-0	T3 Probe
350-711-607-0	T3 Probe
350-711-801-0	Oil Level Sensor
350-711-901-0	Oil Pressure Sensor
350-713-102-0	Actuator, Variable Stator
350-713-103-0	Actuator, Variable Stator
350-713-803-0	Air Engine Turbine Starter
350-713-804-0	Air Engine Turbine Starter
350-713-805-0	Air Engine Turbine Starter
350-713-806-0	Air Turbine Starter
350-713-808-0	Air Turbine Starter
350-713-810-0	Air Turbine Starter
350-713-811-0	Air Turbine Starter
350-713-812-0	Air Turbine Starter
350-713-813-0	Air Engine Turbine Starter
350-713-814-0	Air Turbine Starter
350-713-815-0	Air Engine Turbine Starter
350-713-854-0	Air Engine Turbine Starter
350-713-855-0	Air Engine Turbine Starter
350-713-864-0	Air Engine Turbine Starter

350-713-874-0	Air Engine Turbine Starter
350-714-701-0	Starter Control Valve Manual Release
350-714-801-0	Static Anti-Leak Valve
350-714-802-0	Static Anti-Leak Valve
350-714-901-0	Oil Tank
350-714-902-0	Oil Tank
350-714-904-0	Oil Tank
350-714-951-0	Oil Tank
350-714-952-0	Oil Tank
350-714-953-0	Oil Tank
350-716-301-0	T25/PT25 Temperature Sensor
350-716-302-0	T25/PT25 Temperature Sensor
350-717-701-0	Oil Level Sensor
350-717-901-0	Starter Control Valve Manual Release
350-718-001-0	Oil Tank
350-718-002-0	Oil Tank
350-718-052-0	Oil Tank
350-718-101-0	Oil Separator
350-718-651-0	Lube Oil Tank
350-719-501-0	T25/PT25 Temperature Sensor
350-719-502-0	T25/PT25 Temperature Sensor
350880-6	Hydraulic Pump
350880-7	Pump-Hydraulic
35-0F5-1000	Ballscrew
35-0L5-1003-06	Ballscrew
351-700-003-0	Core Electrical Harness
351-700-104-0	Core Electrical Harness
351-700-202-0	Core Electrical Harness
351-700-203-0	Core Electrical Harness
351-700-204-0	Core Electrical Harness
351-700-205-0	Core Electrical Harness
351-700-302-0	Core Electrical Harness
351-700-303-0	Core Electrical Harness
351-700-304-0	Core Electrical Harness
351-700-305-0	Core Electrical Harness
351-700-402-0	Core Electrical Harness
351-700-502-0	Core Electrical Harness
351-700-503-0	Core Electrical Harness
351-700-602-0	Fan Electrical Harness
351-700-605-0	Fan Electrical Harness
351-700-606-0	Fan Electrical Harness
351-700-702-0	Fan Electrical Harness
351-700-704-0	Fan Electrical Harness
351-700-802-0	Fan Electrical Harness
351-700-803-0	Fan Electrical Harness
351-700-902-0	Fan Electrical Harness
351-700-903-0	Fan Electrical Harness

351-701-002-0	Fan Electrical Harness
351-701-004-0	Fan Electrical Harness
351-701-005-0	Fan Electrical Harness
351-701-102-0	Fan Electrical Harness
351-701-103-0	Fan Electrical Harness
351-701-202-0	Fan Electrical Harness
351-701-203-0	Fan Electrical Harness
351-701-204-0	Fan Electrical Harness
351-701-302-0	Nacelle electrical harness
351-701-402-0	Nacelle electrical harness
351-701-453-0	Core Electrical Harness
351-701-502-0	Fan Electrical Harness
351-701-553-0	Core Electrical Harness
351-701-605-0	Core Electrical Harness
351-701-606-0	Core Electrical Harness
351-701-607-0	Core Electrical Harness
351-701-705-0	Core Electrical Harness
351-701-706-0	Core Electrical Harness
351-701-707-0	Core Electrical Harness
351-701-708-0	Core Electrical Harness
351-701-709-0	Core Electrical Harness
351-701-710-0	Core Electrical Harness
351-701-802-0	Core Electrical Harness
351-701-902-0	Core Electrical Harness
351-702-104-0	Oil Tank
351-702-106-0	Oil Tank
351-702-201-0	Actuator, Variable Stator
351-702-202-0	Actuator, Variable Stator
351-702-303-0	Starter Control Valve
351-702-304-0	Starter Control Valve
351-702-703-0	T3 Probe
351-702-705-0	T3 Probe
351-702-706-0	T3 Probe
351-702-801-0	PT25 Temperature Sensor
351-702-802-0	PT25 Temperature Sensor
351-702-803-0	PT25 Temperature Sensor
351-703-202-0	Pressurizing Valve
351-704-010-0	Lubrication Unit
351-704-801-0	Actuator, Vsv, Ge90
351-704-802-0	Variable Stator Actuator
351-705-501-0	Lubrication Unit
351-705-502-0	Lubrication Unit
351-706-101-0	PT25 Temperature Sensor
3567402-0201	Transmitter, Engine Oil
3567403-3001	Transmitter, Engine Oil
3567404-7001	Transmitter, Engine Oil
3567407-0101	Transmitter, Engine Oil

3567908-0001	Differential Transformer Control
3567909-0001	Differential Transformer Control
3578000-2	Actuator
3578000-3	Sync Shaft Lock
358201-26	Main Fuel Gear Pump
358201-27	Main Fuel Gear Pump
358201-28	Main Fuel Gear Pump
358201-29	Main Fuel Gear Pump
358201-30	Main Fuel Gear Pump
358201-31	Main Fuel Gear Pump
358201-32	Main Fuel Gear Pump
358201-33	Main Fuel Gear Pump
358201-34	Main Fuel Gear Pump
358201-35	Main Fuel Gear Pump
358201-36	Main Fuel Gear Pump
358201-37	Main Fuel Gear Pump
358201-38	Main Fuel Gear Pump
35950	Brake Control Valve Assy
35950-501	Brake Control Valve Assy
35950-503	Brake Control Valve Assy
35950-505	Dual Brake Metering Valve Assy
35E38-5	Air/Oil Idg Cooler Assembly
35E38-6	Air/Oil Idg Cooler Assembly
3600-1-1	Drain Valve Assy
3600232-1	Actuator Assembly
3600232-2	Actuator Assembly
3600925-1	Apu Starter
3600925-2	Apu Starter
3600925-3	Apu Starter
3600925-4	Apu Starter
3600925-5	Apu Starter
3601834-2	Solenoid Valve
3601839-1	Solenoid Valve
3602310-1	Apu Fuel Control
3602310-13	Apu Fuel Control
3602310-14	Apu Electric
3602310-15	Apu Fuel Control
3602310-16	Apu Fuel Control
3602310-17	Apu Fuel Control
3602310-18	Apu Fuel Control
3602310-19	Apu Fuel Control
3602310-2	Apu Fuel Control
3602310-20	Apu Fuel Control
3602310-21	Apu Fuel Control
3602310-22	Apu Fuel Control
3602310-23	Apu Fuel Control
3602310-24	Apu Fuel Control

3602310-25	Apu Fuel Control
3602310-26	Apu Fuel Control
3602310-27	Apu Fuel Control
3602310-28	Apu Fuel Control
3602310-28-1	Apu Fuel Control
3602310-29	Apu Fuel Control
3602310-3	Apu Fuel Control
3602310-30	Apu Fuel Control
3602310-31	Apu Fuel Control
3602310-32	Apu Fuel Control
3602310-32-1	Apu Fuel Control
3602310-33	Apu Fuel Control
3602310-33-1	Apu Fuel Control
3602310-34	Apu Fuel Control
3602310-35	Apu Fuel Control
3602310-36	Apu Fuel Control
3602310-37	Apu Fuel Control
3602310-38	Apu Fuel Control
3602310-4	Apu Fuel Control
3602310-5	Apu Fuel Control
3602310-6	Apu Fuel Control
3602310-7	Apu Fuel Control
3602310-8	Apu Fuel Control
3603100-1	Apu Fuel Control
3603100-2	Apu Fuel Control
3603100-3	Apu Fuel Control
3603100-4	Apu Fuel Control
3603100-6	Apu Fuel Control
3603100-7	Apu Fuel Control
3603100-9	Apu Fuel Control
3603357-1	Apu Starter
3603357-2	Apu Starter
3603357-3	Apu Starter
3603879-1-1	Flow Divider
3603879-2-1	Flow Divider
3604174-1	Centrifugal Switch A
3604174-1-1	Centrifugal Switch A
3605812-1	Apu Starter
3605812-10-1	Electrical Engine Starter
3605812-11	Electrical Engine Starter
3605812-12	Electrical Engine Starter
3605812-13	Apu Starter
3605812-13-1	Apu Starter
3605812-14-1	Electric Sta
3605812-16	Electric Sta
3605812-17	Electrical Engine Starter
3605812-18	Electrical Engine Starter

3605812-19	Electric Sta
3605812-21	Electrical Engine Starter
3605812-2-1	Electrical Engine Starter
3605812-22	Electric Sta
3605812-3	Electrical Engine Starter
3605812-4	Electrical Engine Starter
3605812-9	Electric Sta
3608000-1	Apu Fuel Control
3608000-10	Fuel Control
3608000-11	Apu Fuel Control
3608000-12	Fuel Control
3608000-13	Fuel Control
3608000-14	Fuel Control
3608000-2	Fuel Control
3608000-4	Fuel Control
3608000-4-1	Apu Fuel Control
3608000-5	Apu Fuel Control
3608000-6	Fuel Control
3608000-8	Fuel Control
3609150-1	Apu Fuel Control
3609150-1-1	Apu Fuel Control
3609150-12	Apu Fuel Control
3609150-2	Apu Fuel Control
3609150-3	Apu Fuel Control
3609150-3-1	Apu Fuel Control
3609150-4	Apu Fuel Control
3609150-5	Apu Fuel Control
3609150-6	Apu Fuel Control
3609150-7	Apu Fuel Control
3609150-8	Apu Fuel Control
3609480-1	Speed Switch
3609480-10	Speed Switch
3609480-11	Speed Switch
3609480-13	Speed Switch
3609480-2	Speed Switch
3609480-3	Speed Switch
3609480-5	Speed Switch
3609480-6	Speed Switch
3609480-9	Speed Switch
3609480-X	Speed Switch
3614177-1	FAN COOLING
3614295-1	VALVE COOLING
3614295-2	VALVE COOLING
3614295-3	VALVE, COOLING
3616256-1	Shaft
3616848-2	Apu Shutoff Valve
3616959-6	FAN ASSEMBLY

3616959-7	FAN ASSY
3616960-3	COOLING FAN ASSY
361771-2	Housing
3617750-1	Fuel Control
3617750-2	Fuel Control
3617750-3	Fuel Control
3617750-4	Fuel Control
3617750-7	Apu Fuel Control
362-021-002	Rudder Trim Indicator
362200-1015	Actuator,Eletromechnical Assy
362200-5015	Horizontal Stabilizer Actuator Instl
362200-9015	Actuator Eletromechnical Assy
362688-22-1	Shutoff Differential Valve
362851-3	Wheel
363200-1003	Unit Power
363250-1003	Motor Drive Unit,Flap
363500-1003	Flap Brake
364568-7	Housing
36620-3	Spoiler Power Ctrl Pkk
36900-2	Actuator
36900-4	Actuator
369D27001	Actuator
36E14-1	Valve-Airshutoff
36E14-2	Core Compartment Cooling Valve
36E14-3	Core Compartment Cooling Valve
36E14-4	Core Compartment Cooling Valve
36E14-5	Valve Assy.
36E14-6	Core Compartment Cooling Valve
371380	Hyd Pump
3715-7	Actuator, Dc
3715-7SL	Actuator
371901-26	Main Fuel Gear Pump
371901-27	Main Fuel Gear Pump
371901-28	Main Fuel Gear Pump
371901-29	Main Fuel Gear Pump
371901-30	Main Fuel Gear Pump
371901-31	Main Fuel Gear Pump
371901-32	Main Fuel Gear Pump
371901-33	Main Fuel Gear Pump
371901-34	Main Fuel Gear Pump
371901-35	Main Fuel Gear Pump
371901-36	Main Fuel Gear Pump
371901-37	Main Fuel Gear Pump
371901-38	Main Fuel Gear Pump
372697-10	Electrical Engine Starter
372697-13	Electrical Engine Starter
372697-15	Electrical Engine Starter

372697-16	Electrical Engine Starter
372697-18-1	Electrical Engine Starter
372697-21-1	Electrical Engine Starter
372697-22	Electrical Engine Starter
372697-24	Electrical Engine Starter
372697-6	Electrical Engine Starter
372697-9	Electrical Engine Starter
37-285	4 Way Servo Valve
373401-26	Main Fuel Gear Pump
373401-27	Main Fuel Gear Pump
373401-28	Main Fuel Gear Pump
373401-29	Main Fuel Gear Pump
373401-30	Main Fuel Gear Pump
373401-32	Main Fuel Gear Pump
373401-34	Main Fuel Gear Pump
373401-36	Main Fuel Gear Pump
373401-37	Main Fuel Gear Pump
375322-10	Electrical Engine Starter
375322-8	Electrical Engine Starter
375322-9	Electrical Engine Starter
3753648-5505	Nosewheel Steering Cyl Assy
37540-1	Solenoid
3760963-507	Spring
3772374-5503	Valve Assy
378201-10	Main Fuel Gear Pump
378201-11	Main Fuel Gear Pump
378201-12	Main Fuel Gear Pump
378201-13	Main Fuel Gear Pump
378201-14	Main Fuel Gear Pump
378201-15	Main Fuel Gear Pump
378201-3	Main Fuel Gear Pump
378201-4	Main Fuel Gear Pump
378201-5	Main Fuel Gear Pump
378201-6	Main Fuel Gear Pump
378201-7	Main Fuel Gear Pump
378201-8	Main Fuel Gear Pump
378201-9	Main Fuel Gear Pump
3790011-102	Rudder Ratio Changer Actuator
3790011-103	Rudder Ratio Changer Actuator
3790011-104	Rudder Ratio Changer Actuator
3790011-105	Rudder Ratio Changer Actuator
3790011-106	Rudder Ratio Changer
3790011-107	Rudder Ratio Changer
3790011-108	Rudder Ratio Changer Actuator
3790033-104	Valve Assy, Door Safety
3790034-106	Valve Sequence
3790037-101	Steering Metering Valve

3790037-103	Steering Metering Valve
3790037-105	Steering Metering Valve
3790037-106	Steering Metering Valve
3790037-107	Steering Metering Valve
3790037-108	Steering Metering Valve
3790055-102	Transfer Cylinder
3790076-102	Inlet Guide Vane Act
3790076-103	Inlet Guide Vane Act
3790076-105	Inlet Guide Vane Act
3791497-1106	Lap Assy
3791499-105	Valvevalve Assy
3791499-106	Valvevalve Assy
3791502-104	MANIFOLD
3791502-104	Manifold
3791510-101	HOUSING BEAR
3791510-101	Housing Bear
3791529-101	CAP FIXED
3791529-101	Cap Fixed
3791530-101	CAP AJUSTABL
3791530-101	Cap Ajustabl
379580-650	Oil Pump Assembly
37D400352G003	Stator Vane Actuator
37D400352G008	Stator Vane Actuator
3800014-101	Steering Metering Valve
3800014-102	Steering Metering Valve
3800014-103	Steering Metering Valve
3800014-104	Steering Metering Valve
3800014-105	Steering Metering Valve
3800014-106	Steering Metering Valve
3800022-106	Servo Actuator
3800022-107	Servo Actuator
3800035-105	Stator Vane Actuator
3800035-106	Stator Vane Actuator
3800035-108	Stator Vane Actuator
3800035-109	Stator Vane Actuator
3800035-110	Stator Vane Actuator
3800035-111	Stator Vane Actuator
3800035-113	Stator Vane Actuator
3800035-114	Actuator, Electro-Mechanical
3800035-116	Actuator
3800035-117	Actuator, Electro-Mechanical
3800035-118	Actuator
3800035-119	Actuator, Electro-Mechanical
3800035-120	Actuator
380048-1	Speed Switch
380074-1	Speed Switch
3801059-101	Servoalve Apu Inlet Guide

380256-1	Speed Switch
380428-1	Speed Switch
380428-2	Speed Switch
380428-4	Speed Switch
380428-8	Speed Switch
380428-9	Speed Switch
380564-1	Speed Switch
380678-1	Speed Switch
380678-2	Speed Switch
380678-3	Speed Switch
380678-4	Speed Switch
380678-5	Speed Switch
380714-1	Speed Switch
380824-1	Speed Switch
380968-1	Speed Switch
3810012-103	Nose Steering System
3810056-106	Actuator Assy., T/R
3810056-107	Control Valve Module
381015-1	Speed Switch
3811083-101	Piston Rod Assy
381200-1001	Control Unit: Power,Standby Rudder
381200-1003	Standby Rudder Pcu
381276-1	Speed Switch
381276-2	Speed Switch
381500-1001	Power Control Unit
381500-1003	Power Control Unit
381800	Slat Actuator
381800-1001	Le Slat Actuator
381800-1003	Slat Actuator
381800-1005	L/E Slat Actuator
381900-1001	Actuator: Slat,Leading Edge,Assembly,Svc
382000-1001	Actuator: Leading,Flap
382000-1001	Flap Actuator
3820007-106	Solenoid Valve Assy, Cartridge (28 Vdc)
3821441-101	Piston Rod
382300-1	Plug-In Booster Pump
382300-2	Plug-In Booster Pump
382300-3	Plug-In Booster Pump
382401-26	Main Fuel Gear Pump
382401-27	Main Fuel Gear Pump
382401-28	Main Fuel Gear Pump
382401-29	Main Fuel Gear Pump
382401-30	Main Fuel Gear Pump
382401-32	Main Fuel Gear Pump
382401-34	Main Fuel Gear Pump
382401-36	Main Fuel Gear Pump
382401-37	Main Fuel Gear Pump

3830032-103	Fuel/Oil Heat Exchanger Bypass Valve
3830032-104	Fuel/Oil Heat Exchanger Bypass Valve
3830032-105	Valve - Oil Cooler Bypass
3830041-101	Actuator
3830041-103	Actuator
3830041-104	Actuator
3830041-104K	Actuator
3830041-105	Actuator, Hydraulic Pneumatic, Linear
3830041-106	Actuator, Hydraulic Pneumatic, Linear
3830041-107	Actuator, Hydraulic Pneumatic, Linear
3830041-108	Actuator, Hydraulic Pneumatic, Linear
3830041-109	Actuator
383300-1007	Trim Actuator
383300-1009	Trim Actuator
383300-1011	Trim Actuator
383900-1005	Steering Valve
383900-1007	Steering Valve
383900-1011	Steering Valve Assy
384022-1-2	Pneumatic Starter
384022-1-3	Pneumatic Starter
384022-2-1	Pneumatic Starter
384022-3-1	Pneumatic Starter
384022-4-1	Pneumatic Starter
384022-4-2	Pneumatic Starter
384022-5-1	Pneumatic Starter
3842360-1	T - WHEEL
3842360-1	T - Wheel
384301-10	Main Fuel Gear Pump
384301-2	Main Fuel Gear Pump
384301-3	Main Fuel Gear Pump
384301-4	Main Fuel Gear Pump
384301-5	Main Fuel Gear Pump
384301-6	Main Fuel Gear Pump
384301-7	Main Fuel Gear Pump
384301-8	Main Fuel Gear Pump
384301-9	Main Fuel Gear Pump
3860060-102	Lower Rudder Actuator
3860061-102	Upper Rudder Actuator
3862775-3	Apu Fan
386901-10	Main Fuel Gear Pump
386901-11	Main Fuel Gear Pump
386901-12	Main Fuel Gear Pump
386901-13	Main Fuel Gear Pump
386901-14	Main Fuel Gear Pump
386901-6	Main Fuel Gear Pump
386901-7	Main Fuel Gear Pump
386901-8	Main Fuel Gear Pump

386901-9	Main Fuel Gear Pump
3870075-101	Nlg Pressure S/O Valve
3870127-102	Compensator:
3876049-3	Fuel Solenoid Assembly
3876049-4	Fuel Solenoid Assembly
3876049-5	Fuel Solenoid Assembly
3876049-6	Fuel Solenoid Assembly
3876049-7	Fuel Solenoid Assembly
3876049-8	Fuel Solenoid Assembly
3876166-1	De-Oil Solenoidvalve Assembly
3876211-2	SENSOR LOW O
3876227-2	Pressure Sensor
3876356-1	Apu Solenoid Valve
3880190-10	LUBE PUMP
3880190-11	PUMP ASSY
38-805	Valve
3881000-2	Oil Pump Asembly
3881000-4	Oil Pump Asembly
3881000-5	Oil Pump Asembly
3881000-6	Oil Pump Asembly
3881000-7	Oil Pump Asembly
3882500-10	Fuel Control Unit
3882500-11	Fuel Control Unit
3882500-12	Fuel Control Unit
3882500-13	Fuel Control Unit
3882500-14	Fuel Control Unit
3882500-15	Fuel Control Unit
3882500-16	Fuel Control Unit
3882500-17	Fuel Control Unit
3882500-3	Apu Fuel Control
3882500-4	Apu Fuel Control
3882500-5	Apu Fuel Control
3882500-6	Fuel Control Unit
3882500-7	Fuel Control Unit
3882500-8	Fuel Control Unit
3882500-9	Fuel Control Unit
3882550-1	Flow Divider Valve A
3882550-2	Flow Divider Valve A
3882550-3	Flow Divider Valve A
3882639-1	Fuel Check Valve
3882639-2	Fuel Check Valve
3882639-3	Fuel Check Valve
3882639-4	Fuel Check Valve
3882639-5	Fuel Check Valve
3882730-2	Fuel Control Unit Apu
3882730-9	Fuel Control Unit Apu
3882825-1	Fuel Control Assembl

3882825-2	Fuel Control Assembl
3882825-3	Fuel Control Assembl
3882825-4	Fuel Control Assembl
3882825-5	Fuel Control Assembl
3882825-6	Fuel Control Assembl
3882825-7	Fuel Control Assembl
3882825-8	Fuel Control Assembl
3882825-9	Fuel Control Assembl
3882835-3	VALVE
3882835-4	VALVE
3882835-4-1	VALVE
3883220-3	Servo Actuator
3883229-4	Fuel Control
3883229-5	Fuel Control
3883229-6	Fuel Control
3883240-3	Fuel Control Assembl
3883240-5	Fuel Control Assembl
3883240-6	Fuel Control Assembl
3883297-1	Flow Divider
3883297-2	Flow Divider
3883297-3	Flow Divider
3883297-4	Flow Divider
3883297-5	Flow Divider
3883297-6	Flow Divider
3883297-7	Flow Divider
3883297-8	Flow Divider
3883297-9	Flow Divider
3883499-2	ACTUATOR, INLET GUIDE VANE
3884863-7	PNEUMATIC CL
3885081-1	SHOCK MOUNT-
3886070-4	Vane Actuator
3886167-2	Servo Actuator
3886167-3	Servo Actuator
3886167-4	Actuator,Apu Inlet Guide Vane Furnished
3886168-1	ACTUATOR
3886182-1	ACTUATOR GUIDE VANE
3886188-1	Actuator
3886188-2	Icv Actuator
3886188-3	Apu Inlet Guide Vane Actuator Assembly
3886188-3	Actuator
3888123-9	WIRING HARNESS
3888208-1	HARNESS ASSY
3888208-2	HARNESS
3888217-2	Starter
3888217-3	Starter
3888217-4	Starter
3888297-2	WIRING HARNESS

3888297-3	WIRING HARNESS
3888364-4	HARNESS
3888438-1	WIRING HARNESS, BRANCHED, ENGINE
3888448-2	STARTER/GENERATOR HARNESS
3888449-1	HARNESS
3888449-2	HARNESS
3888458-3	WIRING HARNESS ASSY
3888571-1	WIRING HARNESS
3890010-103	Relief Valve Assy
389401-26	Main Fuel Gear Pump
389401-27	Main Fuel Gear Pump
389401-28	Main Fuel Gear Pump
389401-29	Main Fuel Gear Pump
389401-30	Main Fuel Gear Pump
389401-32	Main Fuel Gear Pump
389401-34	Main Fuel Gear Pump
389401-36	Main Fuel Gear Pump
389401-37	Main Fuel Gear Pump
38E93-5	Valve Assy., Wing Anti-Icing Control
38E93-6	Anti-Ice Valve
39-0001-1300	Pump: Boost,Ar
3900029-104	Variable Bypass Valve Actuator
3900029-105	Variable Bypass Valve Actuator
3901324-101	Piston
390601-6	Main Fuel Gear Pump
390-610-201-0	Electrical Harness J5
390-610-301-0	Electrical Harness J5
390-610-401-0	Electrical Harness J5
390-610-501-0	Electrical Harness J5
390-611-001-0	Electrical Harness J5
390-611-101-0	Electrical Harness J5
390-611-201-0	Electrical Harness J5
390-611-211-0	Electrical Harness J5
390-611-301-0	Electrical Harness J5
390-611-311-0	Electrical Harness J5
390-611-401-0	Electrical Harness J5
390-611-501-0	Electrical Harness J5
390-611-601-0	Electrical Harness J5
390-611-701-0	Electrical Harness J5
390-611-801-0	Electrical Harness J5
390901-10	Main Fuel Gear Pump
390901-11	Main Fuel Gear Pump
390901-12	Main Fuel Gear Pump
390901-13	Main Fuel Gear Pump
390901-14	Main Fuel Gear Pump
390901-7	Main Fuel Gear Pump
390901-8	Main Fuel Gear Pump

390901-9	Main Fuel Gear Pump
3910014-103	Solenoid
3910015-103	Solenoid
3910027-101	Valve
3910027-103	Mlg Selector Bypass Valve
3910028-103	Bypass Valve
3910028-104	Bypass Valve
3910028-105	Bypass Valve
3910028-106	Valve Assy - Nlg Selector/Bypass
3910031-105	Main Gear Door Release Safety Valve
3910032-104	Module - Door Release/Safety Valve
3910036-101	Nose Gear Steering Metering Valve
3911151-2	PINTLE ASSY
3911420-01	WIRING HARNESS, REAR
3911993-01	Starter Motor
3912024-01	OIL PUMP
3912040-01	OIL PUMP ASSY
3912063-01	COOLING FAN
3912063-04	COOLING FAN
3912086-01	Starter Motor
3912086-03	Starter Motor
3912235-01	HARNESS-APU REAR
3912964-5501	Cylinder
3915878-5001	Actuator
3917778-5503	Valve
3918165-5501	Valve
3920048-5511	Cylinder
3920048-5513	Cylinder
3921261-101	PISTON
3921261-101	Piston
392220-1-1	Butterfly Valve
392220-3-1	Butterfly Valve
392454-1-1	Pressure Regulator
392454-3-1	Pressure Regulator
392550-2-1	Airflow Regulator
392550-3-1	Starter Valv
392550-4	Airflow Regulator
392550-5	Regulator, A
392678-1-1	Valve, Turbofan Control
392686-3-1	Valve
392688-10-1	Shutoff Differential Valve
392688-1-1	Shutoff Differential Valve
392688-11-1	Shutoff Differential Valve
392688-12-1	Shutoff Differential Valve
392688-16-1	Shutoff Differential Valve
392688-17-1	Shutoff Differential Valve
392688-18-1	Shutoff Differential Valve

392688-19-1	Shutoff Differential Valve
392688-21-1	Shutoff Differential Valve
392688-5-1	Shutoff Differential Valve
392688-6-1	Shutoff Differential Valve
392688-7-1	Shutoff Differential Valve
392688-8-1	Shutoff Differential Valve
392688-9-1	Shutoff Differential Valve
392714-1-1	Valve, Flow
392796-2-1	Gargo Pack V
392796-2-2	Valve, Flow
3930-0000-0006	Air Intake
3930007-	Valve Assy
3930007-102	Le Slat Control Valve Assy
3930007-104	Le Slat Control Valve Assy
3930007-105	Slat Primary Control Valve
3930021-10	Valve: Primary,Flap,Control,Valve
3930021-102	Flap Primary Control Valve
3930021-103	Flap Primary Control Valve
3930021-104	Flap Primary Control Valve
3930021-105	Flap Primary Control Valve
3930021-106	Flap Primary Control Valve
3930021-107	Flap Primary Control Valve
3930021-108	Flap Primary Control Valve
3930027-101	Mlg Selector Bypass Valve
3930027-102	Mlg Selector Bypass Valve
393026-01840	Rotary Actua
393026-047	Rotary Actua
3931-0600-0000	Spiral Housing Assy
39-353	Valve: Control,Anti-Skid
394100-1001	L.E. Shut-Off Valve
394100-1003	Valve: Shut-Off,Svc
39-521	Antiskid Control Valve
39-525-1	Actuator Hin
39-525-3	Hyd Switch
395300-1001	Valve
395400-1011	Actuator
395400-1013	Actuator
396130-1-1	Valve
39-617	Antiskid Control Valve
396196-9	FLOW CONTROL
396430-2	Shutoff Valve
396430-3	Shutoff Valve
396430-4	Shutoff Valve
396432-1	5 Inch Diameter Flow Control Valve
396432-2	5 Inch Diameter Flow Control Valve
396432-3	5 Inch Diameter Flow Control Valve
396436-2	Shutoff Valve

396442-1	Valve Flow Control
396462-1	Shutoff Valve
396462-2	Valve Cont & Shutoff
396480-1	Valve
396496-1	Shutoff Valv
396498-1	Flow Control Valve
396498-2	Valve
3965062-501	Link
396582-2	Valve
396608-1	Valve: Shutoff,Pk Flow
396632-2	Flow Control Valve
396800-10	Bleed Valve Fuel Gear Motor
396800-11	Bleed Valve Fuel Gear Motor
396800-12	Bleed Valve Fuel Gear Motor
396800-5	Bleed Valve Fuel Gear Motor
396800-6	Bleed Valve Fuel Gear Motor
396800-7	Bleed Valve Fuel Gear Motor
396800-8	Bleed Valve Fuel Gear Motor
396800-9	Bleed Valve Fuel Gear Motor
397728-1	Valve Shut Off
397728-1-1	Valve Shut Off
397728-2	Valve Shut Off
397728-2-1	Valve Shut Off
397728-3	Valve Shut Off
397728-4-1	Valve Shut Off
397728-5	Valve Shut Off
397728-5-1	Valve Shut Off
397728-6	Valve Shut Off
397728-6-1	Valve Shut Off
397728-6-1	Valve Shut Off
397728-7	Valve Shut Off
397728-7-1	Valve Shut Off
397728-8	Valve Shut Off
397728-8-1	Valve Shut Off
397868-1-1	Surge Bleed Valve
397892-1	Valve
398000-1	Fuel Boost Pump
398000-2	Fuel Boost Pump
398114-1-1	Modulating & Shutoff Valve
398116-1-1	Valve Shutoff
398310-2-1	Shutoff Butterfly Valve
398310-3-1	Shutoff Butterfly Valve
398310-4-1	Shutoff Butterfly Valve
398310-5-1	Valve-Shutoff
398396-2	Trim Air Valve
398396-3	Trim Air Valve
398396-4	Trim Air Valve

398396-5	Trim Air Valve
398396-6	Trim Air Valve
398398-2	Trim Air Valve
398398-3	Trim Air Valve
398504-2	Valve
398554-3	Turbine Bypass Valve
398750-2	Temperature Control Valve
398750-3	Temperature Control Valve
398750-4	Temperature Control Valve
398750-5	Valve: Temp Control
398750-6	Valve Assy.,Temp. Control
398774-2	Electric Shutoff Valve
398774-3	Valve, Air Mod & Shutoff
398774-4	Electric Shutoff Valve
398774-5	Electric Shutoff Valve
398774-6	Valve: Assembly
398774-7	Electric Shutoff Valve
398774-8	Valve: Air Modulation
398774-9	Valve Assy
398786-2	Valve Assy, Modulating
398786-3	Trim Air Supply Mod Valve
398786-4	Trim Air Supply Mod Valve
398786-5	Valve
398908-2	Temperature Control Valve
398908-3	Valve: Trim Modulating
398908-4	Valve: Trim Modulating
398908-5	Valve: Trim Modulating
39-891-2	Brake Control Va Valve
398946-1	Turbine Bypass Valve
399300-2	Fuel Boost Pump
399400-1009	Pitch Trim Linear Actuator
399400-1011	Pitch Trim Linear Actuator
399400-1013	Pitch Trim Linear Actuator
399571-13	Solenoid Valve Assy
399571-5	Solenoid Valve Assy
399571-9	Solenoid Valve Assy
39B168-1C	Transducer
3A071-0005-16-2	Actuator Ass
3A071-0005-16-3	Actuator Ele
3A071-0006-16-2	Actuator
3B41-3-B	CONTROL UNIT
3E93-4	Anti-Icing Valve
3E93-5	Anti-Icing Valve
3E93-6	Anti-Icing Valve
3F2201E	Module
3U3195	Pump Bleed And Auto Prime Valve
3U3196	Pump Bleed And Auto Prime Valve

3U3211	Compensator Assembly
3U3322-13	Actuator Elevator L/H
3U3322-14	Actuator Elevator R/H Must Be Usable On
400220-1	Manual Selector Valve
400220-2	Manual Selector Valve
400300-2	Valve, Shuto
4003T68G01	Fuel Flow Divider
4003T68G02	Fuel Flow Divider
4003T68G03	Fuel Flow Divider
4003T68G04	Fuel Flow Divider
4004T63G04	Stator Vane Actuator
4004T63G05	Stator Vane Actuator
4004T63G07	Stator Vane Actuator
4004T63G10	Stator Vane Actuator
4007RT73G01	Air Solenoid Valve
40099-04	Hydraulic Motor
401-09410-10	Brake-Hydr
4012373-810	Actuator
4012373-812	Actuator
4012373-817	Actuator
4012373-903	Actuator
4012373-904	Actuator
4012373-905	Actuator
4012373-906	Actuator
4012373-907	Actuator
4012373-908	Actuator
4012373-909	Actuator
4012373-910	Actuator
4012373-911	Actuator
4012373-912	Actuator
4012373-913	Actuator
4012373-914	Actuator
4012373-915	Actuator
4012373-916	Actuator
4012373-917	Actuator
4012373-918	Actuator
4012373-919	Actuator
4012373-920	Actuator
40157	ELECTRIC HYD
40250-10033	Valve Assy-
4027T69P06	Oil Tank Pressurizing Valve
40574-2	Actuator
40574-4	Actuator Assy
4057800-906	Fuel Valve
40-618-6	Indicator Stabilizer Trim
40-62575	Hyd Switch
4063-16082-2	Isolation Valve

4063-16082-3	Pressure Sel
4063-16082-3 AMDT A	Isolation Valve
4063-16082-3 AMDT B	Isolation Valve
4063-16083	Isolation Valve
4063-16083 AMDT A	Isolation Valve
4063-16083 AMDT B	Isolation Valve
4063-16083-3	Isolation Valve
4063-18139	Recirculation Check Valve
4063-18140-01	Valve Isolation
4063-18167-1	Recirculation Check Valve
4063-18167-1 AMDT A	Recirculation Check Valve
4063-18167-1 AMDT AC	Recirculation Check Valve
4063-18167-1 AMDT B	Recirculation Check Valve
4063-18167-1 AMDT C	Recirculation Check Valve
4063-18167-1AMDRT AB	Recirculation Check Valve
4063-18203	Valve Isolation
4063-18221	Pressure Sel
4063-18288	Valve Isolation
4063-19972-01AA	Outflow Valve
4063-19972-01AB	Outflow Valve
4063-19972-02AA	Outflow Valve
4063-19972-02AB	Outflow Valve
40710-230	Artificial Feel Hydro
407A0000-02	Latching Actuator
4087T100-3	Motor: Electric
40884-1	Pressure Fueling Shu
40884-23	Pressure Fueling Shu
40884-24	Valve Unit
40884-3	Valve, Shutoff, Fuel Pressure
40884-4	Valve Assy, Fuel Shutoff
40884-44	Pressure Fueling Shu
40884-6	Valve, Shutoff, Fuel Pressure
40884-7	Valve, Shutoff, Fuel Pressure
40884-7	Valve, Shuto
40884-8	Valve, Shutoff, Fuel Pressure
40885	Unit, Fuel Control
40885-10	Valve, Shutoff, Fuel Pressure
40885-2	Control Assy, Fuel Flow
40885-22	Control Unit
40885-24	Control Unit
40885-4	Actuator Upp
40885-5	Valve, Shutoff, Fuel Pressure
40885-5	Valve, Shuto
40885-7	Valve, Shutoff, Fuel Pressure
40885-8	Valve, Shutoff, Fuel Pressure
4096T96P09	Ignition Lead
40C138	Check Valve Pump Outlet

40C40612A3	Damper: Primary Control
40F0001	Static Anti-Leak Valve
40F0002	Static Anti-Leak Valve
40F1006	Lubrication Unit
40F1007	Lubrication Unit
40F1008	Lubrication Unit
40F6019	Lubrication Unit
40F6020	Lubrication Unit
40F6021	Lubrication Unit
40P131	Pump Bypass Or Outlet Check Valve
4100149A	Fan-Assy
4100149B	Lavatory/Galley Vent
4100149C	Lavatory/Galley Vent
4100362-1	Motor: Hyd
4100406-1	Hyd Motor
4100406-2	Motor: Hyd
4100836B	Bleed Control Valve
4100836C	Bleed Control Valve
4100836D	Bleed Control Valve
4100837D	Bleed Control Valve
4100837E	Bleed Control Valve
4100837F	Bleed Control Valve
4100837G	Valve Assy
4100941A	Fan 9 Mix Flow
4100941B	Fan 9 Mix Flow
4100941C	Fan 9 Mix Flow
4100941D	Fan 9 Mix Flow
4100943B	Fan: Mixed Flow
4100943C	Fan: Vent,Lav & Galley
4100943D	Fan
4100945A	Fan: Vent,Lav & Galley
4100947	Fan: Axial Flow
4101002-11	Power Transfer Unit
4101002-9	Hydraulic Ptu- Power Transfer Unit
4101054	Fan
4101184A	Bcv Actuator
4101184B	Bcv Actuator
4101378	FAN MIXED FL
4101378A	Fan
4101634A	Recirculation Fan
4101636A	Cargo Fan
4101722	Fan Mixed Flow
4101724A	Recirculation Fan
410-2066	Servo Valve, Electro Hyd, Flow Control
410589-11	Valve Ball
4105DA	Switch
4110312-5	Port Housing

4110342-1	Hanger
4120T02P05	Actuator, Cvg Master
4120T02P07	Actuator, Cvg Master
4120T04P04	Fuel Pump
4120T04P05	Fuel Pump
4120T04P07	Fuel Pump
4120T04P08	Fuel Pump
4120T05P02	Starter Control Valve
4120T05P03	Cntrl Valve Starter
4120T06P01	Air Turbine Starter
4120T06P02	Air Turbine Starter
4120T06P04	Air Turbine Starter
4120T06P05	Air Turbine Starter
4120T06P10	Air Turbine Starter
4120T06P11	Air Turbine Starter
4121T67P02	Start Operability Bleed Valve
412700-1001	Rudder S/O Valve Assy.
4129RA	Nose Wheel Valve Assy
4129RA1	Airspeed Swi
4129RA4	Compressor,
4129RA9	Compressor
4129RA-9	Nose Wheel Steering
413100-1	Relief Valve Pneumat
4135T100-3	Alt. Actr Assy
4136T100-1	lb Flap Alt Actr Assy
4137T100-1	Electric Motor
4138011-1	Fuel Control
4138011-2	Fuel Control
4140066-6	Fuel Solenoid Valve
4140066-7	Fuel Solenoid Valve
4140066-8	Fuel Solenoid Valve
414600-1001	Aileron Power Control Unit
414600-1003	Aileron Power Control Unit
414600-1005	Aileron Power Control Unit
414600-1007	Aileron Power Control Unit
414600-1009	Aileron Power Control Unit
414800-1009	Spoiler Power Control Unit
414800-9011	Spoiler Power Control Unit
414900-1005	Spoiler Actuator
414950-1003	Spoiler Control Module
415100-1003	Pcu
4151010-3	Shutoff Valve
4151010-4	Shutoff Valve
415400-1009	Rudder Actuator
416100-1001	Elevator Actuator
416100-1003	Elevator Actuator
4163DA	Leading Edge Flap Control Valve

4166-134	Body Assembly
418-01124	Oil Press Transmitter
418-04124	Pressure Trasmmitter
418-05124	Pressure Trasmmitter
418-06104	Oil Pressure Transmitter
418-06124	Oil/Fuel Pressure Transmitter
418-08104	Oil Press.Transmitter
418-09104	Transmitter - Oil Pressure
418-17054	Shutoff Valv
418-20044	Buterfly Shu
418575	Pump
418800-9007	ACTUATOR WIN
419200-1003	Rudder Pcu
419300-1003	Enhanced Rudder Pcu
41F1004	Lube Pump
41F1005	Lube Pump
41F5102	Oil Tank
41SG240-1	Oil Pressure Transmitter
41SG240-3	Oil Pressure Transmitter
41SG240-4	Transmitter, Oil Pressure- Diff
41SG272-	Oil Pressure Transmitter
41SG272-3	No.4 Bearing Pressure Transducer
41SG272-5	No 4 Bearing Press Transducer
41SG272-6	No4 Bearing Press Transducer
420035-2	Valve, 3 Way
420035-3	Valve, 3 Way
420085C	EEC Wiring Harnesses
420086A	EEC Wiring Harnesses
420086C	EEC Wiring Harnesses
420088B	EEC Wiring Harnesses
420090A	EEC Wiring Harnesses
420091B	EEC Wiring Harnesses
420092A	EEC Wiring Harnesses
420094B	EEC Wiring Harnesses
4203-1	Ptu Select Hydraulic Valve
420365-1	Valve Assy, Air Shutoff
420505-5	TAI Pressure Switch
4205401	Variable Delivery Hydraulic Pump
42054-01	Hydraulic Engine Driven Pump
4205603	Pump: Electric
420575-2	TAI Pressure Switch
420575-4	TAI Pressure Switch
420575-5	TAI Pressure Switch
420745-3	Pressure Actuated Butterfly Selector Valve
420745-4	Pressure Actuated Butterfly Selector Valve
421245-1	Nacelle Cooling and Transient Bleed Valve
421340-1	EEC Wiring Harnesses

421865-2	Thermal Ant-Ice Valve
422081-100	Position Transducer Unit
422082-400	Actuator, Fe
4221T100-1	Trailing Edge Flap Alternate Actuator Assembly
4221T100-3	Trailing Edge Flap Alternate Actuator Assy
4221T100-5	Trailing Edge Flap Alternate Actuator Assembly
422245-1	Pressure Actuated Sleeve Shutoff Valve
4246000-1	Manual Drive
4252202-2	Stow Indication Switch, Thrust Reverser
4252202-3	Stow Indication Switch, Thrust Reverser
4259000-2	Manual Drive Assembly Torque Limiter
426V600	Override Bleed Valve
4279204	Motor: Converter
42D109-1A	Diff Pressure Switch
42D110	Fuel Low Pre
42D185	Gage Pressure Switch
42D223	Switch
42D362	Fuel Pump Filter Differential Pressure Switch
42D394	Fuel Pump Filter Differential Pressure Switch
42D395	Switch-Differential Pressure
42H0001D	Filter Differential Pressure Switch
42H0002D	Filter Differential Pressure Switch
42H0003D	Filter Differential Pressure Switch
430070-2	Permanent Magnet Alternator
4305990040	TRANSDUCER A
4305990050	SENSOR PRESS
43325-16870	Light Assy
4372-507	Gearbox
4404B000-004	Overtemperature Shut Off Valve / Turboco
441921-1	Auxiliary Power Unit Fuel Control
441921-4	Auxiliary Power Unit Fuel Control
441921-5	Auxiliary Power Unit Fuel Control
441921ISS7	Auxiliary Power Unit Fuel Control
441921ISS8	Auxiliary Power Unit Fuel Control Module
441921ISS9	Auxiliary Power Unit Fuel Control Module
446347-1	Valve Flow,Emergency,Cartridge Powered
446915-1	Flow Valve
44981	HANGER
449V450	Three Way Valve
449V450-1	Three Way Valve
44E64-5	Fuel Manifold Staging Valve
44E64-6	Fuel Manifold Staging Valve
44E64-8	Fuel Manifold Staging Valve
4500039A	Fuel Control Assembl
4500039AC	Fuel Control Assembl
4500039ACD	Fuel Control Assembl
4500039B	Fuel Control Assembl

4500039BC	Fuel Control Assembl
4500039BCD	Fuel Control Assembl
4500039C	Fuel Control Assembl
4500039D	Fuel Control Assembl
4500039E	Fuel Control Assembl
4500039F	Fuel Control Assembl
4500039F1	Fuel Control Assembl
45-0123-1	Light Ay-Retractable Landing
4502242B	HARNESS ASSY
4503653A	Fuel Control Assembl
4503762A	Fuel Control Assembl
45080-1	Solenoid
4522A010001	Valve-Temperature Control
4525A010001	Actuator - Ram Air
4527-1	Valve Relief Balanced Outlet
4527A010001	Valve - Pressure Regulating
4528A010001	Valve - Trim Air - 2 Inch
4529A010001	Valve - Trim Shut Off
452MC10	Ac Motor Assy
452T1003-7	Stop Assembly
452T1016-1	Lock: Assembly
452T1016-2	Lock Assembly
452T1030-4	Stop Assembly - Partial Load, Cargo Hand
452T1040-1	Block: Assembly
452T1104-10	Lock Assembly
452T1104-11	Lock: Assembly
452T1131-6	Lock Assembly
452T1201-15	Cargo Handling Center Stop/Lock Assembly
452T1201-16	Cargo Handling Center Stop/Lock Assembly
452T1201-17	Cargo Handling Center Stop/Lock Assembly
452T1201-18	Cargo Handling Center Stop/Lock Assembly
452T1201-7	Cargo Handling Center Stop/Lock Assembly
452T1201-9	Cargo Handling Center Stop/Lock Assembly
452T1202-15	Cargo Handling Auxiliary Stop/Lock Assembly
452T1202-16	Cargo Handling Auxiliary Stop/Lock Assembly
452T1202-17	Cargo Handling Auxiliary Stop/Lock Assembly
452T1202-18	Cargo Handling Auxiliary Stop/Lock Assembly
452T1202-7	Cargo Handling Auxiliary Stop/Lock Assembly
452T1202-8	Lock Assy
452T1202-9	Cargo Handling Auxiliary Stop/Lock Assembly
452T1203-13	Hsg Ay
452T1603-29	Stop: Lock,Cargo,Assembly
452T2301-10	Guide, Ctr Cargo Aux
452T2301-11	Guide, Ctr Cargo Hand Aux
452T2301-13	Guide, Ctr Cargo Hand Aux
452T2301-16	Center Guide Assembly - Cargo Systems
452T2301-17	Auxiliary Guide Assembly - Cargo Systems

452T2633-18	Guide Assy, Cargo Handling Lateral
452T2633-20	Guide Assy, Cargo Handling Lateral
452T2633-28	Lateral Guide Assembly
452T2633-29	Lateral Guide Assembly
452T2633-30	Lateral Guide Assembly
452T2633-35	Lateral Guide Assembly
452T2633-8	Guide: Assembly
4535A010001	Valve - Recirculation Shut Off
4537A010001	Valve - Occupant Backup Shutoff
4539A010001	Valve - Cargo Regulating Shutoff
45-521212-604	Actuator
45-521212-605	Actuator
45-521212-607	Actuator
45595	Subassy
45595-5	Piston
45595-7	Rod Assembly
45731-1191	Servo Fuel Heater
45731-1231-2	Servo Fuel Heater
45731-1251	Heater, Servo Fuel
45731-1251-1	Actuator
45731-1262	Cooler-Oil Fuel Cooled
45731-1301-1	Servo Fuel Heater
45731-1301-2	Servo Fuel Heater
45731-1375	Idg Oil Cooler
45731-1381	Servo Fuel Heater
45731-1382	Servo Fuel Heater
45731-1385	Servo Fuel Heater
45731-1386	Servo Fuel Heater
45731-1391	Idg Oil Cooler
45731-1392	Idg Oil Cooler
45731-1393	Idg Oil Cooler
45731-1444	Heat Exchanger: Main
458-56115-1	FWD AXLE
458-56115-1	Fwd Axle
458-56155-1	TORSION LINK
458-56155-1	Torsion Link
4592A010001	Frsov - Flow Regulating Shut-Off Valve
45D31	Differential Pressure Switch
45D32	Differential Pressure Switch
45D33	Fuel Press. Diff. Switch
45D5-1	Pressure Switch
45D5-2	Pressure Switch
45D5-series	Pressure Switch
4604KPS2740	Hp Press Switch
4611028900	Recirculation Fan (Gasper)
4626-1	Priority Valve Assy
463600-1001	Rudder Actuator, Upper

46363-1	Alternating Current Motor
463700-1001	Rudder Actuator, Lower
4638-1	Hyd Relief Valve
4675-3	Hydraulic Balanced Relief Valve
4679-3	Bootstrap Priority Valve
46E93-1	HOUSING BUTT
46E93-1	Housing Butt
46E93-2	HOUSING
46E93-2	Housing
47111-1171	Fuel/Oil Heat Exchanger
47111-1172	Fuel/Oil Heat Exchanger
47111-1191	Fuel/Oil Heat Exchngr.
47111-1201	Fuel Oil Cooler
47111-1203	Fuel/Oil Heat Exchngr.
47111-1204	Fuel/Oil Heat Exchngr.
47145-121	Actuator Assy
47145-133	Actuator Assy
47145-137	Actuator Assy
47145-147	Actuator Assy
47145-167	Actuator Assy
47147-500	Actuator Assy
47148-122	Actuator Assy
473873-1	Fire Detector Assemblies
473873-2	Fire Detector Assemblies
4777669-1	Piston
48114-1149	IDG Air Cooled Oil Cooler
4812-70	Stator And Housing Assembly
4813-002	Actuator
49000-5005	Check Valve
49-164-05	Spoilers Control Unit
49-164-06	Spoiler, Electronic Control Unit
49-164-20	Spoilers Control Unit
491-938	Actuator
491B1200041-001	Locking Assy Actuator
491B1200042-001	Locking Assy Actuator
491B1200043-001	Locking Assy Actuator
491B1200044-001	Locking Assy Actuator
49207-107	LOWER TORQUE
49207-107	Lower Torque
492143-001	EVC 3-2 and EVC 3-4 Engine Vane
49238-11	AXLE SLEEVE
49238-11	Axle Sleeve
4951023	Valve
4951078-507	Bungee
4953194-1	Anti-Surge Valve
4953195-1	Anti-Surge Valve
49600-13	Retraction Actuator Assy

4A7110	Oil Pressure Pump
4D132	Shut Of Valve
5000047-01	Bleed Control Valve
5000131-01	Fuel Manifold
5000132-01	Fuel Manifold
5000133-01	Fuel Manifold
5000134-01	Fuel Manifold
5000482	INBOARD WHEE
5001105-01	Oil Cooler
5001222-01	Stage 10 Air Solenoid Valve
5001396-01	Thermocouple Box and Cable (Tt7)
5001648-01	Stage 10 Air Solenoid Valve
5001T39G10	Main Fuel Control
5001T39G11	Main Fuel Control
5001T39G18	Main Fuel Control
5001T39G31	Main Fuel Control
5001T39G39	Main Fuel Control
5001T39G41	Main Fuel Control
50026001-1	Air Cooled Oil Cooler
5002844-01	Fuel Pressurizing and Dump/Drain Valve
5003130-01	Oil Cooler
50034001-1	Air Cooled Oil Cooler
5003704-1	Body
5003704-101	Body Assy
5005228-01	Fuel Manifold
5005228-02	Fuel Manifold
5005228-03	Fuel Manifold
5005229-01	Fuel Manifold
5005229-02	Fuel Manifold
5005229-03	Fuel Manifold
5005287-01	Fuel Filter
5006002A	Main Fuel Boost Pump
5006002B	Main Fuel Boost Pump
5006002C	Main Fuel Boost Pump
5006002D	Main Fuel Boost Pump
5006002E	Pump: Boost,Assembly
5006003B	Pumping Unit Assy
5006003C	Pumping Unit Assy
5006003D	Pump: Boost,Assembly
5006151A	Valve Motive Flow And Screen
5006151B	Valve
5006283A	Fuel Boost Pump
5006283B	Fuel Boost Pump
5006283C	Fuel Boost Pump
5006283D	Fuel Boost Pump
5006283E	Fuel Boost Pump
5006283F	Fuel Boost Pump

5006283G	Fuel Boost Pump
5006286A	Fuel Boost Pump
5006286B	Fuel Boost Pump
5006286C	Fuel Boost Pump
5006286D	Fuel Boost Pump
5006286E	Fuel Boost Pump
5006286F	Fuel Boost Pump
5006286G	Fuel Boost Pump
5006488A	Power Driven Rotary Pump
5006488B	Power Driven Rotary Pump
5006488C	Power Driven Rotary
5006488D	Power Driven Rotary Pump
5006488E	Power Driven Rotary Pump
5006488F	Power Driven Rotary Pump
5006488G	Power Driven Rotary Pump
5006514-01	Stage 10 Air Solenoid Valve
5006521-01	Immersion Thermocouple (Tt7)
5006522-01	Immersion Thermocouple (Tt7)
5006755-01	Oil Cooler
5006755-02	Oil Cooler
5006834 series	Fuel Gear Pump Assembly
5006834D	Fuel Gear Pump Assembly
5006834E	Fuel Gear Pump Assembly
5006834F	Fuel Gear Pump Assembly
5006834G	Fuel Gear Pump Assembly
5006834H	Fuel Gear Pump Assembly
5006834J	Fuel Gear Pump Assembly
5006834K	Fuel Gear Pump Assembly
5006834L	Fuel Gear Pump Assembly
5006834M	Fuel Gear Pump Assembly
50069001-1	Air Cooled Oil Cooler
500702-4620	Mixed Flow Fan
5007246A	Fuel Pump
5007246B	Fuel Pump
5007436A	Lube Pump
5007436B	Lube Pump
5007436C	Lube Pump
5008055-01	Oil Cooler
5008269B	Rotary Pump
5008269C	Rotary Pump
5008269D	Rotary Pump
5008269E	Rotary Pump
5008269F	Rotary Pump
5008269G	Rotary Pump
5008269H	Rotary Pump
5008437	PUMP AY-LUB/
5008591-1	Axle Sleeve

5008735D	Lp/Hp Fuel Pump A1
5008735E	Main Fuel Gear Pump
5008735F	Fuel Pump
5008735-series	Lp/Hp Fuel Pump A1
5009776D	Fuel Gear Pump Assembly
5009776E	Fuel Gear Pump Assembly
5009776F	Fuel Gear Pump Assembly
5009776G	Fuel Gear Pump Assembly
5009776H	Fuel Gear Pump Assembly
5009913B	Main Fuel Gear Pump
5009913C	Main Fuel Gear Pump
5009913D	Lp/Hp Fuel Pumps
5009913E	Main Fuel Gear Pump
5009913F	Lp/Hp Fuel Pumps
5009913G	Main Fuel Gear Pump
5009913-series	Lp/Hp Fuel Pump A5
5009980A	Rotary Pump
5009980B	Rotary Pump
5009980C	Rotary Pump
5009980D	Rotary Pump
5009982A	Rotary Pump
5009982B	Rotary Pump
5009982C	Rotary Pump
5009982D	Rotary Pump
5009984A	Power Driven Rotary Pump
5009984B	Power Driven Rotary Pump
5009984C	Power Driven Rotary Pump
5009986A	Power Driven Rotary Pump
5009986B	Power Driven Rotary Pump
5009986C	Power Driven Rotary Pump
5010216B	Lp/Hp Fuel Pump D5
5010216C	Lp/Hp Fuel Pump D5
5010216D	Lp/Hp Fuel Pump D5
5010216E	Lp/Hp Fuel Pump D5
5010216F	Lp/Hp Fuel Pump D5
5010216G	Lp/Hp Fuel Pump D5
5010216-series	Lp/Hp Fuel Pump D5
5010224A	Main Fuel Gear Pump
5010752-103	Fuel Actuated Booster Anti-Ice Valve
5010758-101	LPT Active Clearance Control Valve
5010758-103	LPT Active Clearance Control Valve
5010758-104	LPT Active Clearance Control Valve
5010759-101	Core Compartment Cooling Valve
5010759-102	Core Compartment Cooling Valve
5010759-103	Core Compartment Cooling Valve
5016KTU01	Sensor: Qty,Fuel Tank
50179-3A	Brake: Speed,Lever,Assembly

50196-13	Speed Brake Ctrl Assy
50196-15	Speed Brake Ctrl Assy
50-2-3100-00	HYD PRESS SW
503860-1	EEC Wiring Harnesses
504243-1	Resistance Temperature Detector Probe
504909-1	Permanent Magnet Alternator
504910-1	Permanent Magnet Alternator
5050973-101	Wing Thermal Anti-Ice Valve
5050T37G01	Variable Geometry Actuator
5050T37G02	Variable Geometry Actuator
5050T37Gseries	Variable Geometry Actuator
505344-1	Permanent Magnet Alternator
5059-2	Shuttle Valve
5059-4	Hydraulic Shuttle Valve
505P044-01	Fuel Distribution Valve
505P044-02	Fuel Distribution Valve
505P044-03	Fuel Distribution Valve
5060-3	Valve
5060-5	Valve: Assy
5060-6	Hydraulic Shuttle Valve
506412-1	Wiring Harnesses
506413-1	Wiring Harnesses
506414-1	Wiring Harnesses
506415-1	Wiring Harnesses
506416-1	Wiring Harnesses
50648-27	Transmitter: Water Qty
506569-1	Permanent Magnet Alternator
5068D100-3	Electromechanical Rotary Actuator
5068D100-5	Electromechanical Rotary Actuator
5068D100-7	Actuator, Passenger Door Rotary
5075D100-3	Motor: Ac
5076D100-17	Motor: Electric,Ram Air
5076D100-7	Motor, Ram Air Turbine
5084-1	Hydraulic Shuttle Valve
508938-1	Wiring Harnesses
50E40-4	Shutoff Valve Assembly
50E40-5	VALVE -AIR I
50E40-6	Shutoff Valve Assembly
50P029	EGT (T4.95) Thermocouple Probe
50P066	EGT (T4.95) Thermocouple Probe
50R295	Lube Pump
510-0030-1	IDG Shutoff Valve Assembly
510-0031-1	Valve Assy., Air Shut Off
510-0031-2	Valve - Air Shut Off
510846-1	Permanent Magnet Alternator
51154-02	Pump Motor Package
51154-03	Pump Motor Package

51154-04	Pump: Electric
51154-05	Pump: Electric
51164-01	Variable Delivery Hydraulic Pump
51164-02	Variable Delivery Hydraulic Pump
51164-03	Variable Delivery Hydraulic Pump
51164-04	Variable Delivery Hydraulic Pump
51164-05	Variable Delivery Hydraulic Pump
51164-06	Variable Delivery Hydraulic Pump
51166-01	Pump Motor Package
51166-02	Hydraulic Pump
51166-03	Hydraulic Pump
51166-04	Hydraulic Pump
511A0000-07	Power Control Unit
512337-1	Permanent Magnet Alternator
512A0000-02	Block Valve
512A0000-03	Block Valve
512A0000-04	Block Valve
512A0000-2	Block Valve
512A0000-3	Block Valve
512A0000-4	Block Valve
51300-1	Rudder Actuator
5132-00-1	Normally Open Anti Ice Shutoff Valve
5140017-101	Core Compartment Cooling Valve
514A0000-03	Valve Block
515090-4	Alternating Current Geared Motor
515090-5	Alternating Current Geared Motor
515090-6	Alternating Current Geared Motor
516538-3	A/C Motor
516538-4	A/C Motor
516A0000-02	Torque, Limiter
516P636-01	Fuel Distribution Valve
516P636-02	Fuel Distribution Valve
51725-01	HANGER
51725-01	Hanger
517794-1	Exhaust Gas Temperature Probe
519806-3	Dc-Motor
519852-2	Engine Starter Motor
519852-3	Engine Starter Motor
519852-4	Engine Starter Motor
519858-1	Engine Starter Motor
519858-2	Engine Starter Motor
519858-3	Engine Starter Motor
519858-4	Engine Starter Motor
519858-5	Engine Starter Motor
519858-6	Engine Starter Motor
519858-7	Engine Starter Motor
519858-8	Engine Starter Motor

51A060	Wire Harnesses (Airbus Aircraft Installation)
51A157	Wire Harness (Douglas Aircraft Installation)
51R159	Lube Pump
52105-103	TORQUE TUBE
52105-103	Torque Tube
5224-082	Valve Assembly, Vsv Pilot
5225-216	Valve Assembly
52335-	Piston
52350-	Steering Actuator
52350-5	Steering Actuator
52350-6	Steering Actuator
5252-122	Fuel Pressurizing And Dump Valve
5262100	Actuator: Door
53-0014	ACTUATOR
53065-07	Pump: Hyd,Variable Delivery
53078-3	Speed Brake
53078-3P	SPEED BREAK
53080	Pump - Electric Motor Pump (Emp)- Hydraulic
53080-02	Pump - Electric Motor Pump (Emp)- Hydraulic
53080-03	Pump - Electric Motor Pump (Emp)- Hydraulic
53080-04	Pump - Electric Motor Pump (Emp)- Hydraulic
53080-05	Pump - Electric Motor Pump (Emp)- Hydraulic
532A0000-04	Torque Limiter
533A0000-02	Right Angle Gearbox
533A0000-03	Gearbox
537L68217-019	Switcher Valve
5394-02	Valve Flow
53978-	Speed Brake
53T732	CONNECTOR
540-0001	Bleed Air Valve
540-0001-1	Bleed Air Valve
540-0001-2	Bleed Air Valve
540-0001-3	Bleed Air Valve
540-0001-4	Bleed Air Valve
540-0001-5	Bleed Air Valve
540-0001-6	Bleed Air Valve
540-0002-4	Turbine Cooling Air Valve
540-0003-4	Turbine Cooling Air Valve
540-0566-1	Turbine Cooling Air Valve
540-0710-1	Shutoff Valve Assembly
540-0710-2	Shutoff Valve Assembly
540-0712-1	Shutoff Valve Assembly
540-0712-2	Valve - Air Idg Shut Off
540-0712-3	Shutoff Valve Assembly
540-0715-1	Core Compartment Cooling Valve
540-0715-2	Core Compartment Cooling Valve
540-0715-3	Core Compartment Cooling Valve

540-0715-4	Core Compartment Cooling Valve
540-0717-1	Shutoff Valve Assembly
540-0717-2	Shutoff Valve Assembly
540-0719-1	IDG Shutoff Valve Assembly
540-0774-1	Actuator
540-1479-6	High Pressure Bleed Valve
540158-10-1	Actuator
540158-11	Actuator
540-1581-6	Mid Stage Beed Valve Dual Solenoid
540158-4	Actuator
54-079	Accmltr.
541248-3	Actuator, Ro
541248-7	Actuator
541674-1-1	Air Modulation Linear Actuator
541674-3	Air Modulation Linear Actuator
541674-4	Actuator
541674-5	Air Modulation Linear Actuator
541674-6	Air Modulation Linear Actuator
541962-4	Electromechanical Rotary
544086-1-1	Actuator
54-456	Axle Sleeve
54-456-1	Axle Sleeve
5-44561-16	Flight Spoiler Power Control Unit Assy
54-456-2	Axle Sleeve
54-456-2	Sleeve
544622-2	Actuator
54-463	Axle Sleeve
544646-1	L.E Rotary Actuator
54-472	Axle Sleeve
54-472	Axle Sleeve
54-480	AXLE SLEEVE,
54-480	Axle Sleeve
544800-2	Actuator
544964-1	Rotary Actuator
54-592	Axle Sleeve
54-592-1	Axle Sleeve
54-593-1	Axle Sleeve
5500300-1	Actuator
5500300-11	Actuator
5500300-13	Actuator, Lo
5500300-15	Assy-Ail. Lockout
5500300-17	Actuator
5500300-17D	Actuator
5500300-19	Actuator: Aileron,Lockout
5500300-21	Actuator
5500400-901	Actuator
5500500-305	Actuator Assy, Flap Load

55022001-1	Fule Oil Heat Exchan
55022001-11	Fuel Cooled Oil Cooler
55022001-1-11	Fule Oil Heat Exchan
55025001-1	Fule Oil Heat Exchan
55030001-11	Fule Oil Heat Exchan
55076-02	Hydraulic Pump
55076-03	Hydraulic Pump
55098-01	Hydraulic Pump
55098-04	Hydraulic Pump
55098-05	Hydraulic Pump
55098-06	Hydraulic Pump
55098-07	Hydraulic Pump
55098-08	Engine Driven Pump
5537000-2	Transcowl Locking System
5537000-7	Transcowl Locking System
55E27-1	HOUSING BUTT
55E27-1	Housing Butterfly
56019-003	Rotary Actua
5616554-5503	Bogie Trim Cylinder
56193-01	Pump Assy
56-2500-2	Adaptor: Refueling
5641734-5002	Aileron Power Control
564651-001	EVC 3-2 and EVC 3-4 Engine Vane
568-1-25663-001	Boost Pump
568-1-25665-001	Boost Pump
568-1-25666-001	Cannister Assy
568-1-26713	Fuel Booster Pump
568-1-26713-001	Fuel Booster Pump
568-1-26713-002	Fuel Booster Pump
568-1-26713-003	Fuel Booster Pump
568-1-26713-004	Fuel Booster Pump
568-1-26713-005	Fuel Booster Pump
568-1-27170-001	Fuel Booster Pump
568-1-27170-002	Fuel Booster Pump
568-1-27171-002	Fuel Booster Pump
568-1-27202	Fuel Booster Pump
568-1-27202-001	Fuel Pump
568-1-27202-002	Fuel Pump
568-1-27202-005	Fuel Pump
568-1-27202-006	Fuel Pump
568-1-27202-007	Fuel Pump
568-1-27202-02R	Fuel Pump
568-1-27202-03R	Fuel Pump
568-1-27202-05R	Fuel Pump
568-1-27203-002	Canister Pump Fuel
568-1-27244-002	Canister Pump Fuel
568-1-28300-001	Fuel Pump

568-1-28300-002	Fuel Pump
568-1-28300-003	Fuel Pump
568-1-28300-004	Fuel Pump
568-1-29115-002	Motor: Boost,Fuel Pump
568-1-29115-004	Fuel Boost Pump
568-1-29116-001	Housing: Pump,Fuel Boost
568-1-29117	Pump, Fuel, Override/Jettison
568-1-29117-001	Fuel Pump
568-1-29117-002	Motor: Boost,Fuel Pump
568-1-29117-003	Fuel Pump
568-1-29118-001	Housing: Pump,Fuel Boost
568-1-29407-002	Pump: Motor
568-1-29408-001	Housing: Pump
568-1-29507-001	Housing: Pump,Fuel Boost
568-1-30080-001	Fuel Pump
568-1-30080-002	Fuel Pump
568-1-30522-001	Fuel Pump
568-1-30685-001	Fuel Pump
569668	Motor, Hydraulic
569670	Pump
569672	Constant DisplacementHydraulic Motor
56B17E	Temperature Transducers and Thermocouple Sensor
56B3A11	Temperature Transducers and Thermocouple Sensor
56B98	Oil Temperature Resistance Temperature Detectors
56BK32K	Temperature Transducers and Thermocouple Sensor
56T083-01	Duct: Assy
570031	VALVE BLOCK
5701195-501	Butterfly Valve
5701803	Ball Screw Assy
5702224	BALLSCREW GR
5702224U1	Ballscrew As
5702224U2	Ballscrew Assy
5714715-5512	Rh Aileron Power Control
57155A	Pump And Motor
5715610-5501	Mainfold Assy.
57186-01	Pump Motor Package
57186-02	Pump Motor Package
57186-03	Pump Motor Package
57186-04	Pump Motor Package
57186-05	Pump Motor Package
57186-06	Pump Motor Package
57186-07	Pump Motor Package
57186-10	Ac Motor Driven Pump System A And
57186-11	Ac Motor Driven Pump System A And
5-73196-4	COLLAR ASSY
5-73196-4	Collar Assy
5777869-5001	Valve Assy Dual Control

5779-1	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
5781-1	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
579V200	Fuel Manifold Drain Valve
579V200-2	Fuel Manifold Drain Valve
579V200-3	Fuel Manifold Drain Valve
580-235-001	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
580-235-series	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
580-258-002	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
580-258-003	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
580-268-012	Variable Bleed Valve Feedback Cable
580-268-041	Feedback Cable, Variable Bleed Valve, Vbv
580-278-002	Feedback Cable, Variable Stator Vane, Vsv
580-278-005	Feedback Cable, Variable Stator Vane, Vsv
580-278-series	Feedback Cable, Variable Stator Vane, Vsv
580-285-051	Feedback Cable, Variable Stator Vane, Vsv
580-285-052	Feedback Cable, Variable Stator Vane, Vsv
580-285-054	Feedback Cable, Variable Stator Vane, Vsv
580-285-056	Feedback Cable, Variable Stator Vane, Vsv
580-285-058	Feedback Cable, Variable Stator Vane, Vsv
580-285-151	Feedback Cable, Variable Stator Vane, Vsv
580-285-152	Feedback Cable, Variable Stator Vane, Vsv
580-285-153	Feedback Cable, Variable Stator Vane, Vsv
58172	Hydraulic Motor
58172-01	Motor: Hyd
58173-03	Hydraulic Motor Flap
5-83015-3	ST. KNUCKLE
5-83015-3	St. Knuckle
5830201-106	Turbine Case Cooling Air Actuator
5830201-107	Turbine Case Cooling Air Actuator
5830201-108	Turbine Case Cooling Air Actuator
5830201-109	Turbine Case Cooling Air Actuator
5830201-110	Turbine Case Cooling Air Actuator
5830201-111	Actuator-Turb Case Clg
5830202-101	Turbine Case Cooling (LPT) Air Valve
5830202-102	Turbine Case Cooling (LPT) Air Valve
5830202-103	Turbine Case Cooling (LPT) Air Valve
5830202-104	Turbine Case Cooling (LPT) Air Valve
5830202-105	Turbine Case Cooling (LPT) Air Valve
5830202-106	CASE COOLING
5830202-108	Valve-Turb.Case,Clg Air
5830203-104	Valve-Turb.Case,Clg Air
5830205-102	Shutoff Valve
5830212-101	Compressor Bleed Valve
5830212-102	Compressor Bleed Valve
5830212-104	Compressor Bleed Valve
5830213-101	Valve Turbin
5832114-101	BODY VALVE

5832114-101	Body Valvevalvee
5833417-5	BODY ASSEMBL
5833419-2	BODY
5833419-2	Body
5840207-103	Compressor Bleed Valve
5840207-104	Valve, Regulating, Fluid Pressure
5850265-103	ECU Cooling Valve
5853161-1	Body
5853161-101	Body Assy
5853161-101	Body Assy
5853162-1	Body
5853162-1	Body
5853162-1	Body Assy
5853162-101	Body Assy
5853270-101	SHAFT
5860010-103	Stage 10 To Hpt Air Valve
5860010-106	Stage 10 To Hpt Air Valve
5860010-108	Valve Assy., 10Th. Stage To Hpt
5860016 Series	HPT/LPT ACC Valve Assembly
5860016-107	Hpt/Lpt Acc Valve Assembly
5860016-109	Hpt/Lpt Acc Valve Assembly
5860016-111	Hpt/Lpt Acc Valve Assembly
5860016-113	Hpt/Lpt Acc Valve Assembly
5860016-115	Hpt/Lpt Acc Valve Assembly
5860016-116	Hpt/Lpt Acc Valve Assembly
5860016-117	Hpt/Lpt Acc Valve Assembly
5860016-118	Hpt/Lpt Acc Valve Assembly
5860016-119	Hpt/Lpt Acc Valve Assembly
5860016-120	Hpt/Lpt Acc Valve Assembly
5860016-121	Hpt/Lpt Acc Valve Assembly
5860016-122	Hpt/Lpt Acc Valve Assembly
5860016-123	Hpt/Lpt Acc Valve Assembly
5860016-124	Hpt/Lpt Acc Valve Assembly
5860016-125	Hpt/Lpt Acc Valve Assembly
5860016-126	Hpt/Lpt Acc Valve Assembly
5860016-127	Hpt/Lpt Acc Valve Assembly
5860016-128	Hpt/Lpt Acc Valve Assembly
5860016-129	Hpt/Lpt Acc Valve Assembly
5860016-130	Hpt/Lpt Acc Valve Assembly
5860016-131	Hpt/Lpt Acc Valve Assembly
5860016-132	Hpt/Lpt Acc Valve Assembly
5860016-133	Hpt/Lpt Acc Valve Assembly
5860016-134	Hpt/Lpt Acc Valve Assembly
5860016-139	Valve - Air Hpt/Lpt Acc
5860016-140	Hpt/Lpt Acc Valve Assembly
5860016-141	Hpt/Lpt Acc Valve Assembly
5860016-142	Hpt/Lpt Acc Valve Assembly

5860017 Series	HPT/LPT ACC Valve Actuator Assembly
5860017-109	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-111	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-113	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-114	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-115	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-116	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-117	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-118	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-119	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-120	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-122	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-124	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-125	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-127	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-129	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-130	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-131	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-132	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-133	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-134	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-135	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-136	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-137	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-138	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-139	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-140	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-141	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-142	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-143	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-144	Hpt/Lpt Clearance Ctl Valve Actuator
5860017-series	Hpt/Lpt Active Clearance Control Valve Actuator A1/A5
5860040-104	Turbine Clearance Control Valve
5860040-105	Actuator
5860040-106	Turbine Clearance Control Valve
5860040-107	Valve - Turb Clearance
5860040-series	Turbine Clearance Control Valve
5870141-105	Solenoid Val
5870153-101	Clearance Control Valve
587A0000-01	Gearbox
587A0000-02	Gearbox
5880344-107	Valve, Butterfly
5880344-109	Valve, Butterfly
5880344-111	Valve, Butterfly
5880357-104	Accumulator
5880357-105	Accumulator
5880357-106	Accumulator

5880357-107	Actuator, Electro-Mechanical, Line
5880358-111	Valve, Compr & Turb Valve, Butterfly
5880358-112	Valve, Compr & Turb Valve, Butterfly
5883670-101	BODY ASSY LP
5883670-101	Body Assy Lp
5883676-101	BODY ASSY HP
5883676-101	Body Assy Hp
5890421-106	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-108	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-114	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-116	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-118	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-120	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-122	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-124	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5890421-126	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5900-12	Centrifugal Fuel Purifier
5900-16	Centrifugal Fuel Purifier
5900-17	Centrifugal Fuel Purifier
5910478-101	HPT/LPT ACC Valve Assembly
5910478-103	HPT/LPT ACC Valve Assembly
5910479-102	Hpt/Lpt Active Clearance Control Valve Actuator D5
5910479-103	Hpt/Lpt Active Clearance Control Valve Actuator D5
5910479-104	Hpt/Lpt Active Clearance Control Valve Actuator D5
5910479-105	Hpt/Lpt Active Clearance Control Valve Actuator D5
5910479-series	Hpt/Lpt Active Clearance Control Valve Actuator D5
5910500-106	High Pressure Turbine Active Clearance Control Valve
5910503-102	Low Pressure Turbine Active Clearance Control Valve
5910503-105	Low Pressure Turbine Active Clearance Control Valve
5910504-103	Core Compartment Cooling Valve
5910504-104	Core Compartment Cooling Valve
5910504-105	Core Compartment Cooling Valve
5910514-104	Valve: Nacelle Vent
5910524-126	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910524-128	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910524-130	Valve, Safety Relief Butterfly
5910525-106	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-107	Valve, Intake Anti-Ice
5910525-108	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-109	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-114	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-115	Valve, Intake Anti-Ice
5910525-116	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-117	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-118	Valve, Intake Anti-Ice
5910525-119	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-119-	Valve, Intake Anti-Ice

5910525-120	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-121	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-122	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-123	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-124	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-125	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-126	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-127	essure Turbine Case Cooling Air Valve (Modulating Active Clearance Control V
5910525-139	Valve, Safety Relief Butterfly
5910525-141	Valve, Intake Anti-Ice
591200-31	Disconnect-Self Sealing Hydraulic
591200-41	Disconnect-Self Sealing Hydraulic
591200-51	Disconnect-Self Sealing Hydraulic
5912378-1	Support
5912415-4	Lube Oil Filter Assembly
5913242-3	Oil Reservoir Assembly
5913900-5517	Actuator
5914066-5583	Actuator
5914190-5503	Valve
5914387-527	Actuator
5915159-9	Rat Pump, Hydraulic
5917267-5509	Tail Cone Hydraulic Valve Assy
5918125-501	Damper
5918161-5507	Valve
5919985-5001	Valve
5925379-523	Actuator
5930638-101	Low Pressure Turbine Case Cooling Valve
5930638-102	Low Pressure Turbine Case Cooling Valve
5930638-103	Low Pressure Turbine Case Cooling Valve
5930639-102	High Press. Turbn. Case Cooling Valve
5930639-103	High Press. Turbn. Case Cooling Valve
5930639-104	High Press. Turbn. Case Cooling Valve
5930643-106	Start Transient Bleed Valve
5936919-5001	Manifold
5937036-5001	Act. Mlg
5937036-5501	Act. Mlg
5937036-5503	Actuator
5937036-5505	Act. Mlg
5937036-5507	Act. Mlg
5937036-5507K	Actuator
5937038-3	Rod
5937038-5	Rod
5937038-505	Rod Assy
5937038-9	Rod
593764-001	Prbc
5938045-1	Actuator
5939074-5501	Actuator

5950009-102	Start Transient Bleed Valve
5950009-103	Start Transient Bleed Valve
5950041-105	High Pressure Compressor Bleed Valve
5950041-107	High Pressure Compressor Bleed Valve
5950041-108	High Pressure Compressor Bleed Valve
5950041-series	High Pressure Compressor Bleed Valve A5/D5
5951639-5001	Actuator
59600-5003	Solenoid Valve
59600-5004	Solenoid Valve
59600-5005	Solenoid Valve
59600-5006	Solenoid Valve
59600-5007	Solenoid Valve
59600-5008	Solenoid Valve
59600-5009	Solenoid Valve
59600-5010	Solenoid Valve
59600-5011	Solenoid Valve
5971330-5001	Act. Mlg
5971330-5501	Act. Mlg
5980015-103	No. 4 Bearing Scavenge Valve
5L0022	No 4 Bearing Compartment Scavenge Valve
5L0026	No.4 Bearing Pressure Transducer
5L0027	Actuator, L.P.C. Bleed Slave, A1
5L0038	Lpc Bleed Master Actuator
5L0039	L.P.C. Bleed Slave Actuator
5L0043	Actuator, L.P.C. Bleed Master, D5
5L0044	Actuator, L.P.C. Bleed Slave, D5
5L0054	Fuel Diverter And Return Valve
5L0056	Fuel Diverter And Return Valve
5L0057	Lpc Bleed Master Actuator
5L0059	Actuator, L.P.C. Bleed Master, A1
5L0061	Fuel Diverter And Return Valve
5L0065	Fuel Diverter And Return Valve
5L0074	Fuel Diverter And Return Valve
5L0076	Valve Fuel Filter Diverter And Return
5R5025	Pressure Oil Filter Element
5U0026	Oil Temperature Thermocouple
5U0030	Oil Temperature Thermocouple
6000174	Dual Wheel Speed Transducer
6000189-3	Anti-Skid Valve
6000189-4	Anti-Skid Valve
60007-1	Fuel Valve
60010-000	IDG Air/Oil Cooler
600200-18	Actuator Assy
600200-19	Actuator Assy
60029-1U1501-3	Valve: Isolation
60029-1U1503-2	Valve: Control,Directional
6005-1	Solenoid

6006079-2	Actuator
6006081-2	Transducer-Wheel Speed
600700-00-501	Trim Air Valve
6007293-4	Anti Skid Control Valve
6007294-1	Brake Metering Unit
6007294-2	Brake Metering Unit
6007296-2	Valve
60101A010001	Engine Anti-Ice Valve
601200-02	Actuator
601300-1	Linear Actuator
601300-11	Linear Actuator
6013J0001-01	Actuator, Linear
6013K0001-01	Actuator
60141-000	Fuel Cooled VSCF Oil Cooler
60160-1	Pressure Fueling Shutoff
60160-2	Pressure Fueling Shutoff
60160-4	Pressure Fueling Shutoff
60160-5	Valve, Shut-
60160-55	Pressure Fueling Shutoff
60160-7	Pressure Fueling Shutoff
601R14250-17	ROD ASSY
601R14250-17	Rod Assy
601R60002-985	Anti-Ice Pressure Relief Valve
601R75101-1	Unit, Power Control (Rudder)
601R75102-3	Pwr Cntrl
60213-14	Receptacle - Fueling
60213-15	Receptacle - Fueling
6023100-2	Actuator, Spoiler Override
6026D0001-01	Actuator, Cargo Door
60-331	Fuel Pump
60-331A	Fuel Pump
60-369	Fuel Booster Pump As
60369A	Fuel Booster Pump As
60-369A	Fuel Pump
60-371D	Fuel Pump
605290-4-2	COOLING FAN
6052T06P03	Main Fuel Gear Pump
6052T06P05	Main Fuel Gear Pump
605457-2	Motor Driven Centrifugal Fan
605457-3	Fan Assy, Centrifugal Air Conditioning
605457-7	Blower, Vacu
605457-8	Motor Driven Centrifugal Fan
605457-9	Motor Driven Centrifugal Fan
60-551	Fuel Pump
60590-000	ESM101-1 Solenoid Drive Controller Assembly
606515-1	Valve: Vacuum,Tank,Sr
606622-1	Cabin Air Recirculation Fan

606622-2	Cabin Air Recirculation Fan
606622-3	Fan, Air Recirculation
606622-4	Cabin Air Recirculation Fan
606707-1	Fan: Motor Driven,A/C
606772-1	Cabin Air Recirculation Fans
606772-2	Cabin Air Recirculation Fan
606772-3	Fan Assy
606772-4	Fan Assy
606772-5	Fan Assy
606772-6	Fan Assy
606802-2	Blower: Vacuum,Waste Tank
606832-10	Cabin Pressure Outflow Valve
606832-11	Cabin Pressure Outflow Valve
606832-12	Cabin Pressure Outflow Valve
606832-13	Cabin Pressure Outflow Valve
606832-14	Cabin Pressure Outflow Valve
606832-15	Cabin Pressure Outflow Valve
606832-16	Cabin Pressure Outflow Valve
606832-17	Cabin Pressure Outflow Valve
606832-18	Cabin Pressure Outflow Valve
606832-20	Cabin Pressure Outflow Valve
606832-21	Outflow Valve
606832-5	Cabin Pressure Outflow Valve
606832-6	Cabin Pressure Outflow Valve
606832-7	Cabin Pressure Outflow Valve
606832-8	Cabin Pressure Outflow Valve
606832-9	Cabin Pressure Outflow Valve
606836-6	Valve, Cabin Pressure Outflow
60-70103	Pump, Fuel Jettison
60-70104	Pump, Fuel Jettison
60-70113	Pump, Fuel Jettison
60-703	Fuel Pump
60-70303	Pump, Fuel Jettison
60-70303-3	Pump, Fuel Jettison
60-70305	Motor-Impeller Subassembly
60-70305-1	Motor-Impeller Subassembly
60-70306	Pump, Fuel Jettison
60-70306-3	Pump, Fuel Jettison
60-70307	Pump, Fuel Jettison
60-70307-3	Pump, Fuel Jettison
60-70308	Pump, Fuel Jettison
60-70308-3	Pump, Fuel Jettison
60-70309	Pump, Fuel Jettison
60-70309-3	Pump, Fuel Jettison
60-703103	Pump, Fuel Jettison
60-703103-3	Pump, Fuel Jettison
60-703104	Pump, Fuel Jettison

60-703104-3	Pump, Fuel Jettison
60-703113	Pump, Fuel Boost
60-703113-3	Pump, Fuel Jettison
60-70313	Pump, Fuel Jettison
60-703-2	Fuel Pump
60-703200	Motor-Impeller Subassembly
60-703200-1	Fuel Pump
60-703-3	Fuel Pump
60-703-4	Fuel Pump
60-703A	Pump, Fuel Jettison
60-721	Motor-Impeller Subassembly
60-72101	Motor-Impeller Subassembly
6072101-1	Fuel Jettison Pump
60-72101-2	Fuel Jettison Pump
6072101-3	Fuel Jettison Pump
60-72101-3	Fuel Jettison Pump
6072101-3A	Fuel Jettison Pump
60-72101-3A	Fuel Jettison Pump
60-72101-3B	Fuel Jettison Pump
60-72101-4	Fuel Jettison Pump
60-72101-5	Fuel Jettison Pump
60-721A	Motor-Impeller Subassembly
60-723	Motor-Impeller Subassembly
60-72301	Motor-Impeller Subassembly
60-72301-3	Pump, Fuel Jettison
60-72301-4	Pump, Fuel Jettison
60-72301-5	Pump, Fuel Jettison
60-723A	Motor-Impeller Subassembly
607510-3	Box 35 Deg Temp Sense Control
607518-2	Pack/Zone Temperature Controller
60-755	Fuel Booster Pump As
60-75501	Motor Impeller Subas
60-75501-1	Motor Impeller Subas
60-75501-4	Motor Impeller Subas
60-75501-5	Motor Impeller Subas
60-75502	Housing: Fuel Pump
60-75503	Motor Impeller Subas
60-75503-1	Motor Impeller Subas
60-75503-4	Motor Impeller Subas
60-75503-5	Motor Impeller Subas
60-75504	Hydraulic Va
60-755-1	Fuel Booster Pump As
60-755100	Motor Impeller Subas
60-755100-2	Fuel Boost Pump
60-755100-4	Fuel Boost Pump
60-755100-5	Pump: Fuel Boost, Motor-Impeller, Svc
60-755-2	Fuel Booster Pump As

60-755-4	Fuel Booster Pump As
6078T39P01	Main Fuel Gear Pump
6078T39P02	Main Fuel Gear Pump
6078T39P03	Main Fuel Gear Pump
6078T39P04	Main Fuel Gear Pump
60-843	Fuel Boost Pump Housing Assy
60-843-1	Fuel Boost Pump Housing Assy
60-843-2	Fuel Boost Pump Housing Assy
60-843-2M	Fuel Boost Pump Housing Assy
60-845	Fuel Boost Pump Housing Assy
60-845-1	Fuel Boost Pump Housing Assy
60-845-2M	Fuel Boost Pump Housing Assy
60-847	Pump, Fuel Boost
60-847-1A	Fuel Boost Pump
60-847-2	Fuel Boost Pump
60-847-3	Hydraulic Va
60-847-4	Fuel Boost Pump
60-989	Fuel Boost Pump
60-989	Fuel Pump
60-98901	Housing Subassembly
60-98901	Fuel Pump
60-98901A	Housing Subassembly
60-98901A	Fuel Pump
60-98902	Fuel Pump
60-98902A	Fuel Pump
60-98904	Fuel Boost Pump
60-98904	Fuel Pump
60-98904A	Fuel Boost Pump
60-98904A	Fuel Pump
60-98905	Housing: Pump,Fuel Booster,Sub-Assembly
60-98905	Fuel Pump
60-98906	Fuel Pump
60-98906A	Fuel Boost Pump
60-98906A	Fuel Pump
60-98907	Pump: Housing,Assembly
60-98908	Fuel Boost Pump
60-989-1	Fuel Boost Pump
60-989-1	Fuel Pump
60-989100	Fuel Override Pump
60-989100-1	Fuel Override Pump
60-989100-2	Fuel Override Pump
60-989100-3	Fuel Override Pump
60-989100-4	Motor: Impeller,Fuel Override/Boostpump
60-989100-5	Fuel Override Pump
60-989-2	Fuel Boost Pump
60-989-3	Fuel Boost Pump
60-989-4	Fuel Boost Pump

60-989-5	Fuel Boost Pump
60-989-6	Fuel Boost Pump
60-989-7	Fuel Boost Pump
60-98976	Fuel Boost Pump
60-98976-1	Fuel Boost Pump
60-98976-2	Fuel Boost Pump
60-98976-4	Fuel Boost Pump
60-98976-5	Fuel Boost Pump
60-989-8	Fuel Boost Pump
60B00026-81	Flow Control Valve
60B00210-2	Nose Steering Metering Valve
60B00210-4	Nose Steering Metering Valve
60B00210-5	Nose Steering Metering Valve
60B00210-6	Nose Steering Metering Valve
60B00216-4	Landing Gear Selector Valve
60B00216-5	Landing Gear Selector Valve
60B00222-2	Nose Gear Door Actuator
60B00222-3	Nose Gear Door Actuator
60B00230-1	Nose Gear Door Actuator
60B00230-2	Nose Gear Door Actuator
60B00230-3	Nose Gear Door Actuator
60B00238-13	Valve Edp Su
60B00304-1	Actuator
60B00304-3	Actuator, Ca
60B00304-5	Actuator, Ca
60B80028-10	Brake-Hydr
60B80029-10	Landing Gear Door Rotary Actuator
60B80029-11	Landing Gear Door Rotary Actuator
60B80029-7	Landing Gear Door Rotary Actuator
60B80029-8	Landing Gear Door Rotary Actuator
60B80029-9	Landing Gear Door Rotary Actuator
60B80042-25	Pneumatic Drive Actuator
60B80042-26	Pneumatic Drive Actuator
60B80042-33	Pneumatic Drive Actuator
60B80042-34	Pneumatic Drive Actuator
60B80042-35	Pneumatic Drive Actuator
60B80042-36	Pneumatic Drive Actuator
60B80042-37	Pneumatic Drive Actuator
60B80042-38	Pneumatic Drive Actuator
60B89004-1	Fuel Boost Pump
60B89004-1	Fuel Pump
60B89004-10	Motor-Impeller Subassembly
60B89004-11	Motor-Impeller Subassembly
60B89004-12	Fuel Override Pump Motor-Impeller
60B89004-13	Motor-Impeller Subassembly
60B89004-14	Boost Pump
60B89004-16	Boost Pump

60B89004-1A	Fuel Boost Pump
60B89004-1A C	Fuel Pump
60B89004-2	Fuel Pump
60B89004-21	Fuel Pump
60B89004-4	Motor-Impeller Subassembly
60B89004-41	Motor-Impeller Subassembly
60B89004-5	Fuel Boost Pump
60B89004-6	Motor-Impeller Subassembly
60B89004-61	Fuel Pump
60B89004-7	Fuel Boost Pump
60B89004-8	Motor-Impeller Subassembly
60B89004-9	Motor-Impeller Subassembly
60B92400-3	Switch, Fuel Pump Discharge
60B92400-7	Switch
60B92404	Volute Housing
60B92404-1	Volute Housing
60B92404-103	Volute Housing
60B92404-104	Volute Housing
60B92404-2	Volute Housing
60B92404-3	Volute Housing
60B92404-4	Volute Housing
60B92404-403	Volute Housing
60B92404-404	Volute Housing
60B92404-5	Volute Housing
60B92404-6	Volute Housing
60B92404-7	Fuel Boost Pump Impellar Assy
60B92404-8	Fuel Boost Pump Impellar Assy
60B92602-12	Valve Unit
60B92602-13	Valve Unit
60B92602-14	Control Unit
60B92602-16	Valve Unit
60B92602-17	Control Unit
60B92602-21	Control Unit
60B92602-9	Control Unit
60B92603	Fuel Pump
60B92603-17	Fuel Pump
60B92603-18	Fuel Jettison Pump Motor
60B92603-21	Fuel Pump
60B92603-22	Motor-Impeller Subassembly
60B92603-25	Fuel Pump
60B92603-5	Housing Subassembly
60B92603-5	Fuel Pump
60B95404-103	Fuel Pump
60B98803-5	Air Intake Actuator
60B98803-6	Air Intake Actuator
6137-3	Actuator, Rudder Trim
6137-5	Actuator

6-1404-0000-4	Hydraulic Hand Pump
6-1404-0102-4	Hydraulic Hand Pump
615000-1001	Main Gear Steering Lock Actuator
615000-1002	Main Gear Steering Lock Actuator
616400-1007	Reservoir Assy-Bootstrap (Left-Right)
616500-1007	Reservoir Assy - Bootstrap (Center)
616600-1007	Filter Module - Pressure
616700-1007	Hydraulic Accumulator
616800-1005	Module-Case Drain Filter
616800-1007	Module-Case Drain Filter
617100-1005	Assembly-Hyd Fill Select
6190-1	Hydraulic, Fuse
61B43502-044	WIRE BUNDLE
61B43504-056	WIRE BUNDLE
61B43510	WIRE BUNDLE
62015-1	Valve, Float Vent
62015-3	Valve, Float Vent
622634	Motor, Hydraulic
62303	Subassy
623337	Pump, Hydraulic
6239228-1	Duct Vent Valve
623V100-1	T/R Hand Wind Mechanism
623V100-2	T/R Hand Wind Mechanism
624014-2	Sensor Pack: Temp
624016-2	Temp Sensor
624022	ADAPTERBLK
625868-1	Blower
625928-3	Sensor: Compressor Outlet
625946-10	Pack Temperature Controller
625946-8	Pack Temperature Controller
625946-9	Pack Temperature Controller
62702-1	Position Indicating Switch
6271-1	Fuse
62716-1	Position Indicating Switch
62716-2	Position Indicating Switch
62716-5	Position Indicating Switch
62716-6	Position Indicating Switch
6272-1	Hyd Fuse, Volumetric
62721-1	Position Indicating Switch
62726-1	Position Indicating Switch
6273-1	Hyd Fuse, Volumetric
6273-5	Hyd Fuse, Volumetric
62742-1	Position Indicating Switch
62744-1	Position Indicating Switch
62744-3	Position Indicating Switch
62765-2	Pump: Ar
630124-08	Reservoir

630124-11	Reservoir
63035	Hydraulic Motor/Pump
63041-06	Motor-Pump,Rev. Hydraulic
630500-02	Cargo Door Actuator
630500-04	Actuator, Ru
630500-06	Cargo Door Actuator
630500-07	Actuator, Ru
6305J0001-01	Cargo Door Actuator
6315G0001-01	Electric Powered Spring Load
6315H0001-01	Elect Powered Self Retract Roller A
6315J0001-01	Electric Powered Roller Assy
63169	PTU PUMP ASS
6319A0001-02	Drive Unit
63203072-2	Check Valve
63216064-3	Prsov
63216066-4	Anti Ice Valve
6322A0001-04	Actuator, Rotary
6323A0001-02	Actuator, Spoiler Controller
63292068-2	Hp S/O Valve
63292146-1	Precooler Control Valve
6338B0001-02	Rotary Actuator Assembly Fuel Shutoff Control
64-1119-2	Fuel Boost Pump, Engine Mount
64-1119-3	Fuel Boost Pump, Engine Mount
64-1119-4	Fuel Boost Pump, Engine Mount
64-1119-5	Fuel Boost Pump, Engine Mount
642D0010-503	On/Off Anti-Ice Valve
642D0010-505	On/Off Anti-Ice Valve
642D0010-507	On/Off Anti-Ice Valve
645172-1	Water System Vacuum Blower
645172-2	Valve, Shuto
645242-1	Fan Assy
645252-2	Fan
645405-1	Fan: Recirculation,Fan
645405-2	Fan
645507-2	Mixed Flow Fan
645670-1	Vaneaxial Motor Driven Fan
645705-1	Fan Assy
645705-2	Fan Assy
645705-3	Fan Assy
645705-4	Fan Assy
645947-1	Fan
645980-1	Mixed Flow Fan
646275	A/C Start Generator
65066-06	Pump,Hydraulic
65075-01	Hydraulic Pump
65075-02	Hyd Pump, Variable Delivery
65075-04	Hydraulic Pump

65075-06	Hyd Pump, Variable Delivery
65139-02	Ram Air Turbine Pump
65-17814-	Nose Steering Cylinder Assy
65-17819-10	Lock Actuator
65-17819-14	Lock Actuator
65-17821-20	Package: Modular,Hydraulic,System,Assy
65-17821-21	Pkg Ay
65-17951-	Piston
65-17961-	Barrel
65-17978-3	Mlg Hydraulic Swivel Assembly
65-21945-7	Flap Drive Power Unit Assy
65-21945-8	Flap Drive Power Unit Assy
65-22123-1	TRUNNION
65-22123-1	Trunnion
65-2346-4	Galley Door Snubber
65-2346-5	Galley Door Snubber
65-23557-7	Gearbox Flap Assy
65-23557-8	Gearbox Flap Assy
65-23559-12	Transmission,Outbd Flap
65-23559-34	Flap Outboard Trans Assy
65-23559-35	Flap Assy Transmission
65-3285-5	Strut
65-3285-6	MLG SIDE STR
65-3285-6	Mlg Side Str
65-44503	Feel Actuator Cyl Assy
65-44503-	Cylinder Assy
65-44503-1	Feel Actuator Cyl Assy
65-44503-10	Feel Actuator Cylinder Assembly
65-44503-11	Feel Actuator Cyl Assy
65-44503-2	Feel Actuator Cyl Assy
65-44503-3	Feel Actuator Cyl Assy
65-44503-4	Feel Actuator Cyl Assy
65-44503-5	Feel Actuator Cyl Assy
65-44503-6	Feel Actuator Cyl Assy
65-44503-7	Feel Actuator Cylinder Assembly
65-44503-8	Valve Assy.
65-44503-9	Feel Actuator Cyl Assy
65-44504-1	Main Gear Damper Assembly
65-44504-2	Main Gear Damper Assembly
65-44504-3	Main Gear Damper Assembly
65-44504-5	Main Gear Damper Assembly
65-44521-5	Valve Assy.
65-44521-6	Actuator
65-44550-14	Leading Edge Flap Actuator Assembly
65-44550-15	Leading Edge Flap Actuator Assembly
65-44550-16	Leading Edge Flap Actuator Assembly
65-44550-18	Leading Edge Flap Actuator Assembly


65-44550-20	Leading Edge Flap Actuator Assembly
65-44551-5	Flap Actuator
65-44551-6	Actuator
65-44551-7	Actuator
65-44551-9	Flight Spoil
65-44551-XX	Flap Actuator
65-44561-10	Flight Spoil
65-44561-11	Flight Spoiler Pcu
65-44561-12	Flight Spoiler Pcu
65-44561-13	Flight Spoil
65-44561-14	Power Contro
65-44561-15	Power Contro
65-44561-5	Spoiler Actuator
65-44561-6	Flight Spoiler Pcu
65-44561-7	Flight Spoiler Pcu
65-44561-8	Flight Spoiler Pcu
65-44561-9	Reservoir Re
65-44600-7	Reservoir Re
65-44600-8	Actuator
65-44610-3	Actuator Nlg
65-44610-4	Nlg.Actuator
65-44620-4	Transducer A
65-44625-14	Actuator
65-44625-17	Nlg.Lock Actuator
65-44625-18	Nlg.Lock Actuator
65-44625-5	Control Valv
65-44631-1	Actuator
65-44650-16	Leading Edge Slat Actuator Assy
65-44650-17	Leading Edge Slat Actuator Assy
65-44650-18	Leading Edge Slat Actuator Assy
65-44650-19	Leading Edge Slat Actuator Assy
65-44650-23	Leading Edge Slat Actuator Assy
65-44650-24	Leading Edge Slat Actuator Assy
65-44650-25	Leading Edge Slat Actuator Assy
65-44650-26	Leading Edge Slat Actuator Assy
65-44650-27	Leading Edge Slat Actuator Assy
65-44650-28	Leading Edge Slat Actuator Assy
65-44650-29	Leading Edge Slat Actuator Assy
65-44650-30	Leading Edge Slat Actuator Assy
65-44651-11	Actuator
65-44651-12	Leading Edge Slat Actuator Assy
65-44651-13	Actuator
65-44651-14	Actuator
65-44651-15	Actuator
65-44651-16	Actuator
65-44651-17	Actuator
65-44651-6	Actuator

65-44651-7	Actuator
65-44651-8	Actuator
65-44651-9	Modular Pack
65-44681-11	Modular Pres
65-44681-17	Modular Package
65-44681-18	Modular Package
65-44681-9	Modular Asse
65-44691-3	Modular Asse
65-44691-4	Modular Asse
65-44691-5	Modular Asse
65-44691-6	Actuator
65-44710-4	Steering Cyl
65-44710-5	Steering Cyl
65-44710-7	Actuator
65-44710-9	Nose Wheel Steering
65-44711-	Barrel
65-44712-	Piston
65-44725-10	Leading Edge Slat Actuator Assy
65-44725-101	Leading Edge Slat Hydraulic Actuator
65-44725-102	Leading Edge Slat Hydraulic Actuator
65-44725-103	Leading Edge Slat Hydraulic Actuator
65-44725-104	Leading Edge Slat Hydraulic Actuator
65-44725-105	Leading Edge Slat Hydraulic Actuator
65-44725-11	Leading Edge Slat Actuator Assy
65-44725-12	Leading Edge Slat Actuator Assy
65-44725-13	Leading Edge Slat Actuator Assy
65-44725-15	Leading Edge Slat Actuator Assy
65-44725-16	Leading Edge Slat Actuator Assy
65-44725-17	Leading Edge Slat Actuator Assy
65-44725-18	Leading Edge Slat Actuator Assy
65-44725-19	Leading Edge Slat Actuator Assy
65-44725-20	Leading Edge Slat Actuator Assy
65-44725-21	Leading Edge Slat Actuator Assy
65-44725-22	Leading Edge Slat Actuator Assy
65-44725-23	Leading Edge Slat Actuator Assy
65-44725-25	Leading Edge Slat Actuator Assy
65-44725-3	Leading Edge Slat Actuator Assy
65-44725-33	Leading Edge Slat Actuator Assy
65-44725-34	Leading Edge Slat Actuator Assy
65-44725-35	Leading Edge Slat Actuator Assy
65-44725-36	Leading Edge Slat Actuator Assy
65-44725-37	Leading Edge Slat Actuator Assy
65-44725-38	Leading Edge Slat Actuator Assy
65-44725-39	Actuator
65-44725-4	Leading Edge Slat Actuator Assy
65-44725-40	Feel Augm Br
65-44725-41	Leading Edge Slat Actuator Assy

65-44725-42	Leading Edge Slat Actuator Assy
65-44725-43	Leading Edge Slat Actuator Assy
65-44725-44	Leading Edge Slat Actuator Assy
65-44725-45	Leading Edge Slat Hydraulic Actuator
65-44725-47	Leading Edge Slat Hydraulic Actuator
65-44725-48	Leading Edge Slat Hydraulic Actuator
65-44725-5	Leading Edge Slat Actuator Assy
65-44725-50	Leading Edge Slat Hydraulic Actuator
65-44725-52	Leading Edge Slat Hydraulic Actuator
65-44725-54	Leading Edge Slat Hydraulic Actuator
65-44725-55	Leading Edge Slat Hydraulic Actuator
65-44725-57	Leading Edge Slat Hydraulic Actuator
65-44725-58	Leading Edge Slat Hydraulic Actuator
65-44725-59	Leading Edge Slat Hydraulic Actuator
65-44725-6	Leading Edge Slat Actuator Assy
65-44725-60	Leading Edge Slat Hydraulic Actuator
65-44725-61	Leading Edge Slat Hydraulic Actuator
65-44725-62	Leading Edge Slat Hydraulic Actuator
65-44725-63	Leading Edge Slat Hydraulic Actuator
65-44725-64	Leading Edge Slat Hydraulic Actuator
65-44725-65	Leading Edge Slat Hydraulic Actuator
65-44725-76	Leading Edge Slat Hydraulic Actuator
65-44725-77	Leading Edge Slat Hydraulic Actuator
65-44725-79	Leading Edge Slat Hydraulic Actuator
65-44725-85	Leading Edge Slat Hydraulic Actuator
65-44725-86	Leading Edge Slat Hydraulic Actuator
65-44725-87	Leading Edge Slat Hydraulic Actuator
65-44725-88	Leading Edge Slat Hydraulic Actuator
65-44725-89	Leading Edge Slat Hydraulic Actuator
65-44725-90	Leading Edge Slat Hydraulic Actuator
65-44725-91	Leading Edge Slat Hydraulic Actuator
65-44725-92	Leading Edge Slat Hydraulic Actuator
65-44725-93	Leading Edge Slat Hydraulic Actuator
65-44725-94	Leading Edge Slat Hydraulic Actuator
65-44725-95	Leading Edge Slat Hydraulic Actuator
65-44725-96	Leading Edge Slat Hydraulic Actuator
65-44725-97	Leading Edge Slat Hydraulic Actuator
65-44725-98	Leading Edge Slat Hydraulic Actuator
65-44725-99	Leading Edge Slat Hydraulic Actuator
65-44731-2	Rh Brake Met
65-44731-4	Actuator, Lo
65-44741-5	Blocking Valve Assy
65-44741-7	Blocking Valve Assy
65-44741-8	Blocking Valve Assy
65-44751	Tab Lock Actuator
65-44751-1	Tab Lock Actuator Assembly
65-44751-2	Hydraulic Ac

65-44751-3	Actuator
65-44760-10	Leading Edge Slat Hyd Actuator Assy
65-44760-11	Elevator Pow
65-44760-12	Leading Edge Slat Hyd Actuator Assy
65-44760-13	Leading Edge Slat Hyd Actuator Assy
65-44760-14	Hyd Actuator Assy
65-44760-15	Leading Edge Slat Hyd Actuator Assy
65-44760-22	Leading Edge Slat Hyd Actuator Assy
65-44760-23	Leading Edge Slat Hyd Actuator Assy
65-44760-24	Leading Edge Slat Hyd Actuator Assy
65-44760-25	Actuator
65-44760-26	Leading Edge Slat Hyd Actuator Assy
65-44760-27	Slat Actuator
65-44760-28	Slat Actuator
65-44760-33	Leading Edge Slat Hyd Actuator Assy
65-44760-34	Leading Edge Slat Hyd Actuator Assy
65-44760-35	Leading Edge Slat Hyd Actuator Assy
6544760-5	Leading Edge Slat Hyd Actuator Assy
65-44760-5	Leading Edge Slat Actuator Assy
65-44760-7	Leading Edge Slat Hyd Actuator Assy
65-44760-8	Leading Edge Slat Hyd Actuator Assy
65-44761-10	Aileron & Elevator Power Control Unit Assy
65-44761-12	Elevator Pow
65-44761-14	Elevator Pow
65-44761-15	Aileron & Elevator Power Control Unit Assy
65-44761-16	Elevator Pow
65-44761-17	Power Elevator
65-44761-18	Aileron & Elevator Power Control Unit Assy
65-44761-19	Pcu
65-44761-20	Aileron & Elevator Power Control Unit Assy
65-44761-21	Power Control Unit Assembly
65-44761-22	Power Control Unit Assembly
65-44761-8	Elevator Pow
65-44761-9	Damper
65-44769-6	PISTON
65-44771-2	Piston
65-44771-3	Main Gear Damper Assembly
65-44771-4	Damper
65-44810-5	Lock Actuator
65-44810-6	Lock Actuator
65-44821-1	Ground Spoiler
65-44821-2	Trailing Edge Flap Control Valve Assy
65-44821-3	Trailing Edge Flap Control Valve Assy
65-44821-4	Trailing Edge Flap Control Valve Assy
65-44825-16	Actuator
65-44825-17	Actuator

65-44825-18	Actuator
65-44828-2	Servo Valve Assy
65-44828-4	Servo Valve Assy
65-44851-10	Ground Spoiler Locking Actuator Assembly
65-44851-12	Actuator, Gr
65-44851-13	Actuator Ass
65-44851-14	Actuator
65-44851-3	Ground Spoiler Locking Actuator Assembly
65-44851-4	Ground Spoiler Locking Actuator Assembly
65-44851-5	Ground Spoiler Locking Actuator Assembly
65-44851-6	Ground Spoil
65-44851-7	Main Gear Ac
65-44891-7	Modular Assembly
65-44891-8	Module: Flt Control
65-44898-2	Main Gear Damper Assembly
65-44898-3	Main Gear Damper Assembly
65-44898-5	Main Gear Damper Assembly
65-44898-7	Main Gear Damper Assembly
65-44898-8	Main Gear Damper Assembly
65-44910-11	Main Gear Ac
65-44910-12	Actuator Mlg
65-44910-13	Main Gear Actuator
65-44910-27	Actuator-Mlg
65-44910-28	Main Gear Actuator
65-44910-29	Mlg Retract
65-44910-30	Mlg-Actuator
65-44910-31	Main Gear Actuator
65-44910-32	Main Gear Actuator
65-44910-6	Main Gear Actuator
65-44910-7	Main Gear Actuator
65-44910-8	Metering Val
65-44910-9	Main Gear Actuator
65-44925-11	Main Gear Actuator
65-44925-12	Main Gear Actuator
65-44925-15	Main Gear Actuator
65-44925-16	Main Gear Actuator
65-44925-21	Main Gear Actuator
65-44925-22	Main Gear Actuator
65-44925-28	Main Gear Actuator
65-44925-29	Main Gear Actuator
65-44925-30	Main Gear Actuator
65-44925-31	Main Gear Actuator
65-44925-33	Main Gear Actuator
65-44925-34	Main Gear Actuator
65-44925-36	Main Gear Actuator
65-44925-41	Main Gear Actuator
65-44925-7	Main Gear Actuator

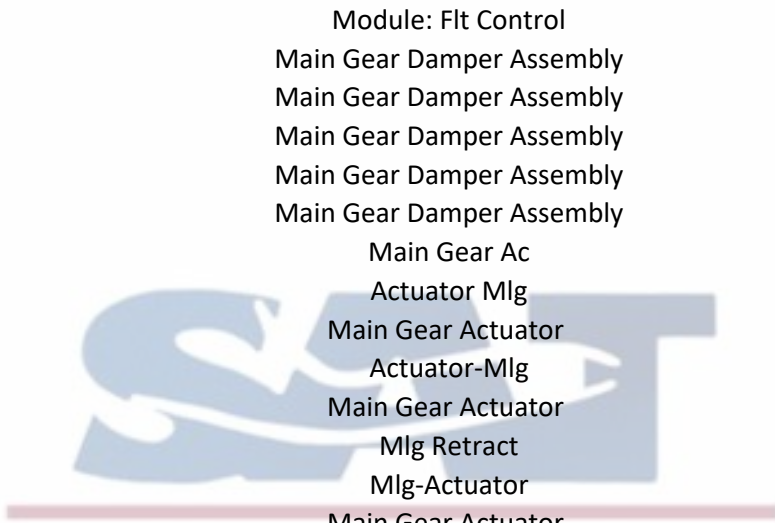 

65-44925-8	Main Gear Actuator
65-44925-9	Main Gear Actuator
65-44931-11	Metering Val
65-44931-12	Actuator Ass
65-44951-1	Ground Spoiler Actuator Assy
65-44951-2	Ground Spoiler Actuator Assy
65-44951-5	Ground Spoiler Actuator Assy
65-44951-6	Ground Spoiler Actuator Assy
65-44951-7	Ground Spoiler Actuator Assy
65-44951-8	Ground Spoiler Actuator Assy
65-44960-10	Outboard Ground Spoiler Locking Actuator
65-44960-11	Outboard Ground Spoiler Locking Actuator
65-44960-13	Outboard Ground Spoiler Locking Actuator
65-44960-15	Outboard Ground Spoiler Locking Actuator
65-44960-2	Outboard Ground Spoiler Locking Actuator
65-44960-23	Outboard Ground Spoiler Actuator Assembly
65-44960-24	Outboard Ground Spoiler Actuator Assembly
65-44960-25	Outboard Ground Spoiler Actuator Assembly
65-44960-27	Outboard Ground Spoiler Actuator Assembly
65-44960-28	Outboard Ground Spoiler Actuator Assembly
65-44960-29	Outboard Ground Spoiler Locking Actuator
65-44960-30	Outboard Ground Spoiler Locking Actuator
65-44960-4	Outboard Ground Spoiler Locking Actuator
65-44960-5	Outboard Ground Spoiler Locking Actuator
65-44960-6	Outboard Ground Spoiler Locking Actuator
65-44960-8	Outboard Ground Spoiler Locking Actuator
65-44960-9	Outboard Ground Spoiler Locking Actuator
65-44961-10	Actuator, Sp
65-44961-12	Outboard Ground Spoiler Locking Actuator
65-44961-14	Ground Spoil
65-44961-16	Outboard Ground Spoiler Locking Actuator
65-44961-2	Outboard Ground Spoiler Locking Actuator
65-44961-3	Outboard Ground Spoiler Locking Actuator
65-44961-4	Outboard Ground Spoiler Locking Actuator
65-44961-5	Outboard Ground Spoiler Locking Actuator
65-44961-6	Actuator Ass
65-44961-7	Modular Hyd
65-44975-3	Steering Depressurization Valve Assembly
65-44975-5	Steering Depressurization Valve Assembly
65-44981-5	Elev. & Rudd
65-44981-6	Modular Package
65-44991-3	Modular Package
65-45121-117	Subassy
65-45132-10	Feel Computer
65-45132-11	Feel Computer
65-45132-12	Feel Computer
65-45132-5	Feel Computer

65-45132-7	Feel Computer
65-45132-8	Feel Computer
65-45134-3	Rudder & Elevator Feel Actuator Cylinder Assy
65-45140-5	Rudder & Elevator Feel Actuator Cylinder Assy
65-45180-13	Aileron & Elevator Power Control Unit Assy
65-45180-18	Aileron & Elevator Power Control Unit Assy
65-45180-19	Aileron & Elevator Power Control Unit Assy
65-45180-2	Aileron & Elevator Power Control Unit Assy
65-45180-22	Aileron & Elevator Power Control Unit Assy
65-45180-23	Aileron & Elevator Power Control Unit Assy
65-45180-27	Aileron & Elevator Power Control Unit Assy
65-45180-29	Aileron & Elevator Power Control Unit Assy
65-45180-30	Aileron & Elevator Power Control Unit Assy
65-45180-31	Aileron & Elevator Power Control Unit Assy
65-45180-34	Aileron & Elevator Power Control Unit Assy
65-45180-35	Aileron & Elevator Power Control Unit Assy
65-45180-4	Aileron & Elevator Power Control Unit Assy
65-45180-5	Aileron & Elevator Power Control Unit Assy
65-45180-7	Aileron & Elevator Power Control Unit Assy
65-45180-8	Aileron & Elevator Power Control Unit Assy
65-45190	Tab Lock Actuator
65-45190-10	Tab Lock Actuator Assembly
65-45190-4	Tab Lock Actuator Assembly
65-45190-9	Tab Lock Actuator Assembly
65-46108-17	Actuator
65-46108-17	Actuatorator Bea
65-46108-19	Actuator
65-46108-21	Actuator
65-46108-23	Actuator
65-46112-26	LINK ASSY, A
65-46112-31	LINK ASSY, A
65-46113-24	PIN
65-46113-24	Pin
65-46141-10	Uplock Mlg
65-46141-11	Uplock Mlg
65-46141-19	UPLOCK ASSY,
65-46141-21	Uplock Mlg
65-46141-22	Uplock Mlg
65-46141-23	Uplock Mlg
65-46141-24	Uplock Mlg
65-46160-9	SUPPORT TUBE
65-46160-9	Support Tube
65-46203-24	Steering Collar
65-46203-26	COLLARAY
65-46203-26	Collaray
65-46215-17	INNER CYLIND
65-46215-17	Inner Cyлинд

65-46230-7	Spoil Mixer
65-46360-4	Spoiler Mixe
65-46360-7	Fitting Assy
65-46850-16	Fitting Assy
65-46850-8	Trim Actuato
65-47821-	Carriage
65-49580-11	Flight Spoiler Pcu
65-49580-12	Flight Spoiler Pcu
65-49580-13	Flight Spoiler Pcu
65-49580-14	Flight Spoiler Pcu
65-49580-15	Flight Spoiler Pcu
65-49580-16	Flight Spoiler Pcu
65-49580-17	Flight Spoiler Pcu
65-49580-18	Flight Spoiler Pcu
65-49580-19	Flight Spoiler Pcu
65-49580-20	Flight Spoiler Pcu
65-49580-21	Flight Spoiler Pcu
65-49874-15	Aileron & Elevator Power Control Unit Assy
65-49874-28	Aileron & Elevator Power Control Unit Assy
65-49874-29	Aileron & Elevator Power Control Unit Assy
65-49874-30	Aileron & Elevator Power Control Unit Assy
65-49874-32	Aileron & Elevator Power Control Unit Assy
65-49874-34	Aileron & Elevator Power Control Unit Assy
65-49874-37	Aileron & Elevator Power Control Unit Assy
65-49874-39	Aileron & Elevator Power Control Unit Assy
65-49874-40	Aileron & Elevator Power Control Unit Assy
65-49874-43	Aileron & Elevator Power Control Unit Assy
65-49874-44	Aileron & Elevator Power Control Unit Assy
65-49874-47	Aileron & Elevator Power Control Unit Assy
65-49874-48	Aileron & Elevator Power Control Unit Assy
65-49874-49	Aileron & Elevator Power Control Unit Assy
65-49874-50	Aileron & Elevator Power Control Unit Assy
65-49874-52	Aileron & Elevator Power Control Unit Assy
65-49874-54	Aileron & Elevator Power Control Unit Assy
65-49966-1	PIN ASSY
65-49966-1	Pin Assy
65-49970-1	Stab Trim Actuator
65-49970-10	Stab Jackscr
65-49970-12	Trim Actuato
65-49970-13	Stab Trim Actuator
65-49970-14	Stab Trim Actuator
65-49970-15	Stab Trim Actuator
65-49970-16	Stab Trim Actuator
65-49970-17	Stab Trim Actuator
65-49970-18	Stab Trim Actuator
65-49970-19	Stab Trim Actuator
65-49970-2	Stab Trim Actuator

65-49970-20	Stab Trim Actuator
65-49970-21	Stab Trim Actuator
65-49970-22	Stab Trim Actuator
65-49970-23	Stab Trim Actuator
65-49970-24	Trasmission
65-49970-25	Stab Trim Actuator
65-49970-26	Stab Trim Actuator
65-49970-27	Stab Trim Actuator
65-49970-28	Stab Trim Actuator
65-49970-29	Stab Trim Actuator
65-49970-3	Stab Trim Actuator
65-49970-4	Stab Trim Actuator
65-49970-5	Stab Trim Actuator
65-49970-7	Stab Trim Actuator
65-49970-9	Stab Trim Actuator
654T0387-20	Outboard Leading Edge Slat Drive Gearbox
654T0387-23	Outboard Leading Edge Slat Drive Gearbox
654T0387-24	Outboard Leading Edge Slat Drive Gearbox
654T0387-25	Outboard Leading Edge Slat Drive Gearbox
654T0387-26	Gearbox Assy, Otbd Le Slat
654T0387-27	Outboard Leading Edge Slat Drive Gearbox
654T0387-28	Outboard Leading Edge Slat Drive Gearbox
65-50251-2	T/E Flap Drive Trans Assy No. 1 & 8
65-50251-4	T/E Flap Drive Trans Assy No. 1 & 8
65-50251-5	T/E Flap Drive Trans Assy No. 1 & 8
65-50251-7	Transmission
65-50252-4	Transmission
65-50252-6	Transmission
65-50253-6	Transmission
65-50254-4	Transmission
65-50254-6	Transmission
65-50255-4	Transmission
65-50255-6	Flap Drive T
65-50256-6	T/E Flap Drive Trans Assy No. 3 & 6
65-50257-2	T/E Flap Drive Trans Assy No. 2 & 7
65-50257-4	T/E Flap Drive Trans Assy No. 2 & 7
65-50257-5	T/E Flap Drive Trans Assy No. 2 & 7
65-50257-6	T/E Flap Drive Trans Assy No. 2 & 7
65-50257-7	T/E Flap Drive Trans Assy No. 2 & 7
65-50257-8	T/E Flap Drive Trans Assy No. 2 & 7
65-50258-2	T/E Flap Drive Trans Assy No. 1 & 8
65-50258-4	Transmission
65-50258-5	T/E Flap Drive Trans Assy No. 1 & 8
65-50258-6	T/E Flap Drive Trans Assy No. 1 & 8
65-50258-7	T/E Flap Drive Trans Assy No. 1 & 8
65-50283-8	GEAR
65-50283-8	Gear

65-50302-2	T/E Flap Drive Trans Assy No. 2 & 7
65-50302-3	T/E Flap Drive Trans Assy No. 2 & 7
65-50302-4	T/E Flap Drive Trans Assy No. 2 & 7
65-50302-5	Flap Drive T
65-50302-6	T/E Flap Drive Trans Assy No. 2 & 7
65-50302-7	T/E Flap Drive Trans Assy No. 2 & 7
65-50303-02	T/E Flap Drive Trans Assy No. 3 & 6
65-50303-03	T/E Flap Drive Trans Assy No. 3 & 6
65-50303-4	T/E Flap Drive Trans Assy No. 3 & 6
65-50304-3	Flap Drive T
65-50305-3	Flap Drive T
65-50306-2	Transmission
65-50306-3	T/E Flap Drive Trans Assy No. 3 & 6
65-50306-4	T/E Flap Drive Trans Assy No. 3 & 6
65-50307-2	T/E Flap Drive Trans Assy No. 2 & 7
65-50307-3	T/E Flap Drive Trans Assy No. 2 & 7
65-50307-4	T/E Flap Drive Trans Assy No. 2 & 7
65-50307-5	T/E Flap Drive Trans Assy No. 2 & 7
65-50307-6	T/E Flap Drive Trans Assy No. 2 & 7
65-50307-7	T/E Flap Drive Trans Assy No. 2 & 7
65-50308-2	T/E Flap Drive Trans Assy No. 1 & 8
65-50321-1	Transmission
65-50321-3	Transmission
65-50321-5	Flap Transmi
65-50322-10	Flap Transmi
65-50322-11	Transmission
65-50322-12	Transmission
65-50322-14	Trans Outb T
65-50322-5	Gear Box
65-50322-9	Transmission
65-50323-3	Transmission
65-50323-4	Transmission
65-50323-6	Flap Drive T
65-50324-1	Transmission
65-50324-2	Transmission
65-50324-3	Flap Drive T
65-50324-4	Transmission
65-50324-5	Transmission
65-50325-1	Flap Drive T
65-50325-1-600U	Flap Drive T
65-50325-3	Flap Drive T
65-50325-4	Flap Drive T
65-50325-5	Transmission
65-50326-3	Transmission
65-50327-11	Transmission
65-50327-12	Transmission
65-50327-14	Flap Transmi

65-50327-7	Transmission
65-50327-9	Transmission
65-50328-3	Transmission
65-50328-5	Gearbox
65-51245-3	Hydraulic Control Assy
65-51245-4	Hydraulic Control Assy
65-51245-5	Hydraulic Control Assy
65-51250-14	Link: Assy
65-51510-1	Gearbox
65-51602-10	Leading Edge & Trailing Edge Flap Control Assy
65-51602-11	Trailing Edge Flap Control Valve Assy
65-51602-2	Trailing Edge Flap Control Valve Assy
65-51602-20	Leading Edge & Trailing Edge Flap Control Assy
65-51602-21	Leading Edge & Trailing Edge Flap Control Assy
65-51602-27	Leading Edge & Trailing Edge Flap Control Assy
65-51602-29	Trailing Edge Flap Control Valve Assy
65-51602-30	Trailing Edge Flap Control Valve Assy
65-51602-31	Leading Edge & Trailing Edge Flap Control Assy
65-51602-32	Leading Edge & Trailing Edge Flap Control Assy
65-51602-33	Leading Edge & Trailing Edge Flap Control Assy
65-51602-35	Leading Edge & Trailing Edge Flap Control Assy
65-51602-39	Leading Edge & Trailing Edge Flap Control Assy
65-51602-43	Leading Edge & Trailing Edge Flap Control Assy
65-51602-47	Leading Edge & Trailing Edge Flap Control Assy
65-51602-49	Leading Edge & Trailing Edge Flap Control Assy
65-51602-5	Leading Edge & Trailing Edge Flap Control Assy
65-51602-51	Leading Edge & Trailing Edge Flap Control Assy
65-51602-53	Leading Edge & Trailing Edge Flap Control Assy
65-51602-6	Leading Edge & Trailing Edge Flap Control Assy
65-51602-7	Leading Edge & Trailing Edge Flap Control Assy
65-51602-8	Leading Edge & Trailing Edge Flap Control Assy
65-51602-9	Leading Edge & Trailing Edge Flap Control Assy
65-52807-12	Flap And Sla
65-52807-19	Flap/Slat Ac
65-52807-26	Flap/Slat Po
65-52811-109	Landing Gear
65-52811-111	Ldng Gear Ac
65-52811-162	Ldng Gear Ac
65-52811-62	Flight Instr
65-53788-2	Aileron Control Spring Cartridge Assy
65-53788-3	Aileron Control Spring Cartridge Assy
65-53788-4	Aileron Control Spring Cartridge Assy
65-56298-1	Main Cargo Door Actuator
65-5646	PISTON
65-5646	Piston
65-5746-1	DRAG STRUT
65-5746-1	Drag Strut

65-60214-36	Flap Drive G
65-63851-2	Aileron Cent
65-65030-3	TRUCK
65-65030-3	Truck
65-67156-2	Track Assy
65-67158-	Outboard Flap Track Assembly
65-73606-69	Auto Brake A
65-73761-121	MAIN GEAR AS
65-73761-122	MAIN GEAR AS
65-73761-123	SIDE STRUT A
65-73761-124	SIDE STRUT A
65-75960-4	Actuator
6577-1	Fan, Vaneaxial
6577-2	Vaneaxial Fan
65-77496-10	Main Gear Actuator
65-77496-11	Main Gear Actuator
65-77496-12	Main Gear Actuator
65-77496-13	Main Gear Actuator
65-77496-14	Main Gear Actuator
65-77496-17	Main Gear Actuator
65-77496-18	Main Gear Actuator
65-77496-19	Main Gear Actuator
65-77496-20	Main Gear Actuator
65-77496-21	Main Gear Actuator
65-77496-22	Main Gear Actuator
65-77496-23	Main Gear Actuator
65-77496-26	Main Gear Actuator
65-77496-27	Main Gear Actuator
65-77496-28	Main Gear Actuator
65-77496-29	Main Gear Actuator
65-77496-30	Main Gear Actuator
65-77496-5	Main Gear Actuator
65-77496-6	Main Gear Actuator
65-77496-7	Main Gear Actuator
65-77496-8	Main Gear Actuator
65-77496-9	Main Gear Actuator
6577-7	Vaneaxial Fan
65-79479-7	Module Assy
65-80055-5	Gearbox
65-80055-6	Flap Gearbox Assy
658385-001	Prbc
658490-001	Prbc
65860, -1	2 Position 3 Way MotorOperated Valve
658D100-1	Rudder Trim Actuator
658D100-3	Rudder Trim Actuator
658D100-5	Actuator
658D100-7	Actuator: Trim,Rudder,Svc

658D100-9	Actuator
65A149	Actuator
65A150	Actuator
65B01441-2	WLG WALKING
65B01456-5	NLG DRAG STR
65B01468-4	Brake Rod
65B01468-7	Brake Rod
65B01502-11	Body Main Gear Retract Actuator
65B01502-12	Body Main Gear Retract Actuator
65B01502-14	Body Main Gear Retract Actuator
65B01502-3	Body Main Gear Retract Actuator
65B01502-4	Body Main Gear Retract Actuator
65B01502-5	Body Main Gear Retract Actuator
65B01502-7	Body Main Gear Retract Actuator
65B01502-8	Body Main Gear Retract Actuator
65B01502-9	Body Main Gear Retract Actuator
65B01503-	Steering Actuator
65B01503-16	Actuator
65B01504-18	Actuator
65B01504-24	Actuator Assy
65B01514-	Trunnion
65B01514-11	TRUNNION
65B01514-11	Trunnion
65B01514-12	TRUNNION
65B01514-12	Trunnion
65B01518-	Piston Rod
65B01518-21	PISTON ROD
65B01518-21	Piston Rod
65B01533-3	Piston
65B01538-2	Actuator Assy
65B01539-10	Wing Gear Truck Positioner Actuator Assy
65B01539-3	Wing Gear Truck Positioner Actuator Assy
65B01539-5	Actuator
65B01539-7	Wing Gear Truck Positioner Actuator Assy
65B01539-8	Wing Gear Truck Positioner Actuator Assy
65B01539-9	Wing Gear Truck Positioner Actuator Assy
65B01540-19	Actuator Assy
65B01540-20	Actuator Assy
65B01552-10	Body Main Gear Retract Actuator
65B01552-11	Body Main Gear Retract Actuator
65B01552-13	Body Main Gear Retract Actuator
65B01552-21	Body Main Gear Retract Actuator
65B01552-22	Body Main Gear Retract Actuator
65B01552-3	Body Main Gear Retract Actuator
65B01552-7	Body Main Gear Retract Actuator
65B01552-8	Body Main Gear Retract Actuator
65B01552-9	Body Main Gear Retract Actuator

65B01557-13	Autobrake Actuator
65B01557-2	Autobrake Actuator
65B01557-3	Autobrake Actuator
65B01557-4	Autobrake Actuator
65B01557-7	Autobrake Actuator
65B01570-10	Wing Landing Gear Retract Actuator Assembly
65B01570-2	Wing Landing Gear Retract Actuator Assembly
65B01570-3	Wing Landing Gear Retract Actuator Assembly
65B01570-4	Wing Landing Gear Retract Actuator Assembly
65B01570-5	Wing Landing Gear Retract Actuator Assembly
65B01570-6	Wing Landing Gear Retract Actuator Assembly
65B01570-7	Wing Landing Gear Retract Actuator Assembly
65B01570-8	Actuator
65B01570-9	Wing Landing Gear Retract Actuator Assembly
65B02083-14	SPINDLE
65B02083-14	Spindle
65B04835-12	Hook-Pull
65B05157-8	Uplock
65B05290-5	L/H BLG DRAG
65B05290-6	R/H BLG DRAG
65B05398-8	Bungee
65B07783-	Trailing Edge Flap Track Assembly
65B07789-	Trailing Edge Flap Track Assembly
65B08005-	Trailing Edge Flap Track Assembly
65B08026-	Carriage Fitting Assy-
65B08027-	Outbd Te Flap Carriage Assy
65B08413-5	GIMBAL ASSY
65B08413-5	Gimbal Assy
65B08415-6	GIMBAL ASSY
65B08415-6	Gimbal Assy
65B08800-1	TOW FITTING
65B10187-	Main Flap Carriage
65B10189-	Fitting Assy
65B13468-	Carriage Fitting Assy-
65B16628-	Outbd Te Flap Carriage Assy
65B19980-10	R/H WLG SIDE
65B40146-6	Valve Assy, Lav/Galley Vent Fan
65B60402-1	Stop Assy - Cargo
65B61130-5	Actuator, Li
65B80103-6	Link: Carrier,Assembly
65B80495-10	Brake Pedal Cable Bus Crank
65B80495-7	Brake Pedal Cable Bus Crank
65B80495-8	Brake Pedal Cable Bus Crank
65B80495-9	Brake Pedal Cable Bus Crank
65B80562-45	Drive Mechanism Assy - Stab Trim
65B81129-10	Transmission Assy
65B81129-1169	Transmission Assy

65B81129-1170	Transmission Assy
65B81226-3	Feel Unit Assy
65B81551-5	YOKE
65B81551-5	Yoke
65B81555-6	YOKE
65B81555-6	Yoke
65B82558-10	Actuator Assy, Downlock-Body Landing Gea
65B82584-2	Nose Gear Retract Actuator
65B82584-3	Nose Gear Retract Actuator
65B82584-5	Nose Gear Retract Actuator
65B82584-6	Nose Gear Retract Actuator
65B82584-9	Nose Gear Retract Actuator
65B82585-1	Nose Gear Retract Actuator
65B82585-2	Nose Gear Retract Actuator
65B82585-3	Nose Gear Retract Actuator
65B82585-4	Actuator
65B83205-10	Wing Gear Truck Positioner Actuator Assy
65B83205-13	Wing Landing Gear Retract Actuator Assembly
65B83205-14	Wing Landing Gear Retract Actuator Assembly
65B83205-19	Wing Landing Gear Retract Actuator Assembly
65B83205-20	Wing Landing Gear Retract Actuator Assembly
65B83205-23	Wing Landing Gear Retract Actuator Assembly
65B83205-24	Wing Gear Truck Positioner Actuator Assy
65B83205-27	Wing Landing Gear Retract Actuator Assembly
65B83205-28	Wing Landing Gear Retract Actuator Assembly
65B83205-3	Wing Landing Gear Retract Actuator Assembly
65B83205-32	Wing Landing Gear Retract Actuator Assembly
65B83205-33	Wing Landing Gear Retract Actuator Assembly
65B83205-5	Wing Gear Truck Positioner Actuator Assy
65B83205-6	Wing Landing Gear Retract Actuator Assembly
65B83205-7	Wing Landing Gear Retract Actuator Assembly
65B83205-8	Wing Landing Gear Retract Actuator Assembly
65B83205-9	Wing Landing Gear Retract Actuator Assembly
65B83287-1	Ratio Changer Actuator Assembly
65B83637-6	GEARBOX ASSY, CARGO DOOR
65B93075-1	Engine Bleed Air Check Valve
65B93075-2	Engine Bleed Air Check Valve
65B93075-3	Engine Bleed Air Check Valve
65B93075-4	Engine Bleed Air Check Valve
65B93075-5	Engine Bleed Air Check Valve
65B93075-6	Engine Bleed Air Check Valve
65B93075-7	Engine Bleed Air Check Valve
65B94077-3	Valve - Bleed Air Check
65B94340-1	Installation - Engine Mount
65B98507-1	Rudder Contr
65C16300-1	Power Control Assy
65C25410-5	Valve Assy


65C25410-7	Rudder Controls Feel&Centerzz
65C25410-8	Centering Unit: Assy
65C25465-10	Feel And Centering Elevator Control Unit Assembly
65C25465-11	Feel And Centering Elevator Control Unit Assembly
65C25465-12	Feel And Centering Elevator Control Unit Assembly
65C25465-15	Feel And Centering Elevator Control Unit Assembly
65C25465-16	Feel And Centering Elevator Control Unit Assembly
65C25465-17	Feel And Centering Elevator Control Unit Assembly
65C25465-18	Feel And Centering Elevator Control Unit Assembly
65C25465-19	Feel And Centering Elevator Control Unit Assembly
65C25465-2	Feel And Centering Elevator Control Unit Assembly
65C25465-20	Feel And Centering Elevator Control Unit Assembly
65C25465-21	Feel And Centering Elevator Control Unit Assembly
65C25465-22	Feel And Centering Elevator Control Unit Assembly
65C25465-23	Control Unit: Elevator,Feel & Centering
65C25465-4	Feel And Centering Elevator Control Unit Assembly
65C25465-8	Feel And Centering Elevator Control Unit Assembly
65C26833-3	T/E Flap Tra
65C26864	Actuator
65C26864-1	Actuator Assy
65C26864-2	Outboard Ground Spoiler Actuator Ay
65C26864-3	Actuator-Assy
65C26869-2	Auto Slat Control Valve Assy
65C26870-3	Auto Slat Control Valve Assy
65C27298-5	Leading Edge & Trailing Edge Flap Control Assy
65C27298-6	Leading Edge & Trailing Edge Flap Control Assy
65C27298-7	Leading Edge & Trailing Edge Flap Control Assy
65C27409-	Carriage
65C27409-29	CARRIAGE
65C27409-29	Carriage
65C27501	T/E Flap Tra
65C27501-1	Te Flap Drive Transmission
65C27501-2	Transmission
65C27501-3	Transmission
65C27502	Transmission
65C27502-3	Transmission
65C27502-4	Transmission
65C27502-5	Transmission
65C27503	Transmission
65C27503-2	T/E Flap Tra
65C27503-3	Transmission
65C27506-2	Transmission
65C27506-3	T/E Flp Tran
65C27507-3	Flap Transmission Assy
65C27507-4	Transmission
65C27507-8	Transmission
65C27508-1	Te Flap Drive Transmission

65C27508-2	Transmission
65C27508-3	Horiz Stab J
65C31099-1	Actuator
65C31099-2	Actuator
65C31398-	Barrel
65C31398-7	Barrel
65C32956-1	MLG RETRACT
65C32956-4	MLG RETRACT
65C33092-9	Door: Fuel Access
65C34483-	Carriage Assy
65C34751-11	Stab Trim Actuator
65C34751-3A	Trim Actuator
65C34751-7	Act Assy,Stab Trim
65C34809-	Track
65C34809-2	FLAP TRACK
65C34809-2	Flap Track
65C34810-	Track
65C34812-	Outbd Flap, Outbd Track Assy-
65C35387-	Track
65C35387-2	Track
65C35387-4	Track Assy-Outbd Flap, Inbd
65C35615-	Outbd Flap Track Assy-
65C35615-3	Track
65C35616-3	Track
65C35616-5	Outbd Flap Track Assy
65C36408-10	Leading Edge Slat Hyd Actuator Assy
65C36408-11	Leading Edge Slat Hyd Actuator Assy
65C36408-12	Leading Edge Slat Hyd Actuator Assy
65C36408-5	Leading Edge Slat Hyd Actuator Assy
65C36408-7	Leading Edge Slat Hyd Actuator Assy
65C36408-8	Leading Edge Slat Hyd Actuator Assy
65C36486-10	Pcu
65C36486-9A	Jack Screw
65C37053-5	Pcu
65C37053-9	Actuator Ass
65C37971-2	Feel And Centering Elevator Control Unit Assembly
65C37971-3	Feel And Centering Elevator Control Unit Assembly
65C37971-4	Feel And Centering Elevator Control Unit Assembly
65C37971-5	Feel And Centering Elevator Control Unit Assembly
65C37971-7	Feel And Centering Elevator Control Unit Assembly
65C38058-10	Leading Edge Slat Hyd Actuator Assy
65C38058-11	Leading Edge Slat Hyd Actuator Assy
65C38058-12	Actuator
65C38058-13	Hyd Actuator Assy
65C38058-14	Slat Actuator
65C38058-15	Slat Actuator
65C38058-22	Slat Actuator

65C38058-23	Slat Actuator
65C38058-24	Actuator
65C38058-5	Leading Edge Slat Hyd Actuator Assy
65C38058-7	Leading Edge Slat Hyd Actuator Assy
65C38058-8	Leading Edge Slat Hyd Actuator Assy
65C38058-Series	Leading Edge Slat Hydraulic Actuator
65C38059-10	Actuator
65C38059-11	Actuator,Hydraulic
65C38059-12	Slat Actuator
65C38059-13	Slat Actuato
65C38059-14	Slat Actuator
65C38059-15	Slat Actuator
65C38059-5	Leading Edge Slat Hyd Actuator Assy
65C38059-7	Leading Edge Slat Hyd Actuator Assy
65C38059-8	Leading Edge Slat Hyd Actuator Assy
65C380XX-XX	L.E. Slat Actuator
65E63-2	Anti-Ice Valve Assembly
65W01025	Hyd Pump
66068-05	Hydraulic Pump
66068-06	Hydraulic Pump
66068-08	Motor: Pump,Driven Hy
6610-15945	Fill Valve
6610-20560-01	Actuator
66132-03	Servoalve
66132-04	Pump: Hyd,Variable,Assembly
66133-03	Pump: Hyd,Ac,Motor Driven,Assembly
66133-04	Ac Motor Pump (Acmp)
66189-02	Variable Delivery Hydraulic Pump
66190-04	Solenoid Val
66195-01	Pump Motor
66198-01	Variable Delivery Hydraulic Pump
663017-	Body
663017-4	Body, Valve
663017-4	Valvevalve Body
66350-3	Door Opening Actuator Assy
66350-4	Door Opening Actuator Assy
66360-4	Door Opening-Manifold Assembly
66360-5	Door Opening-Manifold Assembly
663927-5	Body Valve
663M96P03	IDG Shutoff Valve Assembly
664D100-	Actuator
664D100-5	Power Unit:
664D100-7	Actuator, Linear
66508	HANGER
666V100	Fuel Check Valve, Two-Way Restrictor
666V100-1	Fuel Check Valve, Two-Way Restrictor
66790-1	Control Valve Assembly

66950	Valve, Reservoir Pressurization
67041445-4	Switch: Wai,Under,Pressure
6713-011	Body
6713-0470	Actuator Body
6713-0611-0905	Body
6713-0711	Actuator Body
6713-0905	Body
6713-0907	Valve Body
6713-166	Shaft
6713-168	Shaft
6713D010000	High Pressure Regulating Valve
6713D020000	High Pressure Regulating Valve
6713D040000	High Pressure Regulating Valve
6713D040000 AMDT A	High Pressure Regulating Valve
6713D050000	High Pressure Regulating Valve
6713D050000 AMDT A	High Pressure Regulating Valve
6713D060000	High Pressure Regulating Valve
6713D060000 AMDT A	High Pressure Regulating Valve
6713D070000	High Pressure Regulating Valve
6713D070000 AMDT A	High Pressure Regulating Valve
6714-010	Actuatorator Hou
6714-0350	Valve Body
6714-0350	Actuatorator
6714D070000	High Pressure Bleed Valve
6714D070000 AMDT A	High Pressure Bleed Valve
6723-01710	Body Valve
67-2906-001	Air Shutoff Valve
67-2906-002	Air Shutoff Valve
67-2951-001	Air Shutoff Valve
6730-0340	Body
6730-051	Body
6730C010000	Valve Assy., Fan Air
6733A030000	Fan Air Valve
6740-0190	Body
6740-0431	Body
6740-0431	Body
6740-0431R	Valve Body
6740-89	Valve Body
6740B03	Overpressure Valve
6740B03 AMDT A	Overpressure Valve
6740B04	Overpressure Valve
6740B04 AMDT A	Overpressure Valve
6740B050000	Overpressure Valve
6740E010000	Overpressure Valve
6740E010000 AMDT A	Overpressure Valve
6743A010000	Overpressure Valve
6747A010001	Overpressure Valve

67530-2	Restrictor Assy
6753-020	Body Act
6753-140	Butterfly Shaft
6753-173	Body Valvevalvee,
6753B040000	High Pressure Bleed Valve
6753B040000 AMDT A	High Pressure Bleed Valve
6753B040000 AMDT AB	High Pressure Bleed Valve
6753B040000 AMDT B	High Pressure Bleed Valve
6754-0495	Actuator Body
6754-0496	Valve Body
6754-0496R	Valve Body
6754-0497	Body
6754-0497R	Valve Body
6754-0499	Actuator Body
6754-0502	Valve Body
6754-0502R	Valve Body
6754C030000	Bleed Valve
6763-01126	Valve Body
6763-01126R	Valve Body
6763-01880	Actuator Body
6763-01880	Body
6763-01880R	Body
6763-01890	Actuator Body
6763-01890	Body
6763-01890R	Actuator Body
6763-01890R	Body
6763-202	Shaft
6763C07000	High Pressure Bleed Valve
6763C080000	High Pressure Bleed Valve
6763C080000 AMDT A	High Pressure Bleed Valve
6763D080000	High Pressure Bleed Valve
6763D090000	High Pressure Bleed Valve
6763D090000 AMDT A	High Pressure Bleed Valve
6764-0876	Actuator Housing
6764B030000	Bleed Valve
6764B040000	Bleed Valve
6764B040000 AMDT A	Bleed Valve
6764B040000 AMDT B	Bleed Valve
6773-01101	Shaft
6773-01101A	Shaft
6773-01102	Shaft
6773-01111	Body
6773-02001	Valve Body
6773-0861	Valve
6773-0861	Valvevalvee
6773-0861R	Valve Body
6773-0861R	Body Valvevalvee

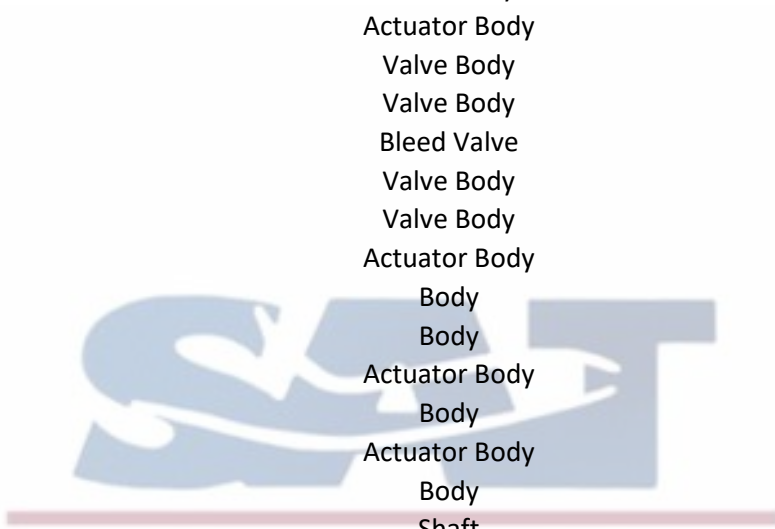 

6773-0870	Actuator Body
6773-0920	Shaft
6773E010000	Bleed Valve
6773F010000	High Pressure Bleed Valve
6773F010000 AMDT A	High Pressure Bleed Valve
6773G010000	High Pressure Bleed Valve
6774-01020	Actuator Body
6774-01101	Actuator Body
6774-01101A	Actuator Body
6774-01410	Actuator Body
6774B030000	High Pressure Bleed Valve
6774E010000	Actuator Ram
6774E010000 AMDT A	Bleed Valve
6774E010000 AMDT AB	Bleed Valve
6774E010000 AMDT ABC	Bleed Valve
6774E010000 AMDT AC	Bleed Valve
6774E010000 AMDT C	Bleed Valve
6774F010000	Bleed Valve
6774F010000 AMDT A	Bleed Valve
6774F010000 AMDT AB	Bleed Valve
6774G010000	Bleed Valve
6774G010000 AMDT A	Bleed Valve
6797A010001	High Pressure Regulating Shutoff Valve
6798A010001	Pressure Regulating Shutoff Valve
68000-5005	Elevator Power Control Package
68000-5007	Elevator Power Control Package
680203037	Rat -Ram Air Turbine
680640-4	Actuator Ele
68160-1	Valve Module Assy
68160-2	Valve Module Assy
68160-3	Valve Module Assy
681L263G01	Aft Mount Assembly
681L263G02	Aft Mount Assembly
681I264G01	Aft Mount Assembly
6832A020001	Fan Air Modulating Valve
683I239G01	Aft Mount Assembly
683I241G01	Aft Mount Assembly
684D100-1	Linear Actuator
684D100-11	Actuator, Linear
684D100-13	Actuator, Linear
684D100-15	Actuator, Speed Brake
684D100-17	Actuator, Speed Brake
684D100-17	Linear Actuator
684D100-3	Actuator
684D100-5	Linear Actuator
684D100-7	Actuator
684D100-7	Linear Actuator

684D100-9	Linear Actuator
684D100-MD7-1	Linear Actuator
684D100-MD9-1	Linear Actuator
684V100	Flow Control Thermostat
684V800	Flow Control Thermostat
6854C020000	Pressure Regulating Valve
6857A010001	Valve - Flow Control
68640-2	Restrictor Assy
68E54-3	IDG Shutoff Valve Assembly
68E54-4	IDG Shutoff Valve Assembly
69-10311-4	Piston Assy
69-14106-7	Lock Actuator
69-20495-1	Rod: Assy
692545-1	Solenoid Shutoff Val
692545-10	Solenoid Shutoff Val
692545-11	Solenoid Shutoff Val
692545-12	Solenoid Shutoff Val
692545-13	Solenoid Shutoff Val
692545-14	Solenoid Shutoff Val
692545-17	Solenoid Shutoff Val
692545-18	Fan, Vaneaxi
692545-2	Solenoid Shutoff Val
692545-3	Fan, Vaneaxi
692545-400	Solenoid Shutoff Val
692545-500	Solenoid Shutoff Val
692545-6	Solenoid Shutoff Val
692545-7	Solenoid Shutoff Val
692545-9	Solenoid Shutoff Val
692546-4	Valve
692D100-15	Actuator, Rotary
692D100-5	ACTUATOR-ROTARY DRIVE
692D100-9	Actuator
693335	Motor Pump
69-35500-6	Rod Assembl
69-35553-1	Bearing
69-37290-13	Assy.
69-40060	AXLE SLEEVE
69-40060	Axle Sleeve
69-41278-4	Swivel Joint
69-52416-4	GEAR
69-52416-4	Gear
696161-8-360	WHEEL
696161-8-360	Wheel
69-61785-8	BEARING
69-61785-8	Bearing
69660-	Valve Assy
696V300	Fuel Control Water Signal Check Valve

69-70991	Actuator Lever
69-71002	Actuator Lever
69-73485-3	Leading Edge Slat Actuator Rod End Assy
69-73485-5	Leading Edge Slat Actuator Rod End Assy
69-73485-7	Leading Edge Slat Actuator Rod End Assy
69-73485-9	Leading Edge Slat Actuator Rod End Assy
69-77096-1	Pin
697729	INPUT HOUSIN
697836	OUTPUT HOUSI
698427-14	Fan, Vaneaxi
698427-18	Fan Assembly
698430-1	Switch
698430-2	Pressure Switch
699-095	Turbine Blade Temperature Pyrometer
699-098	Turbine Blade Temperature Pyrometer
699-099	Turbine Blade Temperature Pyrometer
699-108	Turbine Blade Temperature Pyrometer
69B04065-	Bolt
69B04065-2	Bolt
69B19980-9	L/H WLG SIDE
69B80187-7	Wing Gear Truck Positioner Act
69B80187-8	Valve Assy
69B83285-1	Ratio Changer Actuator Assembly
6U1000	Chip Collector With Self Closing Valve
70010-000	IDG Air/Oil Cooler
7003M94P06	Compressor Inlet Temperature SensorAssembly
7003M94P07	Compressor Inlet Temperature SensorAssembly
7003M94P09	Compressor Inlet Temperature SensorAssembly
701222-1	Fuel Control
701222-2	Fuel Control
701222-3	Fuel Control
701222-4	Fuel Control
701-5097002	Passenger Door Damper
7017M64G01	Pressurizing and Drain Valve
7017M64G02	Pressurizing and Drain Valve
7017M64G03	Pressurizing and Drain Valve
7017M64G04	Pressurizing and Drain Valve
7020M44G01	Pressurizing and Drain Valve
7020M44G02	Pressurizing and Drain Valve
70210-2022522-5	Valve
70210-2704474-2	Valve: Control, Motor Assembly
702200-1	Fuel Booster Pump
702300-1	Fuel Booster Pump
70269-1	Moduel, Tail Skid
70358-06304-042	SHAFT ASSY
70358-06304-042	Shaft Assy
70358-06304-101	SHAFT, PITCH

70358-06304-101	Shaft, Pitch
70408-2	Hyd Shuttle Valve
704300-1	Fuel Pump
704300-10	Fuel Pump
704300-11	Fuel Pump
704300-12	Fuel Pump
704300-13	Fuel Pump
704300-14	Fuel Pump
704300-15	Fuel Pump
704300-2	Fuel Pump
704300-3	Fuel Pump
704300-4	Fuel Pump
704300-5	Fuel Pump
704300-6	Fuel Pump
704300-7	Fuel Pump
704300-8	Fuel Pump
704300-9	Fuel Pump
70507-2	Valve Assy, Brake Metering Module
70507-3	Valve Assy.
705301-26	Main Fuel Gear Pump
705301-27	Main Fuel Gear Pump
705301-28	Main Fuel Gear Pump
705301-29	Main Fuel Gear Pump
705301-30	Main Fuel Gear Pump
705301-32	Main Fuel Gear Pump
705301-34	Main Fuel Gear Pump
705301-36	Main Fuel Gear Pump
705301-37	Main Fuel Gear Pump
705401-26	Main Fuel Gear Pump
705401-27	Main Fuel Gear Pump
705401-28	Main Fuel Gear Pump
705401-29	Main Fuel Gear Pump
705401-30	Main Fuel Gear Pump
705401-32	Main Fuel Gear Pump
705401-34	Main Fuel Gear Pump
705401-36	Main Fuel Gear Pump
705401-37	Main Fuel Gear Pump
705501-26	Main Fuel Gear Pump
705501-27	Main Fuel Gear Pump
705501-28	Main Fuel Gear Pump
705501-29	Main Fuel Gear Pump
705501-30	Main Fuel Gear Pump
705501-32	Main Fuel Gear Pump
705501-34	Main Fuel Gear Pump
705501-36	Main Fuel Gear Pump
705501-37	Main Fuel Gear Pump
70577-42	Snubber, Rotary Hydraulic

70577-43	Actuator Fue
7061M31G01	Turbine Clearance Control Valve
7061M31G02	Turbine Clearance Control Valve
7061M31G03	Turbine Clearance Control Valve
7061M31G04	Turbine Clearance Control Valve
7061M31G05	Turbine Clearance Control Valve
7061M31Gseries	Turbine Clearance Control Valve
7062-4	Motor Control Unit
706400-2	Bleed Valve Fuel Gear Motor
706400-3	Bleed Valve Fuel Gear Motor
706400-4	Bleed Valve Fuel Gear Motor
706801-29	Main Fuel Gear Pump
706801-30	Main Fuel Gear Pump
706801-31	Main Fuel Gear Pump
706801-32	Main Fuel Gear Pump
706801-33	Main Fuel Gear Pump
706801-34	Main Fuel Gear Pump
706801-35	Main Fuel Gear Pump
706801-36	Main Fuel Gear Pump
706801-37	Main Fuel Gear Pump
7-0700-	Housing Assy
7-0703-	Piston
7-0703-4	PISTON
7-0703-4	Piston
7-0713-	Cylinder
70739-1	LEADING EDGE
70740-1	Brake Control Valve
7074-100	Actuator
7074-200	Actuator
7074-300	Actuator
7074-901-0	Cylinder Rod Assembly
7074-series	Actuator, Variable Bypass Valve, Vbv
70781-7	Actuator Wing Flap
707999	HOUSING CSD
708300-1	Fuel Pump
708300-2	Fuel Pump
708300-3	Fuel Pump
708300-4	Fuel Pump
708300-5	Fuel Pump
708300-6	Fuel Pump
708300-series	Fuel Pump
708400-1	Fuel Pump
708400-2	Fuel Pump
708600-1	Fuel Pump
708600-2	Fuel Pump
708600-3	Fuel Pump
708600-4	Fuel Pump

708600-5	Fuel Pump
708600-6	Fuel Pump
708600-7	Pump-Fuel
708600-series	Fuel Pump
7087M94G03	Valve Active Signal Assy
70912-1	Valve: Priority
7-100415	Piston
7-100417	Piston
7-100482-1	Piston
7100M53P04	Temperature Transducers and Thermocouple Sensor
7101-01	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-02	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-03	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-04	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-05	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-06	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-07	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-08	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-09	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-10	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-11	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-12	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-13	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-135	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-136	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-137	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-138	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-14	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-149	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-15	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-155	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-16	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-17	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-18	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-19	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-20	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-21	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-22	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-23	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-236	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-237	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-24	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-25	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-26	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-265	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-27	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)
7101-28	odel 801-RDS Fire/Overheat /Detector (Douglas Aircraft Installation)

711001-11	Main Fuel Gear Pump
711001-12	Main Fuel Gear Pump
711001-2	Main Fuel Gear Pump
711001-3	Main Fuel Gear Pump
711001-4	Main Fuel Gear Pump
711001-5	Main Fuel Gear Pump
711001-6	Main Fuel Gear Pump
711001-7	Main Fuel Gear Pump
711001-8	Main Fuel Gear Pump
711001-9	Main Fuel Gear Pump
711003-3	Valve Outflow
7119M71G03	Turbine Clearance Control
7119M71G07	Turbine Clearance Control
71208-1	Fuel Swing Check Valve
7120M32P01	Temperature Transducers and Thermocouple Sensor
712178-1	CAP FILTER
712178-1	Cap Filter
71396-3	Power Door System Actuator Assembly
71396-4	Power Door System Actuator Assembly
71404-1	Valve
71404-2	Valve, Brake
71444	Valve: Priority
71476-1	Actuator: Pneumatic, Assembly
714900-1	Main Fuel Gear Pump
714900-2	Main Fuel Gear Pump
714900-3	Main Fuel Gear Pump
714900-4	Main Fuel Gear Pump
714900-5	Fuel Pump
715001-29	Main Fuel Gear Pump
715001-30	Main Fuel Gear Pump
715001-31	Main Fuel Gear Pump
715001-32	Main Fuel Gear Pump
715001-33	Main Fuel Gear Pump
715001-34	Main Fuel Gear Pump
715001-35	Main Fuel Gear Pump
715001-36	Main Fuel Gear Pump
715001-37	Main Fuel Gear Pump
7156M75G01	Electrical Cables
7156M75G02	Electrical Cables
7156M75G03	Electrical Cables
7156M75G04	Electrical Cables
7156M75G05	Electrical Cables
7156M75G06	Electrical Cables
7156M76G01	Electrical Cables
7156M76G02	Electrical Cables
7156M76G03	Electrical Cables
7156M76G04	Electrical Cables

7156M76G05	Electrical Cables
7156M76G06	Electrical Cables
7156M77G01	Electrical Cables
7156M77G02	Electrical Cables
7156M77G03	Electrical Cables
7156M78G01	Electrical Cables
7156M78G02	Electrical Cables
7156M78G03	Electrical Cables
7156M79G01	Electrical Cables
7156M79G02	Electrical Cables
7156M79G03	Electrical Cables
7156M80G01	Electrical Cables
7156M80G02	Electrical Cables
7156M80G03	Electrical Cables
7156M81G01	Electrical Cables
7156M81G02	Electrical Cables
7156M81G03	Electrical Cables
7156M81G04	Electrical Cables
7156M81G05	Electrical Cables
7156M81G06	Electrical Cables
71577-2	Brake Valve
715995-2	Pressure Relief Valve
715995-3	Pressure Relief Valve
7161M60G01	Electrical Cables
7161M60G02	Electrical Cables
7161M60G03	Electrical Cables
7161M60G04	Electrical Cables
7161M61G01	Electrical Cables
7161M61G02	Electrical Cables
7161M61G03	Electrical Cables
7161M61G04	Electrical Cables
7161M61G05	Electrical Cables
7161M62G01	Electrical Cables
7161M62G02	Electrical Cables
7161M62G03	Electrical Cables
7161M63G01	Electrical Cables
7161M63G02	Electrical Cables
7161M63G03	Electrical Cables
7161M63G04	Electrical Cables
7161M63G05	Electrical Cables
7161M63G06	Electrical Cables
7161M64G01	Electrical Cables
7161M64G02	Electrical Cables
7161M64G03	Electrical Cables
7161M65G01	Electrical Cables
7161M65G02	Electrical Cables
7161M67G01	Electrical Cables

7161M67G02	Electrical Cables
71756	Valve: Flow Control Module
71784	Valve
717998-2	Bypass Check Valve
717998-3	Bypass Check Valve
717998-4	Valve Assy - Cprsr Bypass A1C
718801-10	Main Fuel Gear Pump
718801-11	Main Fuel Gear Pump
718801-12	Main Fuel Gear Pump
718801-5	Main Fuel Gear Pump
718801-6	Main Fuel Gear Pump
718801-7	Main Fuel Gear Pump
718801-8	Main Fuel Gear Pump
718801-9	Main Fuel Gear Pump
719201-10	Pressurization Out Flow Valve
719201-11	Pressurization Out Flow Valve
719201-12	Pressurization Out Flow Valve
719201-2	Pressurization Out Flow Valve
719201-3	Pressurization Out Flow Valve
719201-4	Pressurization Out Flow Valve
719201-5	Pressurization Out Flow Valve
719201-6	Pressurization Out Flow Valve
719201-7	Pressurization Out Flow Valve
719201-8	Pressurization Out Flow Valve
719201-9	Pressurization Out Flow Valve
719223-3	Turbine Bypass Valve
719223-4	Valve, Turbine Bypas
719224-3	Zone Trim Air Valve
719224-4	Valve Assy
719999-3	SACS 1-1 Stator Vane Actuator
719999-4	SACS 1-1 Stator Vane Actuator
719999-6	SACS 1-1 Stator Vane Actuator
720000-1	SACS 2-1 Bleed Valve Actuator
720000-10	SACS 2-1 Bleed Valve Actuator
720000-11	SACS 2-1 Bleed Valve Actuator
720000-12	SACS 2-1 Bleed Valve Actuator
720000-17	SACS 2-1 Bleed Valve Actuator
720000-18	SACS 2-1 Bleed Valve Actuator
720000-19	SACS 2-1 Bleed Valve Actuator
720000-20	SACS 2-1 Bleed Valve Actuator
720000-4	SACS 2-1 Bleed Valve Actuator
720000-6	SACS 2-1 Bleed Valve Actuator
720000-8	SACS 2-1 Bleed Valve Actuator
720000-9	SACS 2-1 Bleed Valve Actuator
720101-10	Main Fuel Gear Pump
720101-11	Main Fuel Gear Pump
720101-12	Main Fuel Gear Pump

720101-6	Main Fuel Gear Pump
720101-7	Main Fuel Gear Pump
720101-8	Main Fuel Gear Pump
720101-9	Main Fuel Gear Pump
7-20275-1A	Flexible Thermocouple Harness
7-20275-2	Flexible Thermocouple Harness
7-20276-1	Flexible Thermocouple Harness
7-20276-3	Flexible Thermocouple Harness
7-20276-A	Flexible Thermocouple Harness
720301-10	Main Fuel Gear Pump
720301-11	Main Fuel Gear Pump
720301-12	Main Fuel Gear Pump
720301-6	Main Fuel Gear Pump
720301-7	Main Fuel Gear Pump
720301-8	Main Fuel Gear Pump
720301-9	Main Fuel Gear Pump
720434-2	Zone Trim Air Valve
720434-3	Zone Trim Air Valve
720434-4	Zone Trim Air Valve
720434-5	Zone Trim Air Valve
720434-6	Zone Trim Air Valve
720434-7	Zone Trim Air Valve
720613-3	Outflow Valve Actuator
720613-6	Outflow Valve Actuator
720845D	GENERATOR, APU
721001-10	Main Fuel Gear Pump
721001-11	Main Fuel Gear Pump
721001-12	Main Fuel Gear Pump
721001-7	Main Fuel Gear Pump
721001-8	Main Fuel Gear Pump
721001-9	Main Fuel Gear Pump
7-21248-1	Flexible Thermocouple Harness
721401-1	Fuel Pump
721401-2	Fuel Pump
721401-3	Fuel Pump
722101-10	Main Fuel Gear Pump
722101-11	Main Fuel Gear Pump
722101-12	Main Fuel Gear Pump
722101-7	Main Fuel Gear Pump
722101-8	Main Fuel Gear Pump
722101-9	Main Fuel Gear Pump
723301-10	Fuel Pump
723301-11	Fuel Pump
723301-12	Fuel Pump
723301-7	Fuel Pump
723301-8	Fuel Pump
72372-7	Lock

72372-8	Lock
723D100-9	Lock Actuator
724282-1	Outflow Valve Actuator
724282-2	Outflow Valve Actuator
724282-3	Outflow Valve Actuator
724400-1	Fuel Pump
724400-2	Fuel Pump
724827-2	Air Pressure
724D100-1	ELECTRICAL ACTUATOR, ALTERNATE LANDING GEAR EXTEND
724D100-3	Actuator: Motor
725725-1	Fuel Control
725725-2	Fuel Control
725725-3	Fuel Control
725725-4	Fuel Control
725725-5	Fuel Control
725725-6	Fuel Control
726602-	Housing
726602-2	HOUSING
726602-2	Housing
727262A	Governor & Inversion Pump
727262B	Governor & Inversion Pump
727262C	Governor & Inversion Pump
7-27275-4	Stator Vane Feedback Control Assembly
727439-8	HOUSING, VAL
727439-8	Housing, Valve
727439-9	HOUSING, VAL
727439-9	Housing, Valve
7-27511-3	Stator Vane Feedback Control Assembly
727973-1	Servomotor
727973-2	Servomotor
727973-3	Servomotor
727973-4	Servomotor
727973-5	Servomotor
727973-6	Servomotor
727973-7	Servomotor
728859-2	Actuator Cover
7-29038-1	Stator Vane Feedback Control Assembly
7-29039-1	Stator Vane Feedback Control Assembly
7-29039-2	Stator Vane Feedback Control Assembly
72914/38E93-5	Wing Anti-Ice Valve
729355G	Rotor
729550D	RAM AIR TURBINE GROUND MODULE
729722C	GENERATOR
72N620-351	Fan Cowl Damping Rod
72N620-353	Fan Cowl Damping Rod
72N620-361	Fan Cowl Damping Rod
72N620363	Fan Cowl Damping Rod

72N620-805	Fan Cowl Damping Rod
72N620-807	Fan Cowl Damping Rod
72N620-821	Fan Cowl Damping Rod
72N640-353	Telescoping Strut
72N640-361	Telescoping Strut
72N640-363	Telescoping Strut
72N640-365	Telescoping Strut
72N640-807	Telescoping Strut
72N640-811	Telescoping Strut
72N640-821	Telescoping Strut
73030-720737-6	Valve: Relief
730822B	Uplock Assembly
731376	Fan, Axial Flow
731376A	Axial Flow Fan
7-3141-1	Actuator Ass
7-3141-4	Actuator - E
73195	Servo Valve, Electro Hyd, Flow Control
7319604	Servo Valve
731966	Pump, Motor
732-11240-01	Modular Assy
732-11240-02	Actuator Ass
732-11240-03	Actuator Ass
732-11240-05	Actuator Ase
732-11610-01	Actuator Ass
732-11610-02	Actuator
732-11750-01	Actuator
732-11750-02	Actuator Ass
732-13650-06	Safety Valve
732-13650-07	Actuator Lat
732-13650-09	Actuator
732-13650-11	CARGO POWER UNIT
732-13870-09	Actuator, Apu
732-13870-11	Actuator Assy
732-13870-12	Actuator Assy
732-13870-15	Actuator Lin
732-13870-16	Actuator Assy
732-13870-9	Linear Actua
732161-2	Fuel Control Unit
732-16810-01	Actuator, Mechanism
732-16810-03	Trim Actuator
732-16810-05	Actuator Lateral Trim
732-16830-01	60B80052-3
732-16830-02	60B80052-4
732-16830-03	60B80052-4
732-16870-01	Air Intake Actuator
732-16870-02	Actuator, Apu Inlet
732-16870-03	Air Intake Actuator

732-18550-01	Control Vlv Module
732-18550-02	Control Vlv Module
732-18550-03	Control Vlv Module
732-18550-04	Control Vlv Module
732-18550-05	Control Vlv Module
732-18550-06	Control Vlv Module
732-18550-07	Control Vlv Module
732-18550-08	Control Vlv Module
732-18550-09	Control Vlv Module
732-18550-10	Control Vlv Module
732-18550-11	Control Vlv Module
732-18550-12	Control Vlv Module
732-18550-13	Control Vlv Module
732-18560-01	Control Vlv Module
732-18560-02	Control Vlv Module
732-18560-03	Control Vlv Module
732-18560-04	O/B Leading Edge Stat Control Module
732-18560-05	O/B Leading Edge Stat Control Module
732-18560-06	Actuator, EI
732-18560-07	Cartridge: Check Valve
732-18560-08	Control Vlv Module
732-18570-01	Ctrl Vlv Module
732-18570-02	Ctrl Vlv Module
732-18570-03	Ctrl Vlv Module
732-18570-04	Ctrl Vlv Module
732-18570-05	Ctrl Vlv Module
732-18600-01	Bypass Vlv, Motor Operated
732-18600-02	Bypas Vlv, Motor Operated
732-18610-01	ACTUATOR, ROTARY
732-18700-01	Flap & Slat Shutoff Valve Assy
732-18700-02	Flap & Slat Shutoff Valve Assy
732-18700-03	Flap & Slat Shutoff Valve Assy
732-18700-04	Flap & Slat Shutoff Valve Assy
732-18700-05	Flap & Slat Shutoff Valve Assy
732-18700-06	Flap & Slat Shutoff Valve Assy
732-18700-07	Flap & Slat Shutoff Valve Assy
732-18700-08	Flap & Slat Shutoff Valve Assy
732-18700-09	Flap & Slat Shutoff Valve Assy
732-18700-1	S/O Valve Mod
732-18700-10	S/O Valve Mod
732-18700-11	S/O Valve Mod
732-18700-12	S/O Valve Mod
732-18700-13	S/O Valve Mod
732-18700-14	S/O Valve Mod
732-18700-15	S/O Valve Mod
732-18700-16	S/O Valve Mod
732-18700-17	S/O Valve Mod

732-18700-18	S/O Valve Mod
732-18700-19	S/O Valve Mod
732-18700-2	S/O Valve Mod
732-18700-20	S/O Valve Mod
732-18700-21	S/O Valve Mod
732-18700-3	S/O Valve Mod
732-18700-4	S/O Valve Mod
732-18700-5	S/O Valve Mod
732-18700-6	S/O Valve Mod
732-18700-7	S/O Valve Mod
732-18700-8	S/O Valve Mod
732-18700-9	S/O Valve Mod
732591- SERIES	Air Cooling Fan
732591A	Air Cooling Fan
732591B	Air Cooling Fan
732591C	Air Cooling Fan
732591D	Air Cooling Fan
732591E	Air Cooling Fan
732591F	Air Cooling Fan
732591G	Air Cooling Fan
732654B	Housing
732900-10	EVC 3-2 and EVC 3-4 Engine Vane
734-06485-03	Ballscrew - Te Inbd Flap
734-06485-11	Ballscrew - Te Outbd Flap
734-06485-12	Ballscrew - Te Outbd Flap
734-06485-14	Ballscrew - Te Inbd Flap
734-06490-32	Transmission 2 - Te Flap Drive
734-06490-33	Transmission 3 - Te Flap Drive
734-06490-34	Transmission 4 - Te Flap Drive
734-06490-35	Transmission 5 - Te Flap Drive
734-06490-36	Transmission 6 - Te Flap Drive
734-06490-37	Transmission 7 - Te Flap Drive
734-06490-41	Transmission 1 - Te Flap Drive
734-06490-48	Transmission 8 - Te Flap Drive
734-06500-08	Power Drive Unit - Te Outbd Flap Drive
734-06500-09	Power Drive Unit - Te Inbd Flap Drive
734-06510-01	Angle Gearbox - Te Flap Drive
734-06510-05	Angle Gearbox No. 3 - Outboard Te Flap D
734-06510-07	Angle Gearbox - Te Flap Drive
734-06510-13	Angle Gearbox - Te Flap Drive
734-15610-02	Control Unit: Power,Drive,Hinge
734-16100-02	Actuator
734-16100-03	Actuator: Linear,Lkg,Door,Airstair
734-17360-	Truck Positioner
734-17360-03	Mlg Truck Positioner Actr
734-17364-01	Piston Rod
734183A	Gearbox Assembly

734183B	Gearbox Assembly
734-18510-01	Valve Assembly - Sequence, Down Lock
734-18520-01	Valve, Assembly - Sequence, Up Lock
734-19150-09	Hydraulic Control Valve Module
734-19150-10	Hydraulic Control Valve Module
734444-1	Remote Temperature Sensor
735697	HOUSING,CSD
735697-1	Housing Assy
738138-	Cage
738138-100	CAGE
738138-100	Cage
738138-101	HOUSING
738138-101	Housing
738138-104	GEAR CAGE
738138-104	Gear Cage
738138-109	GEAR CAGE
738138-109	Gear Cage
738138-9	CAGE
738138-9	Cage
738274-103	Housing
738274-103	Housing Tran
738341-5	Air Regulator & Shutoff Valve
738353-2	Housing
738353-3	Body Assy
739173-6	Valve
740123A	Adapter: Qad
740179-10	Pneumatic Starter
740179-11	Pneumatic Starter
740179-12	Pneumatic Starter
740179-13	Pneumatic Starter
740179-2	Pneumatic Starter
740179-3	Pneumatic Starter
740179-4	Pneumatic Starter
740179-5	Pneumatic Starter
740179-6	Pneumatic Starter
740179-7	Pneumatic Starter
740179-9	Pneumatic Starter
7-40614-1	Nacelle Temperature Sensor
7-40614-2	Nacelle Temperature Sensor
740724-1	Body
740802-19	Rotor Assy
740D8003-21	Lower Locking Actuator
740D8003-23	Upper Feedback Actuator
740D8003-31	Lower Locking Actuator
740D8003-32	Upper Feedback Actuator
740D8003-42	Upper Feedback Actuator
740D8007-1	V2500 C-Duct Linear Hydraulic Actuator

740D8007-3	V2500 C-Duct Linear Hydraulic Actuator
741756A	Stator Housing
741900-1	Fuel Pump
741900-2	Fuel Pump
741900-3	Fuel Pump
741900-4	Fuel Pump
742511-1	Fuel Control
742600-3	EVC 3-2 and EVC 3-4 Engine Vane
742600-4	EVC 3-2 and EVC 3-4 Engine Vane
742600-5	EVC 3-2 and EVC 3-4 Engine Vane
742868-1	Ram Air Valve Actuator
742868-2	Ram Air Valve Actuator
742868-3	Ram Air Valve Actuator
742868-4	Ram Air Valve Actuator
742868-5	Ram Air Valve Actuator
743522-1	Fuel Control
7-43534-1	Nacelle Temperature Sensor
7-43534-3	Nacelle Temperature Sensor
743602-1	Fuel Control
743602-2	Fuel Control
743602-3	Fuel Control
743602-4	Fuel Control
743602-5	Fuel Control
7-43717-2	E.G.T. Harness and Junction Box
7-43717-3	E.G.T. Harness and Junction Box
7-43736-1	Scavenge Filter Pressure Switch
7-43736-2	Scavenge Filter Pressure Switch
743801-1	Fuel Control
743802-2	Fuel Control
743802-3	Fuel Control
743802-4	Jet Fuel Control
743803-1	Fuel Control
743803-2	Fuel Control
743803-3	Fuel Control
743803-4	Fuel Control
7-43963-1	Throttle Control Box Assembly
7-43963-10	Throttle Control Box Assembly
7-43963-2	Throttle Control Box Assembly
7-43963-3	Throttle Control Box Assembly
7-43963-4	Throttle Control Box Assembly
7-43963-5	Throttle Control Box Assembly
7-43963-6	Throttle Control Box Assembly
7-43963-7	Throttle Control Box Assembly
7-43963-8	Throttle Control Box Assembly
7-43963-9	Throttle Control Box Assembly
7-44211-2	E.G.T. Harness and Junction Box
7-44758-11	Control: Valve,Drain,Waste Tank,Assembly

7-44828-2	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-3	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-6	Remote Starter Override Control Assembly (Douglas Installation)
7-44828-7	Remote Starter Override Control Assembly (Douglas Installation)
744975A	Gearbox Assembly
745A0000-01	Trim-Air Check Valve
746A0000-05	Actuator Ra
746A0000-06	Actuator Ra
747-5700-3-0	Actuator
747955-2	EVC 3-2 and EVC 3-4 Engine Vane
747955-3	EVC 3-2 and EVC 3-4 Engine Vane
747955-4	EVC 3-2 and EVC 3-4 Engine Vane
747955-5	EVC 3-2 and EVC 3-4 Engine Vane
747955-6	EVC 3-2 and EVC 3-4 Engine Vane
747955-7	EVC 3-2 and EVC 3-4 Engine Vane
747955-8	EVC 3-2 and EVC 3-4 Engine Vane
747955-9	EVC 3-2 and EVC 3-4 Engine Vane
748804-3	Butterfly Disk
748804-6	Butterfly Disk
748A0000-08	Valve Assy., Anti-Ice
749A0000-02	Chamber: Air Plenum
75130-A3073	SERVO VALVE
751912-1	PISTON SHAFT
751912-1	Piston Shaft
751A0000-07	Flow Control Valve
751A0000-07 AMDT A	Flow Control Valve
751A0000-07 AMDT AB	Flow Control Valve
751A0000-07 AMDT ABC	Flow Control Valve
751A0000-07 AMDT B	Flow Control Valve
751A0000-07 AMDT BC	Flow Control Valve
751A0000-07 AMDT D	Flow Control Valve
751A0000-07 AMDT E	Flow Control Valve
751B0000-02	Flow Control Valve
751B0000-02 AMDT A	Flow Control Valve
751B0000-02 AMDT B	Flow Control Valve
751B0000-02 AMDT C	Flow Control Valve
751B0000-02 AMDT D	Flow Control Valve
751B0000-02 AMDT E	Flow Control Valve
751F0000-01	Flow Control Valve
751G0000-01	Flow Control Valve
751G0000-01 AMDT A	Flow Control Valve
752000-1	Trim Air Regulating Valve
752000-2	Trim Air Regulating Valve
752000-3	Air Regulator & Shutoff Valve
752095A	Carrier Shaft Assy
752110A	Scavenge Pump Assy
752118A	Charge Pump Assy

752124A	Inversion Pump Assy
752685A	Stator Housing Assy
752685B	Stator Housing Assy
752685C	Stator Housing Assy
752685D	Stator Housing Assy
752685E	Stator Housing Assy
752685F	Stator Housing Assy
752685G	Stator Housing Assy
753365-10	Shaft
753582-1	Shut Off Valve
753582-2	Shut Off Valve
753582-3	Shut Off Valve
754909-XX	Actuator
754A0000-03	MAIN HEAT EX
755150-1	Remote Temperature Sensor
755300-2	EVC 3-5 Engine Vane Control
755675C	INPUT HOUSIN
755675D	Input Housing
755961A	Rotor Balance Assy
755961B	Rotor Balance Assy
755961C	Rotor Balance Assy
755961D	Rotor Balance Assy
755961E	Rotor Balance Assy
755961F	Rotor Balance Assy
755961G	Rotor Balance Assy
755961H	Rotor Balance Assy
755961J	Rotor Balance Assy
755961K	Rotor Balance Assy
755961L	Rotor Balance Assy
755C0000-01	REHEATER
756589A	APU GENERATOR
756722A	Solenoid Valve
756722B	Solenoid Valve
756910A	Stator Housing Assy
756910B	Stator Housing Assy
756910C	Stator Housing Assy
756A0000-06	Condensor
757030B	Rotor Balance Assy
757030C	Rotor Balance Assy
757030D	Rotor Balance Assy
757030E	Rotor Balance Assy
757030F	Rotor Balance Assy
757030G	Rotor Balance Assy
757030H	Rotor Balance Assy
757318	INPUT HOUSIN
7589149-101	Solenoid Air Filter

7589149-102	Solenoid Air Filter
758A0000-02	Bypass Valve
7590469-101	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-102	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-103	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-105	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7590469-107	Hydraulic Filter Assembly 1500 PSI (Douglas Aircraft Installation)
7591030-1	Wire Harnesses
7591300-1	Wire Harnesses
7592174-101	Hydraulic Filter Assembly 1500 PSI
7592174-102	Hydraulic Filter Assembly 1500 PSI
7592174-103	Hydraulic Filter Assembly 1500 PSI
7612B000	Pressure Regulating And Shutoff Valve
76-167-2	Oil Quantity Transmitter
76-167-3	Oil Quantity Transmitter
76-167-4	Oil Quantity Transmitter
76-167-5	Oil Quantity Transmitter
761A0000-04	Inlet/Outlet Actuator Assy
761B0000-01	Inlet/Outlet Actuator Assy
762080-1	Valve Safety
762080-2	Safety Valve
762A0000-04	Pack Outlet Actuator
76301-03902-102	Actuator
763A0000-03	Sensor: Temp
764224A	PUMP,LUBE AN
764224B	PUMP ASSY-LU
7646B000	Pressure Regulating And Shutoff Valve
764711B	Actuator Ram Air Turbine
764711C	Actuator: Ram Air Turbine
764875-1	Lever And Plates, Sensor
764930A	Stator Housing Assy
764930B	Stator Housing Assy
764930C	Stator Housing Assy
764930D	Stator Housing Assy
764930E	Stator Housing Assy
764930F	Stator Housing Assy
764930G	Stator Housing Assy
764B0000-01	Sensor: Temp
764B0000-02	Sensor: Temp
765950-4	Actuator
765950-6	Actuator
766088A	Actuator
766361B	Inboard Flap Actuator Assy
766361C	Inboard Flap Act
766363B	Midboard Right Flap Actuator
766363C	Midboard Right Flap Act
766365B	Midboard Left Flap Actuator

766365C	Midboard Left Flap Act
766367A	Outboard Rt Flap Act
766367B	Outboard Rt Flap Act
766369A	Outboard Left Flap
766369B	Outboard Left Flap
766383C	Inboard Slat Actuator
766389R	Control
766A0000-01	Sensor: Temp
767188A	Rotor Balance Assy
767188B	Rotor Balance Assy
767188C	Rotor Balance Assy
767460-1	Valve
767460-2	Flow Control Valve
767460-3	Flow Control Valve
767460-4	Flow Control Valve
7675B000	Pressure Regulating And Shutoff Valve
767A0000-04	Sensor: Temp
768616C	Actuator
769105A	Airborne Ground Check Module
769106A	Module,Airborne Grnd Chk
769148-1	Bushing
769151-1	Bushing
769152-1	Washer
769606-11	Fuel Control
769606-12	Fuel Control
769606-13	Fuel Control
769606-14	Fuel Control
769606-15	Fuel Control
769606-16	Fuel Control
769606-5	Fuel Control
769606-7	Fuel Control
769606-8	Fuel Control
77000-025-201	Valve: Waste Drain
7702-01	Fire/Overheat Detector Assembly
7702-02	Fire/Overheat Detector Assembly
7702-03	Fire/Overheat Detector Assembly
7702-04	Fire/Overheat Detector Assembly
770358D	Lubrication and Scavenge Pump
770358E	Lubrication and Scavenge Pump
770375A	HOUSING
770375A	Housing
77087740	PUMP HSG & I
7711300-1	Cargo Handling Partial Load Stop
77-139-2	Transmitter, Engine Oil
77-139-3	Transmitter, Engine Oil
77143-02	Servo Valve, Steering Control
77144-04	Steering Control Mod., Main Gear

772499-1	GTA-9 Engine Vane and Bleed Control
773288-	Pressure Regulator
773288-10	Pressure Regulating & Shutoff Valve
773288-3	Pressure Regulating & Shutoff Valve
773288-4	Pressure Regulating & Shutoff Valve
773288-5	Pressure Regulating & Shutoff Valve
773288-6	Pressure Regulating & Shutoff Valve
773288-7	Pressure Regulating & Shutoff Valve
773288-8	Pressure Regulating & Shutoff Valve
773288-9	Pressure Regulating & Shutoff Valve
773289-10	High Pressure Controller
773289-11	High Pressure Controller
773289-12	High Pressure Controller
773289-13	High Pressure Controller
773289-14	High Pressure Controller
773289-15	Hp Controller
773289-16	Controller, High Pre
773289-18	Controller, High Pre
773289-3	High Pressure Controller
773289-4	High Pressure Controller
773289-5	High Pressure Controller
773289-6	High Pressure Controller
773289-7	High Pressure Controller
773289-8	High Pressure Controller
773289-9	High Pressure Controller
773855-	Valve
773855-3	Fan Air Modulating Valve
773855-4	Fan Air Modulating Valve
773855-5	Valve: Fan Air
773855-6	Fan Air Modulating Valve
773855-7	Valve, Fan Air Mod
773855-8	Fan Air Modulating Valve
773856-10	Intermediate Pressure Check Valve
773856-11	Intermediate Pressure Check Valve
773856-12	Intermediate Pressure Check Valve
773856-13	Intermediate Pressure Check Valve
773856-14	Intermediate Pressure Check Valve
773856-15	Valve Assy., Inter Press. Check
773856-16	Intermediate Pressure Check Valve
773856-17	Intermediate Pressure Check Valve
773856-18	Intermediate Pressure Check Valve
773856-19	Ip Check Valve
773856-3	Intermediate Pressure Check Valve
773856-4	Intermediate Pressure Check Valve
773856-5	Intermediate Pressure Check Valve
773856-6	Intermediate Pressure Check Valve
773856-8	Intermediate Pressure Check Valve

774500-1	Remote Temperature Sensor
774541-12	HOUSING
774541-12	Housing
774541-8	HOUSING
774541-8	Housing
774545-4	CAP
774545-4	Cap
774551-	Shaft
774553-4	Levelveer
774555-1	GTA-9 Engine Vane and Bleed Control
774592-11	ACTUATOR HOU
774592-11	Actuatorator Hou
774592-2	Housing
774592-2	Housing
774599-1	SPRING
774599-1	Spring
774619-	Valve Body
774637-3	HOUSING
774871-	Turbine Wheele
774871-1	Rotor, Turbi
774871-4	ROTOR TURBIN
774871-4	Rotor Turbin
774918-1	Valve Shaft
774984-1	Starter Assy
774987-1	Shutoff Valve
775001-3	Housing
775001-4	Housing
775001-6	Housing
775002-13	Housing
775002-2	Housing
775002-2	Housing
775002-4	Housing
775009-5	HOUSING
775009-5	Housing
775023-1	Shaft
775023-4	Shaft
775538-1	Starter, Valve
775538-10	Starter Valve
775538-11	Starter Valve
775538-12	Starter Valve
775538-13	Starter Valve
775538-15	Starter Valve
775538-16	Starter Valve
775538-3	Starter, Valve
775538-6	Starter, Valve
775538-7	Starter, Valve
775538-9	Starter Valve

775550-2	Pneumatic Starter
775550-3	Pneumatic Starter
775550-4	Pneumatic Starter
775550-5	Pneumatic Starter
775550-6	Pneumatic Starter
775550-7	Pneumatic Starter
776555-3	GTA-9 Engine Vane and Bleed Control
776555-5	GTA-9 Engine Vane and Bleed Control
776555-6	GTA-9 Engine Vane and Bleed Control
776555-7	GTA-9 Engine Vane and Bleed Control
776635-	Inlet Housing
776635-1	INLET HOUSIN
776635-1	Inlet Housing
776635-600	INLET HOUSIN
776635-600	Inlet Housing
776635-602	HOUSING, INL
776635-602	Housing, Inl
776635-603	HOUSING, INL
776635-603	Housing, Inl
776635-604	HOUSING INLE
776635-604	Housing Inle
776635-605	INLET HOUSIN
776635-605	Inlet Housing
776654-1	Valve Shaft
776950-1	Fuel Metering Unit Bypass Valve
777-1492-003	Actuator Bac
777B0000-01	Temperature Selector
777B0000-02	Temperature Selector
778686-3	High Pressure Shutoff Valve
778686-4	High Pressure Shutoff Valve
778718-	Transmission Housing
778727-1	Pack Temperature Control Valve
778727-2	Pack Temperature Control Valve
778727-5	Pack Temperature Control Valve
778727-7	Pack Temperature Control Valve
778727-9	Pack Temperature Control Valve
7800014-001	Selcal Decod
78014-01	Servoalve For Rudder Control Unit
78046-03	Pressure Cntrl Servoalve
780A0000-01	Command Sensor
780A0000-02	Command Sensor
780B0000-01	Command Sensor
78169-02	Check Valve
78169-03	Hyd Brake Control
78169-04	Autobrake Control Module
7820646	SCREW
7820665	BALL NUT

7820923	Ball Screw Assy
7821202	SCREW
7821343	Ballscrew Assy
782467-1	Fuel Pump/Fuel Control Coupling Clamp
782467-2	Fuel Pump/Fuel Control Coupling Clamp
782475-1	Ice Detection System
782475-2	Ice Detection System
7825222	Ballscrew Assy
7825223	Ballscrew Assy
7827-02	Fire/Overheat Detection System
7827-03	Fire/Overheat Detection System
782790-15	Actuator Cap
7829997	Ballscrew Assy
783955-001	Pressure Ratio Bleed Control
785796-2	PLATE
785796-2	Plate
786333-1	Remote Temperature Sensor
786333-2	Remote Temperature Sensor
78695-1	Snubber
786A0000-06	Power Ctrl Unit
786A0000-11	Power Ctrl Unit
786A0000-12	Slat Pcu
786A000-03	Control Valve
786A000-04	Control Valve
786A000-05	Control Valve
786A000-06	Control Valve
786A0100-01	Pressure Off Brake
786A0100-02	Pressure Off Brake
786A2000-01	Pressure-Off Brake
787A0000-03	Valve Block
787A0000-04	Valve Block
787A0000-07	Valve Block
787V1100	Cooling Air Shutoff Valve
787V1300	Cooling Air Shutoff Valve
787V300	LP/HP Fuel Pump
787V500	Cooling Air Shutoff Valve
787V800	Cooling Air Shutoff Valve
787V900	Cooling Air Shutoff Valve
788041-1	Housing
788041-10	Housing
788041-2	Housing
788366-1	Fuel Distribution Valve
788366-2	Fuel Distribution Valve
788366-3	Fuel Distribution Valve
788366-7	Fuel Distribution Valve
788377-1	Stator Vane Actuator
788377-2	Stator Vane Actuator

788399-1	Air/Oil Heat Exchanger Valve
788399-3	Air/Oil Heat Exchanger Valve
788399-4	Air/Oil Heat Exchanger Valve
788399-5	Heat Exchanger-Valve
788399-6	Air/Oil Heat Exchanger Valve
788600-7	Fuel Pump
789300-1	HOUSING
789300-1	Housing
789300-1	Housing
790144-1	Air/Oil Heat Exchanger Valve
790144-2	Air/Oil Heat Exchanger Valve
790144-3	Air/Oil Heat Exchanger Valve
790210-1	Intercompressor (2.5) Bleed Actuator
790246-103	ACTUATOR HOU
790246-103	Actuatorator Hou
790246-9	Housing
790246-9	Actuatorator Hou
790247-13	Cap
790247-3	ACTUATOR CAP
790247-3	Actuatorator Cap
790247-4	Actuator Cap
790247-4	Actuatorator Cap
790268-	Housing
790268-11	Housing
790268-11	Housing
790268-12	Housing
790268-12	Valvevalvee Housing
790268-5	Housing
790268-5	Valvevalvee Housing
790268-6	Housing
790268-6	Valvevalvee Housing
790268-7	Valvevalvee Body
790270-	Valve
790270-1	High Pressure Shutoff Valve
790270-10	High Pressure Shutoff Valve
790270-11	High Pressure Shutoff Valve
790270-12	High Pressure Shutoff Valve
790270-13	High Pressure Shutoff Valve
790270-14	Valve-High Pressure
790270-15	High Pressure Shutoff Valve
790270-2	High Pressure Shutoff Valve
790270-3	High Pressure Shutoff Valve
790270-4	High Pressure Shutoff Valve
790270-5	High Pressure Shutoff Valve
790270-6	High Pressure Shutoff Valve
790270-7	High Pressure Shutoff Valve
790270-8	High Pressure Shutoff Valve

790270-9	High Pressure Shutoff Valve
790312-001	Prbc
790388-3	HOUSING VALV
790388-3	Housing Valvevalve
790390-5	Fan Air Temp Sensor
790400-2	Housing
790400-2	Housing
790424-4	Starter Control Valve
790425-2	Pneumatic Starter
790425-3	Pneumatic Starter
790425-4	Pneumatic Starter
790425-5	Pneumatic Starter
790425-6	Pneumatic Starter
790425-7	Pneumatic Starter
790425-8	Pneumatic Starter
790425-9	Pneumatic Starter
790425A3	Pneumatic Starter
790425-A3	Pneumatic Starter
790425A4	Pneumatic Starter
790425-A4	Pneumatic Starter
790425A5	Pneumatic Starter
790425-A5	Pneumatic Starter
790425A6	Pneumatic Starter
790425A7	Pneumatic Starter
790425A8	Pneumatic Starter
790425A9	Pneumatic Starter
791100-16-096	Engine Inlet Pressure and Temperature Sensor
791100-16-098	Engine Inlet Pressure and Temperature Sensor
791100-16-104	Engine Inlet Pressure and Temperature Sensor
791100-16-106	Engine Inlet Pressure and Temperature Sensor
791100-4-044	Engine Inlet Pressure and Temperature Sensor
791100-4-066	Engine Inlet Pressure and Temperature Sensor
791100-4-069	Engine Inlet Pressure and Temperature Sensor
791100-4-076	Engine Inlet Pressure and Temperature Sensor
791100-4-087	Engine Inlet Pressure and Temperature Sensor
791100-4-089	Engine Inlet Pressure and Temperature Sensor
791100-4-092	Engine Inlet Pressure and Temperature Sensor
791100-4-094	Engine Inlet Pressure and Temperature Sensor
791100-4-108	Engine Inlet Pressure and Temperature Sensor
791100-4-111	Engine Inlet Pressure and Temperature Sensor
791100-4-112	Engine Inlet Pressure and Temperature Sensor
791100-6-070	Engine Inlet Pressure and Temperature Sensor
791100-6-071	Engine Inlet Pressure and Temperature Sensor
791100-6-075	Engine Inlet Pressure and Temperature Sensor
791100-6-081	Engine Inlet Pressure and Temperature Sensor
791100-6-084	Engine Inlet Pressure and Temperature Sensor
791100-6-090	Engine Inlet Pressure and Temperature Sensor

791100-6-091	Engine Inlet Pressure and Temperature Sensor
791100-6-095	Engine Inlet Pressure and Temperature Sensor
791100-6-096	Engine Inlet Pressure and Temperature Sensor
791100-6-109	Engine Inlet Pressure and Temperature Sensor
791100-6-110	Engine Inlet Pressure and Temperature Sensor
791990-2	ACTUATOR PIS
791A0000-02	Flap Transmission
791A0000-03	Flap Transmission
791A0000-04	Flap Transmission
791A0000-05	Flap Transmission
791A0000-06	Flap Transmission
791C0000-01	Actuator-Flap No. 1
791C0000-02	Actuator-Flap No. 1
791D0000-01	Actuator-Flap No. 1
792-6-19	T4.9 Thermocouple
792-6-20	T4.9 Thermocouple
792755-11	Pressure Controller
792755-12	Pressure Controller
792755-13	Pressure Controller
792755-14	Pressure Controller
792755-15	Pressure Control
792755-16	Pressure Controller
792755-3	Pressure Controller
792755-4	Pressure Controller
792755-5	Pressure Controller
792755-6	Pressure Controller
792755-7	Pressure Controller
792755-8	Pressure Controller
792856-1	Shaft
792895-13	Housing
792895-4	Housing
792895-4	Housing
792930-4	Precoolr
792937-5	Rotor,Turbine
792940-5	Precoolr
792993-12	INLET HOUSIN
792993-12	Inlet Housing
792993-3	INLET HOUSIN
792993-3	Inlet Housing
792993-6	INLET HOUSIN
792993-6	Inlet Housing
792993-XXX	Inlet Housing
792995-3	Deflector,Exhaust
792999-1	Pressure Regulating Valve
792999-10	Pressure Regulating Valve
792999-11	Pressure Regulating Valve
792999-2	Pressure Regulating Valve

792999-3	Pressure Regulating Valve
792999-4	Pressure Regulating Valve
792999-5	Pressure Regulating Valve
792999-6	Pressure Regulating Valve
792999-7	Pressure Regulating Valve
792999-8	Pressure Regulating Valve
792999-9	Pressure Regulating Valve
792A0000-03	Lh Wing Flap Track 2 Actuator
792A0000-04	Flap Actuator
792A0000-05	Flap Actuator
792A0000-06	Flap Actuator
792A0000-07	Flap Actuator
792D0000-01	Actuator-Flap No. 2
792D0000-02	Actuator-Flap No. 2
792E0000-01	Actuator-Flap No. 2
793999-1	Air/Oil Heat Exchanger Valve
793999-2	Air/Oil Heat Exchanger Valve
793999-3	Air/Oil Heat Exchanger Valve
793A0000-02	Flap Transmission
793A0000-03	Actuator-Flap,No.3
793A0000-04	Flap Transmission
793A0000-05	Flap Transmission
793A0000-06	Flap Transmission
793A0000-07	Flap Transmission
793C0000-01	Actuator
793C0000-02	Actuator-Flap No. 3
793D0000-01	Actuator-Flap No. 3
793T100-3	Drive Unit
793T100-5	Drive Unit
793T100-7	Dr Unit Wing Alterna
794A0000-02	Flap Transmission
794A0000-03	Flap Transmission
794A0000-04	Flap Transmission
794A0000-05	Flap Transmission
794A0000-06	Flap Transmission
794C0000-01	Flap Actuator
794C0000-02	Actuator-Flap No. 4
794D0000-01	Actuator-Flap No. 4
795860-1	Housing
795860-1	Housing
796050-1	Fuel Distribution Valve
797655-2	Shaft
798750-1	Air/Oil Heat Exchanger Valve
798750-2	Air/Oil Heat Exchanger Valve
798850-1	Valve Assy., Air Oil Heat
798850-2	Air/Oil Heat Exchange Val
799643-2	HOUSING

799643-3	HOUSING
799700-1	Valve - Starter
799736-	Shaft
799742-2	Housing
799801-1	Pressure Regulating Valve
799801-2	Pressure Regulating Valve
799801-3	Pressure Regulating Valve
799801-4	Valve
799818-4	Rotor
7C2F-360000	Check Valve
7D2F-4000201	Check Valve
7D2F-4000202	Check Valve
7D2F-4000203	Check Valve
7G110-3	Switch, Fuel Pressure
7G110-5	Switch, Gage Pressure
7G110-6	Press Switch
7GR159	Switch, Pres
7N12190-2	Rotary Actua
7N15010-1	Rotary Actua
8.1E+104	JET PUMP
80000000-12	STABILIZER TRIM LIMIT SWITCH
80010-000	IDG Air/Oil Cooler
800953-1	ACTUATOR-IGV APU
800953-2	IGV ACTUATOR
800954-1	Diverter Valve Contr
800954-2	Diverter Valve Contr
800954-3	Diverter Valve Contr
800954-4	Diverter Valve Contr
800954-5	Diverter Valve Contr
800954-6	Diverter Valve Contr
800956-1	Diverter Valve
800956-2	Diverter Valve
801000-1	Fuel Metering Unit
801000-2	Fuel Metering Unit
801000-3	Fuel Metering Unit
801000-4	Fmu
801053-1	Fuel Metering Unit
801053-2	Fuel Metering Unit
801053-3	Fuel Metering Unit
801053-4	Fuel Metering Unit
801240-1	Vaneaxial Fan
801240-2	Vaneaxial Fan
801240-3	Air Cycle Machine
801240-4	Turbo Fan
801246-1	PLATE
801246-1	Plate
802154-2	Shaft

802154-3	Housing
802170-	High Pressure Valve
802170-1	High Pressure Shutoff Valve
802170-10	High Pressure S/O Valve
802170-11	High Pressure S/O Valve
802170-12	High Pressure S/O Valve
802170-2	High Pressure Shutoff Valve
802170-3	Valve-High Pressure
802170-4	Valve-High Pressure
802170-5	High Pressure Shutoff Valve
802170-6	High Pressure Shutoff Valve
802170-7	High Pressure Shutoff Valve
802170-8	High Pressure Shutoff Valve
802170-9	High Pressure S/O Valve
8029000-1	Position Lock:
8035A010001	Fan - Lower Recirculation
805373-001	Prbc
806162-	Shaft
806162-3	Shaft
806162-3	Shaft
806162-3WE	PMA SHAFT
806162-3WE	Pma Shaft
806162-4	Shaft
8062- 494	Servo Fuel Heater
8062-488	Servo Fuel Heater
8062-489	Servo Fuel Heater
8062-493	Servo Fuel Heater
806253-1	SEAL PLATE
806253-1	Seal Plate
8063- 201	Servo Fuel Heater
8063-202	Servo Fuel Heater
8063-208	Servo Fuel Heater
8063-209	Servo Fuel Heater
8063-214	Servo Fuel Heater
806808-1	Stator Vane Actuator
806808-2	Stator Vane Actuator
806808-3	Stator Vane Actuator
806818-1	Oil Cooler Bypass Valve
806818-2	Oil Cooler Bypass Valve
806833-1	Oil Cooler Bypass Valve
806833-2	Oil Cooler Bypass Valve
806833-3	Oil Cooler Bypass Valve
806833-4	Oil Cooler Bypass Valve
806D100-1	Door, Cargo
807962-401	Actuator Assembly
807962-403	Actuator Assembly
808118-4	

Silicone Capacitive Pressure Sensor (SPCS) Assemblies

808118-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808119-4	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808119-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808120-4	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808120-7	Silicone Capacitive Pressure Sensor (SPCS) Assemblies
808411-1	Deflector
808411-2	Deflectr
808445-1	Duct Temperature Sensor
808550-1	Flow Regulating Valve
808556-1	Valve-Check, Interme.
808726-1	Intercompressor (2.5) Bleed Actuator
808726-2	Intercompressor (2.5) Bleed Actuator
808756-1	SPRING COMPR
808756-1	Spring Compr
808800-1	Fmu
808810-1	Oil Cooler Bypass Valve
808810-2	Oil Cooler Bypass Valve
808884-5	In-Line Starter Valve
808884-6	In-Line Starter Valve
808891-01	Oil Cooler
808899-1	Housing
808899-1	Housing Main
808899-2	HOUSING, MAI
808899-2	Housing, Mai
808900-1	Engine Air/Oil Heat Exchanger Valve
8100-151	Variable Stator Vane Actuator
810204-2	Flow Control And Shutoff Valve
810204-3	Flow Control And Shutoff Valve
810204-4	Valve: Control,Flow & Shutoff
810205-1	Fan Bypass Check Valve Assy
810205-2	Fan Bypass Check Valve Assy
810205-3	Fan Bypass Check Valve Assy
810206-4	Actuator
810206-5	Actuator
810210-2	Exchanger: Heat
810211-1	Sensor: Temp
810212-1	Collector: Water
810214-1	Trim: Zone,Valve
810214-2	Low Limit Valve
810215-2	Economy Cooling Valve
810215-3	Valve: Economy Cooling
810216-1	Bypass Valve
810218-1	Sensor: Temp
810220-1	Sensor: Temp
810221-1	Valve: Zone Trim
810221-2	Zone Trim Valve
810229-2	Trim Pressure Regulating & Shutoff Valve

810229-3	Trim Pressure Regulating & Shutoff Valve
810229-4	Trim Pressure Regulating & Shutoff Valve
810229-5	Trim Pressure Regulating & Shutoff Valve
810229-6	Valve: Zone Trim,Pressure Relief,Shutoff
810230-102	Flow Sensing Venturi
810230-103	Flow Sensing Venturi
810230-104	Flow Sensing Venturi
810230-2	Flow Sensing Venturi
810230-204	Flow Sensing Venturi
810230-3	Flow Sensing Venturi
810230-4	Flow Sensing Venturi
810233-1	Conditioned Air Check Valve
810233-2	Conditioned Air Check Valve
810233-3	Valve: Check,Conditioned Air
810234-2	Sensor: Temp
810234-3	Sensor: Temp,Assembly
810287-2	VALVE HOUSIN
810287-2	Valvevalvee Housing
810287-5	VALVE HOUSIN
810287-5	Valvevalvee Housing
810376-2	Body
810502-3	Actuator
810504-10	Pressure Sensor
810504-3	Pressure Sensor
810504-4	Pressure Sensor
810504-5	Pressure Sensor
810504-6	Pressure Sensor
810504-7	Pressure Sensor
810504-8	Pressure Sensor
810504-9	Pressure Sensor
810601-1	Pressure Regulating Valve
810601-2	Pressure Regulating Valve
810601-3	Valve:
810603-3	Pressure Sensor
810603-4	Sensor: Pressure
810603-5	Sensor: Pressure
810970-1	Pneumatic Starter
810970-2	Pneumatic Starter
810970-3	Pneumatic Starter
810970-4	Pneumatic Starter
810977-1	HOUSING
810977-1	Housing
810977-2	HOUSING
810977-2	Housing
810A0000	Rudder Servo Control Valve
810A0000-03	Rudder Servo Control
810A0000-03 AMDT A	Rudder Servo Control

810A0000-03 AMDT B	Rudder Servo Control
810A0000-04	Rudder Servocontrol
810A0000-04 AMDT A	Rudder Servo Control
810A0000-05	Rudder Servo Control
810A0000-06	Rudder Servo Control
810C0000-01	Rudder Servo Control
810D0000-01	Rudder Servo Control
810E102	Pump:
810M0000-01	Rudder Servo Control
810M0000-02	Rudder Servo Control
810M0000-02 AMDT A	Rudder Servo Control
811-0006	PISTON ROD
811-0006	Piston Rod
811040-2	Starter Air Valve Solenoid
811040-3	Starter Air Valve Solenoid
811050-1	Pneumatic Starter
811050-2	Pneumatic Starter
811050-3	Pneumatic Starter
811050-4	Pneumatic Starter
811149-1	Actuator
811250-30	Engine Relay Unit
811250-7	Engine Relay Unit
811390-1	Starter Control Valve
811390-3	Starter Valve
811390-4	Starter Valve
81248A030001	Precooler Heat Exchanger
81253A010001	Heat Exchanger-Ram
813398-1	Shaft
813520-1	Fuel Metering Unit Bypass Valve
813664-1	Stator Vane Actuator
813664-2	Stator Actuator
814890-1	Actuator- Intercompressor
814890-2	Intercompressor (2.5) Bleed Actuator
815240-2	Machine, Air Cycle
815V700	Pneumatic Solenoid Valve
815V700-2	Pneumatic Solenoid Valve
816601-1	Valve, High Stage Bleed
816603-3	Check Valve
8184-1	Electronic Ballast
818490-01	Fuel Distribution Valve
819077-1	Housing
81969-10	LOCK ASSY
819779-1	Piston
819779-1	Housing
819802-1	Hpc Stator Actuator
819810-1	Stator Vane Actuator
819812-2	HOUSING, ACT

819812-2	Housing, Act
820902-2	Flow Control Shutoff Valve
820902-3	Flow Control Shutoff Valve
820902-4	Flow Control Shutoff Valve
820902-5	Flow Control Shutoff Valve
820902-6	Flow Control Shutoff Valve
820914-2	Bypass Pack Valve
820914-3	Bypass Pack Valve
820914-5	Bypass Pack Valve
820914-6	Bypass Pack Valve
820914-7	Bypass Pack Valve
820966-1	Solenoid Shutoff Valve
820966-2	Solenoid Shutoff Valve
820966-3	Solenoid Shutoff Valve
820971-2	Regulating And Shutoff Valve
820971-3	Regulating And Shutoff Valve
820973-1	Pressure Switch
820973-2	Pressure Switch
820973-4	Pressure Switch
821197-2	Valve Body
821M64G01	Electrical Cables
822-0407-101	Actuator: Back,Drive,Control
822575-01	Brake Oil
8236-3	Actuator-Trim
823740-2	Ehsv
823740-2	Ehsv
823742-1	Intercompressor (2.5) Bleed Actuator
823742-2	Intercompressor (2.5) Bleed Actuator
823743-2	Ehsv
8247-3	Flow Limiter Valve
8247-5	Flow Limiter Valve
825214-1	Turbine Bypass Valve
825501-10	Main Fuel Gear Pump
825501-11	Main Fuel Gear Pump
825501-12	Pump:
825501-8	Main Fuel Gear Pump
825501-9	Main Fuel Gear Pump
825720-1	GTA69-1 Turbine Case Cooling Valve
827104-2	Fuel Pump/Fuel Control Coupling Clamp
827A0000-01	Gearbox Tee
827A0000-02	Gearbox Tee
828300-1	Fuel Pump
828300-2	Fuel Pump
828300-3	Fuel Pump
828300-4	Fuel Pump
828300-5	Fuel Pump
828300-6	Fuel Pump

828300-7	Fuel Pump
828300-8	Fuel Pump
828501-1	Gear Type Main Fuel Pump Assembly
828501-2	Gear Type Main Fuel Pump Assembly
828501-3	Gear Type Main Fuel Pump Assembly
828A0000-01	Bevel Gearbox
828A0000-02	Bevel Gearbox
829500-4	Fuel Pump
829500-5	Fuel Pump
829500-7	Fuel Pump
829500-8	Fuel Pump
829A0000-02	Actuator-Slat A
829B0000-01	Actuator-Slat A
829C0000-01	Actuator-Slat A
830100-1	Main Gear Fuel Pump Assembly
830204-1	Flow Control Shutoff Valve
830A0000-02	Actuator-Slat B
830C0000-01	Rotary Actuator
830D0000-01	Rotary Actuator
830D0000-02	Rotary Actuator
831100-1	Plug-In Booster Pump
831100-2	Plug-In Booster Pump
831100-4	Fuel Pump
83540-1	Housing
835801-15	Main Fuel Gear Pump
835901-10	Main Fuel Gear Pump
837600-3	Fuel Pump
837600-4	Fuel Pump
837600-5	Fuel Pump
838000-1	Gear Type Main Fuel Pump Assembly
838000-2	Gear Type Main Fuel Pump Assembly
8408	Actuator
8408-1	Actuator
8414	Actuator, Linear
8414 A	Actuator, Linear
8414A	Actuator, Linear
846D100-7	Drive Unit
846D100-9	Drive Unit
848847	Pump
849589	Pump
852D100-23	Actuator
852D100-25	Actuator
852SE154-2	Pinion
852SE174-1	PINION
852SE174-1	Pinion
852SE174-3	PINION
852SE174-3	Pinion

853D100-23	Actuator
853D100-24	Actuator, lb
853SE174-1	PINION
853SE174-1	Pinion
853SE174-2	PINION
853SE174-2	Pinion
853SE174-3	PINION
853SE174-3	Pinion
853SE174-4	PINION
853SE174-4	Pinion
85464-2	Stator And Housing Assembly
85465-1	lternating Current Generator,Model 5318
85465-2	lternating Current Generator,Model 5318
85465-3	lternating Current Generator,Model 5318
854D100-23	Actuator, Ob
854D100-24	Actuator
854SE154-1	PINION
854SE154-1	Pinion
854SE154-2	PINION
854SE154-2	Pinion
854SE154-3	PINION
854SE154-3	Pinion
854SE154-4	PINION
854SE154-4	Pinion
855D100-13	Sensor, Brake And Position
855D100-15	Sensor, Brake And Position
856-2-12	Pressure Probe
858720-1	Check Valve Body Assy
858789-1	Flapper Assy
859335-3	Body
859335-3	Body Valvevalvee
859362-3	Body
859362-3	Valvevalvee Body
859691-1	Body
861555	Pump
862-6-18	Valve
863-1-11	Twin Element Thermocouple
865D100-7	Pdu
866-1-11	Pressure Probe
86815-1	Stator And Housing Assembly
87001-24	Actuator Tri
87006-1	Stator And Housing Assembly
87006-10	Stator And Housing Assembly
87006-11	Stator And Housing Assembly
87006-12	Stator And Housing Assembly
87006-2	Stator And Housing Assembly
87006-3	Stator And Housing Assembly

87006-4	Stator And Housing Assembly
87006-5	Stator And Housing Assembly
87006-9	Stator And Housing Assembly
87020-2	Snubber, Ecs Door
870413-401	Actuator Assembly
870713-403	Actuator Assembly
87290-1	Valve - Shutoff
874038-405	Actuator Assembly
88005B0203	Cabin Pressure Outflow Valve
88005B0204	Cabin Pressure Outflow Valve
88005B0205	Cabin Pressure Outflow Valve
88005B0206	Cabin Pressure Outflow Valve
88005B0304	Cabin Pressure Outflow Valve
88005B0305	Cabin Pressure Outflow Valve
88005B0306	Cabin Pressure Outflow Valve
880351-2	Shaft
880351-2	Shaft
880400-1005	Variable Bypass Valve Actuator
880400-1006	Variable Bypass Valve Actuator
881077-	Valve Housing
881600-1001	Valve
881696-1	Flapper Assy
881696-2	Flapper Assy
881700-1001	Hydraulic Fu
882169-3	BODY VALVE
882169-3	Body Valvevalvee
883963-	Valve Body
8-840-01	SENSOR PROXI
8-840-02	PROXIMITY SE
887055	Pump
887087	Motor, Const Displacement Hyd
887111	Pump-Hydraulic
887451-5	Shaft Assembly, Butterfly
887477	Pump
887511-4	Body
887511-4	Valvevalvee Body
887673	PUMP, HYDRAU
8901-062	CIT Sensor
8901-064	CIT Sensor
8901-074	CIT Sensor
8901-078	CIT Sensor
8901-100	CIT Sensor
8901-102	CIT Sensor
8901-104	CIT Sensor
8901-118	Compressor Inlet Temperature SensorAssembly
8901-124	Compressor Inlet Temperature SensorAssembly
8901-128	CIT Sensor

8901-132	CIT Sensor
8901-136	CIT Sensor
8901-170	Compressor Inlet Temperature Sensor Assembly
8901-174	CIT Sensor
8901-180	CIT Sensor
8901-185	Sensor
8901-192	CIT Sensor
8901-194	CIT Sensor
8901-196	CIT Sensor
8901-198	CIT Sensor
8901-205	Fan Air Temp Sensor
8901-216	CIT Sensor
8901-218	CIT Sensor
8901-220	CIT Sensor
8901-222	CIT Sensor
8901-224	Sensor, Cf6-50
8901-254	Sensor, Cf6-80A
8901-274	Sensor, Cfm56
8901-314	Sensor, Cit
8901-318	N1 Sensor
8901-326	Sensor, Cfm56
8901-328	Fan Inlet Temperature Sensor Assembly
8901-340	Fan Inlet Temperature Sensor Assembly
890307-105	Relief Valve
8908-002	N1 Sensor
8908-004	N1 Sensor
8908-006	N1 Sensor
8908-007	Sensor N1, Speed Hydro- Mech Anical Restr
8910-100	Burner Selection Valve
8910-114	Burner Selection Valve
8910-322	Fuel Return Valve
8910-332	Cit Sensor
8910-342	Fuel Return Valve
8910-620	Valve
895491-01	Ballscrew
89-6337	Solenoid Valve
898126-2-1	Differential Pressure Regulator
898626-3	Valve Press Reg Pn
898626-4	Valve - Pneu Press
898760-1	Regulating Valve
898930-10	21/2 Regulating And Shutoff Valve
898930-3-1	21/2 Regulating And Shutoff Valve
898930-7-1	21/2 Regulating And Shutoff Valve
898930-7-2	21/2 Regulating And Shutoff Valve
898930-8	21/2 Regulating And Shutoff Valve
898930-9	21/2 Regulating And Shutoff Valve
898980-1	Regulating Valve

898980-2	Regulating Valve
898980-3	Valve - Pres Reg/Shutoff
899727-10	Pump Assy Power Driven
899727-3-1	Pump Assy Power Driven
899727-5-1	Pump Assy Power Driven
899727-8-1	Pump Assy Power Driven
899727-9-1	Pump Assy Power Driven
8C213-1	Valve: Manifold,Vacuum
8D1494	Oil Filter Press Switch
8EH20AAF1	EGT Harness Assembly
8EH35AAG1	T4.9 Thermocouple Cable Assemblies
8EH35AAH1	T4.9 Thermocouple Cable Assemblies
8G441-1	Pressure Swi
8TC18AAP1	T3 Sensor Compressor Outlet Temperature
8TC19AAJ1	T3 Sensor Compressor Outlet Temperature
8TC19AAK1	T3 Sensor Compressor Outlet Temperature
8TC19AAN1	T3 Sensor Compressor Outlet Temperature
8TC19AAR1	T3 Sensor Compressor Outlet Temperature
8TC34ABW1	Thermocouple Temperature Probe
8TC34ABY1	Thermocouple Temperature Probe
8TC58AAE4	T3 Probe
8TC58AAE6	T3 Probe
8TC58AAE7	T3 Probe
8TC58AAG2	T3 Probe
8TC58AAH1	T3 Probe
8TC58AAH2	T3 Probe
8TC65AAB1	Exhaust Gas Temperature (EGT) Probe Assembly
8TC65BAB1	T3 Temperature Probe
8TJ124ERC1	Fuel Flow Transmitter
8TJ124ERE1	Fuel Flow Transmitter
8TJ124ERF1	Fuel Flow Transmitter
8TJ124ERG1	Fuel Flow Transmitter
8TJ124ERJ1	Fuel Flow Transmitter
8TJ124GGD1	Fuel Flow Transmitter
8TJ124GGL1	Fuel Flow
8TJ146AAA1	OIL LEVEL TR
8TJ146AAW2	Oil Quantity Transmitter
8TJ146AAW3	Oil Quantity Transmitter
8TJ146CFA1	Sensor: Oil Level,Ar
8TJ146CFB1	SENSOR, OIL
8TJ160AAE1	Oil Pressure Sensor
8TJ163AAB1	N1 Speed Sensor
8TJ163AAC1	N1 Speed Sensor
8TJ167ERF1	Fuel Flow Transmitter
8TJ167ERG1	Fuel Flow Transmitter
8TJ167GHW1	Trnsmtr Fuel Flow Restricted Air Shipme
8TJ177AAB1	N1 Speed, Total Pressure and Total Temperature Probe

8TJ177AAB2	N1 Speed, Total Pressure and Total Temperature Probe
8TJ177AAE1	N1 Speed, Total Pressure and Total Temperature Probe
8TJ177AAE2	N1 Speed, Total Pressure and Total Temperature Probe
8TJ204AAF1	N1, T2.5, P2.5 Probe
8TJ205AAE1	N2 Speed Sensor
8TJ99GBU2	Oil Qty. X-Mitter
8TJ99GGB3	Liquid Level Transmitter
8TJ99GGB4	Liquid Level Transmitter
8TU34AAL1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAC1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAE1	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU34PAH2	Pressure Probe EGT Probe Plug Pressure Probe Plugs
8TU65AAD1	P4.9 Pressure Pickup Probe Assembly
9000412-1	Arm: Drive,Assembly
9000413-3	Arm: Drive,Assembly
9000414-1	Actuator: Lock,Flight
9000427-1	Stabilizer Trim Module
900099-3	Hydraulic Accumulator
900103-1	Accumulator
900105-1	Accumulator
90-0216-1	Windshield Wiper Drive Arm Assembly
90-0216-2	Windshield Wiper Drive Arm Assembly
90-0216-3	Windshield Wiper Drive Arm Assembly
90-0216-4	Windshield Wiper Drive Arm Assembly
90-0216-7	Windshield Wiper Drive Arm Assembly
90-0216-8	Windshield Wiper Drive Arm Assembly
900974-01	Fire/Overheat Detector Assemblies
900974-02	Fire/Overheat Detector Assemblies
90-10072-2	Door Snubber
90-10072-2U1	Snubber
9011440500-1	Hydraulic Pulsation Dampener
9011440500-2	Hydraulic Pulsation Dampener
9011440500-3	Hydraulic Pulsation Dampener
9014M18P02	Pneumatic Starter
9014M18P03	Pneumatic Starter
9014M18P04	Pneumatic Starter
9014M18P05	Pneumatic Starter
9014M18P06	Pneumatic Starter
9014M18P07	Pneumatic Starter
9014M18P08	Pneumatic Starter
9015M46P09	Main Fuel Pump
9015M46P10	Main Fuel Pump
9015M46P12	Main Fuel Pump
9015M46P13	Main Fuel Pump
9015M81P04	Fuel Filter
9015M96P01	Fuel Manifold Drain Valve
9015M96P02	Fuel Manifold Drain Valve

9015M96P03	Fuel Manifold Drain Valve
9024-15704-03	Actuator
9024-15704-2	Valve: Safety,Svc
9028A0004-01	Position Pickoff Unit
9033M17P07	Screw Bearing Assy
9033M43P02	Scavenge Oil Filter
9033M43P04	Scavenge Oil Filter
9033M43P07	Scavenge Oil Filter
9033M43P08	Scavenge Oil Filter
9033M43Pseries	Scavenge Oil Filter
9033M44P04	Lube And Scavenge Pump
9033M44P04	Lube Pump
9033M44P05	Lube And Scavenge Pump
9033M44P05	Lube Pump
9033M44P06	Lube Pump
9033M44P08	Lube And Scavenge Pump
9033M44P08	Lube Pump
9033M44Pseries	Lube And Scavenge Pump
9039M45P03	Main Fuel Pump
9039M45P04	Main Fuel Pump
9039M45P05	Main Fuel Pump
9039M45P06	Main Fuel Pump
9039M45P07	Main Fuel Pump
9039M45P08	Main Fuel Pump
9039M45P09	Main Fuel Pump
9039M45P10	Main Fuel Pump
9039M45P11	Main Fuel Pump
9039M45P12	Main Fuel Pump
9039M45P13	Main Fuel Pump
9039M45P14	Main Fuel Pump
9039M45P15	Main Fuel Pump
9039M45P16	Main Fuel Pump
9039M45P17	Main Fuel Pump
9039M45Pseries	Fuel Pump, Main
9040465-1	Dual Relay Box
9040M61P01	Temperature Transducers and Thermocouple Sensor
9042M12P03	Vbv Actuator
9042M12P04	Vbv Actuator
9042M12Pseries	Actuator, Variable Bypass Valve, Vbv
9045465-2	Permanent Magnet Alternator Rotor & Stator
904770-01	Flight Lock Actuator
904800-01	Actuating NI
9048120-9	Ignition Lead
9049380-1	Permanent Magnet Alternator
9049385-3	Permanent Magnet Alternator
9049385-5	Permanent Magnet Alternator
9049385-7	Permanent Magnet Alternator

9052301-1	EEC Wiring Harnesses
9052302-1	EEC Wiring Harnesses
9052303-1	EEC Wiring Harnesses
9052304-1	EEC Wiring Harnesses
9067M20P04	Fan Reverser Pneumatic Drive Actuator
9067M20P05	Pneumatic Drive Actuator
9067M20P06	Pneumatic Drive Actuator
9067M20P07	Pneumatic Drive Actuator
9067M20P08	Pneumatic Drive Actuator
9067M20P09	Pneumatic Drive Actuator
9067M20P10	Pneumatic Drive Actuator
9067M20P11	Pneumatic Drive Actuator
9067M20P12	Pneumatic Drive Actuator
9067M20P13	Pneumatic Drive Actuator
9067M20P14	Pneumatic Drive Actuator
9067M20P15	Fan Reverser Pneumatic Drive Actuator
9067M20P16	Pneumatic Drive Actuator
9067M20P17	Fan Reverser Pneumatic Drive Actuator
9067M20P18	Fan Reverser Pneumatic Drive Actuator
9067M20P19	Fan Reverser Pneumatic Drive Actuator
9067M20P20	Pneumatic Drive Actuator
9067M20P21	Fan Reverser Pneumatic Drive Actuator
9067M20P22	Fan Reverser Pneumatic Drive Actuator
9067M20P23	Fan Reverser Pneumatic Drive Actuator
9067M20P24	Fan Reverser Pneumatic Drive Actuator
9067M77P01	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
9067M77P02	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
9067M77P03	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
9067M77P04	Feedback Control Assembly, Variable Bleed Valve, Vbv
9067M77Pseries	Feedback Cable, Variable Bypass Valve, Push/Pull, Vbv
9069A1015-01	Electro-Mechanical Actuator
9069A1015-02	Electro-Mechanical Actuator
9069A1018-01	Electro-Mechanical Actuator
9069B1001-01	Electro-Mechanical Actuator
9069B1002-01	Electro-Mechanical Actuator
9069B1003-01	Electro-Mechanical Actuator
9069B1018-01	Electro-Mechanical Actuator
9069B1018-02	Electro-Mechanical Actuator
9069M91P02	CIT Sensor
9069M91P03	CIT Sensor
9070M89P01	Eductor An Valve Assembly
9070M89P02	Eductor An Valve Assembly
9070M89P03	Eductor An Valve Assembly
9070M89P04	Eductor An Valve Assembly
90G183	Switch
90G236	Switch
90G97	Switch Assy, Hydraulic

9100M30G08	Oil Tank
9100M30G10	Oil Tank
9100M30G11	Oil Tank
9100M30G12	Oil Tank
9100M30G13	Oil Tank
9100M30Gseries	Oil Tank
910369-1	Hand Pump, Hydraulic, Double Acting
9105A0005-01	Sensor: Temp
9105A0005-02	Sensor: Temp
9121M47P01	Temperature Transducers and Thermocouple Sensor
914	Actuator
9150F03	Actuator
9154M97P01	Servo Fuel Heater
9154M98P01	Fuel Filter
9154M98P02	Fuel Filter
9154M98P06	Fuel Filter
9154M98P07	Fuel Filter
9154M98P08	Fuel Filter
9154M98P10	Fuel Filter
9154M98P11	Fuel Filter
9154M98P12	Fuel Filter
9154M98P15	Fuel Filter
9154M98P16	Fuel Filter
9154M98P17	Fuel Filter
9154M98P18	Fuel Filter
9154M98P19	Fuel Filter
9154M98P20	Fuel Filter
9172M81P03	Reverse Thrust Limiter Valve
9172M81P04	Reverse Thrust Limiter Valve
9172M81P06	Reverse Thrust Limiter Valve
9172M81P07	Reverse Thrust Limiter Valve
9175M50P01	CIT Sensor
9175M50P02	CIT Sensor
9175M50P04	CIT Sensor
9175M50P05	CIT Sensor
9175M50P06	CIT Sensor
9175M50P08	CIT Sensor
9175M50P09	CIT Sensor
9175M50P10	CIT Sensor
9175M50P11	CIT Sensor
9178M37P02	CIT Sensor
9191M34P01	Actuator, Cowl Door Hyd
9191M34P02	Cowl Door Actuator
9196M29P24	Variable Stator Actuator
9203M11P02	Feedback Cable, Variable Stator Vane, Vsv
9203M11P04	Feedback Control Assembly, Variable Stator Vane, Vsv
9203M11P05	Feedback Cable, Variable Stator Vane, Vsv

9203M11Pseries	Feedback Cable, Variable Stator Vane, Vsv
920550	Fixed Displacement Hydraulic Motor Assembly
9-217-46	Fuel Flow Transmitter
9-217-59	Fuel Flow Transmitter
9-217-63	Fuel Flow Transmitter
922-232-000-121	No. 1 Bearing Transducer Wiring Harness
922-316-000-511	Fuel Cooled IDG Oil Cooler
9229M76P01	Lube Pump
9242-09	Main Fuel Pump
9242-10	Main Fuel Pump
9242-12	Main Fuel Pump
9242-13	Main Fuel Pump
924D100-	Linear Actua
924D100-1	Actuator
9250M97P01	Oil To Fuel Heat Exchanger
9250M97P02	Oil To Fuel Heat Exchanger
9250M97P04	Oil To Fuel Heat Exchanger
9250M97P07	Oil To Fuel Heat Exchanger
9250M97P08	Oil To Fuel Heat Exchanger
9250M97P09	Oil To Fuel Heat Exchanger
9255-03	Main Fuel Pump
9255-04	Main Fuel Pump
9255-05	Main Fuel Pump
9255-06	Main Fuel Pump
9255-07	Main Fuel Pump
9255-08	Main Fuel Pump
9255-09	Main Fuel Pump
9255-series	Fuel Pump, Main
9257-01	Main Fuel Gear Pump
9257-02	Main Fuel Gear Pump
9257-03	Main Fuel Gear Pump
9257-04	Main Fuel Gear Pump
9257-05	Main Fuel Gear Pump
9257-06	Main Fuel Gear Pump
9257-07	Main Fuel Gear Pump
9257-08	Main Fuel Gear Pump
9257-series	Fuel Pump, Main
9261M73P01	CIT Sensor
9261M74P01	CIT Sensor
9261M74P02	CIT Sensor
9261M74P03	CIT Sensor
9261M74P04	CIT Sensor
9261M74P05	CIT Sensor
9261M74P06	CIT Sensor
9261M74P07	CIT Sensor
9261M74P08	CIT Sensor
9268M32P02	Inlet Temperature Sensor

9268M32P03	Inlet Temperature Sensor
9268M32P04	Inlet Temperature Sensor
9268M48P02	Heater, Servo Fuel
9271M86P02	Combustor Drain Valve
9280-08A1	Main Fuel Pump
9280-14A1	Main Fuel Pump
9280-15A1	Main Fuel Pump
9280-16A1	Main Fuel Pump
9280-16A2	Main Fuel Pump
9280-16A3	Main Fuel Pump
9280-17A3	Main Fuel Pump
9280-17A4	Main Fuel Pump
9280-17A5	Main Fuel Pump
9280-17A6	Main Fuel Pump
9280-18A6	Main Fuel Pump
9280M60P02	IDG Fuel/Oil Heat Exchanger
9285M28P01	CIT Sensor
9295A4	Main Fuel Gear Pump
9295A5	Main Fuel Gear Pump
9297-01A3	Main Fuel Gear Pump
9297-01A4	Main Fuel Gear Pump
9297-01A5	Main Fuel Gear Pump
9297-01A6	Main Fuel Gear Pump
930085-2-4	IDG Oil Cooler
930090-06	IDG Oil Cooler
930090-07	IDG Oil Cooler
9300D030000	Actuator
9300D040000	Actuator
9304M23P08	Main Fuel Pump
9304M23P14	Main Fuel Pump
9304M23P15	Main Fuel Pump
9304M23P16	Main Fuel Pump
9304M23P17	Main Fuel Pump
9304M23P18	Main Fuel Pump
931D100-3	Actuator
933252	Actuator, Horizontal Stab Trim
933260	Pump, Hydr
9333M88P02	Center Drive Unit Actuator
9333M88P03	Center Drive Unit Actuator
9333M88P04	Center Drive Unit Actuator
9333M88P05	Center Drive Unit Actuator
9333M88P06	Center Drive Unit Actuator
9333M88P07	Center Drive Unit Actuator
9333M88P08	Center Drive Unit Actuator
9333M88P09	Center Drive Unit Actuator
9333M88P10	Center Drive Unit Actuator
9333M88P11	Center Drive Unit Actuator

9333M88P12	Center Drive Unit Actuator
9334M96P02	CIT Sensor
9339M12P01	Feedback Cable, Variable Stator Vane, Vsv
9339M12P02	Feedback Cable, Variable Stator Vane, Vsv
9339M12P03	Feedback Cable, Variable Stator Vane, Vsv
9339M12P04	Feedback Control Assembly, Variable Stator Vane, Vsv
9339M12P05	Feedback Cable, Variable Stator Vane, Vsv
9339M12P06	Feedback Cable, Variable Stator Vane, Vsv
9339M12P07	Feedback Cable, Variable Stator Vane, Vsv
9339M12P08	Feedback Cable, Variable Stator Vane, Vsv
9339M12P09	Feedback Cable, Variable Stator Vane, Vsv
933D100-1	Actuator
9355M33P04	Main Fuel Gear Pump
9355M33P05	Main Fuel Gear Pump
9355M33P07	Main Fuel Gear Pump
9355M33P08	Main Fuel Gear Pump
9355M33P09	Fuel Gear Pump Assy
9355M33P10	Main Fuel Gear Pump
9355M33P11	Main Fuel Gear Pump
9355M33P12	Main Fuel Gear Pump
9355M33P13	Main Fuel Gear Pump
9355M33Pseries	Fuel Gear Pump Assembly
93600-5005	Elevator Control Package
93600-5007	Elevator Control Package
93600-5009	Elevator Control Package
93600-5011	Elevator Control Package
93600-5013	Elevator Control Package
93600-5015	Elevator Control Package
93600-5017	Elevator Control Package
93600-5019	Elevator Control Package
93600-5021	Elevator Control Package
93600-5023	Elevator Control Package
93600-5025	Elevator Control Package
93600-5027	Elevator Control Package
93600-5029	Elevator Control Package
93600-5031	Elevator Control Package
93600-5033	Elevator Control Package
93600-5035	Elevator Control Package
93600-5037	Elevator Control Package
93600-5039	Elevator Control Package
93600-5041	Elevator Control Package
93600-5043	Elevator Control Package
93600-5045	Elevator Control Package
93600-5047	Elevator Control Package
93600-5049	Elevator Control Package
93600-5051	Elevator Control Package
93600-5053	Elevator Control Package

93600-9005	Elevator Control Package
93600-9007	Elevator Control Package
93600-9009	Elevator Control Package
93600-9011	Elevator Control Package
93600-9013	Elevator Control Package
93600-9015	Elevator Control Package
93600-9017	Elevator Control Package
93600-9019	Elevator Control Package
93600-9021	Elevator Control Package
93600-9023	Elevator Control Package
93600-9025	Elevator Control Package
93600-9027	Elevator Control Package
93600-9029	Elevator Control Package
93600-9031	Elevator Control Package
93600-9033	Elevator Control Package
93600-9035	Elevator Control Package
93600-9037	Elevator Control Package
93600-9039	Elevator Control Package
93600-9041	Elevator Control Package
93600-9043	Elevator Control Package
93600-9045	Elevator Control Package
93600-9047	Elevator Control Package
93600-9049	Elevator Control Package
93600-9051	Elevator Control Package
9363M10P02	Lube Pump
9363M10P03	Lube Pump
9366M91P02	T2 Sensor
9368M57P13	Servo Fuel Heater
9368M57P15	Servo Fuel Heater
9368M57P16	Servo Fuel Heater
9368M57P17	Servo Fuel Heater
9368M95P01	Check Valve
9368M95P03	Check Valve
93-7717	Oil Level Switch
9377M44P01	IDG Fuel/Oil Heat Exchanger
9377M60P01	Switch, Oil Pressure
9377M60P02	Switch, Oil Pressure
9377M60P05	Switch, Oil Pressure
9377M60P06	Switch, Oil Pressure
9377M60P09	Switch, Oil Pressure
9377M61P01	Fuel Flow Transmitter
9377M61P02	Fuel Flow Transmitter
9377M62P01	Switch, Fuel Pressure
9377M62P03	Switch, Fuel Pressure
9377M62P04	Fuel Pressure Switch
9377M62P05	Switch, Fuel Pressure
9377M63P01	IDG Latching Pressure Relief Valve

9377M63P02	IDG Oil Pressure Relief Valve
9377M64P05	Air/Oil-IDG Cooler Assembly
9377M64P06	Air/Oil-IDG Cooler Assembly
9377M65P01	Shutoff Valve Assembly
9377M65P02	Shutoff Valve Assembly
9377M65P03	Shutoff Valve Assembly
9377M65P04	Shutoff Valve Assembly
9377M65P05	Shutoff Valve Assembly
9377M65P06	Shutoff Valve Assembly
9377M65P07	Shutoff Valve Assembly
9377M65P08	Shutoff Valve Assembly
9377M65P09	Shutoff Valve Assembly
9377M65P11	Shutoff Valve Assembly
9377M65P12	Shutoff Valve Assembly
9377M65P13	Shutoff Valve Assembly
9377M66P01	Temperature Transducers and Thermocouple Sensor
9378M51P01	Variable Bypass Valve Actuator
9378M51P02	Variable Bypass Valve Actuator
9378M51P03	Variable Bypass Valve Actuator
9378M51P04	Variable Bypass Valve Actuator
9378M51P05	Variable Bypass Valve Actuator
9378M51P06	Variable Bypass Valve Actuator
9378M51P07	Variable Bypass Valve Actuator
9378M51P08	Variable Bypass Valve Actuator
9378M51P09	Variable Bypass Valve Actuator
9378M51Pseries	Actuator, Variable Bypass Valve, Vbv
9378M87P02	N1 Sensor
9378M87P03	N1 Sensor
9378M87P04	N1 Sensor
9378M87P05	N1 Sensor
9378M87P06	N1 Sensor
9387M16P01	lternating Current Generator,Model 5318
9387M16P02	lternating Current Generator,Model 5318
9387M16P03	lternating Current Generator,Model 5318
9387M17P01	lternating Current Generator,Model 5318
9387M17P02	lternating Current Generator,Model 5318
9387M17P04	lternating Current Generator,Model 5318
9387M17P05	lternating Current Generator,Model 5318
9387M17P06	lternating Current Generator,Model 5318
9387M17P07	lternating Current Generator,Model 5318
9387M17P08	lternating Current Generator,Model 5318
9387M17P09	lternating Current Generator,Model 5318
9387M17P10	lternating Current Generator,Model 5318
9387M17P11	lternating Current Generator,Model 5318
9387M17P12	lternating Current Generator,Model 5318
938V100	LP/HP Fuel Pump
938V200	LP/HP Fuel Pump

938V400	LP/HP Fuel Pump
938V500	LP/HP Fuel Pump
940731	Motor Assy-Electric
941V0400	LP/HP Fuel Pump
941V0500	LP/HP Fuel Pump
941V100	LP/HP Fuel Pump
941V200	LP/HP Fuel Pump
941V300	LP/HP Fuel Pump
94300000-02	Transmitter Stab Position
9452-A11	Main Fuel Pump, Two Stage
9452-A12	Main Fuel Pump, Two Stage
9452-A13	Main Fuel Pump, Two Stage
9452-A14	Main Fuel Pump, Two Stage
9452-A15	Main Fuel Pump, Two Stage
9452-A16	Main Fuel Pump, Two Stage
9452-A17	Main Fuel Pump, Two Stage
9452-A4	Main Fuel Pump, Two Stage
9452-A5	Main Fuel Pump, Two Stage
9452-A6	Main Fuel Pump, Two Stage
9452-A7	Main Fuel Pump, Two Stage
9452-A8	Main Fuel Pump, Two Stage
9452-A9	Main Fuel Pump, Two Stage
9455-A10	Main Fuel Pump, Two Stage
9455-A11	Main Fuel Pump, Two Stage
9455-A12	Main Fuel Pump, Two Stage
9455-A13	Main Fuel Pump, Two Stage
9455-A14	Main Fuel Pump, Two Stage
9455-A15	Main Fuel Pump, Two Stage
9455-A16	Main Fuel Pump, Two Stage
9455-A17	Main Fuel Pump, Two Stage
9455-A5	Main Fuel Pump, Two Stage
9455-A7	Main Fuel Pump, Two Stage
9455-A8	Main Fuel Pump, Two Stage
9455-A9	Main Fuel Pump, Two Stage
946F961-1	Rotor
9470-A13	Main Fuel Pump, Two Stage
9470-A14	Main Fuel Pump, Two Stage
9470-A15	Main Fuel Pump, Two Stage
9470-A16	Main Fuel Pump, Two Stage
9470-A17	Main Fuel Pump, Two Stage
9477-A10	Main Fuel Pump, Two Stage
9477-A11	Main Fuel Pump, Two Stage
9477-A12	Main Fuel Pump, Two Stage
9477-A13	Main Fuel Pump, Two Stage
9477-A14	Main Fuel Pump, Two Stage
9477-A8	Main Fuel Pump, Two Stage
9477-A9	Main Fuel Pump, Two Stage

9478-A10	Main Fuel Pump, Two Stage
9478-A11	Main Fuel Pump, Two Stage
9478-A12	Main Fuel Pump, Two Stage
9478-A13	Main Fuel Pump, Two Stage
9478-A14	Main Fuel Pump, Two Stage
9478-A9	Main Fuel Pump, Two Stage
94796-10	Ballscrew
954A0000-02	Actuator
960448-1	Reservoir
9631200-0001	Air Compressor
964A0000-03	Flow Control Valve
964A0000-04	Flow Control Valve
964A0000-05	Flow Control Valve
964A0000-06	Flow Control Valve
964D100-1	Pdu, Cargo
964F0000-01	Flow Control Valve
964F0000-02	Flow Control Valve
966595-1-1	Flow Divider
966595-2-1	Flow Divider
966595-3-1	Flow Divider
966595-4-1	Flow Divider
966595-5-1	Flow Divider
966595-6-1	Flow Divider
966595-7-1	Flow Divider
966595-8-1	Flow Divider
968214-10	Pressure Relief Valve Assembly
968214-11	Pressure Relief Valve Assembly
968214-12	Pressure Relief Valve Assembly
968214-13	Pressure Relief Valve Assembly
968214-14	Pressure Relief Valve Assembly
968214-15	Pressure Relief Valve Assembly
968214-17	Pressure Relief Valve Assembly
968214-2	Pressure Relief Valve Assembly
968214-3	Pressure Relief Valve Assembly
968214-4	Pressure Relief Valve Assembly
968214-5	Pressure Relief Valve Assembly
968214-6	Pressure Relief Valve Assembly
968214-7	Pressure Relief Valve Assembly
968214-8	Pressure Relief Valve Assembly
968214-9	Pressure Relief Valve Assembly
968870-1-1	Flow Divider
968870-2-1	Flow Divider
968870-3-1	Flow Divider
968870-4-1	Flow Divider
968870-5-1	Flow Divider
9691M29P05	Actuator, Variable Stator Vane, Vsv
9691M29P08	Actuator, Variable Stator Vane, Vsv

9691M29P09	Actuator, Variable Stator Vane, Vsv
9691M29P11	Actuator - Vsv R/H
9691M29P15	Actuator, Variable Stator Vane, Vsv
9691M29P16	Variable Stator Actuator
9691M29P17	Actuator, Variable Stator Vane, Vsv
9691M29P19	Actuator, Variable Stator Vane, Vsv
9691M29P25	Actuator, Variable Stator Vane, Vsv
9691M29Pseries	Actuator, Variable Stator Vane, Vsv
969900-10	Fuel Control
969900-11	Fuel Control
969900-12	Fuel Control
969900-13	Fuel Control
969900-14	Fuel Control
969900-8	Fuel Control
969900-9	Fuel Control
971533	Pump, Electric Motor
971808 MOD A	Hydraulic Pump
971808MOD B	Hydraulic Pump
972952	Pump
972A0000-02	Anti-Ice Valve
972A0000-03	Anti-Ice Valve
973600	Motor
973930	Pump, Rat
974192-2	Butterfly Disk
974192-3	Butterfly Disk
974209-2	Shaft
974323-2	Shaft
974540	Pump
974800	Pump
974976	Pump
975-0172-006	SWITCH
975275-3	Valve
975285-3	Ptu Select Hydraulic Valve
975287-3	Hydraulic Firewall Shutoff Valve
975287-5	Hydraulic Firewall Shutoff Valve
975287-501	Electric Motor Operated Actuator
975287-7	Hydraulic Firewall Shutoff Valve
975287-701	Electric Motor Operated Actuator
975288-3	Hydraulic Balanced Relief Valve
975289-3	Dump/Thermal Relief Valve
975301-3	Flow Limiter Valve
975301-5	Flow Limiter Valve
975302-1	Pump Unloader Valve
975303-3	Bootstrap Priority Valve
975324-3	Isolation, Reserve Steering
975325-9	Isolation, Alternate Extend (Aeiv)
975326-7	Isolation, Nlg

975483-17	Body-Valve
975483-17	Body Valvevalvee
975655-4	SHAFT ASSY,
975655-4	Shaft Assy,
978514-11	Vlv-Cont Hi Pr Bld
978620-6	Valve
978690-6	PNEUMATIC SH
978690-6	Pneumatic Sh
978690-9	Valve Assy - High Press
978710-5	Shutoff Valve
978710-6	Shutoff Valve
978842-2	Valvefan Air
978852-2	Shutoff Valve
978852-3	Shutoff Valve
979018-1	Valve-Fan Air
979146-1	Hpb Control Valve
979146-3	Valvebleed Control
979146-4	Valvebleed Control
979186-1	Shutoff Valve
979188-1	Shutoff Valve
979188-3	Shutoff Valve
979786-1	Four And A One-Half Inchdiameter
979786-2	Four Inch Shutoff Valve
979786-4	Actuator
979786-5	Four Inch Shutoff Valve
979786-6	Four Inch Shutoff Valve
979806-10	Four Inch Surge Control Valve
979806-11	Four Inch Surge Control Valve
979806-12	Valve Assy-Surge
979806-3-1	Four Inch Surge Control Valve
979806-4-1	Four Inch Surge Control Valve
979806-5-1	Four Inch Surge Control Valve
979806-6-1	Four Inch Surge Control Valve
979806-7	Four Inch Surge Control Valve
979806-8	Four Inch Surge Control Valve
979806-9	Four Inch Surge Control Valve
979826-1	Pneumatic Valve
979826-10	Pneumatic Valve
979826-11	Pneumatic Valve
979826-12	Four Inch Diameter Pneumatic Shutoff Butterfly Valve
979826-2	Pneumatic Valve
979826-3	Pneumatic Valve
979826-4	Pneumatic Valve
979826-5	Pneumatic Valve
979826-6	Pneumatic Valve
979826-7	Pneumatic Valve
979826-8	Starter Valve

979826-9	Pneumatic Valve
979858-1	Valve, 4" Dia. Pneumatic Butterfly
979858-2	Valve, 4" Dia. Pneumatic Butterfly
979858-3	Valve Starter
979858-4	Valve, 4" Dia. Pneumatic Butterfly
979858-5	Valve, 4" Dia. Pneumatic Butterfly
979876-1	Four Inch Shutoff Valve
979908-6	Precooler Control Valve
979912-1	Electrical Selector Valve
979912-2	Electrical Selector Valve
979919-3	Electrical Selector Valve
979919-4	Electrical Selector Valve
979990-1	Valve Control Temperature
983A0000-03	Air Cycle Machine
9928-513	Hook Latch and Keeper Assembly
9929-502	Hook Latch and Keeper Assembly
9930-511	Hook Latch and Keeper Assembly
9931-505	Hook Latch and Keeper Assembly
9971M46P07	VSV Actuator
99C51330-7	A/I Valve
99C55007-111	Valve: Uplock,Nlg
99C55008-101	Valve: Assembly
99C5508-101	Valve:
99C55201-121	Valve: Assembly
99C55202-101	Nlg Door Op Seq Vlv
99C55203-111	Mlg Drag Brace Op Seq Vlv
99C55480-101	Snubber: Linear,Assembly
99C55620-101	Valve:
A05B00	Actuatorelectric
A06000	Actuator
A06A00	Actuator
A06C00	Actuator
A06D00	Actuator
A06L00	Actuator
A08000	Actuator Lp Fuel Sov Apu
A1153-1B	Engine Cowl Strut Assembly
A1153-4A	Stay (Nh)
A142443-1	VALVE BODY
A142443-1	Valvevalvee Body
A142443-3	Body Valve
A142443-3	Body Valvevalvee
A142458-6	Housing
A25271-1-1	Sequence Valve
A25279-1	Sequence Valve
A25279-1J	Sequence Valve
A25280-1	Sequence Valve
A25315-1	Valve: Brake,Parking

A25316	Parking Brake Shuttle Valve
A25316-101	Parking Brake Shuttle Valve
A25434006-3	Dual Distribution Valve
A25434006-3000	Dual Distribution Valve
A25461	Automatic Brake Selector
A25461-104	Automatic Brake Selector
A2577110203400	Latch
A257-71102-034-00	Latch
A2776-1A	Core & Reverser Cowl Strut Assembly
A28320-15	RUDDER CONTROL
A28321-18	Servo: Autopilot Elev
A2841-1	Engine Cowl Strut Assembly
A28640-10	Lateral Control Module Assy
A28640-11	Lateral Control Module Assy
A28640-12	Actuator: Lateral Control
A28640-2	Lateral Control Module Assy
A28640-3	Lateral Control Module Assy
A28640-4	Lateral Control Module Assy
A28640-5	Lateral Control Module Assy
A28640-6	Actuator Ass
A28640-7	Lateral Control Module Assy
A28640-8	Lateral Control Module Assy
A28640-9	Lateral Control Module Assy
A3056-1	Strut Assembly
A3363-4	Fan Cowl Damping Rod
A3363-5	Fan Cowl Damping Rod
A33982	Axle Sleeve
A33982-1	Axle Sleeve
A3410-2	Rod, Hold Open
A34187	Axle Sleeve
A34208	Sleeve-Axle
A34440	Axle Sleeve
A34440-1	Axle Sleeve
A3445-1	Fan Cowl Door Hold-Open Rod
A3445-10	Strut Assy, Fan Cowl Hold Open (Tracking O
A34664	Axle Sleeve
A3482-4	Rod Hold Open, Eng Fan Cowl
A3497-2	Hold Open Rod
A35104	Axle Sleeve
A35104	Sleeve, Axle
A35104-1	Axle Sleeve
A35104-1	Sleeve, Axle
A35313	Axle Sleeve
A35399	Axle Sleeve
A35399-1	Axle Sleeve
A35534	Axle Sleeve
A35778	Axle Sleeve

A361-5	Fan Cowl Door Hold Open Rod
A361-9	Fan Cowl Door Hold Open Rod
A38103-1	ELECTROHYDRAULIC SERVO VALVE
A38103-3	Spoiler Servo Valve
A38103-4	Valve,Servo
A39707A	Pressure Ratio Bleed Control
A39707A/K	Pressure Ratio Bleed Control
A39707B	Pressure Ratio Bleed Control
A39707C	Pressure Ratio Bleed Control
A39707D	Pressure Ratio Bleed Control
A39707E	Pressure Ratio Bleed Control
A39707F	Pressure Ratio Bleed Control
A39707G	Pressure Ratio Bleed Control
A39707H	Pressure Ratio Bleed Control
A39707J	Pressure Ratio Bleed Control
A39708J	Pressure Ratio Bleed Control
A39708K	Pressure Ratio Bleed Control
A39709J	Pressure Ratio Bleed Control
A39709K	Pressure Ratio Bleed Control
A39710J	Pressure Ratio Bleed Control
A39710K	Pressure Ratio Bleed Control
A55201B	Surge Detector Control
A55201C	Surge Detector Control
A55201D	Surge Detector Control
A60302B	Differential Pressure Switch
A-62080	Hydraulic Priority Valve
A-62080-1	Hydraulic Priority Valve
A-62080-2	Hydraulic Priority Valve
A-62080-3	Hydraulic Priority Valve
A-62080-4	Hydraulic Priority Valve
A-62080-5	Hydraulic Priority Valve
A-62080-6	Hydraulic Priority Valve
A62H200-7	Actuator
A64090-2	Ehsv
A64090-3	Ehsv
A64193	Ehsv
A64378	Ehsv
A64736-1	Ehsv
A64736-2	Ehsv
A64847-006	Actuator
A64847-007	Actuator,Apu Inlet Guide Vane Furnished
A64847-1	Servo Actuator
A64847-2	Servo Actuator
A64847-3	Servo Actuator
A64847-4	Servo Actuator
A64847-5	Servo Actuator
A64918-1	Ehsv

A64918-2	Ehsv
A64918-3	Ehsv
A64982-004	Servo Assy
A64982-3	Servo Assy
A64986-1	Ehsv
A64986-2	Ehsv
A68793-002	Servo Valve
A68793-006	Servo Valve
A68793-007	Servo Valve, Elevator
A68799	Spoiler 4-5 Servovalves
A68982	Nose Wheel Steering Servovalve
A68982-002	Nose Wheel Steering Servovalve
A68982-004	Nose Wheel Steering Servovalve
A71720-6	Elevator Servoactuator
A71850	Ehsv
A71852	Ehsv
A71854	Ehsv
A71874-XXX	Valve Servo, Spoiler Control Alt S251N11
A71882-003	Servo Valve
A71882-1	Servo Valve
A71882-2	Servo Valve
A76602C	Fuel De-Icing Valve
A76602D	Fuel De-Icing Valve
A76602E	Fuel De-Icing Valve
A76602F	Fuel De-Icing Valve
A76602G	Fuel De-Icing Valve
A76602H	Fuel De-Icing Valve
A76602J	Fuel De-Icing Valve
A76602K	Fuel De-Icing Valve
A76602L	Fuel De-Icing Valve
A76602M	Fuel De-Icing Valve
A76602N	Fuel De-Icing Valve
A76602P	Fuel De-Icing Valve
A76602S	Fuel De-Icing Valve
A76602T	Fuel De-Icing Valve
A76602U	Fuel De-Icing Valve
A84502-7	Lateral Central Control Actuator Assembl
A84503-5	Lateral Autopilot Servo
A84504-4	Rollout Control Servo Assembly Model 17-
A88004-2	Valve
A88008-2	Valve
A88008-X	Valve, Servo
AA1051-00	Stage 7 Solenoid Valve
AA1056-00	Stage 7 Solenoid Valve
AA1060-00	Stage 10 Solenoid Valve
AA1064-00	Stage 10 Solenoid Valve
AC16V1965B	Motor Operated Shutoff Gate Valve

AC67114	Bleed Valve
AC67926	Bleed Valve
AC67960	Valve Assy-High Press. Bleed Valve Op Sol
AC69178	Valve Assy-High Pressure Bleed Valve Op
AC69254	Hp 7 Bleed Valve
AC69262	Stage 10 Solenoid Valve
AC69378	Stage 10 Solenoid Valve
AC69386	Stage 7 Solenoid Valve
AC69514	Hp 10 Bleed Valve
AC69518	Cabin Air Solenoid Valve
AC69572	Stg7 Bleed Solenoid Valve
AC69574	A/C Valve
AC69576	Solenoid Valve
AC69674	Stage 10 Solenoid Valve
AC69859	Hp 7 Bleed Valve
AC69861	Hp 10 Bleed Valve
AC69922	Hp 10 Bleed Valve
AC69924	Hp 7 Bleed Valve
ACG7085-503	Rod Assy
ACG7164-5001	Steering Bypass Valve
ACG7170-5001	Manifold Assy, Steering
ACG7170-5501	Manifold Assy, Steering
ACG7170-5503	Manifold Assy, Steering
ACG7170-5505	Manifold Assy, Steering
ACG7301-5505	Actuator Assy-Upper Cargo-Door
ACG7330-5001	Unlock Cyl. Assy, Nlg
ACG7330-5501	Cylinder Assy
ACG7333-5	ROD
ACG7333-5	Rod
ACG7401-5001	Actuator
ACG7440-5501	Steering Cylinder Assy
ACG7440-5503	Nlg Steering Cyl Assy
ACG7440-5505	Actuator, Ca
ACG7440-5507	Cylinder Assy Nlg Steering
ACP2788AB04	Actuator
AD8552502-1	Actuator
AD8650501	Actuator Ass
AD8650501-1	Actuator, Ho
AD8650502	Actuator
AD8650503	Actuator
AD8650602	Actuator
AD9227-1640	Fuel Filter
AD9227-1649	Fuel Filter
AD9227-1650	Fuel Filter
AD9227-1750	Fuel Filter
AD9227-1780	Fuel Filter
AD9227-1850	Fuel Filter

AD9227-1950	Fuel Filter
AD9227-2050	Fuel Filter
AD9227-2080	Fuel Filter
AD9227-2350	Fuel Filter
AD9227-2450	Fuel Filter
AD9227-2480	Fuel Filter
AD9227-2550	Fuel Filter
AD9227-2750	Fuel Filter
AD9227-2780	Fuel Filter
AD9227-2850	Fuel Filter
AD9227-2950	Fuel Filter
AD9227-3050	Fuel Filter
AD-9380-2024	Scavenge Oil Filter
AD-9380-4010	Scavenge Oil Filter
AD-9380-4011	Scavenge Oil Filter
AD9380-5011	Hydraulic Pu
AD-9380-5011	Flow Regulat
AE1012B00	Actuator Rot
AE1502U01	Actuator Sta
AE4123002	Actuator
AE71088K	Swivel: Assembly,Ar
AEB999-30	Fuel Filter
AH1257-03	Eductor An Valve Assembly
AH1257-04	Eductor An Valve Assembly
AH1257-05	Eductor An Valve Assembly
AH1257-06	Valve Assy - Eductor
AH2574-02	Electro Hydraulic T/R Opening Powerpack (Douglas Installation Aircraft)
AIR91666-0	Accumulator (Un3164) (Hp)
AIR91666-1	Brake Accumulator
AIR91728-1	Cylinder, Accumulator
AIR91740-0	ACCUMULATOR
AIR91740-1	Accumulator, Hyd
AIR91754-0	Cylinder, Hyd Accumulator Transfer
AIR91756-0	Cylinder: Transfer
AJG7005-5501	Brake Ay Stab Trim Motor
AL00102	Actuator
AL00601	Actuator
ALG7024-5507	Elevator Buzz Damper Assy
ALG7080-5501	Outboard Elevator
AMBK02-4010B	BALL
AMBK02-4010B	Ball
AP6VSC-124-01	Variable Delivery Hydraulic Pump
AP6VSC-124-02	Variable Delivery Hydraulic Pump
AP6VSC-124-03	Variable Delivery Hydraulic Pump
AP6VSC-124-04	Variable Delivery Hydraulic Pump
AP6VSC-124-05	Variable Delivery Hydraulic Pump
AP6VSC-124-06	Variable Delivery Hydraulic Pump

APG7000-5511
APS-731500-18BARD
APS-73A18-BARD
APS-73B18-BARD
APT-15-1250-950A
APT-194A-1000-500D
APT-7A-1500-7BARD
APT-7B-1500-7BARD
APT-8A-1500-120D
APT-9A-1500-340A
APTE-8A-2000-7
APTE-8A-2000-7 BARD
AR3-60000-150B
AR6460M2
AR6460M2MOD3
AR7077M1MOD1
AR7077M1MOD2
AR7077M1MOD3
AR7077M2MOD1
AR7077M2MOD2
AR7077M2MOD3
AR7077M2MOD4
AR7077M2MOD5
AR7077M2MOD6
AR7077M2MOD7
AR7077M2MOD8
AR7077M3
AR7077M3MOD1
ARG7076-5505
ARG7076-5507
ARG7076-5509
ARG7076-5511
ARG7349-1
ARG7376-5505
ARG7376-5517
ARH0376-525
ARH0376-529
ARH1210-505
ARH1210-507
ARH1410-503
ARH1410-507
ARH1410-509
ARH7054-517
ARH7057-515
ARH7057-517
AS19570-C
AS-19570-C

Valve
Fuel Filter Clogging Indicator
Fuel Filter Clogging Indicator
Fuel Filter Clogging Indicator
Fuel Manifold Pressure Sensor
APT Pressure Transducers
Oil Pressure Sensor
Oil Pressure Sensor
APT Pressure Transducers
APT Pressure Transducers
Oil Pressure Sensor
Oil Pressure Sensor
Actuator
Actuator Ass
AUTO PILOT A
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Rotary Actuator
Apu Door Act
Rotary Actuator
Trim Cylinder Assy
Trim Cylinder Assy
Trim Cylinder Assy
Cylinder Trim Assy Mlg
Axle Sleeve
MLG RETRACT
Cylinder Retraction Mlg
Pushrod
Spoiler Override Pushrod Assy
Flap Spring
Flap Spring
Outbd Flap Vane
Outbd Flap Vane
Outbd Flap Vane
Actuator Assy Defl Inbd
Actuator Assy Lh
Actuator Assy Rh
Hydraulic Motorpump
Hydraulic Motorpump

AS66411-L-S666	Hyd Pump Assembly
ASG0014-5527	Module
ATS100-395F	Air Turbine Engine Starter
ATS100-395H	Air Turbine Engine Starter
ATS100-395K	Air Turbine Engine Starter
ATS100-462	Air Engine Turbine Starter
ATS100-462A	Air Engine Turbine Starter
ATS100-462B	Air Engine Turbine Starter
ATS100-47	Air Turbine Engine Starter
ATS100-484B	Air Engine Turbine Starter
ATS100-497	Air Engine Turbine Starter
AUM7043-1	Overpressure Valve Assembly
AUM7043-501	Overpressure Valve Assembly
AUM7043-503	Overpressure Valve Assembly
AUM7043-505	Overpressure Valve Assembly
AUM7043-507	Overpressure Valve Assembly
AV13J5144	Ball Valve
AV13J5147	Ball Valve
AV16A1224B1	Gate Valve
AV16A1226B1	Gate Valve
AV16A1237B	Gate Valve
AV16B100B	Motor Operated Shutoff Gate Valve
AV16B1286	2" Motor Valve
AV16B1330D	Valve/Gate
AV16B1331C	Valve/Gate
AV16B1467D	Valve
AV16B1519D	Gate Valve
AV16B1520C	Gate Valve
AV16B1603D	Valve
AV16B1659C	Actuator
AV16B1736D	Actuator
AV16B1950	Motor Operated Shutoff Gate Valve
AV16B1965B	Motor Operated Shutoff Gate Valve
AV16B2070B	Actuator / Valve
AV16B2070R	Actuator / Valve
AV16B2082-1	Actuator / Valve
AV16B2100B	Motor Operated Shutoff Gate Valve
AV16B2111D	Actuator
AV16E1167C	Actuator
AV16E1209D	Apu Fuel S/O Vlv Actuator
AV16E1215-2	Motor Operated Shutoff Valve
AV16E1261D	Valve, Fuel Gate
AV16E1261D1	Switch, Diff
AV16E1261D-1	Switch-Press
AV16E1305	Valve: Thrust Reverser
AV16E1305	Motor Operat
AV16E3261C1	Valve

AV18B1018	Valve Assy
AV23B3146	Valve, Potable Water
AV23E3104	Valve 3 Way, 2 Position, Hyd Motor Opera
AV23E3104-1	Switch
AV24B1488-1	Hydraulic Firewall Shutoff Valve
AV24B1488-2	Hydraulic Firewall Shutoff Valve
AV24B1488-3	Hydraulic Firewall Shutoff Valve
AV24C3114	Valve, Potable Water
AV24E1144	Actuator
AV24E1144-2	Actuator Val
AV24E1150-3	Actuator Ass
AV24E1150-4	Fuel Valve A
AV24E1150-5	Valve
AV24E1162	Valve Shut Off Rudder Motor Pu
AV24E3134-1	Switch, Pres
AV31	Actuator
AV-31	Actuator Assy, Valve Fuel Shutoff
AV31-1	Actuator
AV-31-1	Valve Actuator
AV-32	VALVE BODY, FUEL
AV33	Fuel Valve
AV-33-1	VALVE, BODY, FUEL
AYG7027-5539	Reservoir-Hydr System No 1
AYG7030-5511	Valve Assy Flap Tandem
AYG7030-5515	Flap Valve
AYG7030-5517	Actuator Spo
AYG7050-5501	Selector Valve, Ldg
AYG7050-5503	Selector Valve, Ldg
AYG7050-5505	Selector Valve, Ldg
AYG7050-5507	Selector Valve, Ldg
AYG7091-5505	Valve And Actr Ay Spoiler Serv
AYG7091-5509	Valve And Actr Ay Spoiler Serv
AYG7095-5505	Pump,Manifold Assy Aux Y
AYG7219-5001	Cylinder Clg Lock/Unlock
AYG7323-5509	Valve Hydr Flap Lock
AYG7422-5001	Actuator
AYLF9732	A/I Valve
B03AA1040	De-Iceing Valve
B10046U1	Ball Screw
B10047D	Ballscrew
B10047U1	Screw & Ball
B1548-05-12	Valve-Check
B17CA1042	Valve
B18834	Horizontal Stabilizer Screw Assembly
B18834-1	Jack Screw
B18D18	Air Oil Cooler
B20745	Screw Assemb

B20745D	Ball Screw
B20745U1	Ball Screw
B-20745U1	Ball Screw
B20745U2	Ball Screw
B27000	Actuator, Fuel, Apu Lpsov
B2700-14	Reservoir As
B-2700-14	Module Reser
B38LC1505	Shut-Off Valve
B38LC2505	Shut-Off Valve
B38LC3608	Shut-Off Valve
B38LC3705	Shut-Off Valve
B38LC5108	Shut-Off Valve
B38LC5109	Shutoff Valve
B38LC5110	Valve Shut Off
B401ACM0506	Ball Screw A
B-403-11394-103	Starter Control Valve
B43542-2	I/B Spoiler Pcu
B43542-3	I/B Spoiler Pcu
B43542-4	I/B Spoiler Pcu
B43542-5	I/B Spoiler Pcu
B43542-6	I/B Spoiler Pcu
B43542-7	I/B Spoiler Pcu
B43542-8	I/B Spoiler Pcu
B4902	Pressure Oil Filter Element
B4903	Pressure Oil Filter Element
B5241-04	Sump Supply Check Valve
B5241-05	Sump Supply Check Valve
B546BAM0206	Ball Screw
B546CAM0102	Screw
B546CAM0103	Screw
B546CAM0104	Screw
B97W99-115A	Single Actuators
B97W99-115B	Single Actuators
B97W99-116B	Twin Actuators
BPU 200 Mk1	Backing Pump
BPU 200 Mk2	Backing Pump
BPU200MK1	Pump
BPU200MK2	Pump
BWR990-02-631	RETAINING CA
BYLB 82	Actuator
BYLB50142	Actuator
C-07202-2	Ctrl Shaker Assy
C-07202-3	Ctrl Shaker
C12CB0010	Fuel Pump
C12CB0011	Fuel Pump
C12CB0012	Fuel Pump
C12CB0013	Pump Apu Fuel

C13153CA02	Ball Screw
C143123-2	Valve Dual
C143123-6	Valve Dual Temp
C143620-2	Intermediate Pressure Bleed Check Valve
C143620-3	Intermediate Pressure Bleed Check Valve
C143621-2	Pressure Reducing Shutoff Valve
C143621-4	Pressure Reducing Shutoff Valve
C143622-1	Nacelle Core Compartment Cooling Air Valve
C144704-2	Power Pack
C144704-3	Power Pack
C144704-4	Power Pack
C145531-2	Pressure Reducing Shutoff Valve
C145531-3	Pressure Reducing Shutoff Valve
C145660-2	Nacelle Core Compartment Cooling Air Valve
C145660-3	Nacelle Core Compartment Cooling Air Valve
C146009-4	Valve Anti-Ice, Lip Engine
C148275-1	Nacelle Core Compartment Cooling Air Valve
C16221DB04	Ball Screw
C20105000	Tachometer:
C20105000-1	Tachometer:
C201-1900-1	Solenoid Val
C20288000-1	Accumulator
C20288000-2	Accumulator-Brake
C20374000-1	Actuator Ass
C20374000-2	Brake Servo Valve
C20464001	Temperature Sensor
C22102-603-XXX	Water Heater Assembly
C23005-201	Main Gear Pitch Damper
C23005-303	Pitch Damper
C23005-6	Pitch Damper
C23118-1-9	Brace Strut
C23199-104	Actuating Door Cylinder Assy
C24466000	Thrust Reverser Hydraulic Control Unit
C24466000-102	Thrust Reverser Hydraulic Control Unit
C24466000-103	Thrust Reverser Hydraulic Control Unit
C24466000-104	Thrust Reverser Hydraulic Control Unit
C24466000-3	Thrust Reverser Hydraulic Control Unit
C24466000-4	Thrust Reverser Hydraulic Control Unit
C24466001-102	Thrust Reverser Hydraulic Control Unit
C24466001-103	Thrust Reverser Hydraulic Control Unit
C24466001-2	Thrust Reverser Hydraulic Control Unit
C24466001-3	Thrust Reverser Hydraulic Control Unit
C24568000-5	Actuator
C24589000-2	Actuator
C24592000-1	Master Cylinder
C24592020	Master Cylinder
C24669000	Thrust Reverser Hydraulic Control Unit

C24672000	Check Valve
C24703001	Parking Limiter
C24703001-1	Parking Limiter
C24703001-2	Parking Limiter
C24703001-201	Parking Limiter
C24703001-3	Parking Limiter
C24703001-301	Parking Limiter
C24703001-4	Parking Limiter
C24703002	Parking Limiter
C24703002-1	Parking Limiter
C24703002-2	Parking Limiter
C24703003	Parking Limiter
C24703003-1	Parking Brake Pressure Selector
C24730001-6	Nlg Uplock
C24730100	Nlg Door Uplock
C24736100-1	Servocontrol
C24742000-3	Latch, Pivot Door
C24784000	Air Valve LPTACC Module
C24792000	Air Valve LPTACC Module
C24792000-1	Valve Assy.,
C24792000-1D	Lpt Act CI Cont Valve
C24792000-2	Air Valve LPTACC Module
C24830000-2	Nlg Door Uplock
C24831100-3	Main Landing Gear Uplock
C24831100-4	Mlg Uplock
C24831100-6	Main Landing Gear Uplock
C24831100-7	Mlg Uplock
C24831300-1	Main Landing Gear Uplock
C24833100-2	Mlg Door Uplock
C24837101	Actuator
C24837101-1	Normal Brake Manifold Assembly
C24837101-2	Normal Brake Manifold Assembly
C24837101-3	Normal Brake Manifold Assembly
C24837101-4	Normal Brake Manifold Assembly
C24837101-5	Normal Brake Manifold Assembly
C24937001-1	Lptacc Valve
C24937001-1A	Lptacc Valve
C24937001-2A	Lptacc Valve
C24937001-3	Lptacc Valve
C24960000-1	VALVE SAFETY
C24993000	Selector Valve
C25149000	Air Valve LPTACC Module
C25149000-1	Air Valve LPTACC Module
C25175000	Lptacc Module Air Valve
C25175000-1	Lptacc Module Air Valve
C25175000-2	Lptacc Module Air Valve
C25175000-3	Lptacc Module Air Valve

C25175100	Lptacc Module Air Valve
C25175100-1	Lptacc Module Air Valve
C2608-01	Valve - Idg Press Relief
C49AA0222	Canister Pump
C5116-03	Starter Motor
C5116-04	Starter Motor
C5116-05	Starter Motor
C5116-06	Starter Motor
C5116-07	Starter Motor
C5116-08	Starter Motor
C5116-09	Starter Motor
C5116-10	Starter Assy
C5116-11	Starter Motor
C5120-3	Starter Motor
C51LM0020	Valve 4 Way
C60AA0052	Actuator
C60AA0062	Actuator
C71755-1	Piston
C99144-004	Actuator: Spoiler,Assembly,Ar
C99257-002	Reu: Assembly,Flaperon Manifold
CA115-01	RH and LH T495 Thermocouple Wiring Segments
CA115-03	RH and LH T495 Thermocouple Wiring Segments
CA116-01	RH and LH T495 Thermocouple Wiring Segments
CA116-03	RH and LH T495 Thermocouple Wiring Segments
CA129-01	RH and LH T495 Thermocouple Wiring Harness
CA130-00	T495 Thermocouple Wiring Harness
CA131-00	T495 Thermocouple Wiring Harness
CA132-00	T495 Thermocouple Wiring Harness
CA146-00	T495 Wiring Harness
CA146-01	T495 Wiring Harness
CA146-02	T495 Wiring Harness
CA147-00	T495 Wiring Harness
CA147-01	T495 Wiring Harness
CA147-02	T495 Wiring Harness
CA148-00	T495 Wiring Harness
CA148-01	T495 Wiring Harness
CA148-02	T495 Wiring Harness
CA149-00	T495 Thermocouple Wiring Harness
CA150-00	T495 Thermocouple Wiring Harness
CA150-01	T495 Thermocouple Wiring Harness
CA150-02	T495 Thermocouple Wiring Harness
CA151-00	T495 Thermocouple Wiring Harness
CA151-01	T495 Thermocouple Wiring Harness
CA151-02	T495 Thermocouple Wiring Harness
CA152-00	T495 Thermocouple Wiring Harness
CA152-01	T495 Thermocouple Wiring Harness
CA152-02	T495 Thermocouple Wiring Harness

CA152-03	T495 Thermocouple Wiring Harness
CA152-04	T495 Thermocouple Wiring Harness
CA156-00	T495 Thermocouple Wiring Harness
CA156-01	T495 Thermocouple Wiring Harness
CA156-02	T495 Thermocouple Wiring Harness
CA170-00	T495 Wiring Harness
CA170-01	T495 Wiring Harness
CA170-02	T495 Wiring Harness
CA171-00	T495 Wiring Harness
CA171-01	T495 Wiring Harness
CA171-02	T495 Wiring Harness
CA172-01	T495 Wiring Harness
CA172-02	T495 Wiring Harness
CA172-03	T495 Wiring Harness
CA172-04	T495 Wiring Harness
CA174-00	T495 Thermocouple Wiring Harness
CA174-01	T495 Thermocouple Wiring Harness
CA174-02	T495 Thermocouple Wiring Harness
CA174-03	T495 Thermocouple Wiring Harness
CA174-04	T495 Thermocouple Wiring Harness
CA174-05	T495 Thermocouple Wiring Harness
CA175-00	T495 Thermocouple Wiring Harness
CA175-01	T495 Thermocouple Wiring Harness
CA175-02	T495 Thermocouple Wiring Harness
CA175-03	T495 Thermocouple Wiring Harness
CA175-04	T495 Thermocouple Wiring Harness
CA175-05	T495 Thermocouple Wiring Harness
CA194-00	T495 Thermocouple Wiring Harness
CA194-01	T495 Thermocouple Wiring Harness
CA194-02	T495 Thermocouple Wiring Harness
CA195-00	T495 Thermocouple Wiring Harness
CA195-01	T495 Thermocouple Wiring Harness
CA195-02	T495 Thermocouple Wiring Harness
CA211-00	T495 Wiring Harness
CA212-00	T495 Wiring Harness
CA213-00	T495 Wiring Harness
CA45330-001	Elevator Feel Computer Unit
CH1806T02	Thrust Reverser Transmission, C-Duct Drives and Tubes
CH2151-0052	LOCK RING
CH2151-0052	Lock Ring
CH2151-0423	FITTING, TEE
CH2151-0423	Fitting, Tee
CH2152-0024	RING
CH2152-0024	Ring
CH2152-0026	RING
CH2152-0026	Ring
CHA1001-006A	Slat Stepback Gearbox

CHA1001-008B	Gearbox
CHA1006-006A	Gear Box
CHA1058-008B	Flap Ball Screwjack
CHA1059-008C	Flap Screwjack
CHA1059-008E	Flap Ball Screwjack
CHA1059-008G	Flap Screwjack
CHA1060-008B	Jackscrew
CHA1060-008D	Jackscrew
CHA1061-004A	Slat Ball Screwjack
CHA1061-005A	Slat Ball Screwjack
CHA1061-005B	Slat Ball Screwjack
CHA1067-002B	Slat Control
CHA1159-003A	Flap Bevel Gearbox
CHA1159-004A	Flap Bevel Gearbox
CHA1159-006B	Flap Bevel Gear
CHA1171-003A	Gear Box
CHA1171-004A	Bevel Gearbox
CHA1171-006B	Flap Bevel Gear
CHA1237-002A	Slat Ball Screwjack
CHA1237-002B	Jack Screw
CHA1477-002D	Flap Ball Screwjack
CHA1479-002F	Flap Ball Screwjack
CHA1479-002H	Flap Screwjack
CHA1479-002J	Screwjack
CHA1481-002J	Screwjack, Flap Ball
CHA1483-004F	Screwjack
CHA702-003A	Stepback Gearbox
CHA702-004A	Gearbox
CHA704-218	Slat Transmission Shaft
CHA706-007A	Flap Torque Limiter
CHA707-004A	Flap T-Gearbox
CHA707-005A	Flap T-Gearbox
CHA707-005C	Flap T Gearbox
CHA710-001	Beval Gearbox
CHA710-002A	Beval Gearbox
CHA710-003A	Beval Gearbox
CHA719-004A	Down Drive Gearbox
CHA719-005A	Down Drive Gearbox
CHA720-004A	Flap Gear Box
CHA720-005A	Flap Gear Box
CHA720-005B	Flap Gearbox
CHA722-300	Steady Bearing Assy
CHA722-367	Flap Downdrive Shaft Assy
CHA722-368	Flap Downdrive Shaft Assy
CHA722-369	Shaft
CHA722-375	Flap Downdrive Shaft Assy
CHA722-376	Dive Shaft

CHA722-419	Steady Bearing
CHA722-505	Shaft Assy
CT141-1	Actuator
CT191B	Actuator
CT60-2	Actuator, Sp
CU09696056	Sensor: Flat,Skew,Assembly
D026-005	Nose Wheel Steering Servovalve
D026-005A	Nose Wheel Steering Servovalve
D026-005C	Nose Wheel Steering Servovalve
D05000	Valve, Overflow Shut Off
D05A00	Drain Valve
D05A00	Actuator
D05C00	Drain Valve
D06A00	Drain Valve
D107613/614	Actuator
D1522-4	Actuator
D1522-5	Actuator
D1775-3	Motor
D1876-1000A	No. 4 Bearing Compartment Air Cooler
D1876-5000A	No. 4 Bearing Compartment Air Cooler
D2063-11	Gearbox, Cargo Door
D2063-12	Power Unit - Cargo Door
D2067-8	Gearbox, Cargo Door
D2067-9	Gearbox, Cargo Door
D2070	Actuator
D2070-1	Actuator, Ele
D2070-11	Actuator, Latch
D2070-2	Actuator
D2070-2MOD	Actuator
D2070-3	ACTUATOR
D2070-9	Actuator, Hook And Lock
D2070MD2-1	Actuator
D2157120502400	Plenum: Cooling Air,Assembly
D22357000	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357000-1	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357000-2	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100-1	Thrust Reverser Cowl Opening Hydraulic Actuator
D22357100-2	Thrust Reverser Cowl Opening Hydraulic Actuator
D22AA1022	Fuel Return Valve
D22AA1023	Fuel Return Valve
D22AA1031	Fuel Return Valve
D22AA1032	Fuel Return Valve
D22AA1034	Fuel Return Valve
D22AA1035	Fuel Return Valve
D22AA1036	Fuel Return Valve
D22AA1042	Fuel Return Valve

D22AA1043	Fuel Return Valve
D23071000	Nlg Actuating Cylinder
D23071000-1	Nlg Actuating Cylinder
D23071001	Nlg Actuator Cylinder
D23090000-2	Thrust Reverser Actuator
D23090000-3	Thrust Reverser Actuator
D23090000-4	Thrust Reverser Actuator
D23090000-5	Thrust Reverser Actuator
D23090000-6	Thrust Reverser Actuator
D23090000-6 AMDT B	Thrust Reverser Actuator
D23090000-7	Thrust Reverser Actuator
D23090000-8	Actuator
D23213000-	Actuating Cylinder Assy
D23214000-	Actuating Cylinder Assy
D23613000	Nlg Cylinder Actuator
D2399-3	Actuator, Lift
D24001000	Valve Control Parking Bra
D24005000	Manifold Servovalve Alter
D24006000	Manifold Servovalve Alter
D2401-15	Actuator
D2401-16	Actuator
D2405-5	Actuator, Push, Pull
D2727000700200	Rod Spring
D2727000700600	Snubber
D272-70090-200-00	Rudder Snubber
D272-70250-00	Rudder Snubber
D2727025000400	Spring Rod
D2727025000600	Rod Spring
D2727040001000	Rudder Feel Actuator
D2727040001200	Unit: Artificial Feel
D2727040001400	Unit: Artificial Feel
D27310001000A0	Side Stick
D27310001000AQ	Controller: Side Stick,Assembly
D27310002000A0	Side Stick
D3292-4000A	Idg Oil Cooler
D52856-1	Axle Sleeve
D52861-2	Axle Sleeve
D52863-3	Axle Sleeve
D5757030501500	Rod Spring
D5757032200200	Strut Interconnecting
D5757032201100	Strut: Interconnecting
D59473-1	PISTON
D59473-1	Piston
D61143	Rod
D61143-10	Rod
D65235-1	NLG CYLINDER
D65235-1	Nlg Cylinder

D738-01-001	Switch: Engine Fuel Control
D90ST2003-000	Actuator Ser
D97C00-501	Single Actutor
D97C00-603	Rotary Actutor
D97C00-604	Actuator
D97C00-605	Actuator
D97C00-609	Rotary Actutor
D97C00-610	Actuator
D97C00-612	Actuator
D97C00-613	Actuator
D97C00-614	Actuator
D97C00-615	Actuator
D97C00-624	Rotary Actutor
D97C00-637	Actuator
D97C00-654	Rotary Actutor
D97D00-501	Twin Actuators
D97D00-502	Twin Actuator
DL1020M159-2	Lateral Trim Actuator
DL1028M13-1	Actuator
DL1028M60-	Actuator
DL1632M19-2	Actuator
DL1632M19-3	Actuator
DL2428M9MOD1	Actuator
DL3025M1MOD3	Actuator
DL4528M1MOD5	Actuator
DL4528M1MOD6	Actuator
DS1028M21	Actuator
E03A00	Valve Assy Fire Shutoff
E20000	Actuator Hydraulic
E24230AA	Ball Screw
E24230BA	Ball Screw
E850-106788B190	Actuator / Valve
E850-106788B224	Actuator / Valve
E850-AV16B2070B	Actuator / Valve
E850-AV16B2082-1	Actuator / Valve
E850-AV16E1293	Actuator
EB101729B	Hp 7 Bleed Valve
EB101729C	Hp 7 Bleed Valve
EC96BVA-1	High Pressure Shutoff Valve
EM487-4	Actuator Assembly
EM56-20	Vlv Parking
EM56-20-5	Vlv Parking
EM91-79	Shutoff Ball Valve
EM91-79-3	Valve Shutoff
EM91-79-4	Valve: Shutoff
EM91-79-5	Shut Off Val
EM91-80	Shutoff Ball Valve

EM91-80-3	3 Way Valve
EM91-80-4	Valve: Shutoff
EM91-80-5	3 Way Valve
EPW607-103	ROTDOME SHA
EPW607-103	Rotodome Sha
ES1007-3	JOYSTICK
EVAC2423FD	Actuator,Doo
EVAC2423H	Actuator
EVT174-21A/EVT174-22C	Brake Cooling Fan
EVT174-2E4	Brake Cooling Fan
EVT174-2E8	Fan
EVT174-2E9	Brake Cooling Fan
EVT174-500C	Fan
EVT174-500E	Brake Cooling Fan
EVT3454H	Avionics Cooling Fan
EVT3454HC	Avionics Fan
EVT3454J	Fan
EVT3745B	Avionic Fan
F61D0236M6	Pressure Regulator
FA00914D	Fuel Nozzle Filter
FA100171-001	ACTUATOR. T/
FE171-000	Cable Tension Regulator
FRH010041	Twin Motor Actutr.
FRH100002A	Twin Motor Actuator
FRH100004A	Twin Motor Actuator
FRH100014A	Switch Pressure
FRH100021A	Twin Motor Actuator
FRH220033V	Valve Assy Nonreturn
FRH230003C	Actuator
FRH280002	Actuator, Tw
FRH340003H	Valve Drain
FYLB52145-1	Anti-Ice Pneumatic Shutoff Valve
FYLB52145-2	Actuator
FYLB52145-3	Anti-Ice Pneumatic Shutoff Valve
FYLB52230-1	Anti-Ice Pneumatic Shutoff Valve
FYLB52230-2	Anti-Ice Pneumatic Shutoff Valve
FYLB-52230-2	ANTI ICE VAL
FYLB52230-3	Anti-Ice Pneumatic Shutoff Valve
FYLB52230-4	Anti-Ice Pneumatic Shutoff Valve
FYLB-52230-4	ANTI ICE SHU
FYLB59	Body
G4000VSA01	Actuator, Variable Stator Vane, Vsv
GA30734	Axle Sleeve
GA30735	Axle Sleeve
GA31188	Axle Sleeve
GA63139	Axle Sleeve
GA63406	Rod Assy

GA63406-10	Rod Assy
GA7396	Valve Two Way
GA7463-3	Snubber: Rotary: Radome
GM6937-5	Transducer, Rotary Variabl
GM8708-2F	Transducer: Force
GP200MK1	High Pressure Gear P
GP200MK10	High Pressure Gear P
GP200MK11	High Pressure Gear P
GP200MK2	High Pressure Gear P
GP200MK3	High Pressure Gear P
GP200MK5	High Pressure Gear P
GP200MK6	High Pressure Gear P
GP200Mk7	Main Fuel Gear Pump
GP200Mk8	Main Fuel Gear Pump
GP200Mk9	Main Fuel Gear Pump
GP202	High Pressure Gear Pump
GP202MK1	Pump
GYLC6559	Actuator
H3272	Adjusta-Keeper Latches
H3272-5	Adjusta-Keeper Latches
H3404-1	Hold-Open Rod Assembly (Douglas Aircraft Installation)
H3404-3	Hold-Open Rod Assembly (Douglas Aircraft Installation)
H3782-11	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-12	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-21	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-23	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-25	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3782-27	Thrust Reverser Assembly (Douglas Aircraft Installation)
H3797 series	Fan Cowl Door Support Latches
H3967-3	Keeper:
H505B	Position Transmitter
H509B	Position Transmitter
H61C0538M1	Manifold Drain
H61C0552M1	Hydraulic Check Valve
HAC18339	Resistor Wiring Harness (Tt2 Probe)
HAC19037	Shutoff Valve Assembly
HAC1936	Hi-Stage Temperature Sensor Cable Assembly
HAC19460	Immersion Thermocouple
HAC19481	EEC Fuel/Oil Temperature Thermocouple Probe
HAC19822	EEC Fuel/Oil Temperature Thermocouple Probe
HAC19827	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD 18286	EEC Oil Temperature Thermocouple Probe
HAD17076	Immersion Thermocouple
HAD17818	EEC Wiring Harnesses
HAD17819	EEC Wiring Harnesses
HAD17958	Exhaust Gas Temperature (EGT) Wiring Harnesses
HAD18052	EEC Wiring Harnesses

HAD18053	EEC Wiring Harnesses
HAD18054	EEC Wiring Harnesses
HAD18185	EEC Wiring Harnesses
HAD18186	EEC Wiring Harnesses
HAD18187	EEC Wiring Harnesses
HAD18227	EEC Wiring Harnesses
HAD18269	EGT (T4.9) Thermocouple Probe
HAD18280	Immersion Thermocouple
HAD18286	EEC Oil Temperature Thermocouple Probe
HAD18306	EEC Wiring Harnesses
HAD18307	EEC Wiring Harnesses
HAD18308	EEC Wiring Harnesses
HAD18314	EEC Wiring Harnesses
HAD18520	EEC Wiring Harnesses
HAD18522	EEC Wiring Harnesses
HAD18675	EEC Wiring Harnesses
HAD18700	EEC Fuel Temperature Thermocouple Probe
HAD18760	EEC Fuel/Oil Temperature Thermocouple Probe
HAD18775	EEC Wiring Harnesses
HAD18776	EEC Wiring Harnesses
HAD18777	EEC Wiring Harnesses
HAD18778	EEC Wiring Harnesses
HAD18919	EGT (T4.9) Thermocouple Box and Cable
HAD18927	EGT (T4.9) Thermocouple Box and Cable
HAD18952	EEC Thermocouple Probe (Tt3)
HAD19012	EEC Wiring Harnesses
HAD19013	EEC Wiring Harnesses
HAD19142	EEC Wiring Harnesses
HAD19147	EEC Wiring Harnesses
HAD19247	EEC Fuel/Oil Temperature Thermocouple Probe
HAD19412	EGT (T4.9) Thermocouple Box and Cable
HAD19490	EGT (T4.9) Thermocouple Box and Cable
HAD19555	EEC Wiring Harnesses
HAD19669	E.G.T. Harness and Junction Box
HAD19687	Engine Bleed Air Thermocouple Probe
HAD19697	EEC Wiring Harnesses
HAD19701	EEC Wiring Harnesses
HAD19704	EEC Wiring Harnesses
HAD19705	EEC Wiring Harnesses
HAD19708	EEC Wiring Harnesses
HAD19709	EEC Wiring Harnesses
HAD19768	EEC Wiring Harnesses
HAD19795	Thermocouple:
HAD19824	E.G.T. Harness and Junction Box
HAD19831	EEC Wiring Harnesses
HAD19926	EEC Wiring Harnesses
HAD20458	EGT (T4.9) Thermocouple Box and Cable

HAD20530	EEC Wiring Harnesses
HAD20594	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD20758	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD20759	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
HAD20836	Engine Core Compartment Temperature Thermocouple Probe
HAD20899	Exhaust Gas Temperature (EGT) T4.95
HAD20973	EEC Thermocouple Probe (Tt3)
HAD21021	EEC Fuel/Oil Temperature Thermocouple Probe
HAD21226	TCA Thermocouple Probe
HAD21339	Exhaust Gas Temperature (EGT)/T3 Harness
HAD21364	T3/TCA Harness Assembly
HAD21365	Exhaust Gas Temperature (EGT) Harness Assembly
HAD21368	Exhaust Gas Temperature (EGT) T4.95
HAD21986	Exhaust Gas Temperature (EGT) Harness Assembly
HAD21987	T3/TCA Harness Assembly
HAD21988	Exhaust Gas Temperature (EGT)/T3 Harness
HAD22308	Fuel Temperature Thermocouple
HAD22501	EEC Fuel/Oil Temperature Thermocouple Probe
HAD22615	TCA Thermocouple Probe
HAD22739	T3/TCA Harness Assembly
HP1368100-1	Isolation Valve, Tr
HP1368100-3	Valve Assy, Tr Isolation Module
HP1368100-5	Valve Assy, Tr Isolation Module
HP1368100-6	Isolation Valve, Tr
HP1368100-7	Valve: Isolation,Thrust Reverser
HP1373100-3	Valve,Rsvr Fill
HTE 9037	Actuator
HTE 9037-1	Actuator
HTE1451-1	Twin Motor Actuator
HTE190001-1	Actuator
HTE190001-2	Actuator Twin Motor
HTE190026	Twin Motor Actuator
HTE200002	Actuator
HTE200002-1	Fuel Valve Actuator - Single Motor
HTE310021-1	Valve Air Inlet
HTE420044	Valve Pressure Holding
HTE69000-1	Pressure Switch
HTE8803	Actuator
HTE900001	Low Pressure Valve
HTE900085	Drive Spindle
HTE900087-001	Fuel Transfer Valve
HTE900095	Transfer Valve Drive Shaft
HTE900096	Transfer Valve Drive Shaft
HTE900118	Low Pressure Valve
HTE900118-001	Fuel Low Pressure Valve
HTE900125	Fuel Ball Valve
HTE900133	Fuel Actuated Valve

HTE900135	Fuel Crossfeed Valve
HTE900189	Fuel Control Valve
HTE9037	Actuator
HTE9037-1	Actuator
J1913-02	Combustor Drain Valve
J2714-01	Combustor Drain Valve
J540AI75-100	Bleed Valve
K2482-10	Oil Tank Pressurizing Valve
K3123	Adjusta-Keeper Latches
L10-20	Actuator
L10-70	Actuator
L16-360	Actuator
L2912	Transducer: Linear
L-30825-602	Valve Edp Su
L43418P02	Actuator, Variable Stator Vane, Vsv
L43418P03	Actuator, Variable Stator Vane, Vsv
L43419P04	Actuator, Variable Bypass Valve, Vbv
L43419P06	Actuator, Variable Bypass Valve, Vbv
L43419P07	Actuator, Variable Bypass Valve, Vbv
L43420P04	Actuator, Variable Bypass Valve, Vbv
L43420P06	Actuator, Variable Bypass Valve, Vbv
L43420P07	Actuator, Variable Bypass Valve, Vbv
L80465	Valve: Check
L902503	EXHAUST GAS TEMPERATURE (EGT) WIRING HARNESSSES
L94L38-651	Valve
L95F100-603	Selector Val
L95F100-604	Overpressure Protector
L95F100-605	Overpressure Protector
LA11A2104	Actuator
LA11A2119-1	Actuator
LA11A2121-1	Actuator
LA16-42	Actuator
LC016C11	SPRING
LJ76305	Flap Drag Link
LJ76305-05	Flap Drag Link
LK82593	Mount Assy-Fwd Engine
M11518	Rotary Actua
M4100837B	Bleed Control Valve
M4100837C	Bleed Control Valve
M4100837D	Bleed Control Valve
M4101184	Bcv Actuator
M4101184A	Bcv Actuator
M4500039AC	Fuel Control Assembly
M4500039ACD	Fuel Control Assembly
M4500039BC	Fuel Control Assembly
M4500039BCD	Fuel Control Assembly
M4500039F1	Fuel Control Assembly

M4506061-16	WIRING HARNESS
M4506061-2	WIRING HARNESS
M4506061-5	HARNESS ASSY
M732591AF	Air Cooling Fan
M732591BF	Air Cooling Fan
M732591CF	Air Cooling Fan
M732591DF	Air Cooling Fan
M732591EF	Air Cooling Fan
M913-1	Check Valve.
MA11A1061B	Actuator
MA11A1062B	Solenoid
MA11A1194	Valve, Shut-
MA11A1200B	Actuator
MA11A1200BSL	Actuator
MA11A1267	Valve, Shut-
MA17A2015	Fueling Shut
MA20A2027	Relay
MA20A2036	Electric Motor Operated Actuator
MA20A2036-1	Electric Motor Operated Actuator
MA30A1001	Switching Un
MA32A1001-3	Dual: Motor,Actuator
MF1-019-1	Motor, Hydraulic
MF1-019-3	Motor, Hydraulic
MF1-019-3A	Motor, Const Displacement Hyd
MF1-060-18	Motor, Hydraulic
MF1-095-6	Hydraulic Motor Assy
MF1-152-9	Motor, Hydraulic
MF3-032-EA3F	Fixed Displacement Hydraulic Motor Assembly
MF3-075 EA1G	Fixed Displacement Hydraulic Motor Assembly
MF3-075-EA1E	Fixed Displacement Hydraulic Motor Assembly
MF3-075-EA1F	Fixed Displacement Hydraulic Motor Assembly
MF3-075-EA1H	Fixed Displacement Hydraulic Motor Assembly
MF3-075-EA1J	Fixed Displacement Hydraulic Motor Assembly
MF3-075-EA2A	Fixed Displacement Hydraulic Motor Assembly
MF9-3911-25Z	Hydraulic Motor
MFP-295	Main Fuel Pump
MFP-297	Main Fuel Pump
MPEV3-008-6	Dc Electric Motor Pump Assy
MPEV3-032-1D	Hyd.Motorpump
MPEV3-032-1E	Hyd.Motorpump
MPEV3-032-1F	Hyd.Motorpump
MPEV3-032-GB1	Hyd.Motorpump
MPP2C-4A	Hydraulic Motor/Pump
MS9-3911-30ZE-4C	Motor Assy, Constant Displacement Hyd
NYLC 50427	Actuator
NYLC 50438	Actuator
NYLC 50440-1	Actuator

NYLC 50448-2	Actuator,Rotary
NYLC 50452-2	Actuator
NYLC 50994-1	Actuator
NYLC 51072-2	Actuator
NYLC 51114-1	Actuator
NYLC 8988	Actuator
NYLC 9287	Actuator
NYLC 9376	Actuator
NYLC 9463	Actuator
NYLC 9463-1	Actuator
NYLC50427	Actuator
NYLC50438	Actuator
OA2730-001	Air Cooled Oil Cooler
OA3150-001	Air Cooled Oil Cooler
OF25-001	Fule Oil Heat Exchan
OF25-101	Fule Oil Heat Exchan
OF25-201	Fule Oil Heat Exchan
OF25-301	Fule Oil Heat Exchan
OF25-401	Fule Oil Heat Exchan
OF32-001	Fule Oil Heat Exchan
OF32-101	Fule Oil Heat Exchan
OF33-001	Fule Oil Heat Exchan
P10-0090002	Panel
P141-395-1	Selector Valve
P141-395-3	Selector Valve
P141-395-5	Selector Valve
P165-395	Actuator
P167-395	Actuator
P24-595-1	Valve: Assembly
P300041	LATCH
P300041	Latch
P31-595	Valve, Flow Limiting Assy
P375A0002-00	Actuator Assy
P376A0002-07	Spoiler Speedbrake Actuator
P39-401	Float Valve
P450A0001-01	Unit Assy
P450A0001-02	Drive Unit: Power,Slat
P53-401	Valve
P53-401-1	Float Valve
P535A0036-00	OUTER ROD
P535A0036-00	Outer Rod
P535A0038-00	Inner Rod
P547A0038-00	Outer Rod
P670A0001-01	Actuator: Rotary,Geared,Krueger
P671A0001-01	Actuator: Rotary,Geared,Ib
P685A0001-02	Actuator: Rotary,Geared,Ob
P76201A	Servo Motor

P93A19-203	Apu Aft Boost Pump
P93A19-204	Pump, Fuel Feed, A330
P99C38-601	Engine Feed Pump
P99C38-605	Fuel Pump
P99C38-607	Cartridge, Boost Pump
PA9512-200-246	Oil Pressure Transmitter
PMP05V-34	Pump Motor Package
PMP05V-34-01	Pump Motor Package
PMP1V-20-02	Pump Motor Package
PMP1V-20-03	Pump Motor Package
PS400-1	Starter Control Valve
PS600-9	Pneumatic Starter
PS700-4	Pneumatic Starter
PS700-6	Pneumatic Starter
PS9512-200-246	Oil Pressure Transmitter
PV3-160-4	Hydraulic Pump
PV3-160-4A	Hydraulic Pump
PV3-160-4B	Hydraulic Pump
PV3-160-4C	Hydraulic Pump
PV3-160-8	Hydraulic Pump
PV3-240-10	Variable Displacement Hydraulic Pump
PV3-240-10A	Variable Displacement Hydraulic Pump
PV3-240-10C	Variable Displacement Hydraulic Pump
QA06249	Pressure Oil Filter Element
QA06305	Hydraulic Filter Assembly
QA07670	Fuel Differential Pressure Switch
QA07739-01	Valve, Hyd F
QA07739-02	Flow Reg
QA07907-01	Valve, Hydra
QA07985	Fuel Differential Pressure Switch
QA07995	Fuel Differential Pressure Switch
R1053M2-2	Actuator
R1065M1	Actuator, Li
R1071M2	Actuator
R15048	Lateral Trim Actuator
R21A	Rotary Variable Different
R4101M2	Rotary Actuator Assembly
R4101M2-1	Rotary Actuator Assembly
R4101M2-11	Rotary Actuator Assembly
R4101M3	Rotary Actuator Assembly
R5303-3	Speed Break Actuator
R5303-5	Speed Break Actuator
R5303-51	Speed Brake Actuator
R5303M1	Linaer Actuator
R5303M1-1	Linaer Actuator
R5365-1	Actuator-Rud
R5365-2	Actuator: Door,Intake

R5366-5	Actuator: Rudder Trim,Rotary
R5367M2-4	Actuator: Linear,Feel,Elevator
R5367M2-5	Actuator
R584M54	Actuator Apu
R6166M1	Actuator
R6180M31	Actuator Apu
R6200M3	Actuator Doo
R6200M3-11	ACTUATOR ELE
R6200M3-13	AIR INLET DU
R6206-7	Actuator: Rotary
RD-AM8001-A	Accumulator
RD-AX2301-1	Actuator
RP162-01	Nacelle Temperature Sensor
RP162-02	Nacelle Temperature Sensor
RR11640A3	Fuel Pump
RR11640-D1	Fuel Pump
RR12551A	Fuel Pump
RR34150 series	Lube And Scavenge Pump
RR34150F	Lube And Scavenge Pump
RR34150G	Lube And Scavenge Pump
RR34150H	Lube Pump
RR34150K	Lube And Scavenge Pump
RR34150L	Lube Pump
RR37100	Lube Pump
RR37100A	Lube Pump
RR37100B	Lube Pump
RR37100D	Lube Pump
RR54860	Fuel Pump
RYLB52192-2	Pressure Regulator Valve
RYLB52192-3	Pressure Regulator Valve
RYLB52192-4	Pressure Regulator Valve
S210N701-10	Axial Flow Fan
S210T120-103	Pressure Regulating Valve
S210T120-113	Pressure Regulating Valve
S210T120-122	High Pressure Controller
S210T120-133	Pressure Regulating Valve
S210T120-143	Pressure Regulating Valve
S210T120-153	Pressure Regulating Valve
S210T120-192	High Pressure Controller
S210T120-202	High Pressure Controller
S210T120-22	High Pressure Controller
S210T120-32	High Pressure Controller
S210T120-42	High Pressure Controller
S210T120-73	Pressure Regulating Valve
S210T130-66	Pack Temperature Controller
S210T130-69	Pack Temperature Controller
S210T130-99	Pack Temperature Controller

S210T160-104	Cabin Pressure Outflow Valve
S210T160-114	Cabin Pressure Outflow Valve
S210T160-34	Cabin Pressure Outflow Valve
S210T160-44	Cabin Pressure Outflow Valve
S210T160-54	Cabin Pressure Outflow Valve
S210T160-64	Cabin Pressure Outflow Valve
S210T160-74	Cabin Pressure Outflow Valve
S210T160-84	Cabin Pressure Outflow Valve
S210T160-94	Cabin Pressure Outflow Valve
S212N101-29	Reverse Flow Check Control Valve
S212N101-45	Reverse Flow Check Control Valve
S218W101-108	Pressure Sensor
S218W101-118	Pressure Sensor
S218W101-18	Pressure Sensor
S218W101-7	Pressure Sensor
S218W101-8	Pressure Sensor
S253U001-2	Valve
S256A225-1	Actuator
S256T007-10	Flap Position Transmitter
S256T007-12	Flap Position Transmitter
S256T007-14	Flap Position Transmitter
S256T007-15	Flap Position Transmitter
S256T007-17	Flap Position Transmitter
S256T007-21	Flap Position Transmitter
S271T527-3	Isolation Valve, Tr
S271W741-22	Valve: Shut-Off,Ar
S271W813-1	Fuse Assy
S271W814-21	Flow Control Module Priority Valve
S272U860-5	Fuse, Hydraulic Flow Rate
S272U860-6	Fuse, Hydraulic Flow Rat
S272U860-7	Fuse, Hydraulic Flow Rate
S273A010-1	Landing Gear Selector Bypass Valve
S273A010-2	Landing Gear Selector Bypass Valve
S273N401-7	Alternate Extension Hydraulic Power Pack
S274A101-3	Hydraulic Accumulator
S274T111-2	Valve Assy
S274T120-13	Anti-Skid Shuttle Valve Module
S274T403-3	Hydraulic Flow Regulator Valve
S275A210-4	Steering Valve
S283T001-2	Antiskid Control Valve
S283U008-16	Electronic Ballast
S2861-02	Drain Manifold
S293W520-3	Alternate Extension Hydraulic Power Pack
S293W520-5	Alternate Extension Hydraulic Power Pack
S315A103-5	T/R Cowl Actuator
S315A103-6	T/R Cowl Actuator
S315A103-7	T/R Cowl Actuator

S315N301-3	T/R Cowl Actuator
S315N301-4	T/R Cowl Actuator
S315N301-5	T/R Cowl Actuator
S315N301-6	T/R Cowl Actuator
S315N301-7	T/R Cowl Actuator
S315N301-9	T/R Cowl Actuator
S315N370-1	Synchro-Shaft Lock
S315N370-2	Synchro-Shaft Lock
S315T363-6	Fan Thrust Reversor Hydraulic Power Unit
S315W363-16	T/R Cowl Acuator
S315W363-6	T/R Cowl Acuator
S332A101-5	Nose Cowl Thermal Anti-Ice Valve
S332A101-6	Nose Cowl Thermal Anti-Ice Valve
S332A101-7	Anti Ice Valve
S332T002-1	Valve, 4" Dia. Pneumatic Butterfly
S332T002-11	Valve, 4" Dia. Pneumatic Butterfly
S332T002-12	Valve, 4" Dia. Pneumatic Butterfly
S332T002-13	Valve, 4" Dia. Pneumatic Butterfly
S332T002-8	Valve, 4" Dia. Pneumatic Butterfly
S332T008-3	3.5 Inch Shutoff Valve Assembly
S343T003-10	Valve Assy, Wing Apu Fuel Flow
S343T003-2	Valve Assy, Fuel Feed
S343T003-39	Actuator
S4-3300346	Cargo Door Jack
S4-3300346-02	Cargo Door Jack
S4-3300520	Actuator Assy., Hydraulic
S4-3300520-01	Actuator Assy., Hydraulic
S4-3300955	NLG DOOR ACT
S4-3401310-04	Valve Assy., Safety
SAS911-002	Wing Anti-Ice Valve
SAS911-002A	Wing Anti-Ice Valve
SB209L1A1-1480	Accumulator-Hydraulic
SB209L1A1-1483	Accumulator,Hydraulic
SB209L1A1-1484	Accumulator: Hyd
SC4700	Rudder Yaw Servo Actuator
SC4700-1	Rudder Yaw Servo Actuator
SC4700-2	Rudder Yaw Servo Actuator
SC4700-3	Actuator
SC4700-4	Yaw Damper Actut
SC4700-5	Servo Actuator
SC4710	Yaw Damper Servo
SC4710-1	Yaw Damper Servo
SM-710	Actuator
SM-725	Actuator
SP8833	Door Rate Control Strut Damper
SP8834	Door Rate Control Strut Damper
SR09320063-11	Act. Mlg

SR09320063-13	Act. Mlg
SR09320063-17	Act. Mlg
ST104-515	Hold Open Rod Strut
ST104-523	Hold Open Rod Strut
ST105-517	Hold Open Rod Strut
ST105-525	Hold Open Rod Strut
ST106-519	Hold Open Rod Strut
ST174-1	Telescoping Strut
ST174-3	Telescoping Strut
SW210W110-2117	Trim Pressure Regulating & Shutoff Valve
SYL 2396	Actuator
SYLC 50298-1	Actuator
SYLC 50298-3	Actuator
SYLC 50479	Actuator
SYLC 51836	Actuator
SYLC 51836-1	Actuator
SYLC 51836-10	Actuator
SYLC 52575	Actuator
SYLC51836-1	Actuator
SYLC51836-10	Actuator, Linear
SYLC52245-4	Actuator
SYLC52575	Actuator
SYLC-53058	Linear
SYLZ 9885	Actuator
SYLZ52613-1	Cooling Valve Electronic Sumulator
TC153-00	thermocouple
TC153-01	thermocouple
TC173-00	T495 Thermocouple Wiring Harness
TC174-00	T495 Thermocouple Wiring Harness
TC174-01-	T495 Thermocouple Wiring Harness
TC174-02	T495 Thermocouple Wiring Harness
TC194-00	T495 Wiring Harness
TC194-01	T495 Wiring Harness
TC194-02	T495 Wiring Harness
TC195-00	T495 Wiring Harness
TC195-01	T495 Wiring Harness
TC195-02	T495 Wiring Harness
TC199-00	T5 Temperature Sensor
TC199-01	T5 Temperature Sensor
TC200-00	T495 Thermocouple Wiring Harness
TC200-01	T495 Thermocouple Wiring Harness
TC200-02	T495 Thermocouple Wiring Harness
TC236-00	T5 Temperature Sensor
TC254-01	T495 Wiring Harness
TC254-02	T495 Wiring Harness
TC255-01	T495 Wiring Harness
TC255-02	T495 Wiring Harness

TC255-03	T495 Wiring Harness
TC255-04	T495 Wiring Harness
TC262-00	T495 Thermocouple Wiring Harness
TC262-01	T495 Thermocouple Wiring Harness
TC262-02	T495 Thermocouple Wiring Harness
TC263-00	T495 Thermocouple Wiring Harness
TC263-01	T495 Thermocouple Wiring Harness
TC263-02	T495 Thermocouple Wiring Harness
TC266-00	T5 Temperature Sensor
TC266-01	T5 Temperature Sensor
TC272-00	T495 Thermocouple Wiring Harness
TC272-01	T495 Thermocouple Wiring Harness
TC272-02	T495 Thermocouple Wiring Harness
TC273-00	T495 Thermocouple Wiring Harness
TC273-01	T495 Thermocouple Wiring Harness
TC273-02	T495 Thermocouple Wiring Harness
TC274-00	T5 Temperature Sensor
TC274-01	T5 Temperature Sensor
TC292-01	T5 Temperature Sensor
TC292-02	T5 Temperature Sensor
TC296-02	T495 Wiring Harness
TC296-03	T495 Wiring Harness
TC296-04	T495 Wiring Harness
TC315-00	T495 Wiring Harness
TC315-01	T495 Wiring Harness
TC315-02	T495 Wiring Harness
TC316-00	T495 Wiring Harness
TC316-01	T495 Wiring Harness
TC316-02	T495 Wiring Harness
TCL165-00	RH and LH T495 Thermocouple Wiring Harness
TCR165-00	RH and LH T495 Thermocouple Wiring Harness
TF51300	Pump
TFU100MK2	Valve
TL10589-104	Latch:
TL23003-101	Snubber Ay-Aft Body Apu Door
TS01232-0100-01	Actuator Assembly, Wing Main Gear Retrac
TS01232-0300-01	Actuator Assembly, Body Main Gear Retrac
TSG420-102	Ballscrew &
TSG420-103	Ballscrew
TY1522-50	Lower Locking Actuator
TY1540-23	Hydraulic Control Unit
TY1540-24	Controller, Hydraulic
TY1540-24A	Hydraulic Control Unit
TY1540-24B	Hydraulic Control Unit
TY1540-24C	Sync Lock Assy
TY1540-24D	Hydraulic Control Unit
TY1540-24E	Hydraulic Control Unit

TY1541-22	Upper Feedback Actuator
TY1541-50	Upper Feedback Actuator
TY1541-51	Upper Feedback Actuator
TY1542-22	Lower Locking Actuator
TY1542-50	Lower Locking Actuator
TY1544-20	MANUAL DRIVE
TY1558-51	Air Modulating Valve
TY1558-52	Air Modulating Valve
TY1628-01	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-02	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-03	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1628-04	Hydraulic Control Unit (Douglas Aircraft Installation)
TY1629-06	Actuator
TY1629-07	Actuator
TY1629-10	Actuator
TY1629-15	Actuator
TY1629-20	Actuator
TY1629-50	Actuator
TY1630-06	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-07	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-10	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-14	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-15	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-17	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-18	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-20	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1630-50	Synchronised Locking Actuator (Douglas Aircraft Installation)
TY1632-02	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1633-01	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1634-02	Manual Drive (Douglas Aircraft Installation)
TY1634-03	Manual Drive (Douglas Aircraft Installation)
TY1635-01	Thrust Reverser Transmission (Douglas Aircraft Installation)
TY1727-20A	"C" Duct Actuator (Nh)
TY1795-52	Air Modulating Valve
TY1795-53	Air Modulating Valve
TY1801-03	T/R Inner Actuator
TY1801-50	T/R Inner Actuator
TY1802-03	Outer Locking / Feedback Actuator
TY1802-04	Outer Locking / Feedback Actuator
TY1802-50	Outer Locking / Feedback Actuator
TY1805-02	T/R Hydraulic Control Unit
TY1878-20	Synchro-Shaft Lock
TY1878-21	Synchro-Shaft Lock
TY1878-21C	Synchro- Shaft Lock
TY1878-22	Lock: Shaft,Ohc
TY1878-22A	Syncro Lock
TY1882-03	T/R Hold Open Rod

TY1882-04	T/R Hold Open Rod
TY1898-51	Actuator: Fan Cowl
TY1900-01	T/R Cowl Actuator
TY1900-51	T/R Cowl Actuator
TY1904-02	Control: Unit
TY1904-50	Control Unit
TY1906-50	Power Unit: Hyd
TY1914 -02	T/R Hand Wind Mechanism
TY2013-10	Actuator-Hy
TY2039-11A	Actuator,Hydraulic,Linear
TY2039-14A	Actuator,Hydraulic,Linear Assy
TY2082 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2083 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2084 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2085 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2086 -01	Thrust Reverser Transmission, C-Duct Drives and Tubes
TY2091	Latch
TY2091-01	Primary Door Latch
TY2091-01A	Latch
TY2092-01	Hydraulic Control Unit
TY2092-02	Hydraulic Control Unit
TY2092-21	Hydraulic Control Unit
TY2092-22	Hydraulic Control Unit
TY2109-02A	Power Conditioning
TY2135-01	Hand Wind Assembly
TY2148-10A	Isolation Control Valve
TY2148-11A	Actuator, Sp
TY2150	Actuator
TY2151-15	Locking Actuator
TY2151-15A	Actuator, Sp
TY2152-15A	Feedback Actuator
TY2153-01	Manual Drive
TY2518	Synchronizing Shaft Lock
TY2560-01A	Lock,Tertiary Assy
TY3356-10	Fan Cowl Opening Actuator
TY3357-10	T/R Cowl Actuator
U26B	Actuator: Rudder,Trim,Assembly
U54A	Mach Trim Actuator
UA538283-2	Heater, Servo Fuel
UA538342-2	IDG Fuel/Oil Heat Exchanger
UA538404-9	Fuel Flow Diverter and Return Valve
UA538551-2	Csd Oil Cooler
UA538551-2	Oil Cooler And Relief Bypass Valve
UA538551-3	Idg Oil Cooler
UA538728-1	CF6-IDG FUEL
UA538950-3	Servo Fuel/Oil Heat Exchanger
UA538950-4	Servo Fuel/Oil Heat Exchanger

UA538950-7	Servo Fuel/Oil Heat Exchanger
UA538950-8	Servo Fuel/Oil Heat Exchanger
UA541461-12	Lube/Servo Fuel/Oil Cooler
UA541461-14	OIL COOLER
UA541461-4	Lube/Servo Fuel/Oil Cooler
UA541461-5	Lube/Servo Fuel/Oil Cooler
UA541462-7	IDG/VSCF Air/Oil Cooler Interface
UA541462-8	IDG/VSCF Air/Oil Cooler Interface
UA541462-9	IDG/VSCF Air/Oil Cooler Interface
UA541463-4	VSCF/Lube Oil/Oil Cooler Interface
UA541464-4	IDG Fuel/Oil Cooler
UA541464-5	IDG Fuel/Oil Cooler
UA541464-6	IDG Fuel/Oil Cooler
UA544011-1	IDG/VSCF Air/Oil Cooler Interface
UA544011-2	IDG/VSCF Air/Oil Cooler Interface
UL18586	Mount Assy-Aft Engine
V1-4360-2	Fuse: Mlg
V2-4360-2	Valve Assembly
V2T125-1	Actuator Rot
V2T125-2	Actuator Rot
V2T127B	Air Butterfly Valve
V2T127D	Actuator
V2T152B	Air Butterfly Valve
V2T152D	Air Butterfly Valve
V3400-283	Solenoid Valve
V3400-292	Solenoid Valve
V5000-1001	Solenoid Valve
V5000-10011	Solenoid Valve
V5000-123	Solenoid Valve
V5000-146	Solenoid Valve
V5000-147	Solenoid Valve
V5000-153	Solenoid Valve
V5000-159	Solenoid Valve
V5000-160	Solenoid Valve
V5000-161	Solenoid Valve
V5000-169	Solenoid Valve
V5000-223	Solenoid Valve
V5000-256	Solenoid Valve
V5000-40	Solenoid Valve
V5000-40110	Solenoid Valve
V5000-41	Solenoid Valve
V5000-43	Solenoid Valve
V6-4360	Valve Assy-Fuse Self Resetting
V6-4360-2	Valve Assy-Fuse Self Resetting
VA4110	Extraction Fan
VA4111-05	Variable Speed Fan
VA4111-06	Variable Speed Fan

VD1227	Mixed Flow Fan
VD3800	Mixed Flow Fan
VD3810	Mixed Flow Fan
VD3810-10	Mixed Flow Fan
VD3820	Mixed Flow Fan
VD3820-01	Mixed Flow Fan
VD3900-02	Recirculation Fan
VD3900-03	Recirculation Fan
VD3901-00	Fan: Recirculation
VD3909-00	Fan: Recirculation
VD3920	Extraction Fan
VFT210A1	Valve: Air,Skin
VFT210A2	Valve: Air,Skin
VFT210B00	Actuator
VFT300B00	Skin Air Valve
VG11-03	VBV Position Sensor
VG11-04	VBV Position Sensor
VG14-00	VBV Position Sensor
VG14-01	VBV Position Sensor
VG17-00	Vbv Sensor Position
VG17-01	Vbv Sensor Position
VG22-00	Vbv Sensor Position
VG22-01	Vbv Sensor Position
VR3916-00	Vacuum Generator
VR4100-02	Recirculation Fan
VR4100-03	Recirculation Fan
VR4100-04	Recirculation Fan
VT-0304C	Oil Pressure Transmitter
VT0306D	Fuel/Oil Press Xmitt
VTO304S	Oil Pressure Transmitter
VTO304S-1	Oil Pressure Transmitter
W315T3800-1	Cowl Opening Actuator
W315T3800-2	Cowl Opening Actuator
W315T3800-3	Cowl Opening Actuator
W315T3800-4	Cowl Opening Actuator
W315T3800-5	Cowl Opening Actuator
W315T3800-6	Cowl Opening Actuator
W92A	Actuator, Rudder Pedal Release
W92B	Actuator, Rudder Pedal Release
W92C	Actuator, Rudder Pedal Release
WL101EED2	Relief Valve
XW21181-18	Valve, Selec
XW21181-2	Valve, Meter
XW23629-1	Valve, Meter
XW23629-2	Valve, Meter
XW23629-4	Metering Val
XW23827-1	Valve, Meter

XW26642-3	Valve Assemb
XW26642-4	MOTOR CONVER
Y005-2	Transformer Rectifier 28V - 200A
Y005-5	Transformer Rectifier 28V - 200A
Z2171-01	Drain Module Assembly
Z2171-03	Drain Module Assembly
Z2171-04	Drain Module Assembly
ZCV241	Valve: Drain
ZCV63-4	Valve Check
ZCV63-6	Valve Check
ZCV63-6-1	Valve Check
ZCV63-8	Valve Check
ZCV64-10	Valve Check
ZCV64-12	Valve Check
ZCV64-16	Valve Check
ZCV64-20	Valve Check
5050T60P01	Main Fuel Filter
5050T60P02	Main Fuel Filter
5071T70P01	Main Fuel Filter
4106T62P01	Main Fuel Filter
5023T57P02	Fuel Heater
6047T53P01	Main Fuel Pump
6078T39P08	Main Fuel Pump
4048T65P01	Fuel Check Valve
5047T47G01	Drain and Shutoff Valve
5047T47G02	Drain and Shutoff Valve
5054T82G01	Oil Cooler Bypass Valve Assembly
6047T66P01	VG Flexible Feedback Cable
4071T72P01	T2C (CIT) Sensor
4042T50P02	Permanent Magnet Alternator
6047T55P02	Permanent Magnet Alternator
6047T55P01	Permanent Magnet Alternator
4021T56P01	Fan Speed Pickup
4021T56P03	Fan Speed Pickup
4021T56P04	Fan Speed Pickup
4033T65P02	Fan Inlet Temperature Transmitter (T2)
4033T65P03	Fan Inlet Temperature Transmitter (T2)
6030T40P01	T5 Thermocouple Assembly
6030T40P02	T5 Thermocouple Assembly
6030T41P01	T5 Thermocouple Assembly
6030T41P02	T5 Thermocouple Assembly
5050T93P01	Electrical Cable Assemblies
5050T93P02	Electrical Cable Assemblies
5061T29P01	Electrical Cable Assemblies
6047T76P01	Electrical Cable Assemblies
6047T87P01	Electrical Cable Assemblies
6047T87P02	Electrical Cable Assemblies

6047T88P01	Electrical Cable Assemblies
6047T88P02	Electrical Cable Assemblies
6052T12P01	Electrical Cable Assemblies
6052T23P01	Electrical Cable Assemblies
6078T09P01	Electrical Cable Assemblies
1697M50G01	Electrical Cables
1697M50G02	Electrical Cables
1697M50G03	Electrical Cables
1697M50G04	Electrical Cables
1697M51G02	Electrical Cables
1697M51G03	Electrical Cables
1697M52G01	Electrical Cables
4060T81G03	B-Sump Vent Regulator Valve
4060T81G04	B-Sump Vent Regulator Valve
4106T93G01	B-Sump Vent Regulator
4020T35G04	Pressure Regulating Valve
5047T46G03	Oil Tank
5047T46G04	Oil Tank
5047T46G05	Oil Tank
5047T46G06	Oil Tank
5079T05G01	Oil Tank
5122T11G01	Oil Tank
4027T69P03	Oil Tank Pressurizing Valve
4029T33P01	Oil Drain Valve
4022T27G22	Lube and Scavenge Pump
6087T04P05	Oil Pump Assembly
6087T04P06	Oil Pump Assembly
6087T04P09	Oil Pump Assembly
6087T04P10	Oil Pump Assembly
4018T27P04	Electrical Chip Detector
4029T35P01	Electrical Chip Detector
5071T99P02	Electrical Chip Detector
5071T99P03	Electrical Chip Detector
5079T04P01	Valve Assembly
5079T04P02	Valve Assembly
5079T04P03	Valve Assembly
4018T11P02	A-Sump Oil Scavenge Pump
4044T01G03	Lube Filter
4048T39P01	Oil Cooler Bypass Valve Assembly
6087T05P02	Heat Exchanger
4060T64P01	Oil Filter By-Pass Sensor
4060T64P03	Oil Filter By-Pass Sensor
4060T64P04	Oil Filter By-Pass Sensor
74D10-6	Main Fuel Filter
60E70	Main Fuel Filter
AEC325-12	Main Fuel Filter
D54D44	Fuel Heater

571215	Main Fuel Pump
9297-01A8	Main Fuel Pump
8-1575-1	Fuel Check Valve
35175	VG Flexible Feedback Cable
8901-248	T2C (CIT) Sensor
48989-1	Permanent Magnet Alternator
44895-1	Permanent Magnet Alternator
44895	Permanent Magnet Alternator
472011	Fan Speed Pickup
8TJ118AAC1	Fan Speed Pickup
472011-01	Fan Speed Pickup
0154BE-2	Fan Inlet Temperature Transmitter (T2)
0154CY	Fan Inlet Temperature Transmitter (T2)
8TE32AAZ1	T5 Thermocouple Assembly
8TE32AAZ2	T5 Thermocouple Assembly
8TE32ABA1	T5 Thermocouple Assembly
8TE32ABA2	T5 Thermocouple Assembly
600095	Electrical Cable Assemblies
600236	Electrical Cable Assemblies
600467	Electrical Cable Assemblies
67018	Electrical Cable Assemblies
67019	Electrical Cable Assemblies
600237	Electrical Cable Assemblies
67020	Electrical Cable Assemblies
600238	Electrical Cable Assemblies
600053	Electrical Cable Assemblies
600228	Electrical Cable Assemblies
46629	Electrical Cable Assemblies
111E9000G01	Electrical Cables
111E9000G02	Electrical Cables
111E9000G03	Electrical Cables
111E9000G04	Electrical Cables
111E9001G02	Electrical Cables
111E9001G03	Electrical Cables
111E9002G01	Electrical Cables
0712335-003	B-Sump Vent Regulator Valve
0712335-004	B-Sump Vent Regulator Valve
0712176-004	Pressure Regulating Valve
2700336M1	Oil Tank Pressurizing Valve
CD419V	Oil Drain Valve
31-75107-3020-4	Lube and Scavenge Pump
31-75107-4063-5	Oil Pump Assembly
31-75107-4086-5	Oil Pump Assembly
31-75107-4101-5	Oil Pump Assembly
31-75107-4103-5	Oil Pump Assembly
3307641.02	Electrical Chip Detector
3307761.02	Electrical Chip Detector

3009051.02	Electrical Chip Detector
3009061.02	Electrical Chip Detector
2009051.02	Valve Assembly
2009081.02	Valve Assembly
RG38020A	A-Sump Oil Scavenge Pump
160064-1-1	Oil Cooler Bypass Valve Assembly
47158-5130	Heat Exchanger
RD910VL086	Oil Filter By-Pass Sensor
RD910VL086Y2	Oil Filter By-Pass Sensor
RD910VL086Y4	Oil Filter By-Pass Sensor
14G0186-007	W-3 Harness
14G0184-003	W-4 Harness
14G0187-001	W-10 Harness
14G0187-003	W-10 Harness
14G0182-003	W-11 Harness
14G0185-007	W-12 Harness
15E0404005	W-8 Harness
15E0404005M1	W-8 Harness
15E0404005M2	W-8 Harness
15E0404007	W-8 Harness
15E0404009	W-8 Harness
15E0404011	W-8 Harness
15E0405005	W-9 Harness
829500-9	Fuel Pump
829500-10	Fuel Pump
421654	Wiring Harness
507990-1	Wiring Harness
421656	Wiring Harness
421332	Wiring Harness
421646	Wiring Harness
507987-1	Wiring Harness
421249	Wiring Harness
421391	Wiring Harness
421647	Wiring Harness
507989-1	Wiring Harness
421308	Wiring Harness
421648	Wiring Harness
513969-1	Wiring Harness
421393	Wiring Harness
421649	Wiring Harness
421394	Wiring Harness
421650	Wiring Harness
421560	Wiring Harness
421655	Wiring Harness
509823-1	Wiring Harness
421465	Wiring Harness
421601	Wiring Harness

421657	Wiring Harness
501770-1	Wiring Harness
510573-1	Wiring Harness
421466	Wiring Harness
421658	Wiring Harness
430145	Permanent Magnet Alternator
430233	Permanent Magnet Alternator
430146	Permanent Magnet Alternator
421645	Sump Seal Valve
421645-2	Sump Seal Valve
421885	Sump Seal Shutoff Valve
949-1-11	N1 Fan Speed Sensor
RP302-03	Fan Inlet Temperature Transmitter
RP302-04	Fan Inlet Temperature Transmitter
RP302-05	Fan Inlet Temperature Transmitter
TC321-01	Thermocouple Assembly
TC322-01	Thermocouple Assembly
TC371-01	Thermocouple Assembly
TC490-00	Thermocouple Assembly
TC372-01	Thermocouple Assembly
TC491-00	Thermocouple Assembly
TC533-00	Thermocouple Assembly
TC532-00	Thermocouple Assembly
TC481-02	Thermocouple Assembly
TC493-00	Thermocouple Assembly
TC477-02	Thermocouple Assembly
TC492-00	Thermocouple Assembly
APTE-4-1250-130D	Oil Pressure Transmitter
21SN04-422A	Oil Pressure Switch
21SN04-422B	Oil Pressure Switch
APTE-4A-1250-130D	Oil Pressure Transmitter
APTE-4C-1250-130D	Oil Pressure Transmitter
7U7941-4	Locking Actuator
7U7941-5	Locking Actuator
7U7942-3	Feedback Actuator
7U7942-4	Feedback Actuator
7U7942-5	Feedback Actuator
7U7942-6	Feedback Actuator
7U7943-1	Manual Drive
P529A0001-00	Direction Control Unit
P528A0001-01	Isolation Control Unit
P528A0001-02	Isolation Control Unit
P528A0001-04	Isolation Control Unit
P611A0001-00	Cowl Lock
P535A0001-01	D-Duct Actuator
7941-070	Limit Switch
7U7946-1	Flex Tube Assembly

7U7945	Sync Tube Assembly
160668-1	Air/Oil Cooler
LR47050D	Lube and Scavenge Pump
LR47050G	Lube and Scavenge Pump
LR47050J	Lube and Scavenge Pump
LR47730	Oil Filter Module
LR47170	Oil Filter Module
LR47170A	Oil Filter Module
N/A	Valve Assembly
55024001-11	Fuel Oil Heat Exchanger
55029001-21	Fuel Oil Heat Exchanger
77-167-2	Oil Level Temperature Sensor
77-167-3	Oil Level Temperature Sensor
77-167-4	Oil Level Temperature Sensor
3291339-4	Starter Control Valve
5000728-104	Operability Bleed Fuel Actuated Valve
5000728-106	Operability Bleed Fuel Actuated Valve
5080046-101	Operability Bleed Fuel Actuated Valve
5080046-102	Operability Bleed Fuel Actuated Valve
4120T04P09	Fuel Pump
4120T04P10	Fuel Pump
2160M11P03	Wiring Harness
2160M11P04	Wiring Harness
2160M12P03	Wiring Harness
4120T20P03	Wiring Harness
4120T20P05	Wiring Harness
4120T20P07	Wiring Harness
4120T21P01	Wiring Harness
4120T21P02	Wiring Harness
4120T21P03	Wiring Harness
4120T21P05	Wiring Harness
4120T24P02	Wiring Harness
4120T24P04	Wiring Harness
4120T24P05	Wiring Harness
4120T25P02	Wiring Harness
4120T25P03	Wiring Harness
4120T26P02	Wiring Harness
4120T26P03	Wiring Harness
4142T52P03	Wiring Harness
4142T52P04	Wiring Harness
4142T52P05	Wiring Harness
4142T54P02	Wiring Harness
4142T54P03	Wiring Harness
4142T54P04	Wiring Harness
4142T54P05	Wiring Harness
4142T54P06	Wiring Harness
4142T55P02	Wiring Harness

4142T55P03	Wiring Harness
4120T07P01	Permanent Magnet Alternator
4120T07P02	Permanent Magnet Alternator
4120T08P01	Permanent Magnet Alternator
4123T61P01	Sump Seal Valve
4123T61P03	Sump Seal Valve
4157T43P01	Sump Seal Shutoff Valve
4120T03P05	CVG Slave Actuator
4120T11P01	N1 Fan Speed Sensor
4119T30P03	Fan Inlet Temperature Transmitter
4119T30P06	Fan Inlet Temperature Transmitter
4119T30P07	Fan Inlet Temperature Transmitter
4119T21P02	Thermocouple Assembly
4119T22P02	Thermocouple Assembly
4119T31P02	Thermocouple Assembly
4119T31P03	Thermocouple Assembly
4119T32P02	Thermocouple Assembly
4119T32P03	Thermocouple Assembly
4119T41P01	Thermocouple Assembly
4119T42P01	Thermocouple Assembly
4119T61P03	Thermocouple Assembly
4119T61P04	Thermocouple Assembly
4119T62P03	Thermocouple Assembly
4119T62P04	Thermocouple Assembly
4120T16P01	Oil Pressure Transmitter
4120T17P01	Oil Pressure Switch
4120T17P02	Oil Pressure Switch
4120T16P02	Oil Pressure Transmitter
4120T16P03	Oil Pressure Transmitter
4119T01P01	Lube and Scavenge Pump
4119T01P03	Lube and Scavenge Pump
4119T01P05	Lube and Scavenge Pump
2230M80P02	Oil Filter Module
4119T04P01	Oil Filter Module
4119T04P02	Oil Filter Module
4119T26P02	Fuel Oil Heat Exchanger
4119T36P03	Fuel Oil Heat Exchanger
4120T19P02	Oil Level Temperature Sensor
4120T19P03	Oil Level Temperature Sensor
4120T19P04	Oil Level Temperature Sensor
4120T05P04	Starter Control Valve
4123T71P02	Operability Bleed Fuel Actuated Valve
4123T71P03	Operability Bleed Fuel Actuated Valve
4123T71P04	Operability Bleed Fuel Actuated Valve
4123T71P05	Operability Bleed Fuel Actuated Valve
341D8010-501	Oil Cooler and Relief Bypass Valve Assembly
UA544494-1	Oil Cooler and Relief Bypass Valve Assembly

5-9122-02 (SPEC No. 341D8C

341D8003-505

423405-2

521755-1

A10109-501

A10109-503

A10109-505

A10109-507

H158006-700CD

H158006-702CD

H158010-700HP

H158010-702HP

H158010-700FM

H158010-702FM

H158016-700HR

H158016-702HR

H158016-704HR

H158020-702FS

M1796-501

M1796-503

M1796-505

M1796-519

M1796-521

M1796-527

M1796-529

M1796-531

M1796-533

M1796-535

M1796-537

M1796-539

M1796-541

M1796-543

M1796-545

M1796-547

M1796-549

M1796-551

M1796-553

M1796-555

M1796-557

M1796-559

M1796-561

M1796-563

M1796-565

M1796-567

M1796-569

M1796-571

M1796-573

Anti-Ice Pressure Transducer

Thermal Anti-Ice Valve

Solenoid Pilot Shutoff Valve

Nacelle Anti-Ice Valve

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

Tubes Ducts and Hoses

M1796-575	Tubes Ducts and Hoses
M1796-577	Tubes Ducts and Hoses
M1796-579	Tubes Ducts and Hoses
M1796-581	Tubes Ducts and Hoses
M1796-583	Tubes Ducts and Hoses
M1796-585	Tubes Ducts and Hoses
M1796-587	Tubes Ducts and Hoses
341-1270-501	Tubes Ducts and Hoses
341-1400-501	Tubes Ducts and Hoses
341-1430-501	Tubes Ducts and Hoses
341-5101-501	Tubes Ducts and Hoses
341-5102-501	Tubes Ducts and Hoses
341-5103-503	Tubes Ducts and Hoses
341-5103-505	Tubes Ducts and Hoses
341-5104-503	Tubes Ducts and Hoses
341-5104-505	Tubes Ducts and Hoses
341-5161-509	Tubes Ducts and Hoses
341-5161-511	Tubes Ducts and Hoses
341-5162-507	Tubes Ducts and Hoses
341-5162-509	Tubes Ducts and Hoses
341-5174-501	Tubes Ducts and Hoses
341-5193-501	Tubes Ducts and Hoses
341-5194-501	Tubes Ducts and Hoses
341-5195-501	Tubes Ducts and Hoses
341-5201-501	Tubes Ducts and Hoses
341-5202-505	Tubes Ducts and Hoses
341-5202-507	Tubes Ducts and Hoses
341-5267-501	Tubes Ducts and Hoses
341-5267-503	Tubes Ducts and Hoses
341-5905-501	Tubes Ducts and Hoses
341-5905-503	Tubes Ducts and Hoses
341-5906-501	Tubes Ducts and Hoses
341-5906-503	Tubes Ducts and Hoses
341-5907-501	Tubes Ducts and Hoses
341-5907-503	Tubes Ducts and Hoses
341-5951-501	Tubes Ducts and Hoses
341-5951-503	Tubes Ducts and Hoses
341-5952-501	Tubes Ducts and Hoses
341-5953-501	Tubes Ducts and Hoses
341-5953-503	Tubes Ducts and Hoses
341-5954-503	Tubes Ducts and Hoses
341-5954-505	Tubes Ducts and Hoses
341-5954-507	Tubes Ducts and Hoses
341-5955-503	Tubes Ducts and Hoses
341-5955-505	Tubes Ducts and Hoses
714109-1	Tubes Ducts and Hoses
HA1449-1	Hook Latch Assembly

HA1462-3	Adjustable Hook Latch Assembly
HA1462-1	Adjustable Hook Latch Assembly
HA1462-2	Adjustable Hook Latch Assembly
HA1463-1	Keeper Assembly
HA1463-3	Keeper Assembly
HA1448-1	Keeper Assembly
HA1480-1	Keeper Assembly
HA1367-1	T-Bolt Keeper Assembly
HA1367-2	T-Bolt Keeper Assembly
HA1365-1	Latch Assembly
HA1365-2	Latch Assembly
HA1366-1	Hook Latch Assembly
HA1363-1	Hook Latch Assembly
HA1479-1	Hook Latch Assembly
HA1460-1	Hold Open Rod Assembly
HA1460-5	Hold Open Rod Assembly
341D8021-501	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-503	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-505	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341D8021-507	Toggle Hook Latch Assembly/ Adjusta-Keeper Assembly
341W1421-501	Wire Harness Assemblies
341W1422-501	Wire Harness Assemblies
341W5809-501	Wire Harness Assemblies
341W5810-501	Wire Harness Assemblies
341W5811-501	Wire Harness Assemblies
341W5812-501	Wire Harness Assemblies
341W5813-501	Wire Harness Assemblies
341W5814-501	Wire Harness Assemblies
341W5815-503	Wire Harness Assemblies
341W5816-505	Wire Harness Assemblies
341W5817-501	Wire Harness Assemblies
341W5817-503	Wire Harness Assemblies
341W5818-501	Wire Harness Assemblies
341W5818-503	Wire Harness Assemblies
341W5818-507	Wire Harness Assemblies
341W5818-509	Wire Harness Assemblies
341W5818-511	Wire Harness Assemblies
AEC46816	Main Fuel Filter Assembly
AEC55516	Main Fuel Filter Assembly
847000-1	Fuel Pump
847000-2	Fuel Pump
UA544051-2	Fuel/Oil Heat Exchanger
UA544051-3	Fuel/Oil Heat Exchanger
502425-1	Wiring Harnesses
504444-1	Wiring Harnesses
504444-2	Wiring Harnesses
502430-1	Wiring Harnesses

504445-1	Wiring Harnesses
504445-2	Wiring Harnesses
421511	Wiring Harnesses
504994-1	Wiring Harnesses
508040-1	Wiring Harnesses
421513	Wiring Harnesses
504995-1	Wiring Harnesses
508041-1	Wiring Harnesses
508041-2	Wiring Harnesses
504444-3	Wiring Harnesses
504445-3	Wiring Harnesses
508040-2	Wiring Harnesses
519660-1	EGT Wiring Harness
510003-1	Wiring Harnesses
510003-2	Wiring Harnesses
510004-1	Wiring Harnesses
510004-2	Wiring Harnesses
510005-1	Wiring Harnesses
510005-2	Wiring Harnesses
510006-1	Wiring Harnesses
510006-2	Wiring Harnesses
510007-1	Wiring Harnesses
510007-2	Wiring Harnesses
510008-1	Wiring Harnesses
510008-2	Wiring Harnesses
510009-1	Wiring Harnesses
510009-2	Wiring Harnesses
510010-1	Wiring Harnesses
510010-2	Wiring Harnesses
510011-1	Wiring Harnesses
510011-2	Wiring Harnesses
510011-3	Wiring Harnesses
510012-1	Wiring Harnesses
510012-2	Wiring Harnesses
510013-1	Wiring Harnesses
510013-2	Wiring Harnesses
510013-3	Wiring Harnesses
510014-1	Wiring Harnesses
510014-2	Wiring Harnesses
510014-3	Wiring Harnesses
510015-1	Wiring Harnesses
510015-2	Wiring Harnesses
510015-3	Wiring Harnesses
510015-4	Wiring Harnesses
510016-1	Wiring Harnesses
510016-2	Wiring Harnesses
510017-1	Wiring Harnesses

510017-2	Wiring Harnesses
510018-1	Wiring Harnesses
510018-2	Wiring Harnesses
510018-3	Wiring Harnesses
510018-4	Wiring Harnesses
510019-1	Wiring Harnesses
510019-2	Wiring Harnesses
510019-3	Wiring Harnesses
510019-4	Wiring Harnesses
510020-1	Wiring Harnesses
510020-2	Wiring Harnesses
510020-3	Wiring Harnesses
508071-1	Wiring Harnesses
508071-2	Wiring Harnesses
508072-1	Wiring Harnesses
508072-2	Wiring Harnesses
510931-1	Wiring Harnesses
510931-2	Wiring Harnesses
510932-1	Wiring Harnesses
510932-2	Wiring Harnesses
025-1G (SPEC No. 341D8001-	Low Pressure Fuel Switch
5040908-102	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-103	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-104	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
5040908-105	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
AE0405B04	FADEC Cooling Fan
AE0405B06	FADEC Cooling Fan
8100-052	VBV Actuator
8TJ163AAD1	Sensor, N1 Fan Speed
8TJ163AAF1	Sensor, N1 Fan Speed
8TJ205ABB1	N2 Sensor
8TC34ACA3	T3 Temperature Sensor
ITC34ACC1	Turbine Clearance Temperature Sensor
8TE32ABN3	EGT Probe
8TE32ABP2	EGT Probe
8TE32BAA1	EGT Probe
8TE32BAB1	EGT Probe
8TH32AAA1	Thermocouple Cable Harness
8TH32AAD1	Thermocouple Cable Harness
8TH32CAA1	Thermocouple Cable Harness
8TW32AAB1	T2.5 Temperature Sensor
8TW32AAC1	T2.5 Temperature Sensor
8TW32BAA1	T1.2 Inlet Fan Temperature Sensor
8TW32BAA2	T1.2 Inlet Fan Temperature Sensor
8TJ201JAA1	Differential Pressure Switch
APTE-177F-1000-50D	Pressure Interface Unit
APT-23B-1500-50D	Fuel Strainer Delta Pressure Transducer

P536A0001-01	Isolation Control Unit
P537A0001-01	Direction Control Unit
P547A0001-00	PDO Actuator
P547A0001-01	PDO Actuator
P547A0001-02	PDO Actuator
2U2202-5	TRAS Locking Actuator Assembly
2U2202-7	TRAS Locking Actuator Assembly
2U2202-8	TRAS Locking Actuator Assembly
2U2203-3	Feedback Actuator Assembly
2U2211-1	Cowl Lock Assembly
7U7943-3	Manual Drive Assembly
604C3101-003	Feedback Actuator Assembly
604C3101-005	Feedback Actuator Assembly
604C3102-003	Locking Actuator Assembly
604C3102-007	Locking Actuator Assembly
604C3102-011	Locking Actuator Assembly
604C0123-003	Isolation Control Valve Assembly
604C3103-003	Directional Control Valve
604C3105-005	Cowl Lock Assembly
604C3105-007	Cowl Lock Assembly
604C3105-011	Cowl Lock Assembly
604C3105-013	Cowl Lock Assembly
604C3104-001	Manual Drive
HA1461-1	Hold Open Rod Assembly
HA1461-5	Hold Open Rod Assembly
604C3109-001	Thrust Reverser Harnesses
604C3109-003	Thrust Reverser Harnesses
604C3109-005	Thrust Reverser Harnesses
604C3109-015	Thrust Reverser Harnesses
604C3109-017	Thrust Reverser Harnesses
604C3109-021	Thrust Reverser Harnesses
604C3109-024	Thrust Reverser Harnesses
604C3109-031	Thrust Reverser Harnesses
604C3109-033	Thrust Reverser Harnesses
604C3109-035	Thrust Reverser Harnesses
604C3109-037	Thrust Reverser Harnesses
604C3109-041	Thrust Reverser Harnesses
B1316-00084	Oil Tank
B1316-00829	Oil Tank
B1316-02236	Oil Tank
45731-1397	Fuel Cooled Oil Cooler
B1316-00177	Vent Valve
LR47050E	Lube and Scavenge Pump
LR47050F	Lube and Scavenge Pump
LR47050H	Lube and Scavenge Pump
LR47690	Lube and Scavenge Pump
B5241-06	Aft Sump Supply Check Valve

PD8158-100-24628

Delta P3 Sensor

PD9902-100-40083

Delta P3 Sensor

8TJ146CFE1

Oil Level and Temperature Sensor

8TJ146CFE2

Oil Level and Temperature Sensor

8TJ146CFF1

Oil Level and Temperature Sensor

2122M74P01

Oil Cooler and Relief Bypass Valve Assembly

2044M36P03

Solenoid Pilot Shutoff Valve

2044M36P06

Nacelle Anti-Ice Valve

604C2006-001

Hook Latch Assembly

604C2002-001

Adjustable Hook Latch Assembly

604C2002-003

Adjustable Hook Latch Assembly

604C2002-004

Adjustable Hook Latch Assembly

604C2003-003

Keeper Assembly

604C2006-003

Keeper Assembly

604C4025-003

Keeper Assembly

604C6103-003

Keeper Assembly

604C2001-003

T-Bolt Keeper Assembly

604C2001-004

T-Bolt Keeper Assembly

604C2001-001

Latch Assembly

604C2001-002

Latch Assembly

604C2003-001

Hook Latch Assembly

604C4025-001

Hook Latch Assembly

604C6103-001

Hook Latch Assembly

604C6107-001

Hold Open Rod Assembly

604C6107-003

Hold Open Rod Assembly

2044M35P01

Main Fuel Filter Assembly

2043M12P03

Fuel Pump

2043M12P04

Fuel Pump

2044M34P01

Fuel Pump

2044M34P02

Fuel Pump

1962M41P02

Fuel/Oil Heat Exchanger

1962M41P03

Fuel/Oil Heat Exchanger

2043M21P03

Wiring Harnesses

2043M21P04

Wiring Harnesses

2043M21P05

Wiring Harnesses

2043M23P03

Wiring Harnesses

2043M23P04

Wiring Harnesses

2043M23P05

Wiring Harnesses

2043M25P01

Wiring Harnesses

2043M25P02

Wiring Harnesses

2043M25P03

Wiring Harnesses

2043M27P01

Wiring Harnesses

2043M27P02

Wiring Harnesses

2043M27P03

Wiring Harnesses

2497M68P01

Wiring Harnesses

2502M85P01

Wiring Harnesses

2502M86P01

Wiring Harnesses

2502M87P01	Wiring Harnesses
2760M31P01	EGT Wiring Harness
2124M36P02	Wiring Harnesses
2561M55P01	Wiring Harnesses
2124M52P02	Wiring Harnesses
2561M56P01	Wiring Harnesses
2124M37P02	Wiring Harnesses
2560M94P01	Wiring Harnesses
2124M53P02	Wiring Harnesses
2560M95P01	Wiring Harnesses
2404M53P01	Wiring Harnesses
2560M86P01	Wiring Harnesses
2422M36P01	Wiring Harnesses
2568M00P01	Wiring Harnesses
2404M63P01	Wiring Harnesses
2560M92P01	Wiring Harnesses
2422M37P01	Wiring Harnesses
2568M98P01	Wiring Harnesses
2124M40P02	Wiring Harnesses
2560M96P01	Wiring Harnesses
2340M53P01	Wiring Harnesses
2124M41P02	Wiring Harnesses
2560M97P01	Wiring Harnesses
2124M42P02	Wiring Harnesses
2561M57P01	Wiring Harnesses
2766M70P01	Wiring Harnesses
2424M58P02	Wiring Harnesses
2561M58P01	Wiring Harnesses
2766M73P01	Wiring Harnesses
2424M43P02	Wiring Harnesses
2561M51P01	Wiring Harnesses
2612M47P01	Wiring Harnesses
2766M72P01	Wiring Harnesses
2124M46P02	Wiring Harnesses
2560M98P01	Wiring Harnesses
2124M59P02	Wiring Harnesses
2576M20P01	Wiring Harnesses
2124M47P02	Wiring Harnesses
2519M24P01	Wiring Harnesses
2561M63P01	Wiring Harnesses
2766M71P01	Wiring Harnesses
2124M60P02	Wiring Harnesses
2519M25P01	Wiring Harnesses
2561M64P01	Wiring Harnesses
2766M74P01	Wiring Harnesses
2124M48P02	Wiring Harnesses
2561M52P01	Wiring Harnesses

2766M75P01	Wiring Harnesses
2124M50P01	Wiring Harnesses
2581M82P01	Wiring Harnesses
2124M51P01	Wiring Harnesses
2581M83P01	Wiring Harnesses
2124M38P02	Wiring Harnesses
2560M22P01	Wiring Harnesses
2124M39P02	Wiring Harnesses
2560M91P01	Wiring Harnesses
2043M46P04	HPTCC Valve
2123M21P01	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P02	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P03	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2123M21P04	Low Pressure Turbine Active Clearance Control (LPTACC) Valve
2124M62P04	FADEC Cooling Fan
2124M62P05	FADEC Cooling Fan
2043M17P03	VBV Actuator
2043M14P01	Sensor, N1 Fan Speed
2043M14P02	Sensor, N1 Fan Speed
1963M68P01	N2 Sensor
2043M16P03	T3 Temperature Sensor
2043M32P02	Turbine Clearance Temperature Sensor
2043M47P04	EGT Probe
2043M60P03	EGT Probe
2139M86P01	EGT Probe
2139M87P02	EGT Probe
2043M33P01	Thermocouple Cable Harness
2043M33P02	Thermocouple Cable Harness
2139M85P02	Thermocouple Cable Harness
2043M15P02	T2.5 Temperature Sensor
2043M15P03	T2.5 Temperature Sensor
2043M31P01	T1.2 Inlet Fan Temperature Sensor
2043M31P02	T1.2 Inlet Fan Temperature Sensor
2043M39P01	Differential Pressure Switch
1799M72P03	Pressure Interface Unit
2139M45P03	Fuel Strainer Delta Pressure Transducer
2U2281-2	Feedback Actuator Assembly
2U2281-3	Feedback Actuator Assembly
2U2282-1	Locking Actuator Assembly
2U2282-3	Locking Actuator Assembly
2U2282-4	Locking Actuator Assembly
2U2283-1	Isolation Control Valve Assembly
2U2284-1	Directional Control Valve
2U2285-3	Cowl Lock Assembly
2U2285-4	Cowl Lock Assembly
2U2285-5	Cowl Lock Assembly
2U2285-6	Cowl Lock Assembly

7U7943-4	Manual Drive
604C1501-001	Hold Open Rod Assembly
604C1501-003	Hold Open Rod Assembly
509017-1	Thrust Reverser Harnesses
509018-1	Thrust Reverser Harnesses
509019-1	Thrust Reverser Harnesses
509023-1	Thrust Reverser Harnesses
509024-1	Thrust Reverser Harnesses
509025-1	Thrust Reverser Harnesses
509028-1	Thrust Reverser Harnesses
510654-1	Thrust Reverser Harnesses
510655-1	Thrust Reverser Harnesses
510656-1	Thrust Reverser Harnesses
510657-1	Thrust Reverser Harnesses
510658-1	Thrust Reverser Harnesses
2125M74P03	Oil Tank
1962M23P02	Fuel Cooled Oil Cooler
2043M74P02	Vent Valve
4119T01P02	Lube and Scavenge Pump
4119T01P04	Lube and Scavenge Pump
4119T01P06	Lube and Scavenge Pump
2233M80P01	Lube and Scavenge Pump
2121M57P01	Aft Sump Supply Check Valve
2121M57P02	Aft Sump Supply Check Valve
2043M34P03	Delta P3 Sensor
2043M34P05	Delta P3 Sensor
2043M37P03	Oil Level and Temperature Sensor
2043M37P05	Oil Level and Temperature Sensor
2043M37P04	Oil Level and Temperature Sensor
7002962H02	Electric Motor Pump Assy
7002962H03	Electric Motor Pump Assy
53080-02	Pump Assy
7002958H01	Motor Assy
616500-1007	Reservoir assy
616600-1007	Filter Module Assy
616900-1001	Return Filter Module Assy
975326-7	Isolation Valve
975329-1	Main Landing Gear Priority Valve
975324-3	Valve Assy
975325-9	Valve Assy
711Z2243-509	ESSO ASSY-
711Z2243-510	ESSO ASSY-
2040142-104	Motor Operated Shutoff Valve Assy
2132017-101	Actuator Assy
2041142-103	Ball valve Assy
605457-2	Fan
605457-3	Fan

605457-8	Fan
605457-9	Fan
015T0805-10	Primary Nozzle Assembly
015T0805-11	Primary Nozzle Assembly
015T0805-12	Primary Nozzle Assembly
015T0805-5	Primary Nozzle Assembly
015T0805-6	Primary Nozzle Assembly
015T0805-7	Primary Nozzle Assembly
015T0805-8	Primary Nozzle Assembly
015T0805-9	Primary Nozzle Assembly
015U1547-11	Primary Nozzle Assembly
015U1547-111	Primary Nozzle Assembly
015U1547-112	Primary Nozzle Assembly
015U1547-27	Primary Nozzle Assembly
015U1547-271	Primary Nozzle Assembly
015U1547-272	Primary Nozzle Assembly
015U1547-31	Primary Nozzle Assembly
015U1547-311	Primary Nozzle Assembly
015U1547-312	Primary Nozzle Assembly
015U1547-43	Primary Nozzle Assembly
015U1547-431	Primary Nozzle Assembly
015U1547-432	Primary Nozzle Assembly
015U1547-46	Primary Nozzle Assembly
015U1547-47	Primary Nozzle Assembly
314U2100-1	Primary Nozzle Assembly
314U2100-27	Primary Nozzle Assembly
314U2100-30	Primary Nozzle Assembly
314U2100-1	Primary Nozzle Assembly
314U2100-27	Primary Nozzle Assembly
314U2100-30	Primary Nozzle Assembly
314U2100-31	Primary Nozzle Assembly
314U2100-43	Primary Nozzle Assembly
314U2100-46	Primary Nozzle Assembly
314U2100-47	Primary Nozzle Assembly
314U2100-53	Primary Nozzle Assembly
314U2100-57	Primary Nozzle Assembly
314U2100-70	Primary Nozzle Assembly
314U2100-11	Primary Nozzle Assembly
7075M51G10	Oil Tank
7075M51G03	Oil Tank
7075M51G04	Oil Tank
7075M51G05	Oil Tank
7075M51G06	Oil Tank
7075M51G09	Oil Tank
7075M51G08	Oil Tank
7075M51G07	Oil Tank
FE159-5-002	Hydromechanical Brake Assembly

3036107	Hydromechanical Brake Assembly
3037785	Hydromechanical Brake Assembly
3038240	Hydromechanical Brake Assembly
FE159-5-004	Hydromechanical Brake Assembly
3036795	Hydromechanical Brake Assembly
FE159-5-007	Hydromechanical Brake Assembly
3120890-01	Hydromechanical Brake Assembly
3038240	Hydromechanical Brake Assembly
FE159-5-005	Hydromechanical Brake Assembly
3037250	Hydromechanical Brake Assembly
3120890-01	Hydromechanical Brake Assembly
FE201-6-002	Hydromechanical Brake Assembly
3120891-01	Hydromechanical Brake Assembly
FE159-5-005\B	Hydromechanical Brake Assembly
3037470A	Hydromechanical Brake Assembly
3120890-01	Hydromechanical Brake Assembly
FE201-6-002\A	Hydromechanical Brake Assembly
3120891-01	Hydromechanical Brake Assembly
FE159-5-006	Hydromechanical Brake Assembly
3037785	Hydromechanical Brake Assembly
3037783	Hydromechanical Brake Assembly
FE201-6-002\B	Hydromechanical Brake Assembly
3120891-01	Hydromechanical Brake Assembly
FE159-5-006\A	Hydromechanical Brake Assembly
3037785	Hydromechanical Brake Assembly
3038240	Hydromechanical Brake Assembly
FE201-6-001	Hydromechanical Brake Assembly
FE201-5-002	Hydromechanical Brake Assembly
FE159-5-007\B	Hydromechanical Brake Assembly
FE159-5-007\A	Hydromechanical Brake Assembly
FE159-5-006\B	Hydromechanical Brake Assembly
FE201-6-001\A	Hydromechanical Brake Assembly
FE201-6-001\B	Hydromechanical Brake Assembly
9281M79P01	Air Turbine Engine Starter
9281M79P03	Air Turbine Engine Starter